

PARTS LIST

for

KitchenAid®

7-SPEED HAND MIXER

MODELS:

KHM7TWH5 (White)	KHM7QER5 (Empire Red)
KHM7TAC5 (Almond Creme)	KHM7QGA5 (Green Apple)
KHM7TBU5 (Cobalt Blue)	KHM7QGC5 (Gloss Cinnamon)
KHM7TER5 (Empire Red)	KHM7QOB5 (Onyx Black)
KHM7TOB5 (Onyx Black)	KHM7QWH5 (White)
KHM7TPK5 (Pink)	4KHM7TWH5 (White)
KHM7TAQ5 (Aqua Sky)	4KHM7TBU5 (Cobalt Blue)
KHM7TBW5 (Blue Willow)	4KHM7TER5 (Empire Red)
KHM7TGC5 (Gloss Cinnamon)	4KHM7TOB5 (Onyx Black)
KHM7TPE5 (Pear)	4KHM7TAC5 (Almond Creme)
KHM7QBF5 (Buttercup)	4KHM7TGN5 (Empire Green)
KHM7QBW5 (Blue Willow)	4KHM7TMY5 (Majestic Yellow)
KHM7QCT5 (Clementine)	




FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



UNIT PARTS

Variations of Models: KHM7__5, 4KHM7__5

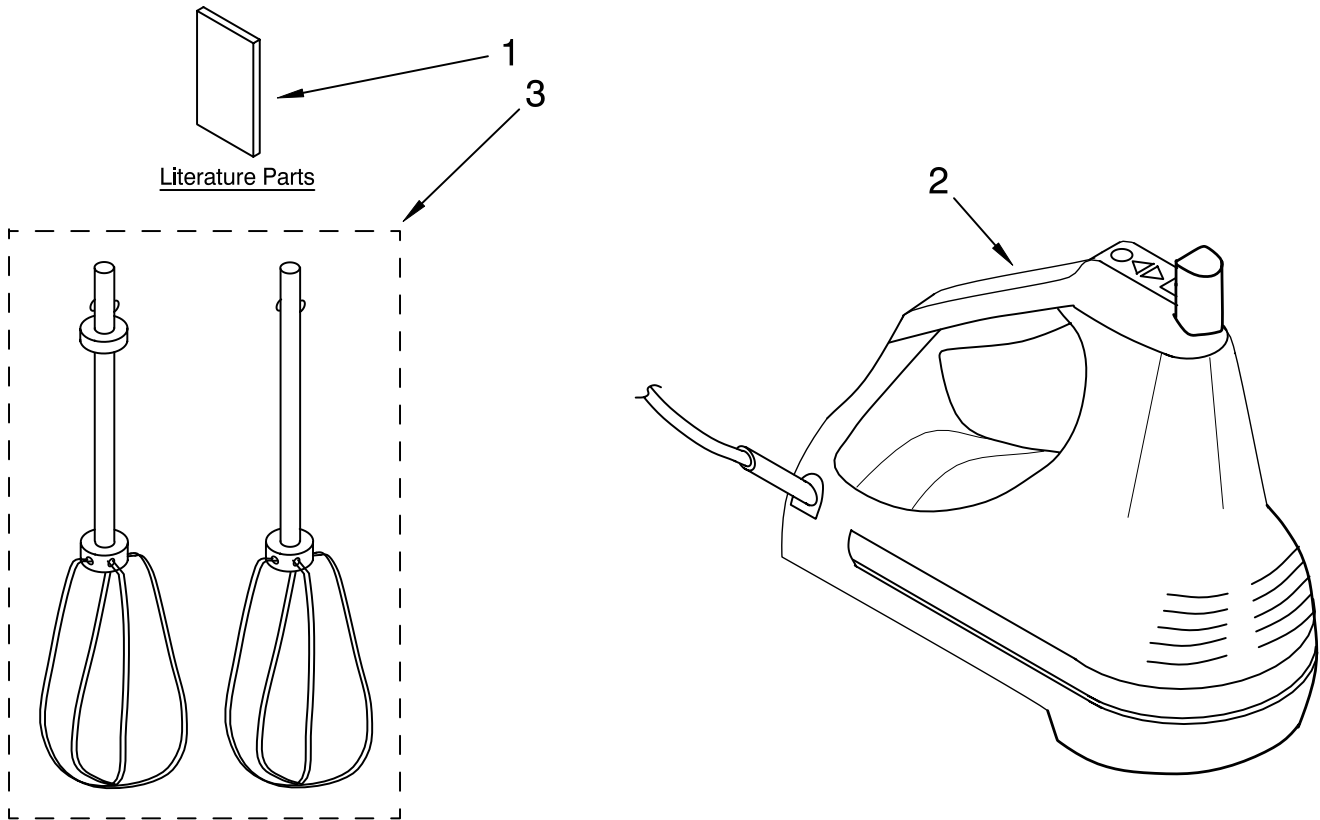

Illus. No.	Part No.	DESCRIPTION
1	8212345	Literature Use & Care Guide (Trilingual)
	8212055	Repair Parts List
2	◆	Mixer, Complete
3	8212348	Beaters, Turbo (Incl. Rt & Lt)

◆ **Note:**
 Parts not sold separately.
 Must be purchased as a complete unit.

OPTIONAL PARTS NOT ILLUSTRATED

- 8212351 Hooks, Dough (Incl. Rt & Lt)
- 8212341 Rod, Blending
- 8212340 Whisk

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST