

PARTS LIST

for

KitchenAid®

PRO LINE 4 SLICE TOASTER

MODELS:

KPTT890PM1 (PEARL METALLIC)
KPTT890ER1 (EMPIRE RED)
KPTT890TG1 (TANGERINE)
KPTT890BU1 (COBALT BLUE)
KPTT890NP1 (NICKEL PEARL)
4KPTT890PM1 (PEARL METALLIC)




FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



HOUSING PARTS

For Models: KPTT890__0

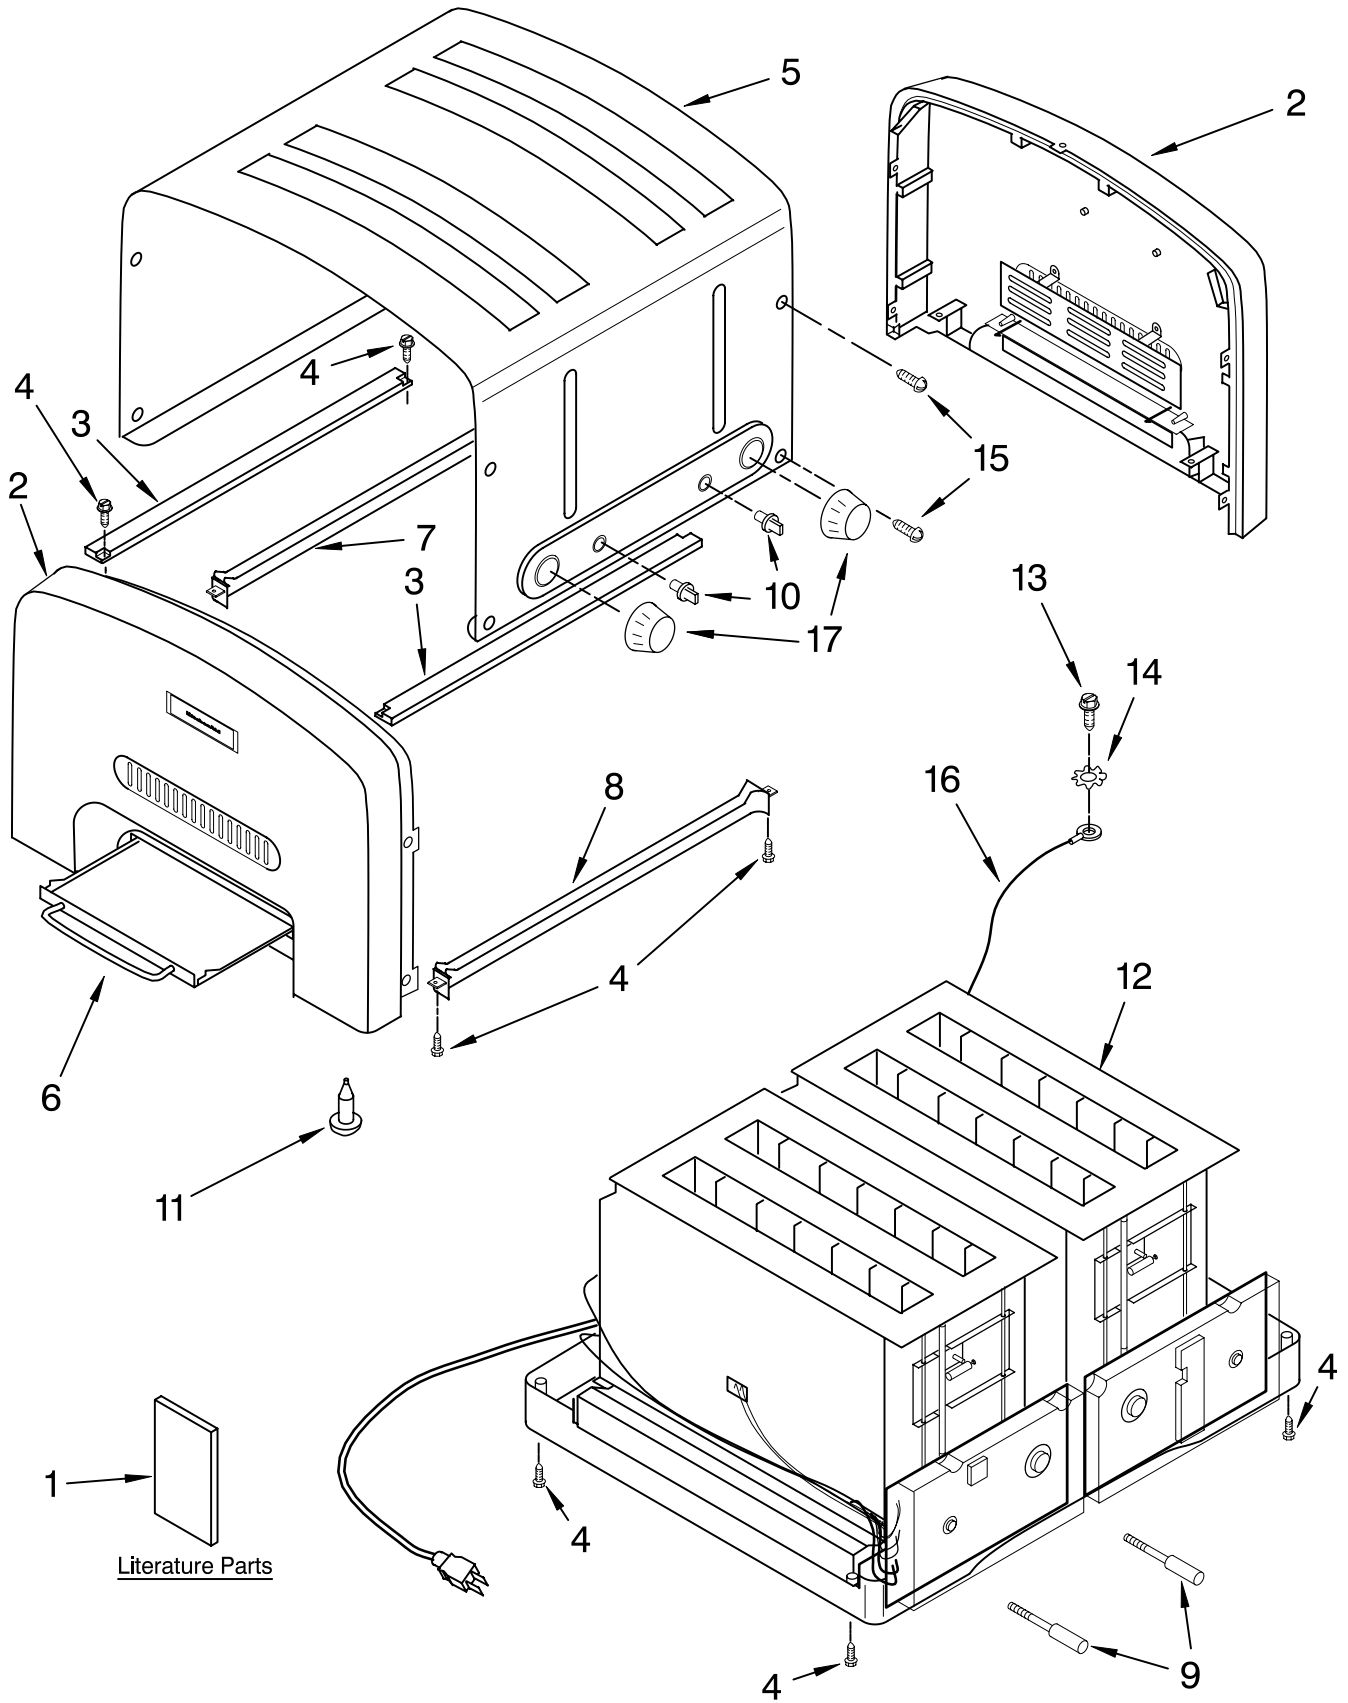

Literature Parts

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

HOUSING PARTS

For Models: KPTT890__0

Illus. No.	Part No.	DESCRIPTION
1		Literature
	8204567	Use & Care Guide
	8212133	Repair Parts List
2		Panel Assembly (Includes Badge & Vent)
	4176815	Pearl Metallic
	4176816	Empire Red
	4176817	Tangerine
	4176818	Cobalt Blue
	8212162	Nickel Pearl
3	4176819	Support
4	4176831	Screw
5	4176813	Wrap Assembly (Includes Items 2 & 10)
6	4176814	Tray, Crumb
7		Bridge, Rear
	4176824	Pearl Metallic
	4176825	Empire Red
	4176826	Tangerine
	4176827	Cobalt Blue
	8212167	Nickel Pearl
8		Bridge, Front
	4176820	Pearl Metallic
	4176821	Empire Red
	4176822	Tangerine
	4176823	Cobalt Blue
	8212166	Nickel Pearl
9	4176832	Arm, Lifter
10	4176838	Knob, On/Off
11	4176837	Foot, Rubber
12	4176808	Chassis (Includes Power Cord, Base, Control Boards, & Heating Elements)
13	4176829	Screw, Grounding
14	4176830	Washer, Lock
15	4176828	Screw, Wrap
16	4176840	Wire, Ground
17	4176839	Knob, Darkness

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST