

This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://Appliance Factory Parts).

 


# KITCHENAID 4KFC3100ER2 Owner's Manual

[Shop genuine replacement parts for KITCHENAID  
4KFC3100ER2](#)

## MOTOR AND HOUSING PARTS

For Models: KFC3100\_2, 4KFC3100\_2

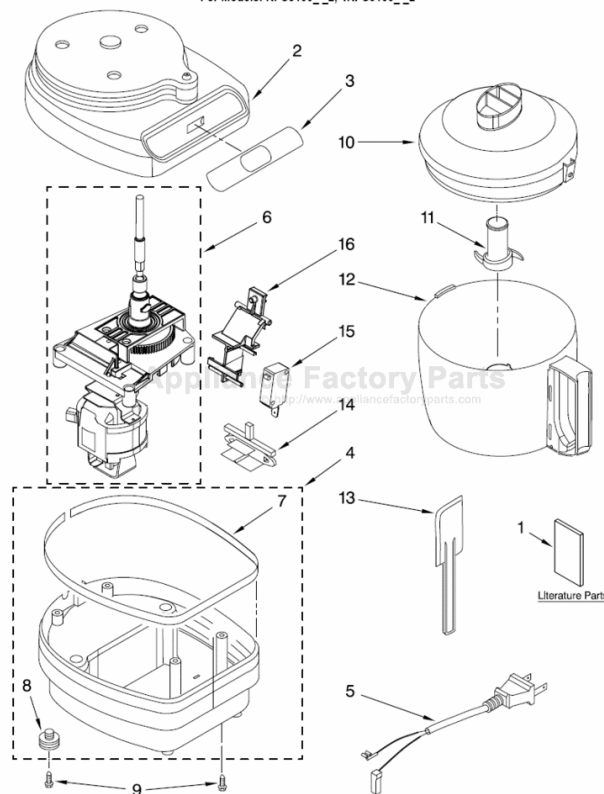

[Find Your KITCHENAID Small Appliance Parts - Select From 538 Models](#)

----- Manual continues below -----

# PARTS LIST

for

# **KitchenAid®**

## **3 CUP FOOD CHOPPER**

### **MODELS:**

KFC3100WH2 (White)  
KFC3100BU2 (Cobalt Blue)  
KFC3100ER2 (Empire Red)  
KFC3100OB2 (Onyx Black)  
KFC3100CR2 (Chrome)  
KFC3100BW2 (Blue Willow)  
KFC3100PK2 (Pink)  
4KFC3100WH2 (White)  
4KFC3100BU2 (Cobalt Blue)  
4KFC3100ER2 (Empire Red)  
4KFC3100OB2 (Onyx Black)  
4KFC3100CR2 (Chrome)

 


FOR CUSTOMER SATISFACTION ALWAYS USE  
FACTORY SPECIFICATION PARTS



# MOTOR AND HOUSING PARTS

For Models: KFC3100\_\_2, 4KFC3100\_\_2

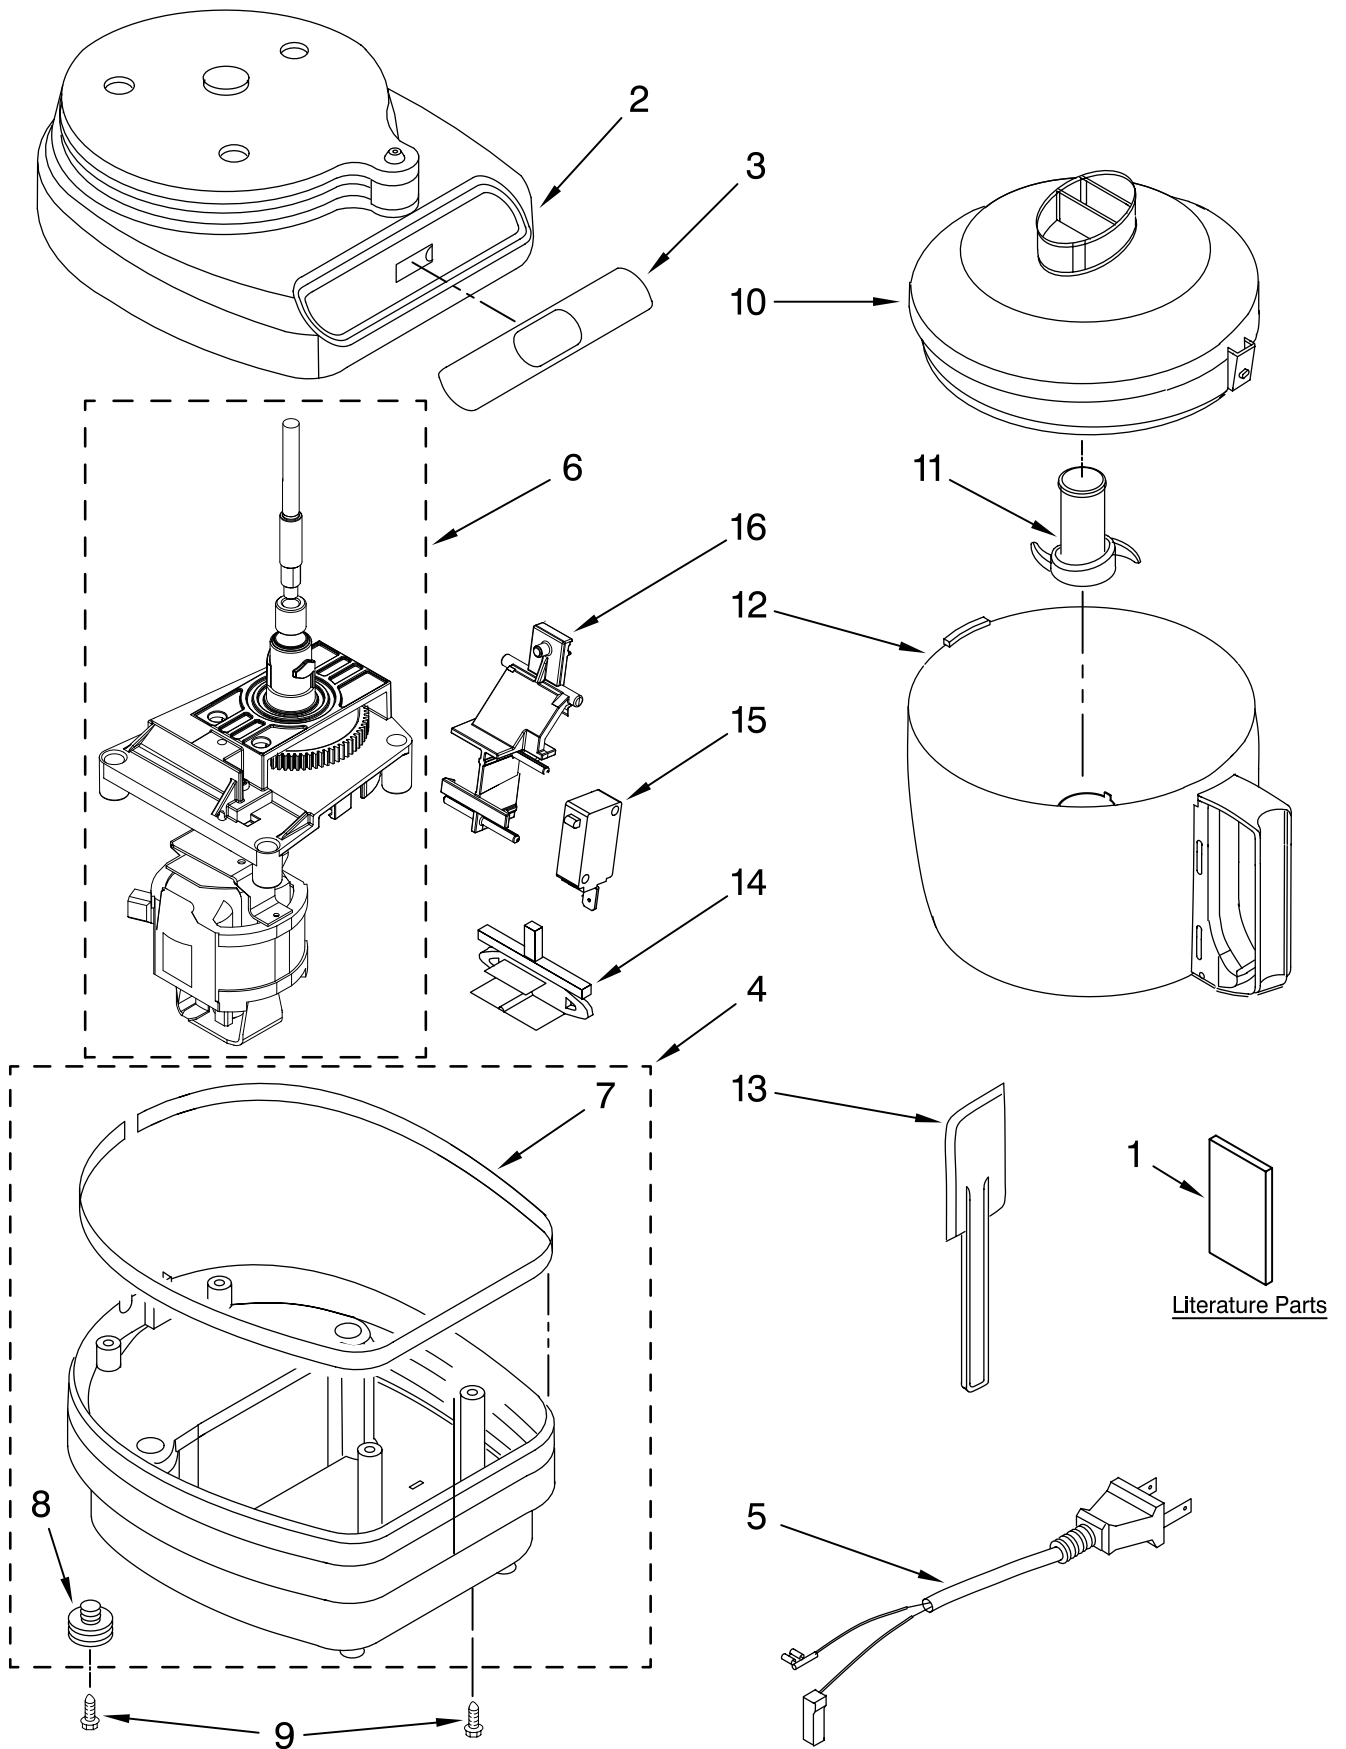

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MOTOR AND HOUSING PARTS

For Models: KFC3100\_\_2, 4KFC3100\_\_2

Illus. No.	Part No.	DESCRIPTION
1	8212295	Literature Parts Use & Care Guide, Trilingual
	8212153	Repair Parts List
2		Upper Housing
	8211769	White
	8211789	Empire Red
	8211792	Cobalt Blue
	8211795	Onyx Black
	8211797	Chrome
	8212292	Blue Willow
	W10158527	Pink
3		Overlay
	8211768	White
	8211788	Empire Red
	8211791	Cobalt Blue
	8211794	Onyx Black & Chrome Models
	8212293	Blue Willow
	W10158636	Pink
4		Base
	8211771	White
	8211790	Empire Red
	8211793	Cobalt Blue
	8211796	Onyx Black
	8211798	Chrome
	8212294	Blue Willow
	W10158528	Pink
5		Cord, Power
	8211778	White
	8211799	Black
6	8211777	Motor Assembly
7	8211785	Band, Trim
8	8211772	Foot
9	8211770	Screw
10	8211775	Lid
11	8211773	Blade Assembly
12	8211774	Bowl Assembly
13	8211787	Spatula
14	8211781	Plate, Backing (Pulse Switch)
15	8211782	Switch, Micro
16	8211783	Mount, Micro Switch

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST