

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



SUNPENTOWN SH-1506 Owner's Manual

[Shop genuine replacement parts for SUNPENTOWN
SH-1506](#)



[Find Your SUNPENTOWN Humidifier Parts - Select From 13 Models](#)

----- Manual continues below -----



 
 
Heater with Humidifier
Model SH-1506

USER MANUAL



**CREATING A CLEAN, HEALTHY LIVING ENVIRONMENT
FOR YOU AND YOUR FAMILY.**

LOCATION OF KEY PARTS AND CONTROLS

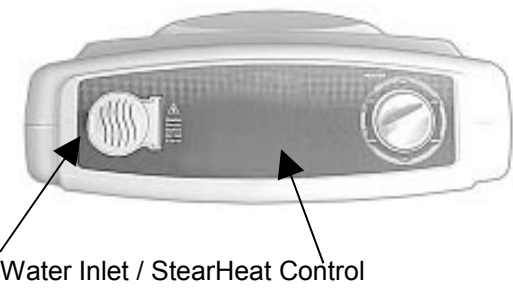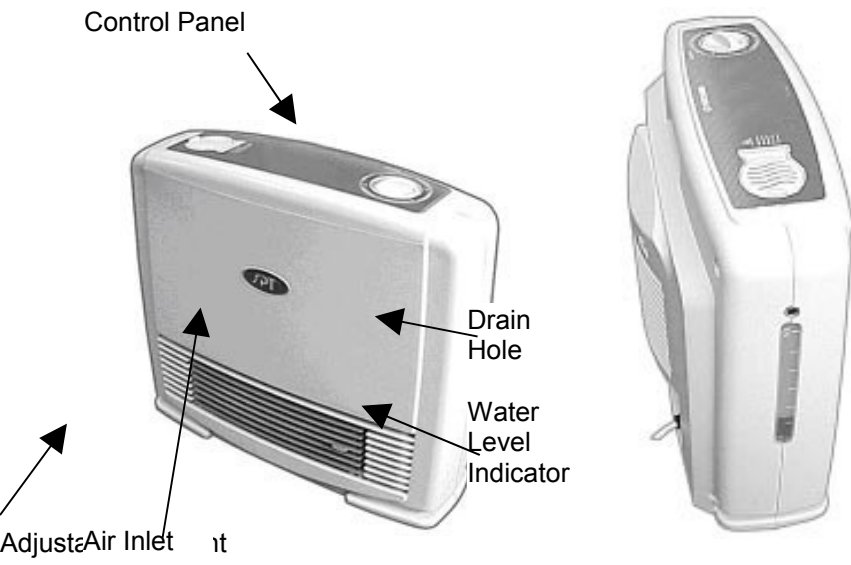

SAFETY

Connecting Power

This appliance is designed to operate on AC 120V, 60Hz supply only. Connecting to other power sources may damage the unit.

Before switching ON, please make sure the voltage of your electricity supply is the same as that indicated on the rating plate.

If it is necessary to replace the fuse in the plug, replace only with a fuse having the same rating as the original.

This appliance must be grounded to avoid a safety hazard.

If the supply cord is damaged, it must be replaced by the manufacturer or a similarly qualified person in order to avoid a hazard.

Other precautions

- Always situate your heater / humidifier on a solid and steady surface. This unit incorporates a safety switch which will activate should the unit be tipped over.
- **WARNING:** Do not cover or place anything on or near the heater / humidifier, which will block the inlets and outlets. Ensure that nothing blocks the airflow to and from the air inlet, air outlet or steam outlet.
- Route the power cable where it will not be walked on, crushed, chafed or cut.
- Do not touch the steam outlet while humidifier is in operation, this area gets hot during operation. The unit may make a boiling noise during humidifier operation – this is normal.
- Do not use the humidifier function if the water tank is empty.
- Do not fill the water tank while the unit is in operation, plugged in or immediately after use. This may cause hot water or steam to be ejected from the steam outlet.
- Do not push any object into any opening and ventilation slots.
- Do not use the heater / humidifier near water (for example: a bath, sink, or pool), in a wet basement or in any damp environment.
- Do not operate if there is any foreign body or liquid inside the

machine. If this happens, immediately switch off unit, disconnect the plug and call a qualified service engineer.

- Never remove any covers.
- Please turn the unit off and unplug before moving.
- **WARNING:** In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket outlet.
- Care should be taken when using the appliance due to the emission of hot water vapor.
- Unplug the appliance during water filling and cleaning.

OPERATION

The heater / humidifier will work most effectively in an average-, or medium-sized room.

HEATER ONLY

- Plug the power cable into a suitable power socket.
- Adjust the heating control knob to the desired setting: LOW or HIGH heat. (Turning to the right side of the dial)
Low: About 700W heat
High: About 1200W heat
- Turn the control knob to the "OFF" position when not in use.

HEATER WITH HUMIDIFIER

Before adding water, first turn OFF the unit at the control knob and unplug from power source.

IMPORTANT NOTE: If the humidifier has just been used, allow the unit to cool before adding any more water, otherwise steam and/or hot water may be ejected from the steam vent during filling.

- Open the steam cover on the left side of the control panel.
- Fill the water tank with clean water, taking care to ensure that the maximum level marked on the water level indicator is not exceeded and that no water enters any other part of the unit.
- Close the steam cover and turn the heating control knob to the desired setting: LOW or HIGH heat with steam. (left side of the dial).
Low: About 750W heat / High: About 1250W heat
- After approximately 6 minutes of heating, steam will begin to generate from the steam outlet.

When the water level reaches the REFILL line on the water level indicator, more water should be added to the water tank.

 
- Turn the control knob to the “OFF” position when not in use.

HINTS AND TIPS

- Clean only with a damp cloth, do not pour water directly onto the unit.
- Clean the filter once a week by removing and cleaning with a vacuum cleaner.
- Unplug the unit if it is not to be used for a long time.

Cleaning the filter

- Turn off the unit at the heater control knob and unplug from the power socket.
- **Remove the fixed screw.**
- Open the filter cover by pushing down on the two filter cover retaining clips and pulling the filter cover downwards.
- Remove the foam filter from the back of the filter cover and clean with a vacuum cleaner.
- Replace the filter and close the filter cover. Make sure the cover is secured by both clips **and replace screw.**

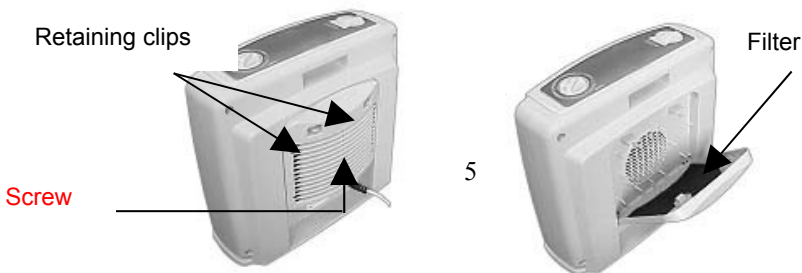

Storage

If the unit is not to be used for some time please unplug from power source and allow unit to cool down. Empty any remaining water from the water tank through the drain hole provided.

SPECIFICATION

	Heat	Heat + Steam
Rated voltage and frequency	120V, 60Hz	120V, 60Hz
Power consumption (High Speed)	About 1200W	About 1250W
Power consumption (Low Speed)	About 700W	About 750W
Weight		9 lbs
Dimensions (W x D x H)	16.5 x 7x 16.25 in	

TROUBLE SHOOTING

If the heater / humidifier does not operate effectively, please check it according to the following steps

If the unit will not start when switched on.

- Check the plug and power source – if necessary try a different appliance in the same power socket to confirm power is available.
- Check that the safety fuse in the plug is intact.
- If unit still does not switch on, please contact Sunpentown Int'l.

If the unit fails to warm the air effectively

- Check that the filter is clean.
- Check that the air inlet and outlet are not blocked

CUSTOMER ASSISTANCE LINE

If you experience a problem, please see the warranty for information. Please **DO NOT** attempt to repair this unit yourself. Doing so, will void your warranty and could cause damage to the fan or personal injury to yourself. If you have any questions concerning this appliance, please call: **1-909-468-5288**

YOUR GUARANTEE

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This **GUARANTEE** is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.
21415 Baker Parkway, City of Industry, CA 91789-5236
909-468-5288 / Fax: 909-468-5279
service@sunpentown.com