

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Black & Decker CJ630 Owner's Manual

[Shop genuine replacement parts for Black & Decker
CJ630](#)



[Find Your Black & Decker Small Appliance Parts - Select From 395 Models](#)

----- Manual continues below -----

Size: 19.685" x 17.5"

Este aparato eléctrico es para uso doméstico únicamente.

CONSERVE ESTAS INSTRUCCIONES.

- No permita que el cable cuelgue del borde de la mesa ni del mostrador.
- Este aparato no se debe utilizar a la intemperie, lesiones personales.
- El uso de accesorios no recomendados por el fabricante del aparato podría ocasionar incendios, choques eléctricos o mecánicos.
- No opere este artefacto si tiene el cable o enchufe dañado, después de un mal funcionamiento o si se ha caído o dañado de alguna manera. Lleve el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste eléctrico o mecánico.
- Evite el contacto con piezas o partes en movimiento.
- No opere este artefacto si tiene el cable o enchufe dañado, después de un mal funcionamiento o si se ha caído o dañado de alguna manera. Lleve el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste eléctrico o mecánico.
- Evite el contacto con piezas o partes en movimiento.
- Desconecte el aparato de la toma de corriente cuando no esté utilizado por minutos o cerca de ellos.
- La supervisión de un adulto es necesaria cuando el aparato es utilizado por niños o cerca de ellos.
- Lea todas las instrucciones.
- Al utilizar cualquier aparato eléctrico siempre deben tomarse precauciones básicas de seguridad, incluyendo las siguientes:

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

¡NECESITA AYUDA!
Para servicio, reparaciones o preguntas relacionadas al producto, por favor llame al número del centro de servicio en el país donde usted compró su producto. NO devuelva el producto al fabricante. Llame o lleve el producto a un centro de servicio autorizado.

Un año de garantía limitada
(No aplica en México, Estados Unidos o Canadá)
¿Qué cubre la garantía?
• La garantía cubre cualquier defecto de materiales o de mano de obra. Aplica no se responsabiliza por ningún costo que exceda el valor de compra del producto.

¿Por cuánto tiempo es válida la garantía?
• Por un año a partir de la fecha original de compra.
¿Cómo se puede obtener servicio?
• Conserve el recibo original de compra.
• Por favor llame al número del centro de servicio autorizado.

Esta garantía no cubre:
• Los productos que han sido utilizados en condiciones distintas a las normales
• Los daños ocasionados por el mal uso, el abuso o negligencia
• Los productos que han sido alterados de alguna manera
• Los daños ocasionados por el uso comercial del producto
• Los productos utilizados o reparados fuera del país original de compra
• Las piezas de vidrio y demás accesorios empacados con el aparato
• Los gastos de franquicia y empaque asociados al reemplazo del producto
• Los daños y perjuicios indirectos o incidentales.

¡NECESITA AYUDA!
Para servicio, reparaciones o preguntas relacionadas al producto, por favor llame al número del centro de servicio en el país donde usted compró su producto. NO devuelva el producto al fabricante. Llame o lleve el producto a un centro de servicio autorizado.

Un año de garantía limitada
(No aplica en México, Estados Unidos o Canadá)
¿Qué cubre la garantía?
• La garantía cubre cualquier defecto de materiales o de mano de obra. Aplica no se responsabiliza por ningún costo que exceda el valor de compra del producto.

¿Por cuánto tiempo es válida la garantía?
• Por un año a partir de la fecha original de compra.
¿Cómo se puede obtener servicio?
• Conserve el recibo original de compra.
• Por favor llame al número del centro de servicio autorizado.

Esta garantía no cubre:
• Los productos que han sido utilizados en condiciones distintas a las normales
• Los daños ocasionados por el mal uso, el abuso o negligencia
• Los productos que han sido alterados de alguna manera
• Los daños ocasionados por el uso comercial del producto
• Los productos utilizados o reparados fuera del país original de compra
• Las piezas de vidrio y demás accesorios empacados con el aparato
• Los gastos de franquicia y empaque asociados al reemplazo del producto
• Los daños y perjuicios indirectos o incidentales.

NEED HELP!
For service, repair or any questions regarding your appliance, call the appropriate 800 number on the cover of this book. **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to the manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

One-Year Limited Warranty
(Applies only in the United States and Canada)
What does it cover?
• Any defect in material or workmanship; provided; however, Applic's liability will not exceed the purchase price of the product.

For how long?
• One years after the date of original purchase.
What will we do to help you?
• Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?
• Save your receipt as proof of the date of sale.
• Check our on-line service site at www.prodprotect.com/applica, or call our toll-free number, 1-800-231-9786, for general warranty service.
• If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?
• Damage from commercial use
• Damage from misuse, abuse or neglect
• Products that have been modified in any way
• Products used or serviced outside the country of purchase
• Glass parts and other accessory items that are packed with the unit
• Shipping and handling costs associated with the replacement of the unit
• Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?
• This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

IMPORTANT SAFEGUARDS
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

ELECTRICAL CORDS
(a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
(b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
(c) If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
(2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
(3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel. In Latin America, by an authorized service center.

BLACK&DECKER is a trademark of The Black & Decker Corporation, Towson, Maryland, USA
Marca registrada de The Black & Decker Corporation, Towson, Maryland, E.U.

NEED HELP!
For service, repair or any questions regarding your appliance, call the appropriate 800 number on the cover of this book. **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to the manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

One-Year Limited Warranty
(Applies only in the United States and Canada)
What does it cover?
• Any defect in material or workmanship; provided; however, Applic's liability will not exceed the purchase price of the product.

For how long?
• One years after the date of original purchase.
What will we do to help you?
• Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?
• Save your receipt as proof of the date of sale.
• Check our on-line service site at www.prodprotect.com/applica, or call our toll-free number, 1-800-231-9786, for general warranty service.
• If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?
• Damage from commercial use
• Damage from misuse, abuse or neglect
• Products that have been modified in any way
• Products used or serviced outside the country of purchase
• Glass parts and other accessory items that are packed with the unit
• Shipping and handling costs associated with the replacement of the unit
• Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?
• This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

IMPORTANT SAFEGUARDS
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

ELECTRICAL CORDS
(a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
(b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
(c) If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
(2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
(3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel. In Latin America, by an authorized service center.

BLACK&DECKER is a trademark of The Black & Decker Corporation, Towson, Maryland, USA
Marca registrada de The Black & Decker Corporation, Towson, Maryland, E.U.

NEED HELP!
For service, repair or any questions regarding your appliance, call the appropriate 800 number on the cover of this book. **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to the manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

One-Year Limited Warranty
(Applies only in the United States and Canada)
What does it cover?
• Any defect in material or workmanship; provided; however, Applic's liability will not exceed the purchase price of the product.

For how long?
• One years after the date of original purchase.
What will we do to help you?
• Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?
• Save your receipt as proof of the date of sale.
• Check our on-line service site at www.prodprotect.com/applica, or call our toll-free number, 1-800-231-9786, for general warranty service.
• If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?
• Damage from commercial use
• Damage from misuse, abuse or neglect
• Products that have been modified in any way
• Products used or serviced outside the country of purchase
• Glass parts and other accessory items that are packed with the unit
• Shipping and handling costs associated with the replacement of the unit
• Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?
• This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.



Register your product online
www.prodprotect.com/applica
for a chance to WIN \$100,000!
For US residents only

Registre su producto por Internet en www.prodprotect.com/applica tendrá la oportunidad de GANAR \$100,000!
Solamente para residentes de E.U.

Modelo
CJ630

Accessories/Parts (USA/Canada)
Accesorios/Partes (EE.UU./Canadá)
1-800-738-0245

 
Size: 19.685" x 17.5"

Product may vary slightly from what is illustrated.



- † 1. Storage cover (Part # CJ630-01)
 - † 2. Large self-reversing cone (Part # CJ630-02)
 - † 3. Small self-reversing cone with stirrers (Part # CJ630-03)
 - † 4. Strainer with adjustable pulp control (Part # CJ630-04)
 - 5. Handle
 - † 6. Clear-view, 1-Liter (34-oz.) container (Part # CJ630-05)
 - 7. Base stem
 - 8. Base
 - 9. Built-in cord wrap
- Note:** † indicates consumer replaceable/removable parts

ASSEMBLING YOUR JUICER

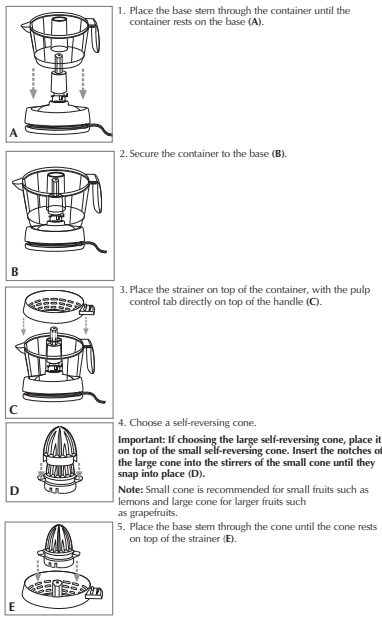

1. Place the base stem through the container until the container rests on the base (A).
 2. Secure the container to the base (B).
 3. Place the strainer on top of the container, with the pulp control tab directly on top of the handle (C).
 4. Choose a self-reversing cone.
- Important:** If choosing the large self-reversing cone, place it on top of the small self-reversing cone. Insert the notches of the large cone into the stirrers of the small cone until they snap into place (D).
- Note:** Small cone is recommended for small fruits such as lemons and large cone for larger fruits such as grapefruits.
5. Place the base stem through the cone until the cone rests on top of the strainer (E).

How to Use

 
- This product is for household use only.
1. Wash all parts as instructed in the CARE AND CLEANING section.
 2. Assemble your juicer as instructed in the ASSEMBLING YOUR JUICER section.
 3. Unwrap the cord from the base.
 4. Plug the cord into a standard electrical outlet.

Este producto puede variar ligeramente del que aparece ilustrado.



- † 1. Tapa de almacenamiento (Pieza N° CJ630-01)
 - † 2. Cono grande autorreversible (Pieza N° CJ630-02)
 - † 3. Cono pequeño autorreversible, con agitador (Pieza N° CJ630-03)
 - † 4. Colador con control de pulpa ajustable (Pieza N° CJ630-04)
 - 5. Asa
 - † 6. Jarra transparente de 1 litro (34-oz.) (Pieza N° CJ630-05)
 - 7. Soporte de la base
 - 8. Base
 - 9. Guardacable
- Nota:** † indica piezas desmontables/reemplazables por el consumidor


CÓMO ARMAR EL EXPRIMIDOR

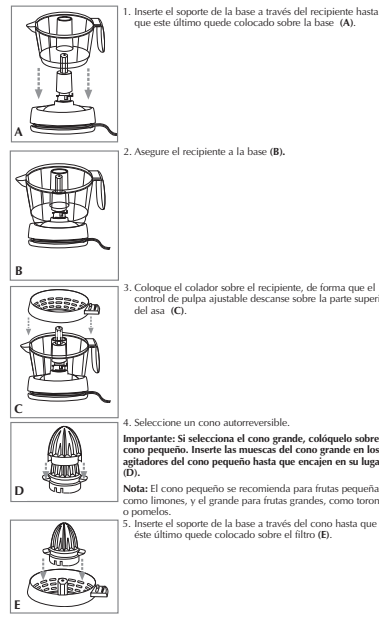

1. Inserte el soporte de la base a través del recipiente hasta que este último quede colocado sobre la base (A).
 2. Asegure el recipiente a la base (B).
 3. Coloque el colador sobre el recipiente, de forma que el control de pulpa ajustable descansa sobre la parte superior del asa (C).
 4. Seleccione un cono autorreversible.
- Importante:** Si selecciona el cono grande, colóquelo sobre el cono pequeño. Inserte las muescas del cono grande en los agitadores del cono pequeño hasta que encajen en su lugar (D).
- Nota:** El cono pequeño se recomienda para frutas pequeñas, como limones, y el grande para frutas grandes, como toronjas o pomelos.
5. Inserte el soporte de la base a través del cono hasta que este último quede colocado sobre el filtro (E).

Como usar

 - Este producto está diseñado únicamente para uso doméstico.
1. Lave todas las piezas según las instrucciones de la sección CUIDADO Y LIMPIEZA.
 2. Arme el exprimidor según las instrucciones de la sección CÓMO ARMAR EL EXPRIMIDOR.
 3. Desenrolle el cable de la base.
 4. Conecte el cable a un tomacorriente estándar.

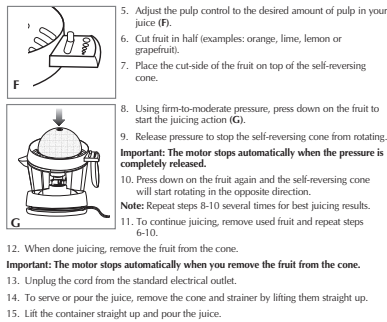

5. Adjust the pulp control to the desired amount of pulp in your juice (F).
6. Cut fruit in half (examples: orange, lime, lemon or grapefruit).
7. Place the cut-side of the fruit on top of the self-reversing cone.
8. Using firm-to-moderate pressure, press down on the fruit to start the juicing action (G).
9. Release pressure to stop the self-reversing cone from rotating.
10. Press down on the fruit again and the self-reversing cone will start rotating in the opposite direction.
11. To continue juicing, remove used fruit and repeat steps 6-10.

12. When done juicing, remove the fruit from the cone.

Important: The motor stops automatically when you remove the fruit from the cone.

13. Unplug the cord from the standard electrical outlet.

 
14. To serve or pour the juice, remove the cone and strainer by lifting them straight up.

15. Lift the container straight up and pour the juice.

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

- TO CLEAN:**
1. Always unplug the unit before cleaning or when not in use.
 2. Remove the cover (first time use), cone and strainer from the container by lifting them straight up.
 3. Immediately rinse the cone and strainer with water after each use.
 4. Lift the container straight up.
 5. Use warm, sudsy water to wash all removable parts (cover, cones, strainer and container) or place them in the dishwasher — top rack ONLY.
 6. Use a bristle brush to remove fine pulp that may remain on the strainer.
 7. Wipe the base with a damp cloth or sponge; do not immerse in water or place in the dishwasher.
 8. Dry all parts before reassembling your juicer (see ASSEMBLING YOUR JUICER section).
- TO STORE:**
1. Unplug the unit.
 2. Wrap the cord around the base of the unit.
 3. Before reassembling your juicer, make sure all parts are dry (see ASSEMBLING YOUR JUICER section).
 4. Place storage cover over the juicer to keep it dust free.

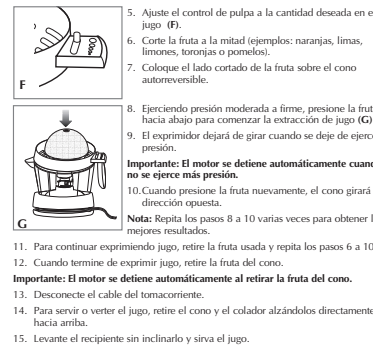

5. Ajuste el control de pulpa a la cantidad deseada en el jugo (F).
6. Corte la fruta a la mitad (ejemplos: naranjas, limas, limones, toronjas o pomelos).
7. Coloque el lado cortado de la fruta sobre el cono autorreversible.
8. Ejerciendo presión moderada a firme, presione la fruta hacia abajo para comenzar la extracción de jugo (G).
9. El exprimidor dejará de girar cuando se deje de ejercer presión.
10. Cuando presione la fruta nuevamente, el cono girará en dirección opuesta.
11. Para continuar exprimiendo jugo, retire la fruta usada y repita los pasos 6 a 10.
12. Cuando termine de exprimir jugo, retire la fruta del cono.
13. **Importante:** El motor se detiene automáticamente al retirar la fruta del cono.
14. Para servir o verter el jugo, retire el cono y el colador alzándolos directamente hacia arriba.
15. Levante el recipiente sin inclinarlo y sirva el jugo.

Cuidado y limpieza

Este producto no contiene piezas reparables por el consumidor. Toda reparación se debe llevar a cabo por personal de servicio autorizado.

PARA LIMPIAR:

1. Desenchúfe siempre el aparato antes de limpiarlo o cuando no lo esté utilizando.
2. Retire la tapa (en el primer uso), el cono y el filtro del recipiente.
3. Lave el cono y el filtro con agua inmediatamente después de cada uso.
4. Alce el recipiente sin inclinarlo.
5. Lave todas las piezas desmontables (tapa, conos, filtro y recipiente) en agua tibia en la bandeja superior de la máquina lavaplatos.
6. Retire la pulpa pequeña que puede quedar en el filtro con un cepillo de cerdas.
7. Pase un paño húmedo o esponja a la base; no la sumerja en agua ni la coloque en la máquina lavaplatos.
8. Las piezas deben estar secas antes de volver a armar el exprimidor (consulte la sección CÓMO ARMAR EL EXPRIMIDOR).

PARA GUARDAR:

1. Desenchúfe el aparato.
2. Enrolle el cable alrededor de la base.
3. Antes de volver a armar el exprimidor asegúrese de las piezas estén secas (consulte la sección CÓMO ARMAR EL EXPRIMIDOR).
4. Colóquelo la funda al aparato para mantenerlo sin polvo.