

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# Jenn Air JTO500WAAW Owner's Manual

[Shop genuine replacement parts for Jenn Air  
JTO500WAAW](#)



[Find Your Jenn Air Small Appliance Parts - Select From 28 Models](#)

----- Manual continues below -----

# TOASTER INSTRUCTIONS

Drawing on the Jenn-Air® 40-year heritage of producing high-end, high-performing appliances for gourmet cooks, the Jenn-Air™ Attrezzi™ toaster is as durable as it is beautiful. To get the most from this unique kitchen product, refer to the following use, care and maintenance tips ... and you can also download the user guide.



## TOASTER USE, CARE AND MAINTENANCE TIPS

Following are some helpful tips to safely use and care for your toaster:

- To protect against risk of electrical shock, do not immerse the cord, plug, or toaster in water or other liquids.
- Never leave toaster unattended while in operation. Close supervision is necessary when any appliance is used by or near children.
- To disconnect when not in use, ensure all controls are in the "Off" position. The START/STOP button should not be illuminated. Then unplug toaster from wall outlet.
- Do not touch hot surfaces. Use handles or knobs. Always use caution when moving.
- Allow the toaster to cool before storing. Unplug the toaster from outlet when not in use and let it cool before cleaning.
- Using accessories or attachments not recommended or sold by the appliance manufacturer for use with this model, including sandwich racks or bun warmers, is not recommended and may cause fire, electric shock or injury to persons.
- Do not insert oversized foods, metal packages, foil, utensils or materials of any kind into the toaster as they may introduce the risk of fire or electric shock.
- The power cord is detachable for storage and is interchangeable with other Jenn-Air™ Attrezzi™ small appliances.