

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# Coleman 4347-712 Owner's Manual

[Shop genuine replacement parts for Coleman 4347-712](#)



[Find Your Coleman Camping Parts - Select From 855 Models](#)

----- Manual continues below -----



Some items shown may be sold separately.  
CR123A Flashlight Series.  
Works with Coleman® Exponent®  
Collapsible Lantern only

WITH CR123A FLASHLIGHTS

COLLAPSIBLE LANTERN

How to Use and Enjoy Your Coleman®

Exponent®



### 3 Year Limited Warranty

The Coleman Company, Inc. ("Coleman") warrants that for a period of three (3) years from the date of purchase, this product will be free from defects in material and workmanship. Coleman, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. No warranty is provided for batteries and lightbulbs. This is your exclusive warranty.


This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers or retail stores selling Coleman® products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use of non-Coleman accessories or parts, use contrary to the operating instructions or failure to follow maintenance instructions, commercial, in profit or non-profit instructional or rental applications, disassembly, repair or alteration by anyone other than Coleman or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

**COLEMAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, BREACH OF CONTRACT OR OTHERWISE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY. SOME STATES, PROVINCES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.**

### THINGS YOU SHOULD KNOW

1. On a new set of lithium batteries, approximate run time of up to 6 hrs. on Low; and up to 1.5 hrs. on High.
2. When the LED is not lit to full brilliance, batteries should be replaced.
3. The Exponent® Collapsible Lantern is an accessory product to the Exponent® CR123A Flashlight Series. The Collapsible Lantern does not include any light source; it is used in conjunction with the flashlight.
4. Visit [www.coleman.com](http://www.coleman.com) to purchase additional items compatible with this product.

©2007 The Coleman Company, Inc.  
All rights reserved. Coleman®,  and  
Coleman® are registered trademarks of

The Coleman Company, Inc.

Made in China 1007

### How to Obtain Warranty Service

Take the product to an authorized Coleman service center. You can find the nearest authorized Coleman service center by visiting [www.coleman.com](http://www.coleman.com) or calling 1-800-835-3278 or TDD 316-832-8707 in the United States or 1 800 387-6161 in Canada. If a service center is not conveniently located, attach to the product a tag that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt. Carefully package the product and send either by **courier** or **insured mail** with shipping and insurance prepaid to:

### For products purchased in the United States:

The Coleman Company, Inc.  
3600 North Hydraulic  
Wichita, KS 67219

### For products purchased in Canada:

Sunbeam Corporation (Canada) Limited  
DBA Jarden Consumer Solutions  
20B Hereford Street  
Brampton (Ontario) L6Y 0M1

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

If you have any questions regarding this warranty please call 1-800-835-3278 or TDD 316-832-8707.

## TO INSTALL OR REPLACE BATTERIES

Carefully read all instructions before use and save for future reference. Your new Exponent® flashlight operates on “CR123A” lithium cell batteries.

1. Rotate end cap counterclockwise to remove. (Fig. 1)
2. Install “CR123A” batteries in the correct orientation as shown on the battery housing. Make certain all batteries are installed correctly. (Fig. 2 & Fig. 3)
3. Replace end cap and rotate clockwise until tightened.



Fig. 1

 


Fig. 2

 


Fig. 3

## TO ATTACH COLLAPSIBLE LANTERN TO “CR123A” FLASHLIGHT

1. Insert the threaded end of the collapsible lantern into the “light” end of the “CR123” flashlight. (Fig. 4)
2. Turn collapsible lantern clockwise to secure. (Fig. 4)

**NOTE:** To avoid damage to the collapsible lantern or flashlight, do not overtighten.

## TO OPEN COLLAPSIBLE LANTERN

1. While firmly holding flashlight, grasp end of collapsible lantern and pull out until fully extended. (Fig. 5)
2. Set the opened lantern on a level surface or hang with the attached lanyard to illuminate a desired area.
3. See “Operating Instructions” for the selection of lighting options.

 


Fig. 4

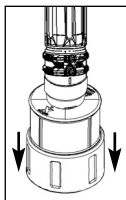 



Fig. 5

## OPERATING INSTRUCTIONS

Your Exponent® flashlight allows you to choose the type of lighting you prefer; standard white light or a bright red light. Select the color of light as follows:

1. Rotate the collar to the right until the “R” symbol is aligned with the selection indicator for red lighting; or to the left until the “W” symbol is aligned with the selection indicator for white lighting. (Fig. 6)
2. When the “” (Lock-out feature) is aligned with the selection indicator, the flashlight will not turn on. (Fig. 6)
3. After selecting the color of light, turn on the flashlight by pushing the 4-position tail cap (rubber button) (Fig. 7). The number of times you push the button will let you choose your lighting preference:
  - Once for on and full brightness
  - Twice for more subdued lighting
  - Three times for flashing emergency signal light
  - Fourth will turn flashlight off.
4. Your flashlight is equipped with “Smart Switch” technology. Push button to cycle through settings, but if left on any setting for a few seconds, the next activation turns off flashlight

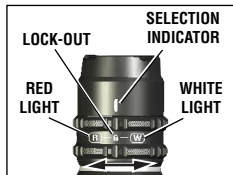 


Fig. 6

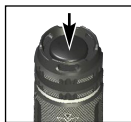 


Fig. 7