

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Coleman 2000001978 Owner's Manual

[Shop genuine replacement parts for Coleman
2000001978](#)



[Find Your Coleman Camping Parts - Select From 855 Models](#)

----- Manual continues below -----

Before you begin

Read all instructions before set up.

- Select a level site clear of rocks, branches, and other hard or sharp objects, to install your tent.

⚠ WARNING: Keep clear of overhead power lines.

- Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- Secure with **all** stakes and guylines provided to prevent property damage or personal injury.
- For best results in windy conditions, position narrow end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

Pole Descriptions

Description	Qty.	Pole Dia.	Pole Repair Kit	Pole Replacement Kit
Main Poles, black	1	11mm	5010000539	5010000549

To Set Up Tent

1. Unfold tent and spread out on a clean, level surface with the door facing perpendicular to the wind direction. Unzip door.
2. Stretch out corners and sides of tent. Secure four corners with stakes driven in at an angle through the loops, at the end of the web straps, to better anchor the tent (Fig. 1 & 2).

Note: Staking the corners will make it easier to raise and tear-down the tent.

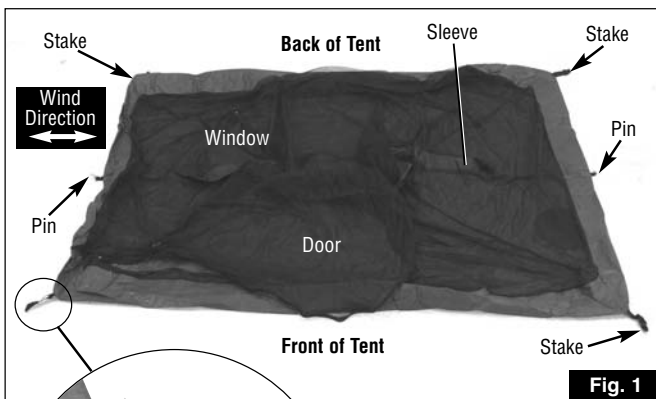


Fig. 1

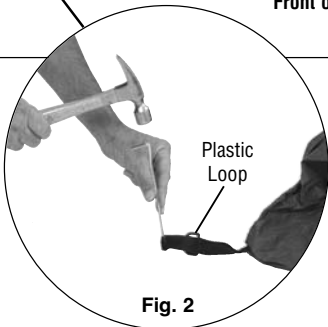


Fig. 2

IMPORTANT:
Never drive stakes through plastic loops on the web straps.

3. Assemble main pole by interlocking the black, shock-corded, sections.
4. Insert main pole through sleeve in top of tent. (Fig. 1)
5. Insert one end of black main pole into pin on metal loop located at either end of tent. (Fig. 3)

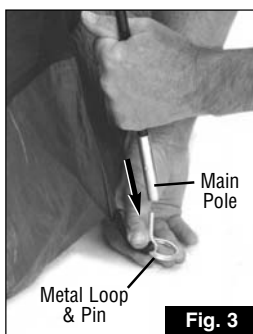


Fig. 3

6. Go to opposite end of the main pole and gradually apply pressure to the pole forming an arch. Insert the pin into the pole end. (Fig. 3 & 4)



Fig. 4

6. Drive in stakes at an angle through the two metal loops to help anchor the sides of the tent.

To Attach Rainfly

1. Drape rainfly over tent. Make sure vestibule and window on the rainfly are positioned over the tent door and the window on the tent. (Fig. 5)

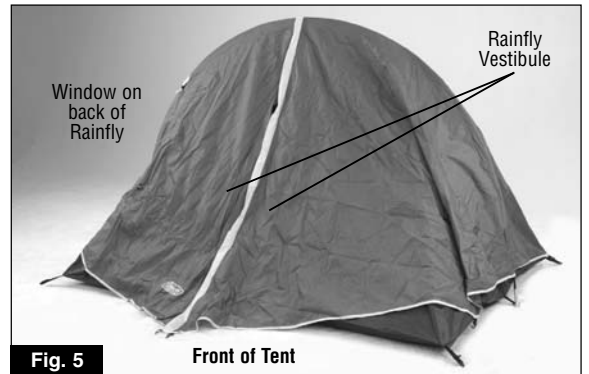


Fig. 5

2. Unzip door on rainfly and fold back flaps for better access to the hook & loop fasteners on the underside of the rainfly. (Fig. 6)
3. Wrap the hook & loop fasteners around the main pole to secure (Fig. 7). There are seven fasteners located on the rainfly.

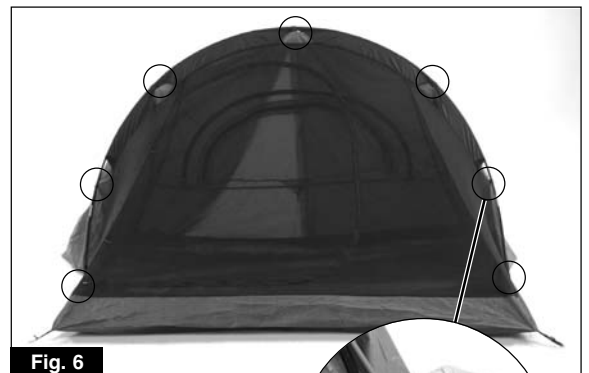


Fig. 6

IMPORTANT:
Make certain all seven hook & loop fasteners are secured before moving on to next assembly step.

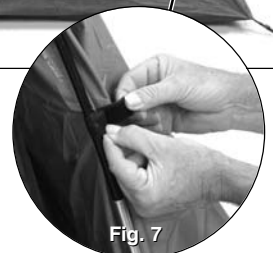


Fig. 7

(continued on other side)

To Attach Rainfly (continued)

4. Pull down the two vestibule flaps on the rainfly after all seven hook & loop fasteners are secured.
5. Attach the hooks on the rainfly to the plastic loops on the four corner web straps (Fig. 8), and the metal loops on the sides of the tent.



Fig. 8

6. Locate the elastic loop, on the back of rainfly, stretch until taut, and secure with a stake.
7. Tie guylines (5 total) onto web straps located on the sides and back of the rainfly, stretch until taut, and secure with stakes. (Fig 9 & 10)

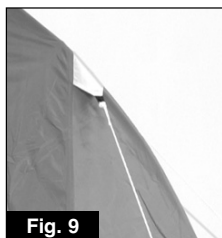


Fig. 9

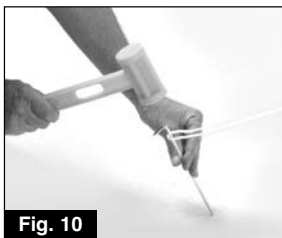


Fig. 10

Vestibule, Window Flap & Vent

The vestibule, on the front of the rainfly, provides privacy and space for gear storage. Both flaps may be rolled back and secured for maximum air flow.

1. Unzip rainfly vestibule, roll up one or both flaps, then insert toggle through fabric loop to secure. (Fig. 11 & 12)
2. If using as a windbreak: select one flap, stretch elastic cord until taut, then secure with a stake (Fig. 13). Roll the other flap back and secure by inserting toggle through fabric loop. (Fig. 12)



Front of Tent

Fig. 11

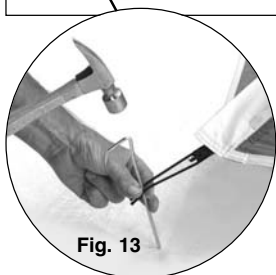


Fig. 13



Fig. 12

Vestibule, Window Flap & Vent (continued)

Your tent has a unique window vent feature. The window flap on the rainfly as well as the window on the tent can both be unzipped and rolled up for unobstructed airflow or viewing.

3. Unzip the rainfly window flap and/or the tent window, roll up one or both flaps, then insert toggle through fabric loops to secure. (Fig. 14)

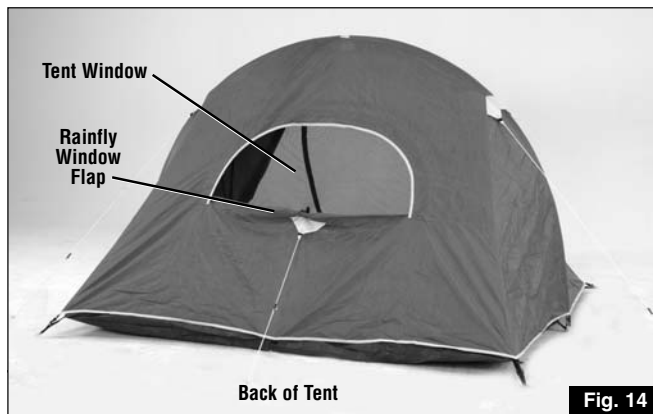


Fig. 14

To Store

1. All stakes and the main pole must be placed in the storage bags to prevent damage to the fabric items placed in the carry case.
2. Make sure tent is clean and dry before placing in carry case.
3. Neatly fold tent and rainfly, place main pole and stakes in storage bags, then roll tightly and place in carry case.
4. Store in a clean, dry area.

Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Tree limbs, tree sap, bird droppings, or moisture steadily dripping off tree limbs can cause damage to the tent fabric and its coating resulting in leaks or loss of flame-resistant properties.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- Stakes should be removed by pulling on the stake itself. NEVER PULL ON THE TENT TO REMOVE STAKES AS THIS COULD RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY.
- Tent poles should not be left telescoped together during storage.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

⚠ WARNING: Keep all flame and heat sources away from this tent fabric.



This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2008 The Coleman Company, Inc.

Coleman®, , and  are registered trademarks and Hooligan™ is a trademark of The Coleman Company, Inc.