


EXPLODED VIEW


DOOR PARTS

(SCB2000CWW, SCB2000CBB, SCB2000CAA, SCB2000CCC, SCB2001CSS)

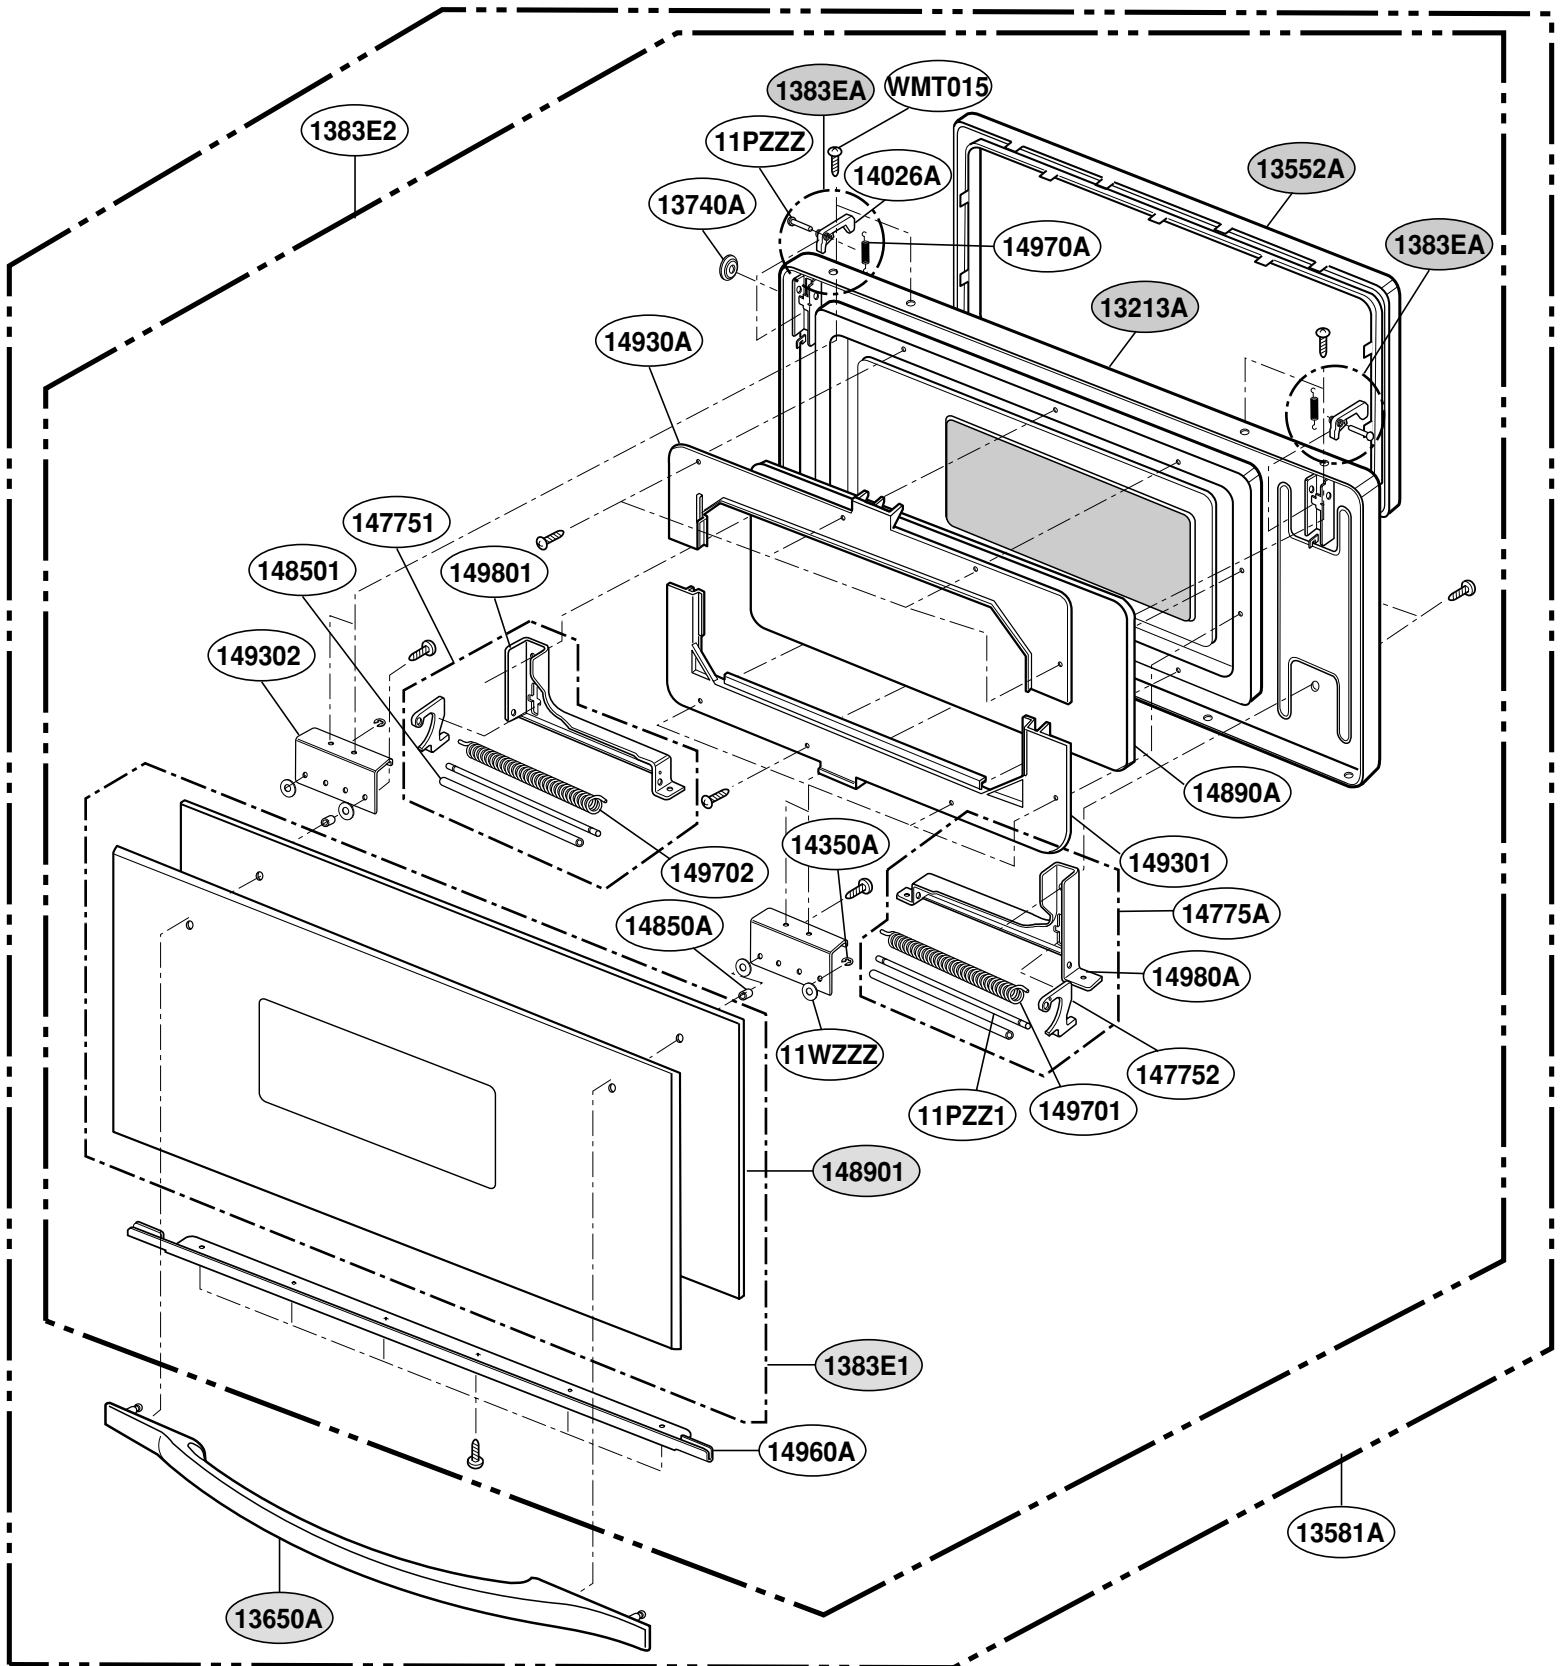


CONTROLLER PARTS

(SCB2000CWW, SCB2000CBB, SCB2000CAA, SCB2000CCC)

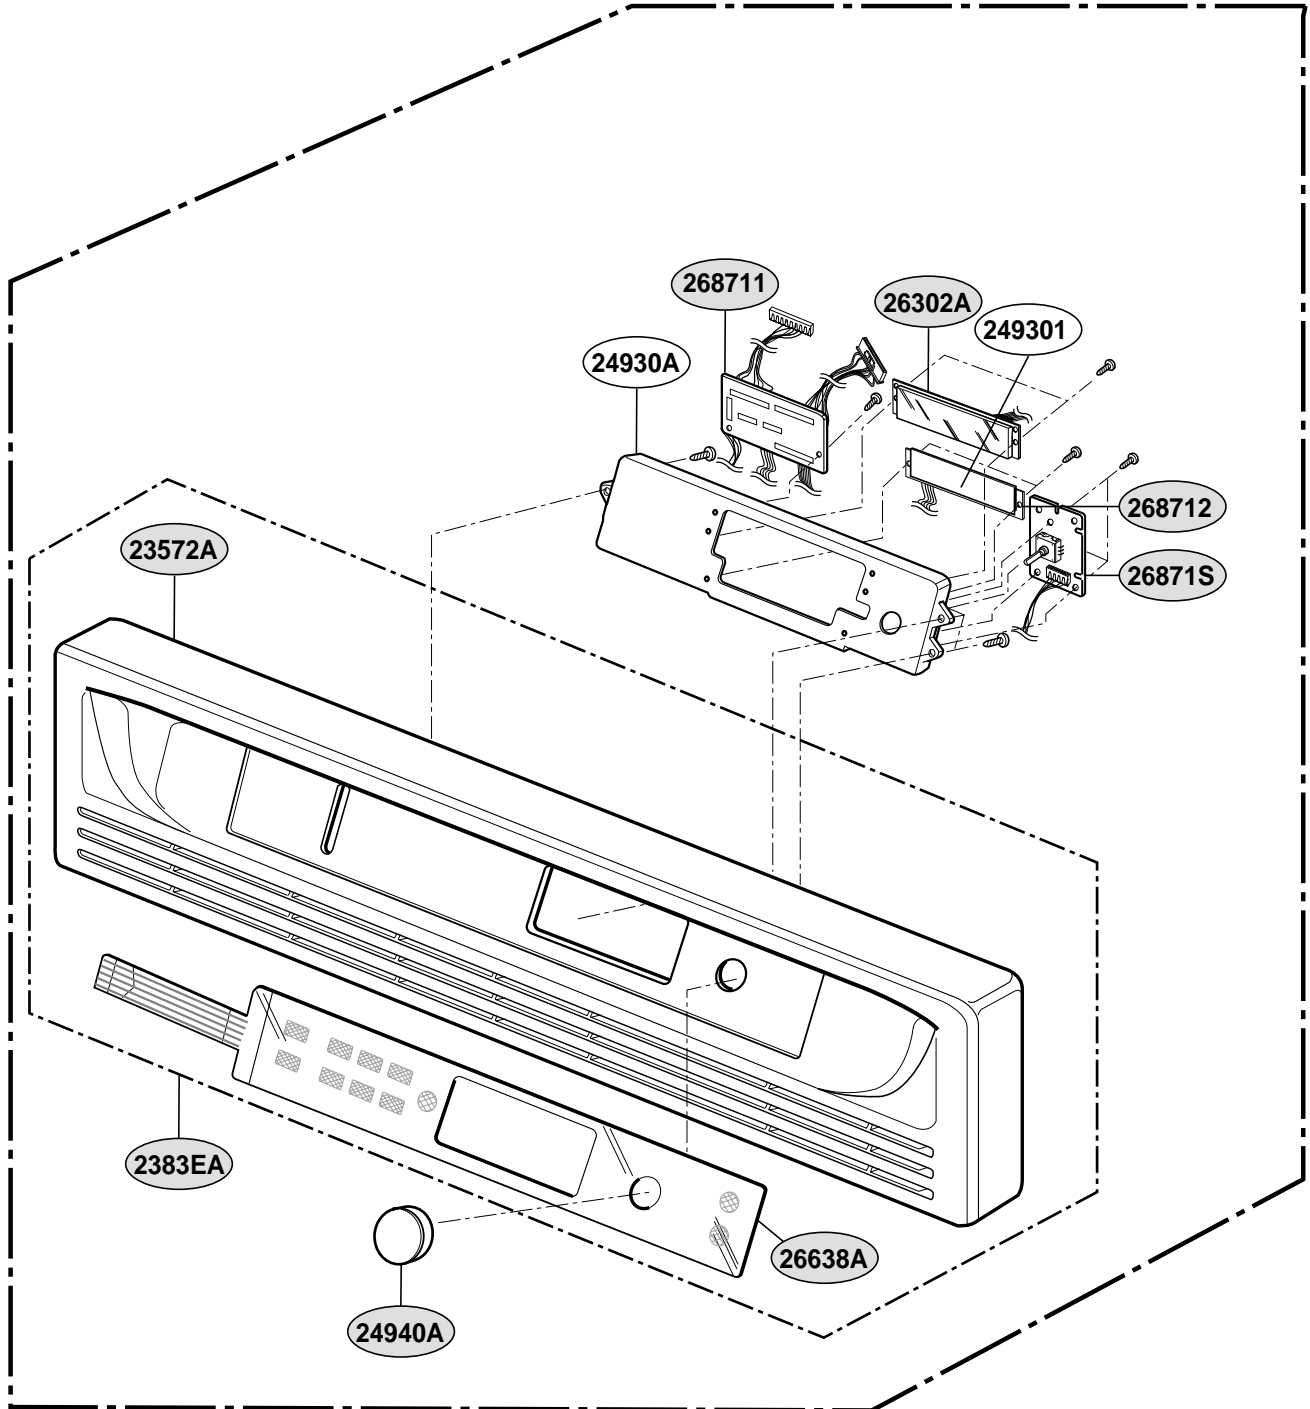

OVEN CAVITY PARTS


(SCB2000CWW, SCB2000CBB, SCB2000CAA,
SCB2000CCC, SCB2001CSS, ZSC2000CWW, ZSC2000CBB, ZSC2001CSS)

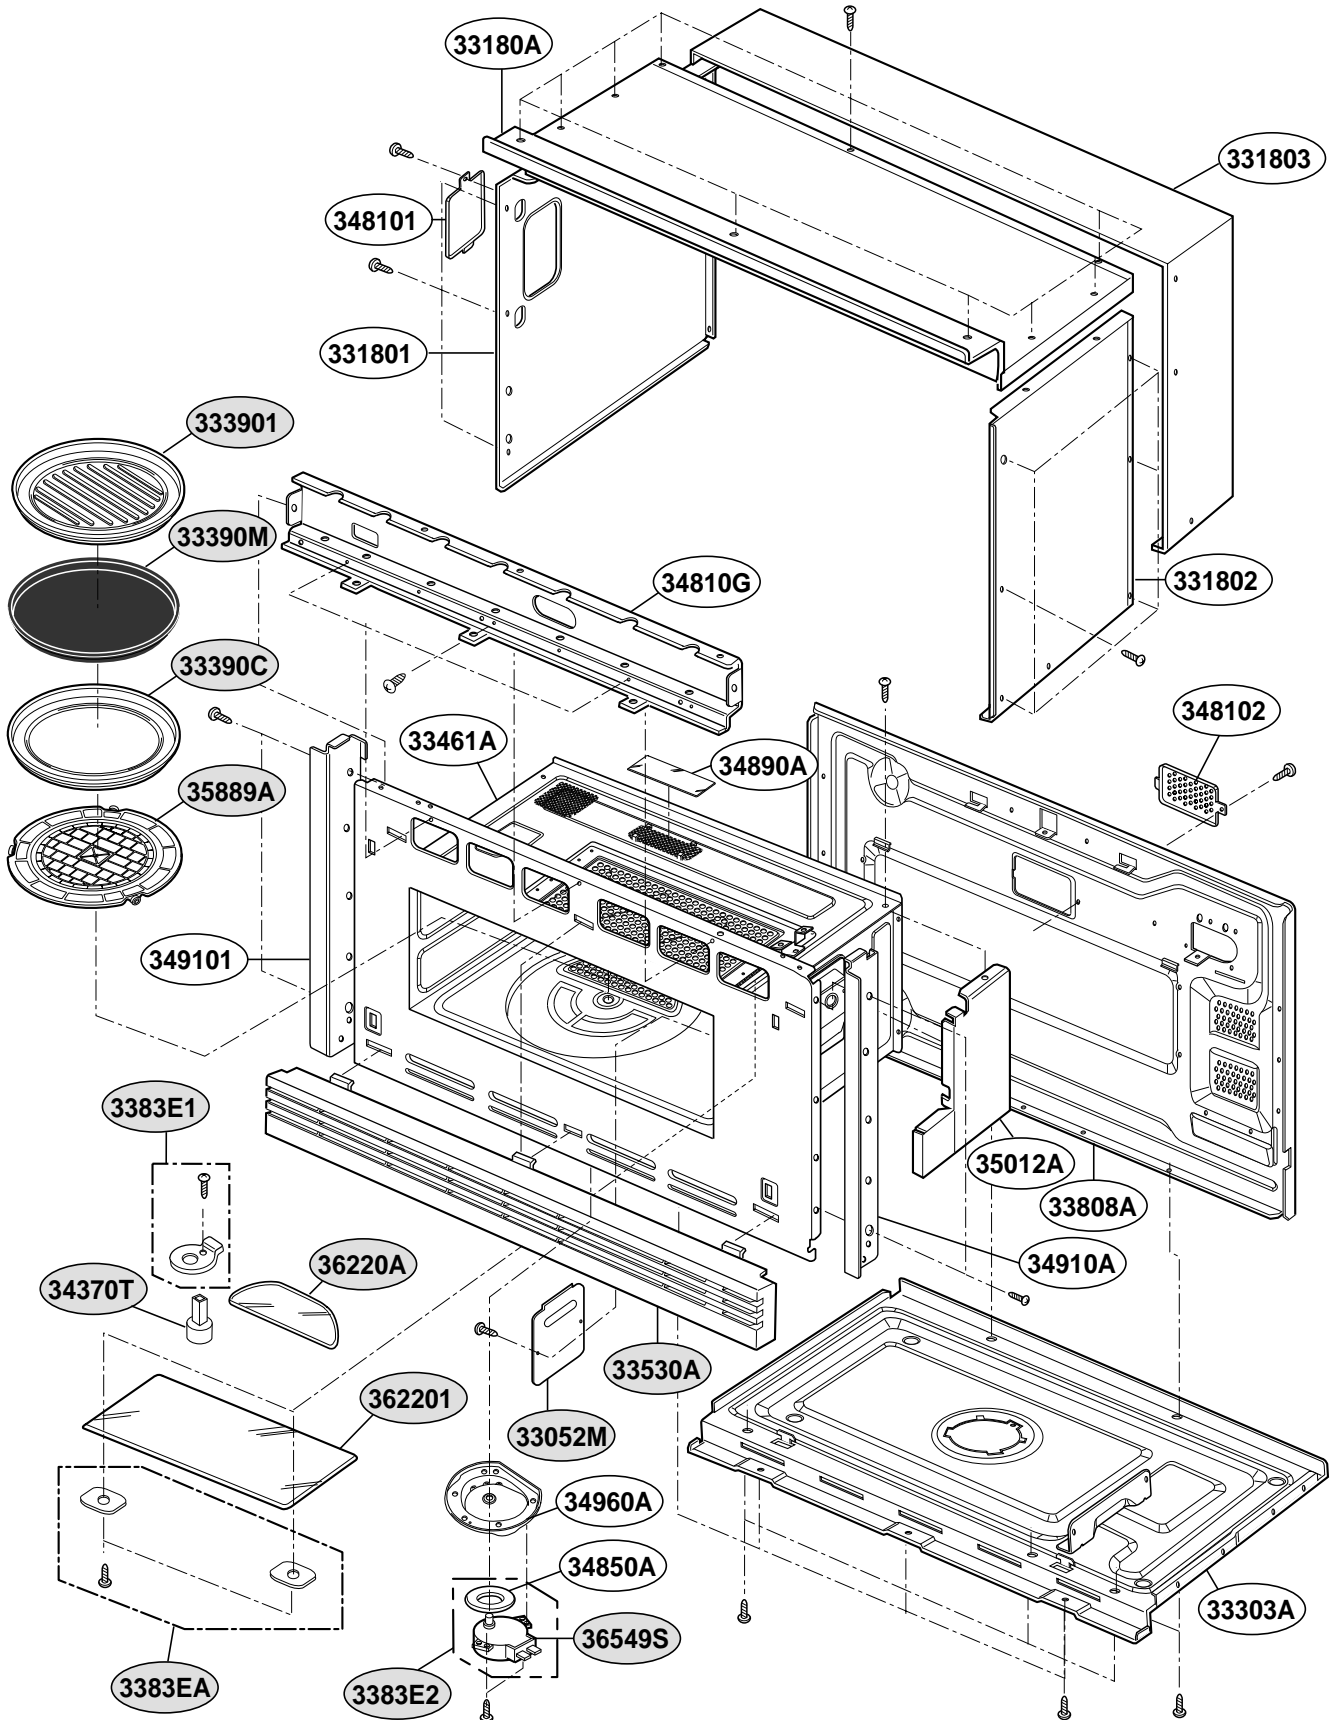


LATCH BOARD PARTS

(SCB2000CWW, SCB2000CBB, SCB2000CAA,
SCB2000CCC, SCB2001CSS, ZSC2000CWW, ZSC2000CBB, ZSC2001CSS)

• LEFT

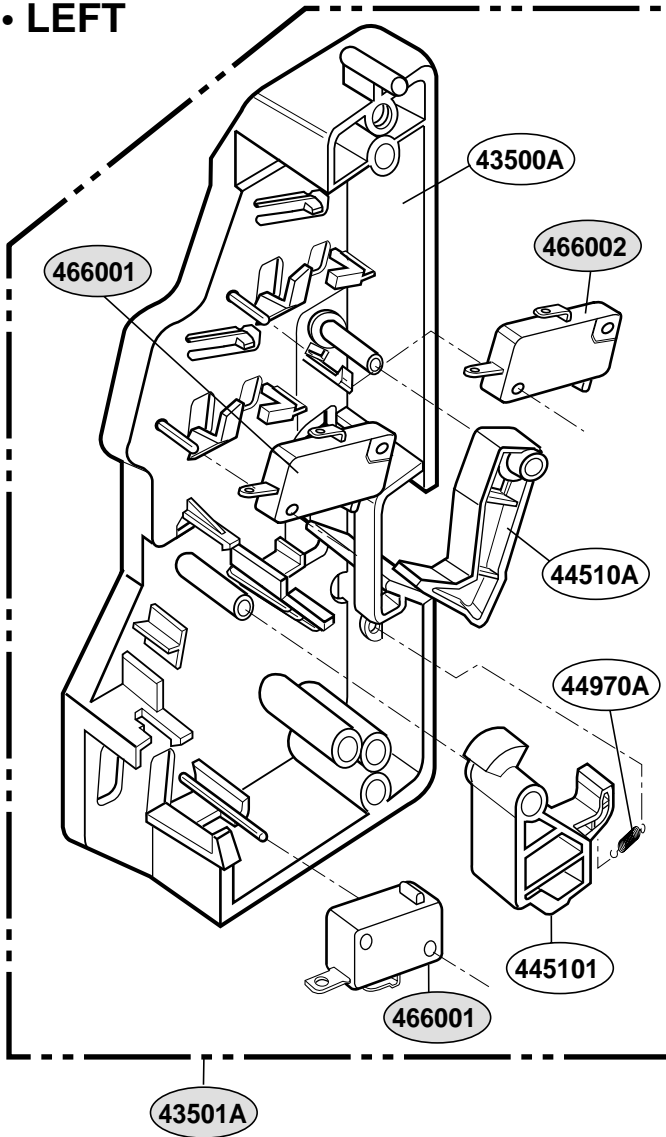


• RIGHT

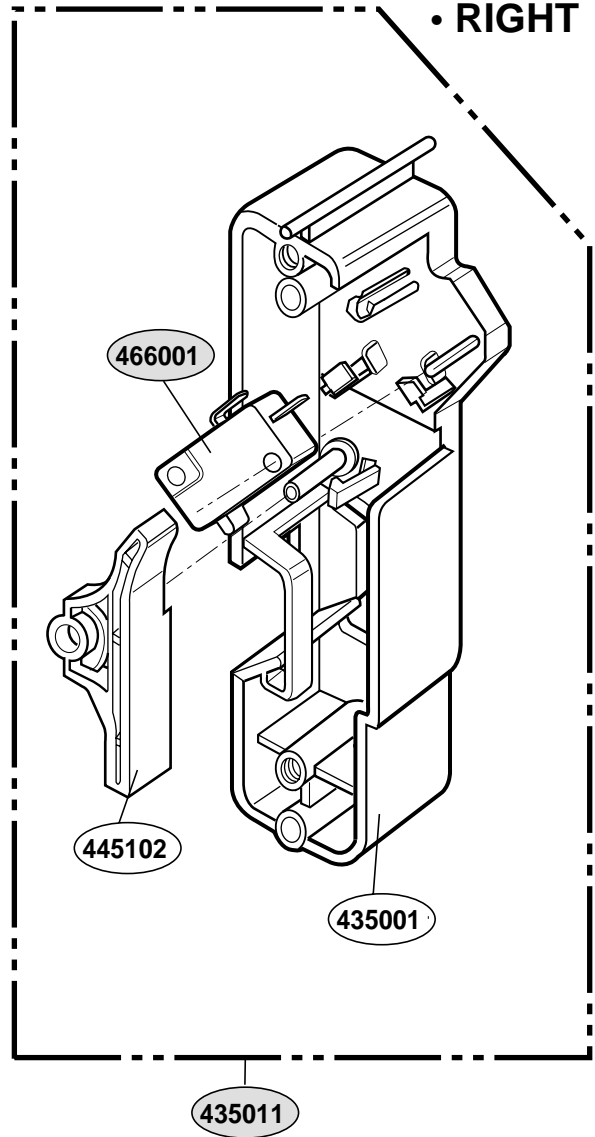

INTERIOR PARTS (I)

(SCB2000CWW, SCB2000CBB, SCB2000CAA,
SCB2000CCC, SCB2001CSS, ZSC2000CWW, ZSC2000CBB, ZSC2001CSS)

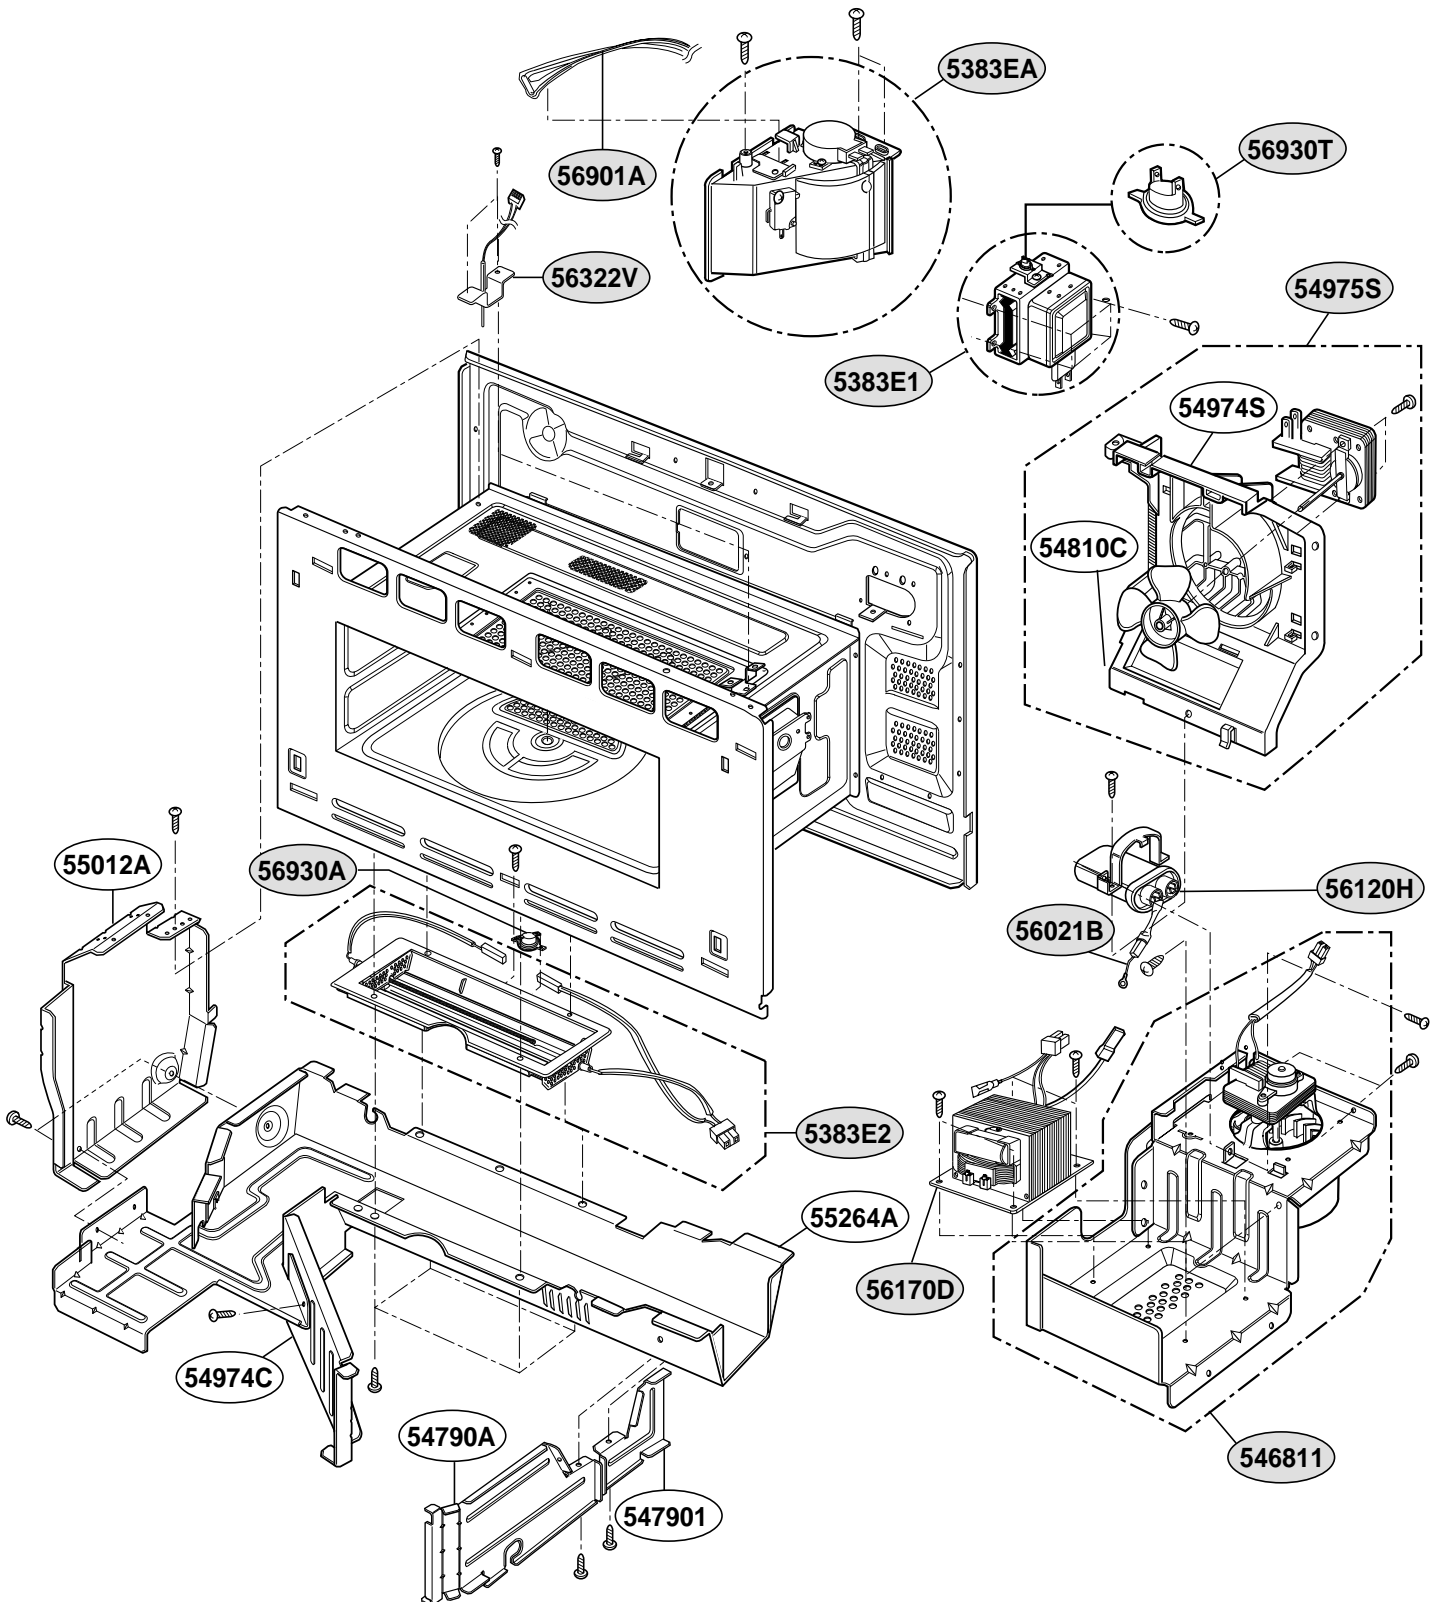

INTERIOR PARTS (II)

(SCB2000CWW, SCB2000CBB, SCB2000CAA,
SCB2000CCC, SCB2001CSS, ZSC2000CWW, ZSC2000CBB, ZSC2001CSS)

