

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Coleman 2000001590 Owner's Manual

**[Shop genuine replacement parts for Coleman
2000001590](#)**



[Find Your Coleman Camping Parts - Select From 855 Models](#)

----- Manual continues below -----

Before you begin

Read all instructions before set up.

- Select a level site clear of rocks, branches, and other hard or sharp objects, to install your tent.

⚠ WARNING: Keep clear of overhead power lines.


- Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- Secure with **all** stakes and guylines provided to prevent property damage or personal injury.
- For best results in windy conditions, position narrow end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

Pole Descriptions

| Description | Qty. | Pole Dia. | Pole Repair Kit | Pole Replacement Kit |
|---|------|-----------|-----------------|----------------------|
| Main Pole, black | 2 | 8.5mm | 5010000541 | 5010000547 |
| Vestibule Pole, grey | 1 | 8.5mm | 5010000541 | 5010000547 |
| Vent Pole, black with pre-bent ferrules | 1 | 6.0mm | 5010000639 | 5010000639 |

To Set Up Tent


1. Unfold tent and spread out on a clean, level surface with the door facing perpendicular to the wind direction. Unzip door.
2. Assemble Main Poles by interlocking the black, shock-corded, sections.
3. Insert Main Poles through sleeves in top of tent. (Fig. 1)

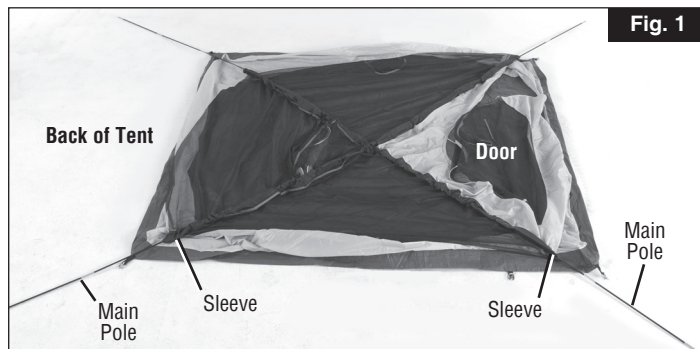

4. Insert one end of black main pole into pin on metal loop located at either end of tent. (Fig. 2)
5. Go to opposite end of Main Pole and gradually apply pressure to pole forming an arch. Insert pin into the pole end (Fig. 2 & 3). Repeat for the remaining Main Pole.




6. Stretch out corners and sides of tent. Drive in stakes at an angle through the metal loops to help anchor the corners & sides of the tent. (Fig. 3 & 4)

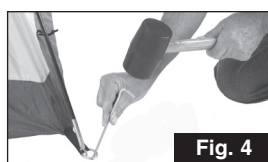


7. Assemble thin, black, shock-corded Vent Pole.

8. Insert Vent Pole through sleeve at back of tent. (Fig. 5)

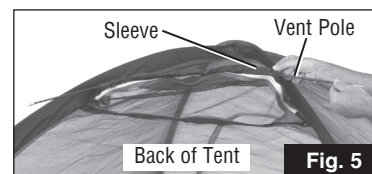

9. Insert metal tip into grommet. Go to opposite end of Vent Pole and gradually apply pressure to pole forming an arch then insert metal tip into grommet. (Fig. 6 & 6A)

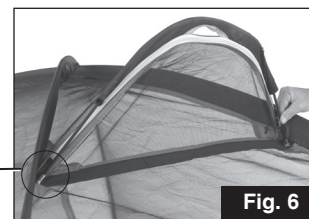


To Attach Rainfly

1. Drape Rainfly over tent. Make sure seams on Rainfly are facing down and centered over poles and the vestibule is over to door of the tent. (Fig. 7)

NOTE: Hook and loop fasteners, located on seams of underside of rainfly, should be centered over black poles.



2. Fold Rainfly at front of tent back as shown in Fig. 8.
3. Assemble Vestibule Pole by interlocking the grey, shock-corded, sections.
4. Insert one end of grey Vestibule Pole into pin on metal loop located at either side of tent. (Fig. 8 & 8A)
5. Go to opposite end of Vestibule Pole and gradually apply pressure to pole forming an arch. Insert pin into the pole end (Fig. 8 & 8A).


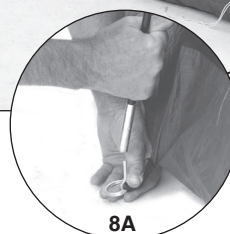


(continued on other side)

To Attach Rainfly (continued)

- Secure all hook & loop fasteners, on the underside of the Rainfly, to the Vestibule Pole, Main Poles, and Rear Vent Pole. (Fig. 9, 9A & 9B)


NOTE: The longer hook & loop fastener, shown in Fig. 9B, must wrap around the Main Pole and the Vestibule Pole to add more strength to the tent.

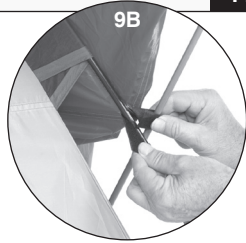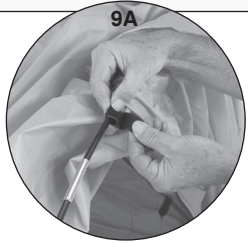

- Attach the hooks on the elastic straps located on the Rainfly to the metal loops on the web straps and the four corners and sides of the tent. (Fig. 10)



- Stretch elastic straps located on vestibule at front of tent and all guylines, stretch until taut, and secure with stakes. (Fig 11 & 11A)

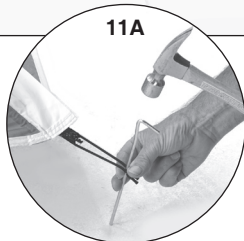

Vestibule & Door Flap

The vestibule, on the front of the Rainfly, provides privacy and space for gear storage. The flaps may be rolled back and secured for maximum air flow.

- Unzip Rainfly vestibule, roll up flap, then insert into pocket on Rainfly to store (Fig. 12 & 13). Other side of vestibule acts as a windbreak.



Fig. 12

Fig. 13

The fabric door of the tent may be closed for maximum privacy or unzip the vent fabric for increased ventilation.

- Unzip door flap and/or the door vent, roll up one or both flaps, then insert toggle through fabric loops to secure. (Fig. 14)



Fig. 13

To Store

- All stakes and the main pole must be placed in the storage bags to prevent damage to the fabric items placed in the carry case.
- Make sure tent is clean and dry before placing in carry case.
- Neatly fold tent and rainfly, place main pole and stakes in storage bags, then roll tightly and place in carry case.
- Store in a clean, dry area.

Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Tree limbs, tree sap, bird droppings, or moisture steadily dripping off tree limbs can cause damage to the tent fabric and its coating resulting in leaks or loss of flame-resistant properties.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- Stakes should be removed by pulling on the stake itself. NEVER PULL ON THE TENT TO REMOVE STAKES AS THIS COULD RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY.
- Tent poles should not be left telescoped together during storage.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

⚠ WARNING: Keep all flame and heat sources away from this tent fabric.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2009 The Coleman Company, Inc.

Coleman®, , and Coleman® are registered trademarks and Hooligan™ is a trademark of The Coleman Company, Inc.