

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Coleman 2000000438 Owner's Manual

[Shop genuine replacement parts for Coleman
2000000438](#)



[Find Your Coleman Camping Parts - Select From 855 Models](#)

----- Manual continues below -----

Warranty

Coleman® Exponent® Limited Lifetime Warranty

The Coleman Company, Inc. warrants to the original retail purchaser that this Coleman® Exponent® product will be free from defects in material and workmanship for the lifetime of the product. Coleman will repair or replace this product or any component of the product found to be defective, at our discretion. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

The warranty is valid for the original retail purchaser and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers or retail stores selling Coleman® Exponent® products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

What This Warranty Does Not Cover

This warranty does not cover normal wear and tear of parts, parts that are not genuine Coleman® part, or damage caused by negligent use or misuse of the product; commercial use of the product; use contrary to the operating instructions; disassembly, repair or alteration by anyone other than Coleman or an authorized service center; or the natural breakdown of materials and colors over extended time and use. Further, the warranty does not cover Act of God, such as fire, flood, hurricanes or tornadoes.

COLEMAN SHALL NOT BE LIABLE FOR DEFECTS THAT ARE CAUSED BY THE USE OF UNAUTHORIZED PARTS OR SERVICE. COLEMAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITIONS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY OR CONDITIONS. SOME STATES, PROVINCES, OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How to Obtain Warranty Service

Take the product to an authorized Coleman service center. You can find the nearest authorized Coleman service center by visiting www.coleman.com or calling 1-800-835-3278 or TDD 316-832-8707 in the United States or 1 800 387-6161 in Canada. If a service center is not conveniently located, attach to the product a tag that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt. Carefully package the product and send either by courier or insured mail with shipping and insurance prepaid to:

For products purchased in the United States:

The Coleman Company, Inc.
3600 North Hydraulic
Wichita, KS 67219

For products purchased in Canada:

Sunbeam Corporation (Canada) Limited
DBA Jarden Consumer Solutions
20B Hereford Street
Brampton, ON L6Y 0M1

The costs of transporting the product to Coleman or an authorized service center for warranty service is the responsibility of the purchaser. **DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.**


If you have any questions regarding this warranty please call 1-800-835-3278 or TDD 316-832-8707 in the United States or 1 800 387-6161 in Canada.



 
The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2007 The Coleman Company, Inc.

Coleman®, , and **exponent®** are registered trademarks and NorthStar™ is a trademark of The Coleman Company, Inc.

Remove items from compartments of the carry case and check to make sure all components are present before assembling your tent.

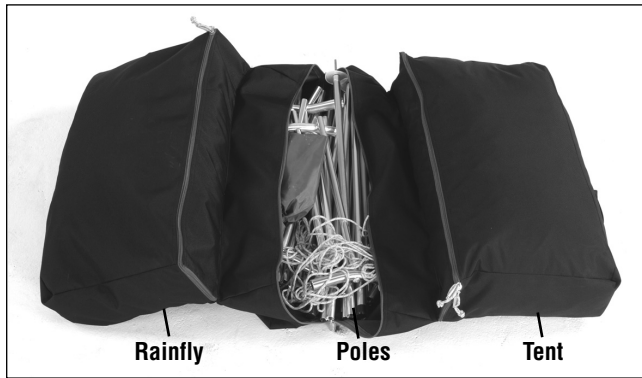


Parts and Components


Description	Part Number
Center Support Pole (1)	5010000256
Gold Leg Poles (4)	5010000255
Chrome Leg Poles (4)	5010000257
Awning Poles (2)	5010000258
Rainfly (1)	5010000259
Tent Body (1)	5010000247
Stakes (30)	5010000248
Carry Case	5010000249

To Set Up Tent

 1. Assemble Center Support Pole, four Chrome Leg Poles, four Gold Leg Poles, and the two Awning Poles. (Fig. 1)

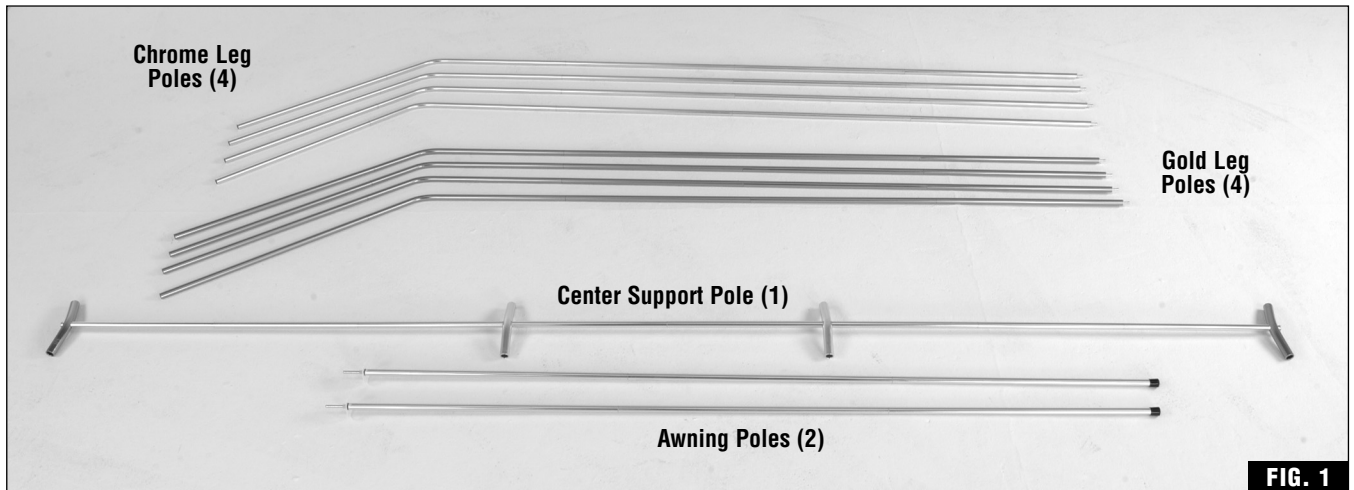

 2. Unfold tent and spread out on a clean, level surface with the Front Living Area Door facing the desired direction (Fig. 2). **NOTE:** Back Bedroom has a window on the left side of tent.

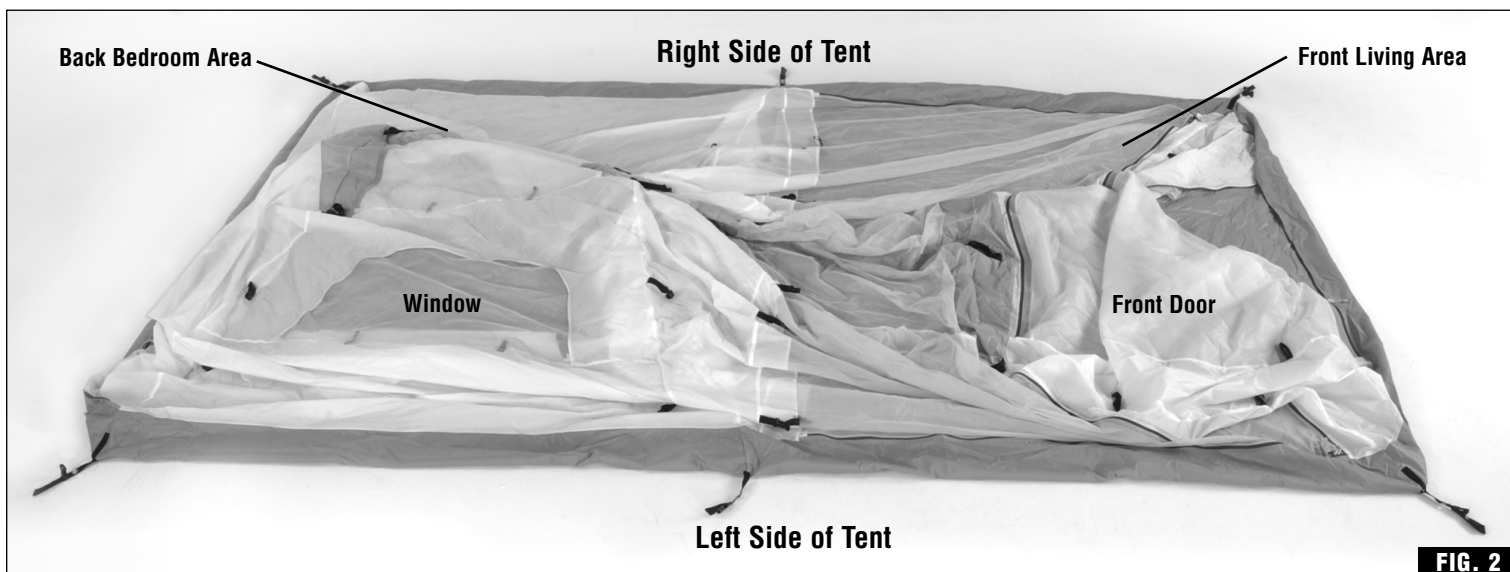

Tent Configuration Section

The following chart is designed to show the variety of options available for access or ventilation with the X4 Tent. By zipping or rolling up the flaps on the Rainfly, Inner Tent, or a combination of both, you can provide access, privacy or maximum cross ventilation to enhance the camping experience.

Rainfly Options			
Awning 1	Zipped	Rolled	Awning*
Awning 2	Zipped	Rolled	Awning*
Front Door	Zipped	Rolled	
Back Door	Zipped	Rolled	
* See following Awning Assembly instructions below.			
Inner Tent Options			
Side Door 1	Zipped	Rolled	
Side Door 2	Zipped	Rolled	
Front Door	Zipped	Rolled	
Back Door	Zipped	Rolled	
Inner Door	Zipped	Rolled	
2 Ceiling Vents	Zipped	Rolled	


To Assemble Right or Left Side Awning

1. Unzip the right or left side Awning Flap on Rainfly. Select which awning you prefer to use, then insert the two furnished Awning Poles into grommets on web straps. (Detail A)
2. Tie guylines onto loops on the web straps, extend out, and secure with stakes. (Fig. 10)



FIG. 10

 6. Attach the two remaining hooks on the top of the tent to the Center Support Post. (Fig. 6)
7. Attach hooks on the corners of the tent to the Gold End Poles; then the hooks on the front & back of the tent to the Chrome Center Poles. (Fig. 6)
8. Stretch corners and front & back of tent until floor is taut; then hammer stakes through loops on web straps to secure. (Fig. 6)

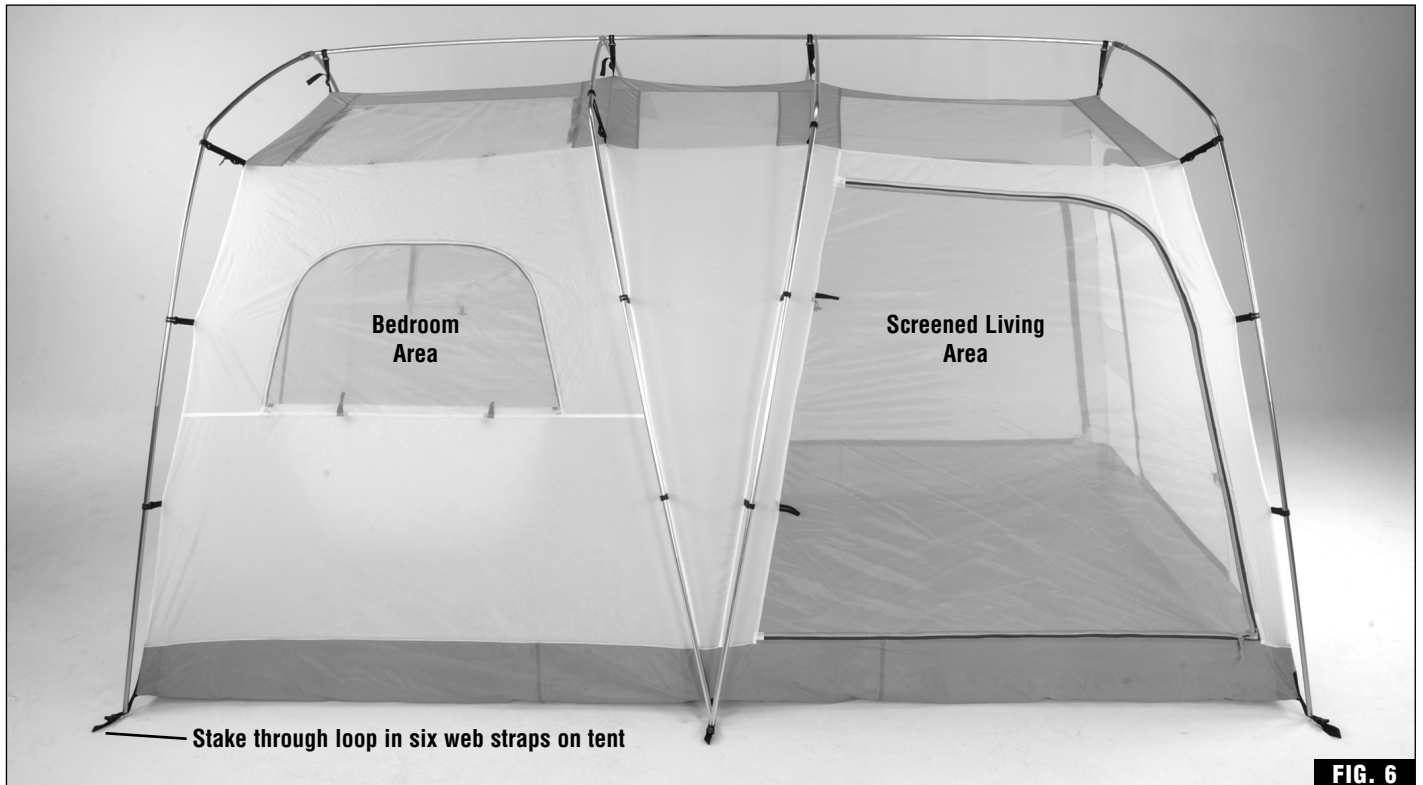

9. Unfold Rainfly and pull it over the tent frame. (Fig. 7)
- NOTE:** The windows need to be placed over the Bedroom Area and the right and left side awning flaps need to be positioned over the Screen Living Area.

