



This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).

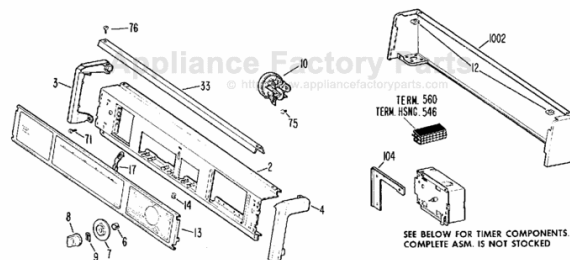


GE WWA8480GAL Owner's Manual

[Shop genuine replacement parts for GE WWA8480GAL](#)

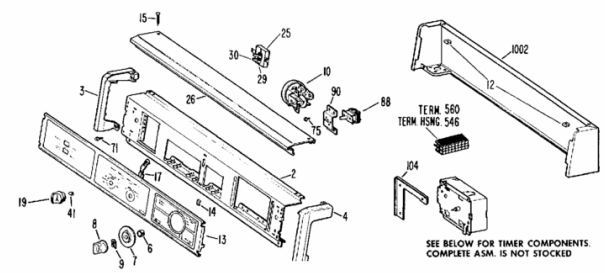

TIMER COMPONENTS

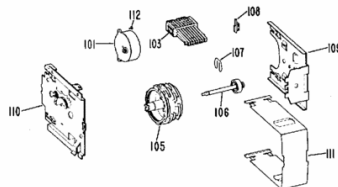


(ART NO. WH6089)

[Find Your GE Washer Parts - Select From 4591 Models](#)

----- Manual continues below -----

How to get the best from

Your Washer

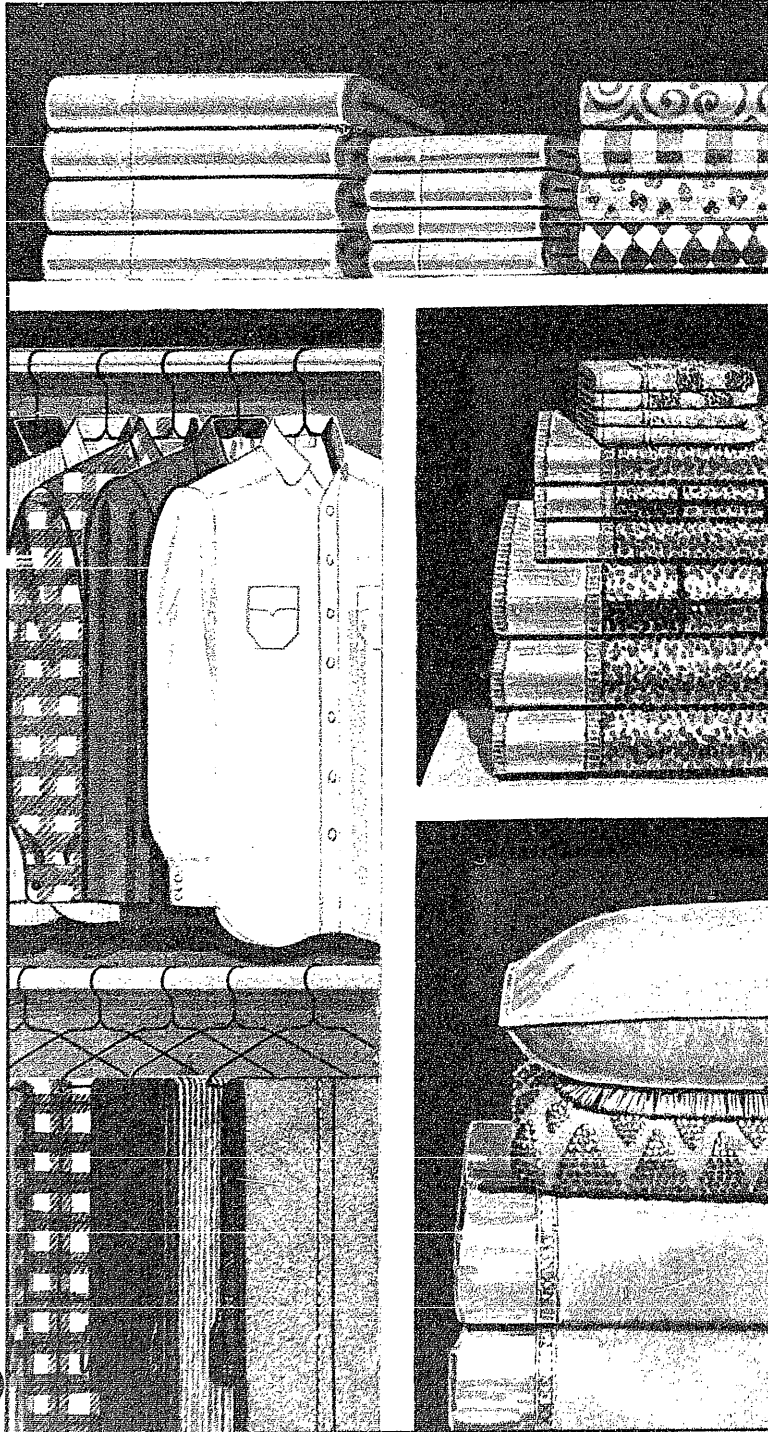

Use and Care of
Model WWA8480G

Setting the controls p4

Bleach and Fabric
Softener Dispensers p8

Using the Mini-Basket™ tub p9

Energy-saving tips p10

Sorting and loading p11

Choosing Detergents p13

Stain removal p18

Save time and money.
Before you call for service,
use the Problem Solver p20



Your Direct Line to General Electric
The GE Answer Center 800.626.2000

JC18

EFFDATE
11-02-84

GENERAL  ELECTRIC

49-9496

Contents

Safety Instructions	3-4
How to operate your washer	4-5
Controls setting guide for different fabrics and loads	6-7
How to use bleach and fabric softener dispensers	8
How to use Mini-Basket™ tub	9
Energy-saving tips	10
Good sorting means better washing	11
It pays to check and pre-treat	11
Soaking	11
How to load your washer	12
What is the best size load of clothes	12
Factors to consider in selection of detergents and soap	13
The results of continued use of carbonate detergents	14
How much detergent or soap should you use	15
How to use detergent or soap	15
Hard water—do you have it	16
Other laundry products	17
How to remove stains	18-19
Problem solving	20-25
User maintenance instructions	26
Consumer Services	27
Warranty	Back Cover

Help us help you...

Read this Use and Care Book carefully

It will help you operate and maintain your new washer properly.

Keep it handy for answers to your questions.

If you don't understand something or need more help... Call, toll free:

The GE Answer Center™
800.626.2000
consumer information service

or write (include your phone number):

Consumer Affairs
General Electric Company
Appliance Park
Louisville, KY 40225

If you received a damaged washer, immediately contact the dealer (or builder) that sold you the washer.

Save time and money... before you call for service

Check the Problem Solver (pages 20-25). It lists minor causes of operating problems that you can correct yourself. It could save you an unnecessary service call.

Write down the model and serial numbers.

You'll find them on a label on the lower left side near the front.

These numbers are also on the Consumer Product Ownership Registration Card that came with your washer. Before sending in this card, please write these numbers here:

Model No.

Serial No.

Use these numbers in any correspondence or service calls concerning your washer.

To obtain Hispanic version of this book, call
The GE Answer Center™
800.626.2000
consumer information service.
Toll-free.

Para obtener la versión en español de este manual, llame gratis a
The GE Answer Center,
servicio de información para el consumidor,
teléfono 800.626.2000.

All washing instruction terms in this book conform to the Care Labeling Rule established by the Federal Trade Commission, January 1984.

YOUR SAFETY

If you smell gas:

1. Open windows
2. Don't touch electrical switches
3. Extinguish any open flame
4. Immediately call your gas supplier

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

Important Safety Instructions—SAVE THESE INSTRUCTIONS

Read all instructions before using this appliance

WARNING—When using this appliance, always exercise basic safety precautions, including the following:

- Use this appliance only for its intended purpose as described in this Use and Care Book.
- This washer must be properly installed and located in accordance with the Installation Instructions before it is used. If you did not receive an Installation Instructions sheet with your washer, you can obtain one by contacting the service location nearest you.
 - Properly ground to conform with all governing codes and ordinances.
 - Install or store where it will not be exposed to temperatures below freezing or exposed to the weather.
 - Connect to a properly rated, protected and sized power-supply circuit to avoid electrical overload.
 - Connect to adequate plumbing and drain facilities as described in the Installation Instructions.
- Turn off water faucets when the washer is not in use to relieve pressure on hoses and valves, and to minimize leakage if a hose or valve should break or rupture.
- When disconnecting this appliance pull by the plug rather than the cord to avoid damage to the cord or junction of cord and plug. Make sure that the cord is located so that it will not be stepped on, tripped over or otherwise subjected to damage or stress.
- We strongly recommend that any servicing be performed by a qualified individual.
- The wiring diagram for this machine is located inside the control panel.

To minimize the possibility of injury:

- Do not mix chlorine bleach with ammonia or acids such as vinegar and/or rust remover. Mixing can produce a toxic gas which may cause death.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as gasoline, degreasers, dry-cleaning solvents, kerosene, etc.) which may give off vapors that could ignite or explode.

Do not add these substances to the wash water.

Do not use these substances around your washer and/or dryer during operation.
- HYDROGEN GAS is produced by the chemical action within your water heater and the gas can accumulate in the water heater and/or water pipes if hot water has not been used for a period of two weeks or longer. HYDROGEN GAS CAN BE EXPLOSIVE UNDER THESE CIRCUMSTANCES. So to prevent the possibility of damage or injury, if you have not used hot water for two weeks or more, or move into a residence in which the hot water system may not have been used for some time, turn on *all* hot water faucets and allow them to run for several minutes before using any electrical appliance which is connected to the hot water system. This will allow any hydrogen gas to escape. Of course, since the gas is flammable, do not smoke or use an open flame or appliance during this process.

- Never reach into the washer while it is moving. Before loading, unloading or adding clothes, push in the Cycle Selector Knob to “STOP” position, then wait until the machine has completely stopped before opening the lid.
- Close supervision is necessary if this appliance is used by or near children. Do not allow children to play inside, on, or with this appliance or any discarded appliance. Dispose of discarded appliances and shipping or packing materials properly. Before discarding a washer or removing from service, remove the washer lid.
- Keep all laundry aids (such as detergents, bleaches, fabric softeners, etc.) out of the reach of children, preferably in a locked cabinet. Observe all warnings on container labels to avoid personal injury.
- Keep the area around and underneath your appliances free from the accumulation of combustible materials, such as lint, paper, rags, chemicals, etc.
- Keep the floor around your appliances clean and dry to reduce the possibility of slipping.
- To minimize the possibility of electric shock, unplug this appliance from the power-supply before attempting any maintenance or cleaning (except the removal and cleaning of the lint filter). **NOTE:** Turning the Cycle Selector Knob to an OFF position does NOT disconnect the appliance from the power-supply.

Continued on next page

Important Safety Instructions (continued)

- Do not tamper with controls.
- Do not operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- Do not wash fiberglass articles in your washer. Skin irritation could result from the remaining particles that may be picked up by clothing during subsequent washer use.

- The laundry process can reduce the flame retardancy of fabrics. To avoid such a result, the Garment Manufacturers' Care Labels should be followed very carefully.
- Never climb on or stand on the washer top.


For Washer Operation

- Do not leave washer lid up during cycle. This will stop the

wash and spin action and prevent completion of the cycle.


- Do not change FABRIC CARE SELECTION while washer is operating. If a change in speed is desired, push in Cycle Selector Knob to "STOP" position and wait for washer to stop. Then make new FABRIC CARE SELECTION and pull out Cycle Selector Knob to restart.

How to operate your clothes washer

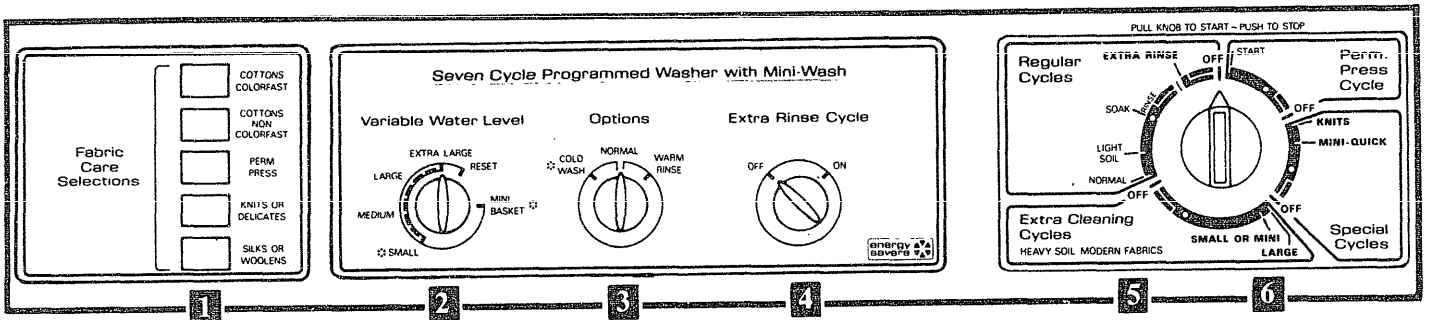

Sorting and Loading

- Sort clothes carefully by fabric type, weight, color and amount of soil according to instructions on page 11.
- Remove Filter-Flo® pan and Mini-Basket™ tub. The underside of the lid is a good place to put the pan while loading or unloading clothes.

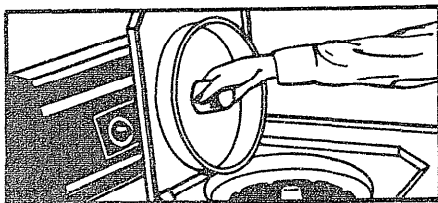

Do not use Mini-Basket tub when washing regular loads. You'll find complete details on how and when to use the Mini-Basket tub on page 9.

- Load clothes into the wash basket being careful not to overload. Clothes should be below the retaining ring. See page 12 for more loading information.
- Position Filter-Flo pan on agitator and add measured amount of detergent. See pages 13 through 17 for information on detergents and other laundry additives.

Set the controls. See the Controls Setting Guide on pages 6-7.

- 1 Select a Fabric Care program.

Automatically Programmed	Wash Speed	Spin Speed	Wash Temp.	Rinse Temp.
Fabric Care Selections				
Cottons Colorfast	Normal	Normal	Hot	Cold
Cottons Non-Colorfast	Normal	Normal	Warm	Cold
Perm. Press	Normal	Gentle	Warm	Cold
Knits or Delicates	Gentle	Gentle	Warm	Cold
Silks or Woolens	Gentle	Normal	Warm	Cold

- 2 Select Water Level.

SMALL: Washer is less than 1/3 full of clothes.

MEDIUM: Between 1/3 and 1/2 full.

LARGE: Between 1/2 and 2/3 full.

EXTRA LARGE: Over 2/3 full.

MINI-BASKET: See page 9.

If you wish to increase level after you've made a selection, turn knob to "RESET" and select new level.

- 3 Select Options.

Use this control if you wish to change the water temperatures that are automatically programmed by the Fabric Care selections control.


NORMAL—Leaves the temperatures as programmed.

COLD WASH—Provides cold wash and rinse water in all cycles.

WARM RINSE—Leaves the wash temperature as programmed but provides warm rinse water in Regular and Extra Cleaning cycles. To minimize the setting of wrinkles, cold rinse is automatically provided in Perm Press and Special cycles.

- 4 Select Extra Rinse, if desired. Turning control to "ON" will provide a second deep rinse in the Regular Cycle. If no Extra Rinse is desired, turn control to "OFF"


5 Push Cycle Selector Knob in and turn clockwise to your selected wash setting.

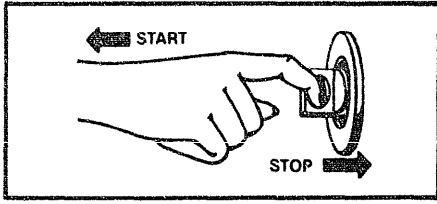


6 Pull Cycle Selector Knob out to start the washer. If you wish to change setting after washer has started, push Cycle Selector Knob in to stop the washer and reset to the new position. Setting can be changed at any time.

Tips to Help You Select Settings


REGULAR CYCLES—
For most cottons, linens, work and play clothes with normal soiling. "Extra Rinse" can be selected if desired.

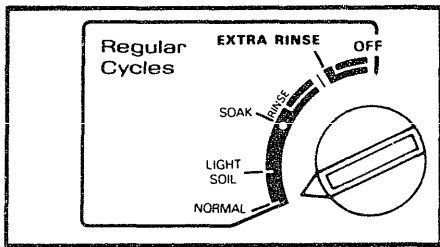


PERM PRESS CYCLE—
For permanent press loads such as shirts, blouses, dresses and similar wearing apparel with normal soiling. An extended cool-down spray rinse is provided to minimize wrinkling.

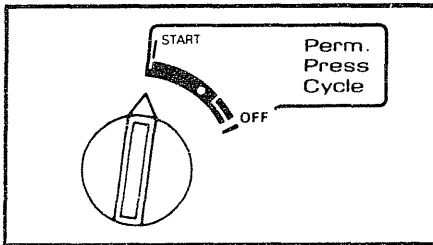


EXTRA CLEANING CYCLES—
For modern fabrics with heavy or oily soil. A second rinse is provided to help remove the additional detergent that's required for these soils. See page 15.

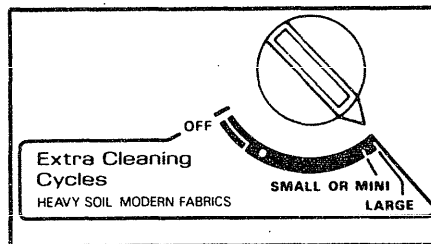


KNITS CYCLE—
A combination of agitation and soak for more effective polyester knits laundering. Plus an extended cool-down spray rinse is provided to minimize the setting of wrinkles.

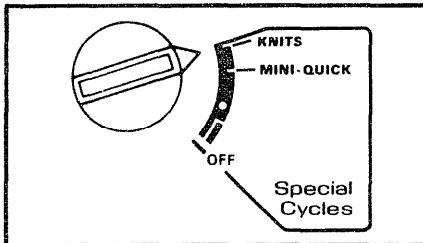

MINI-QUICK CYCLE—
For small, lightly soiled loads you need in a hurry. Use with MINI-BASKET tub only.

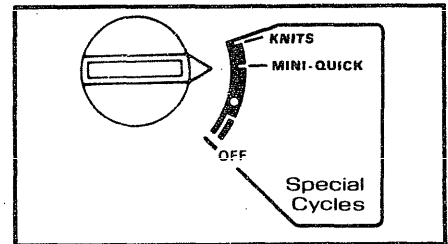

SOAK SETTING—
Use with most soaking aids to loosen embedded soils and stains.

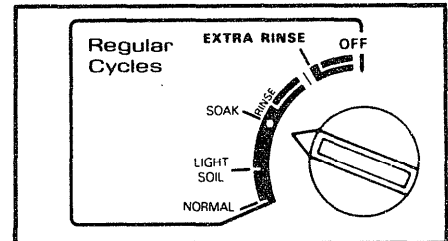

TURN THE PAGE
for Controls Setting Guide


What Happens in Each Setting (Approximate Minutes)

Cycle Selector Settings	Regular			Extra Cleaning		Special		Perm. Press
	Normal	Light Soil	Soak	Large	Small or Mini	Knits	Mini-Quick	
Wash						5		
Soak						2		
Wash	15	6		15	10	3	3	10
Spin	3½	3½		3½	3½	2½	2½	2½
Rinse	3	3	3	3	3	2½	2½	2½
Spin	7	7	7	3	3	4½	4½	4½
2nd Rinse	*2½	*2½		3	3			
Spin	*7	*7		7	7			
Total Time	*32 46	*25 39	11	41½	38½	24½	17½	23

*When "Extra Rinse" control is turned to "ON!"

NOTES:

- Total time includes pauses between each phase of cycle.
- Total time does *not* include water fill time. Fill times vary depending on household water pressure and your selected water level.

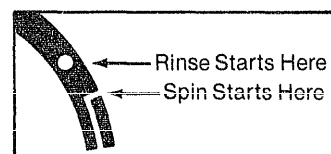

Controls Setting Guide for different fabrics and loads

Load	Fabric Care Program	Cycle Selection
Cottons and Linens White/Colorfast Bright/Noncolorfast	Cottons Colorfast Cottons Non-Colorfast	Regular, Normal or Light Soil Setting Regular, Normal or Light Soil Setting
Workclothes, dungarees, etc. Heavy soil	Cottons Colorfast	Extra Cleaning, Large or Small Setting depending on load size
Average soil	Cottons Colorfast	Regular, Normal Setting
Permanent Press, Treated Cottons, Blends with Cottons Heavy or oily soil	Perm. Press	Extra Cleaning Cycles, Large or Small Setting depending on load size
Average or light soil	Perm. Press	Perm. Press, set at Start
Synthetics—Polyester, Nylon, Acrylic Knits and Woven Fabrics Sturdy	Perm. Press Knits or Delicates	Perm. Press, set at Start Special, Knits Setting
Delicates		
Silks, Wools; Blends of Silk and Wool	Silks or Woolens	Special, Knits Setting
Rayon and Acetate	Silks or Woolens	Special, Knits Setting
Down-filled garments, if machine washing is recommended	Knits or Delicates	Special
Baby Clothes—Sturdy, such as Diapers, Nightgowns, Shirts, Pads, Sheets, Receiving Blankets, Coveralls	Cottons Colorfast	Regular, Normal or Light Soil Setting, depending on amount of soil
Baby Clothes—Delicate	Knits or Delicates	Special, Knits Setting
Blankets—Wool, Part-Wool, Cotton	Cottons Non-Colorfast with 5 min. soak	Regular, Light Soil Setting
Blankets—Synthetic, Electric	Cottons Non-Colorfast with 5 min. soak	Regular, Light Soil Setting
Curtains—DO NOT MACHINE WASH FIBERGLASS	Cottons Non-Colorfast or Cottons Colorfast	Perm. Press, set at Start
Chenille Bedspreads, Robes**	Knits or Delicates	Special, Knits Setting
Slipcovers, Draperies, Bathmats and Rugs**	Cottons Colorfast or Cottons Non-Colorfast	Regular, Normal Setting
Denims (especially indigo blue jeans) and other fabrics that bleed	Cottons Non-Colorfast	Regular, Normal Setting
Rubber-coated items, laminated fabrics, vinyl, plastics and articles with plastic trim	Knits or Delicates	Special, Knits Setting
Pillows	Knits or Delicates	Perm. Press or Special, Knits Setting, depending on amount of soil

**Check size. Some slipcovers, draperies and bedspreads may be too large for automatic home-size washer.

Refer to Garment Manufacturers' Care Labels

Bleach

Liquid chlorine type.

Only non-chlorine bleach when needed.

White or colorfast, liquid chlorine type.
Noncolorfast, only non-chlorine bleach when needed.

White or colorfast, liquid chlorine type.
Noncolorfast, only non-chlorine bleach when needed.

White or colorfast, liquid chlorine type.
Noncolorfast, only non-chlorine bleach when needed.

No bleach

Seldom needed. If needed, use only non-chlorine bleach.

No bleach

White or colorfast, liquid chlorine type.

Only non-chlorine bleach when needed.

No bleach

No bleach

White or colorfast, liquid chlorine type.

White or colorfast, liquid chlorine type.

White or colorfast, liquid chlorine type.

No bleach

No bleach

No bleach

Special Instructions

If colorfast is unusually soiled, use hot water. Use maximum detergent recommended on page 15. Use Extra Cleaning, Large or Small Setting depending on load size. See page 5. Use Extra Rinse, if desired.

Use maximum detergent recommended in chart on page 15.

Small loads reduce wrinkling. Use maximum detergent recommended in chart on page 15. Use Extra Cleaning cycles. See page 5. Use Extra Rinse, if desired.

If unusually soiled, use hot water. Use maximum detergent recommended in chart on page 15. For heavy or oily soil on sturdy garments, use Extra Cleaning, Large or Small Setting depending on load size. See page 5. Use Extra Rinse, if desired. Small loads reduce wrinkling.

Wash *only* if recommended by the garment manufacturer. Follow instructions carefully.

Wash in your washer only if recommended by the garment manufacturer.

Wash frequently to fluff up the down and retain the garment's warmth. Wash separately. Wet down gives off an odor which may be absorbed by other garments. Odor disappears when garment is dry. Treat heavily soiled areas with liquid detergent or paste made of water and granular detergent. Close zippers. Wash 2 or 3 at a time or add towels to balance. **GARMENT MUST BE TUMBLE DRIED.**

You may prefer to use a mild type detergent. Do baby clothes separately. Pretreat spots. Rinse diapers, nightgowns, pads, sheets after use. Keep diapers in a covered pail of cold water and conditioning agent like Borateem brand.

You may prefer to use a mild type detergent. Do hand-knit garments by hand or in Mini-Basket tub. See page 9.

Fill washer, add detergent, allow to dissolve before adding blanket. Do one blanket at a time. Pretreat heavily soiled spots with liquid detergent.

On electric blanket, sew a strong piece of cloth over plug to protect blanket and washer from damage. Do one blanket at a time. Pretreat heavily soiled spots with liquid detergent.

Vacuum out loose dirt before washing. If unusually soiled and fabric is safe in hot water, use COTTONS COLORFAST.

If unusually soiled, use Perm. Press Program.

Wash only 2 or 3 rugs or mats at one time. Shake before washing to remove excess dirt.


For new "indigo blue" jeans, wash at least 3 times in very small loads with full water fill. Jeans need ample room to move to avoid white lines at creases. May discolor plastic washer parts. Subsequent washings will reduce discolorations, but will probably never eliminate it. The stained parts will not discolor subsequent washing loads.

Tumble on FLUFF (No Heat).

Pillows are made of different materials—dacron, fiber, foam, polyester, natural feathers and down. Many pillows can be machine washed, but *manufacturers' care labels must be followed carefully*. If washing is recommended, check pillows for weak seams or holes and mend to prevent escape of feathers or filling. Fill washer, add detergent and agitate for several minutes to dissolve detergent. Add two pillows at a time to balance load, use high water level.


For more information on care labeling, send for "What's New About CARE LABELS."
For sale by the superintendent of Documents, U.S. Government Printing Office, Washington, D.C. 20402.

How to Use the Bleach Dispenser

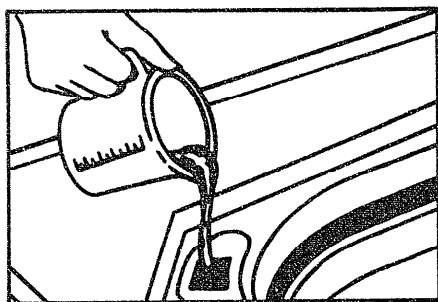


- Use this dispenser with liquid bleach only. If you prefer to use powdered bleach, pour it into the Filter-Flo pan or wash basket along with your detergent. Do not put powdered bleach into the bleach dispenser.
- Measure bleach carefully. Here are some recommended amounts:
FULL WASH— $1\frac{1}{4}$ cup (310 ml) liquid
SMALL WASH— $\frac{2}{3}$ cup (170 ml) liquid
MINI-BASKET tub— $\frac{1}{4}$ cup (60 ml) liquid
- Pour measured amount of liquid bleach directly into bleach dispenser.
- **Do not overfill or allow dispenser to overflow.** Avoid splashing. Undiluted bleach can cause fabric damage.
- **Never pour undiluted liquid bleach directly onto clothes or into the wash basket or Mini-Basket tub.**

How to Use the Fabric Softener Dispenser

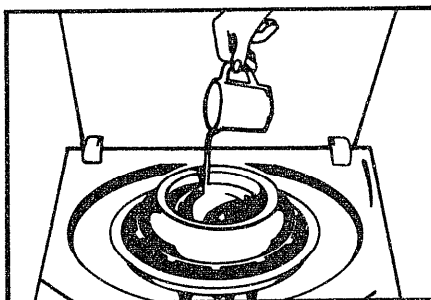

- Position the Fabric Softener Dispenser on the Filter-Flo pan.
- Pour manufacturer's recommended amount of fabric softener into a standard measuring cup.
- Add enough water to fill the cup $\frac{1}{2}$ full.
- Pour the diluted softener into the dispenser.
- The fabric softener will automatically be dispensed at the proper time.
- **Do not stop the washer during the first spin.** This will cause the dispenser to empty too soon.
- When using Fabric Softener Dispenser with the Mini-Basket tub, use one (1) teaspoon (5 ml) of concentrated softener or one (1) tablespoon (15 ml) of diluted softener.
- **Do not use the Fabric Softener Dispenser with the Soak Setting or the Mini-Quick Cycle.**

How to Use the Soak Setting

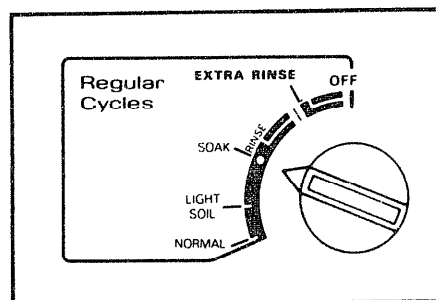

- Push any Fabric Care Selection button and turn Cycle Selector Knob to "SOAK."
- Be sure "Extra Rinse" control is turned "OFF."
 - For a cold soak, set Options control to "NORMAL." For a warm soak, set Options control to "WARM RINSE."
 - If a hot soak is desired, push the COTTONS COLOR FAST Fabric Care Selection button and turn the Cycle Selector Knob to "NORMAL" in the Regular Cycle. Start the washer. After washer fills and begins to agitate, push in the Cycle Selector Knob and turn to "SOAK." Pull out the Cycle Selector Knob to complete the cycle.
 - **For an extended soak** allow the washer to fill and agitate for a few minutes to dissolve the soaking agent. Then push in the Cycle Selector Knob to stop the washer (keep lid closed) and allow to soak for as long as desired. After desired soak period, pull out the Cycle Selector Knob to complete the cycle.
 - **Do not use the Fabric Softener Dispenser or the Mini-Basket tub with the Soak Setting.**

How to Use the Mini-Basket™ tub.

Types of loads which can be washed in the Mini-Basket tub.

- Small loads of regular fabrics ... up to 2½ pounds.
- Delicate loads such as lingerie, panty hose, girdles, blouses, sweaters, socks, shirts, baby clothes and other small delicate hand washables.
- Stuffed toys.
- Tennis shoes.

Some special instructions to remember when you use the Mini-Basket tub.


- Do not wash clothes in the regular basket when using the Mini-Basket tub.
- Do not use the Fabric Softener Dispenser with the MINI-QUICK cycle.
- Do not use the Mini-Basket tub with the Soak Setting.
- You must use the Mini-Basket tub with the MINI-QUICK cycle.
- When washing stockings, panty hose and other easily tangled items, always handle separately. To minimize tangling, the use of a net laundry bag is recommended.

The Mini-Basket tub is designed to be used two ways:


1 The Mini-Basket tub can be used to handle small loads of regular fabrics—up to 2½ pounds—or for easy and economical washing of delicate hand washables.

Here's how to use the Mini-Basket tub:

- Remove Filter-Flo pan.

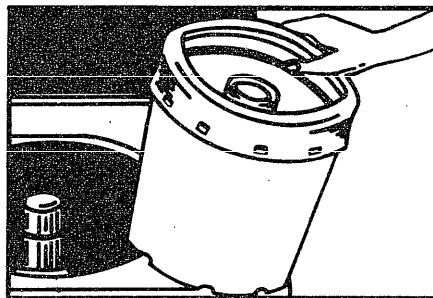


- Place Mini-Basket tub on agitator. Pull the agitator toward the front of the machine for easier installation and removal of Mini-Basket tub.
- Load clothes in Mini-Basket tub. See page 11 for sorting help.

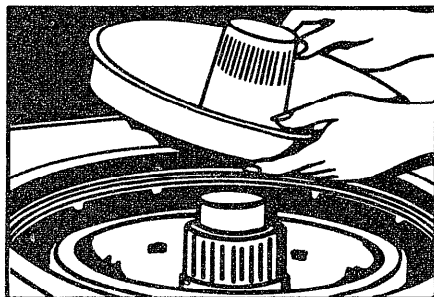

- After loading clothes in the Mini-Basket tub, be sure to replace the Filter-Flo pan. The pan serves as a lid to keep the clothes in the Mini-Basket tub.

- Put ¼ to ⅓ cup (60 to 80 ml) detergent in Filter-Flo pan.
- To use Bleach and Fabric Softener Dispenser, see page 8.
- Close lid and set controls as follows:

—Set Water Level to “MINI-BASKET” position.

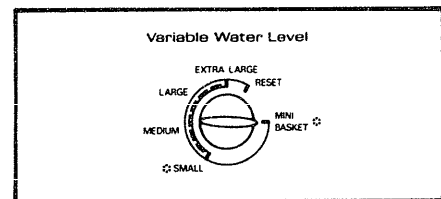


—Select desired Fabric Care program and cycle. See page 4,

—Pull out Cycle Selector Knob to start washer.

2 The Mini-Quick™ cycle allows you to use the Mini-Basket tub to wash small, lightly-soiled loads of clothes that you need in a hurry. Follow all the steps given above except for Cycle Selection.

- Push the Cycle Selector Knob in and turn clockwise to “MINI-QUICK” Cycle.

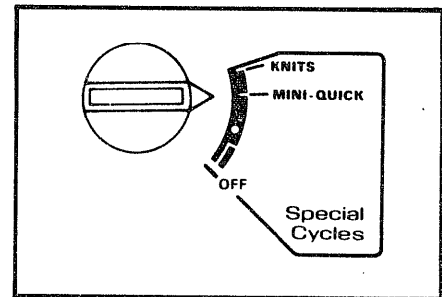

- Pull Cycle Selector Knob to start washer. Cycle will be completed automatically.

Energy-Saving Tips

We are all conscious of the need to save energy—to protect our country's energy reserves and to help us save money. There are several things you can do to reduce the amount of energy needed to wash your clothes:


1. Use Hot Wash—up to 150°F—*on a regular basis only* when washing heavily soiled articles—such as work and play clothes.
2. Under normal soil conditions, wash in water above 80°F (27°C). This generally means using the Warm Wash temperature setting on your washer—temperatures approximately 90°F to 110°F or hand comfortable. If you notice that soil has accumulated after several consecutive washings, use Hot Wash occasionally, if safe for fabrics.
3. Always rinse in Cold Water. The temperature of the rinse does not affect cleaning.
4. Try to wash less often. Save articles of the same type of fabric until you have a full load.
5. If you must wash smaller loads, adjust the amount of water. Small loads should have lower water levels.
6. Wash in off-peak utility hours. Your local utility can tell you which are the off-peak hours.
7. Use your washer's Normal Spin. This will remove more water during spin, which will shorten drying cycle to save more energy. You can use the Normal Spin in place of the Gentle Spin usually recommended for Permanent Press items. Switch to any of the Fabric Care Programs that indicate a Normal Spin. (See page 4.) The drying will remove any wrinkles which may result from the Normal Spin.
8. Use your Mini-Basket™ tub for very small loads. It uses less water than the small water level in the big tub on this washer. You will also save on detergent and energy.

IMPORTANT NOTE: If your clothes and household items don't look clean and fresh after washing, what are you apt to do? You will probably then re-wash them ... and that means you'll waste energy. Remember to sort your clothes carefully, and load them properly, select correct cycles, use enough detergent and *choose a water temperature warm enough to release and get rid of soil.*

Good sorting means better washing

Sort by surface texture

Separate

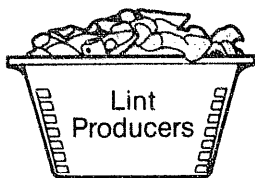

from




LINT PRODUCERS—such as terry toweling and chenille—give up lint.

LINT COLLECTORS—such as man-made fibers and napped fabrics like velveteen and corduroy—attract lint. These must be washed separately.


FOR MORE INFORMATION ON LINT CONTROL, SEE PAGE 20.

Sort by fabric


Separate

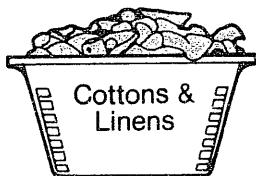


from

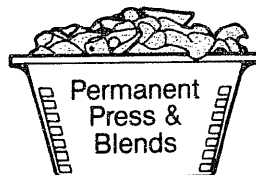

from

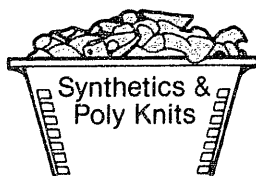


from

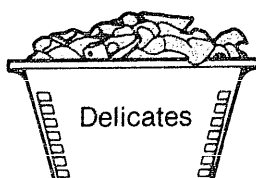


In addition to sorting to reduce lint collection, it is recommended that fabrics of similar construction be washed together whenever possible.

Sort by soil


Separate

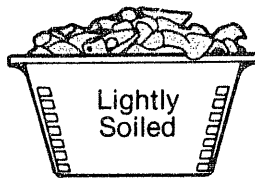

from

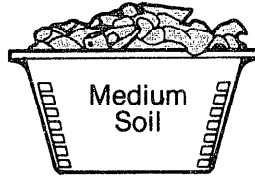


from

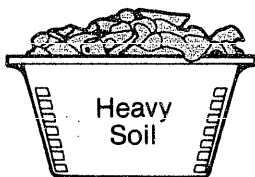


Sort by color


Separate

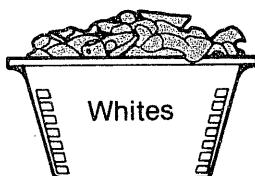


from

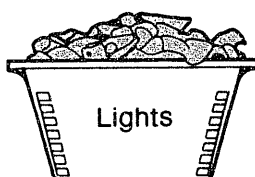

from

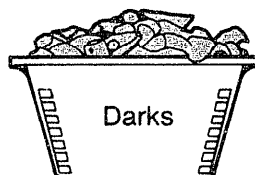

from

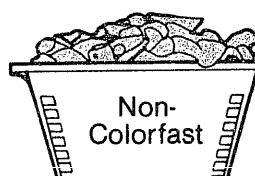

FOR INSTRUCTIONS ON DIFFERENT FABRICS AND LOADS, SEE PAGES 6 and 7.

It pays to check and prepare clothes for washing.

- Empty pockets, brush out cuffs, zip zippers, snap snaps, hook hooks and button buttons.
- Do any necessary mending—rips, hems, tears.
- Check all items for areas of heavy soil or stain.
- Remove stains. **FOR STAIN REMOVAL CHART, SEE PAGES 18 and 19.**
- Turn Poly Knits inside-out to minimize fabric surface damage.

EXTRA CLEANING—Special Modern Fabrics Cycles for removable heavy and oily soils.

(See page 5 for instructions on Extra Cleaning cycles operations.)

See page 18 “Stain Removal Guide”

See page 7 “Special Instructions”

See page 20 “The Problem Solver”

Soaking & Pre-treating—a good way to loosen deep soils and stains.


A thorough soaking with detergent or special soaking agent is an excellent way to remove heavy soils, embedded dirt and even some stains.

Soaking can be either a completely separate washing step or a preliminary step to a complete wash cycle. For detailed information on how to soak in your washer, please see page 8.

FOR INFORMATION ON SOAKING AGENTS, SEE PAGE 17.

- Pre-treat heavy soil by rubbing in a small amount of liquid detergent or a paste made of water and powdered detergent or soap. For best results wait ½ hour before washing.

How to load your washer

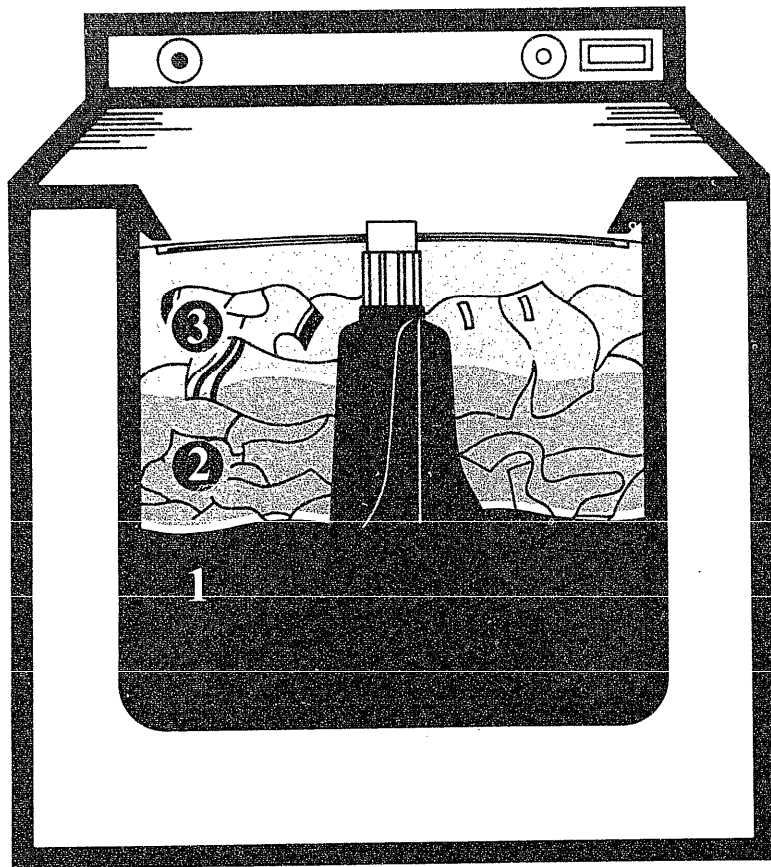

- Load clothes dry.
- Take a properly sorted group of clothes and drop them loosely in the wash basket in this order:

1

Large Items—like sheets. Do not wrap around the agitator.

2

Small Items—like washcloths.

3

Medium Size Items—like towels.

Here is a typical full load:

- 3 Double Sheets
- 6 Long Sleeve Shirts
- 3 Boxer Shorts
- 6 Standard Pillow Cases
- 5 T-shirts
- 4 Pair Trousers
- 6 Handkerchiefs

This illustration with clothes just reaching the Clothes Retaining Ring, shows a proper load. Clothes have ample room to move because they are not packed down, nor wrapped around the agitator. Clothes are loaded dry since wet items are apt to pack down which encourages overloading. This size load requires a full water fill.

What is the best size load of clothes—large, medium, or small? Save time, energy and detergent by avoiding extra use of the washer. Try to wash a full load of clothes. If you can it is better to save clothes until you have a full load. If you must wash smaller loads, save water, energy and detergent by adjusting the water level for the size of the load. See page 4.

Special recommendations for washing permanent press if you do not have a dryer.

If you are machine-washing Permanent Press clothes that you plan to line dry or drip-dry, use extra care to minimize wrinkling in the wash process:

- Be careful not to overload washer. Permanent Press clothes must have ample room to move freely. A Medium size Permanent Press load is the largest that should be washed.
- Use more water than you would for a regular load. Use a Medium Water Level for a Small Load; an Extra Large Water Level for a Medium Load.
- Remove clothes promptly as soon as washer stops and hang immediately.
- To minimize wrinkling, use a Fabric Care Program with a Gentle Spin. See page 4.

To add items after the washer has started.

- Turn off the washer.
- Carefully remove the Filter-Flo pan.
- Add any additional articles by submerging next to the agitator.
- Replace the Filter-Flo pan and restart the washer.

NOTE: Do not use the Filter-Flo pan as a wash basket. Do not put any items to be washed in the Filter-Flo pan.

NOTE: When washing stockings, panty hose and other easily tangled items, always handle separately. To minimize tangling, the use of a net laundry bag is recommended.

Factors to consider in selection of detergents and soap.

Products:

Phosphate— Powdered Detergents

Advantages:

Perform well in hard or soft water.
Wash all types of fabrics well.
Can be used in hot, warm, or cold water.

Disadvantages:

Are not available in some areas.

Non-Phosphate— Powdered Detergents

Perform satisfactorily in soft or moderately hard water.

In some areas only non-phosphate products are available.

Generally do not clean well in hard water.

May be difficult to dissolve, especially in cold water.

Should *not* be used in cold water.

Those containing sodium carbonate as an ingredient may cause harmful limestone deposits on clothes and washer when combined with hard water. (See Page 16.)

Liquid Detergents

Perform well in soft water.
Offer better performance in hard water than powdered non-phosphate types.
Clean synthetics and fabric blends well.
Are excellent as concentrates for removing spots.
Completely dissolve even in cold water.

May not perform as well as powdered phosphate products when diluted in wash water.

Soaps

Perform well in soft water.

Generally do not clean well in medium-hard or hard water.

May combine with water hardness minerals to form sticky soap curd.

The Results of Continued Use of Carbonate Detergents

Is your water hard? If it is, and if you use a carbonate type non-phosphate detergent, you will most probably notice limestone* deposits on your clothes and

washer surfaces. The hardness of your water and your washing frequency will determine how rapidly the limestone will build up. If your water is VERY HARD

(11 or more grains) and if you wash just a few loads a week, you may see limestone build-ups in just a few months (see page 16).

Effects on clothes

Although limestone build-up occurs more rapidly on cotton, it will eventually affect various fabrics in the following ways:

- Gives a stiff, harsh, rough feel to fabrics such as toweling.
- Causes colors to fade and become dull and dingy.
- Causes graying of fabrics.
- Leaves a white, powdery residue on dark-colored items.
- Causes spot-fading of bright colors as a result of direct contact with detergent.
- Reduces wrinkle-resistance of permanent-press fabrics.
- Destroys effectiveness of flame-retardant finishes on cottons such as children's sleepwear.
- Increases fabric wear because of the scrubbing action between limestone deposits on the fabrics during washer agitation.

Effects on washer

- Unsightly build-up on all washer surfaces exposed to the wash solution.
- Mat-like crusty formations caused by lint adhering to the sticky limestone deposits.
- Increased service calls because of limestone deposits in the pump, recirculation water hoses, filters and other washer parts.
- Reduced useful life of washer.

Recommended methods to reduce limestone build-ups

- Use a powdered phosphate detergent or a liquid detergent if these are available in your area.
- Install a home water softener. This will significantly reduce limestone build-up.
- Use a packaged nonprecipitating water softener, such as Calgon brand with phosphate.

Good washing practices may delay limestone damage to clothes

The following recommendations will temporarily delay the effects of limestone on your clothes. These are generally good washing practices and will give better soil removal whether or not you have hard water or use carbonate detergent.

- Use of hotter wash water, for example up to 150 °F for cottons. This also improves oily-soil removal.
- If you wash in cooler water to save energy, use more detergent to promote better washing. Also be sure to use bleach on bleachable fabrics. Use hot water whenever possible.
- Adding detergent and allowing washer to fill and agitate for three or four minutes to dissolve detergent before adding clothes.
- Increase amount of detergent. See chart on page 15 for recommended detergent amounts in relation to water hardness.
- Increase use of bleaches, pre-soaks, packaged water conditioners, prewash soil and stain removers to help in removing stubborn soils and stains.
- Use greater care in sorting loads. Wash very dirty loads separately and increase detergent to help keep dirt from redepositing on less soiled items. Wash delicate items separately to prevent damage from heavy sturdy clothes.
- Wash smaller loads to increase cleaning action of washer.
- Use fabric softener to counteract stiffness or harshness in clothes.

How to partially restore clothes

Once clothes have developed deposits, they may be partially restored by soaking in a solution of two cups of vinegar in one gallon of hot tap-water for 15 minutes. USE A PLASTIC CONTAINER. Then wash clothes in the washer using detergent.

CAUTIONS:

- Do not use vinegar soak solution in washer. The acidic action of the vinegar may damage the porcelain.
- Vinegar soak solution may reduce the wrinkle-resistance of permanent-press fabrics.
- Vinegar soak may damage the dyes in some fabrics.

*LIMESTONE—technically called CALCIUM CARBONATE—is caused by the reaction of the calcium in the hard water with the sodium carbonate in the detergent.

How much detergent should you use?

The use of a sufficient amount of detergent is one of the most important things you can do to make sure your wash comes out clean.


Amount required varies according to:

1. Water hardness
2. Amount of soil
3. Size of load
4. Type of detergent
5. Wash temperature.

Use more detergent if you have...

1. Hard water
2. Large loads
3. Greasy or oily soils
4. Lower wash temperature
5. Low phosphate detergent.

If the recommended amount of detergent produces too many suds, switch to a low sudsing detergent brand, and follow instructions on package.

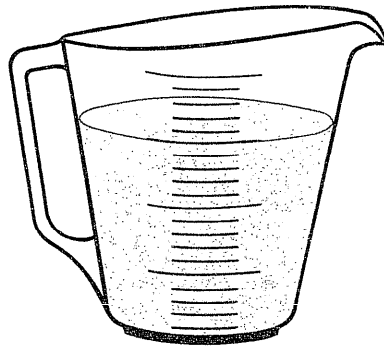

Using too little detergent is a common cause of laundry problems. Always measure detergent in a standard measuring cup.

How to use detergent

Granular or Powdered—Place in the filter pan for normal conditions, but, for best results, put the detergent next to the agitator after the clothes have been loaded.

If your detergent doesn't dissolve well, pre-dissolve the detergent in hot water then pour directly into the wash basket.

Recommended amount of detergent for average soil load high sudsing powder.

	Water Hardness	Water Level Setting				
		Extra Large	Large	Medium	Small	Mini Basket
High Sudsing Powder Type	VERY HARD 10-20 Gr.	2 cups	1 ¾ cups	1 ½ cups	1 ¼ cups	⅓ cup
	HARD 4-10 Gr.	1 ¾ cups	1 ½ cups	1 ¼ cups	¾ cup	¼ cup
	SOFT 0-4 Gr.	1 cup	1 cup	¾ cup	½ cup	⅓ cup
Low Sudsing Concentrated Powder Type	0-10 Grains	1 cup	¾ cup	½ cup	½ cup	¼ cup
LIQUID	0-10 Grains	FOLLOW PACKAGE DIRECTIONS				

1. Use recommended amount of detergent for your load and water hardness as shown in chart.
2. Other detergent types—Low and normal suds, powders, liquids, non-phosphate powders, follow recommendations on package.
3. For Extra Cleaning cycles, double the amount of detergent recommended in the chart.
4. For hard water treatment, see page 16.

Hard water—do you have it?

Before you can decide what to do about hard water, you need to know if you have it and, if so, how hard it is.

- If you live in a municipal area, contact your water company.
- If you live in a rural area, or in some suburban areas, contact your county agent.

The answer will be “you have ‘so many grains’ per gallon” and means this:

0 to 3 grains per gallon—SOFT,
4 to 10 grains—HARD, 11 to 19
grains—VERY HARD, 20 grains
and over—EXTREMELY HARD.

If your water is SOFT, you have no problem. You can use soap or detergent as you prefer and forget all about hard water. If you have HARD water—less than 10 grains—and you use phosphate detergent, you also have no problem.

But, if you have more than 10 grains, you will need to soften your water with either...

1. An installed water softener in your home, or
2. The use of a packaged water softener.

For information on water softeners, see chart below.

Add this much water softener with a full water level

Grains of hardness	0-10	10-15	15-20	20-25	25-30	over 30
When using with detergent	0	¼ cup (60 ml)	½ cup (120 ml)	⅔ cup (160 ml)	1 cup (240 ml)	1 cup plus 1 tbs. for every 5 grains above 30 (240 ml plus 15 ml for each extra 5 grains)
When using with soap	⅓ cup (80 ml)	⅔ cup (160 ml)	¾ cup (180 ml)	1 cup (240 ml)	1½ cup (300 ml)	1¼ cup plus 1 tbs. for every 5 grains above 30 (300 ml plus 15 ml for each extra 5 grains)

Other laundry products—

Laundry Product & Type

BLEACH
Chlorine Liquid
such as Clorox brand

Non-chlorine such as
Clorox 2 brand

FABRIC SOFTENERS
Rinse additive such
as Downy brand

Wash Additive such
as Rain Barrel brand

SANITIZER
Chlorine Bleach,
such as Clorox brand

WATER SOFTENER
Non-Precipitating
such as Calgon brand

Precipitating such as
Borax brand

SOAK AGENT
Such as Biz brand

**PRE-TREATING
STAIN AND SPOT
REMOVERS**
Such as
Spray 'n Wash
and K2R brands

TINTS AND DYES
Powdered such as
Rit and Tintex brands

How to use it

Use your Bleach Dispenser according to instructions on page 8.

Follow package directions.
Put bleach into washer with detergent.

Use your Fabric Softener Dispenser according to instructions on page 8.

Follow Package directions.
Add during wash cycle.

Use in case of infection and contagious disease.
See under Bleach above.

Follow package directions.
Add during wash cycle.

Follow package directions.
Use with detergent or soap in wash cycle.

Follow package directions.

Follow package directions. Treat only heavily soiled areas. Check garment's care labels for instructions

Follow package directions.
NOTE: Tinted garments may not be color-fast. Wash separately.

Special Instructions

1) Do not pour undiluted liquid chlorine bleach directly into washer or on dry clothes.
2) Some of today's washable fabrics should not be chlorine bleached such as: 100% cotton flame-retardant children's sleepwear, silk, wool, mohair, spandex, leather, or non-fast colors. Dilute bleach before using on any fabric.
3) Check Manufacturers' Care Labels for special instructions.

1) May be used on all kinds of fabrics.
2) Is most effective in hot water.

1) Helps make clothes fluffy and soft.
2) Reduces static electricity.
3) Use carefully. Too much may cause staining on some clothes.

Use carefully. Too much may cause staining on some clothes.

Guards against infection by killing most bacteria and viruses*

Suspends hardness minerals in solution, keeping water clear.

Combines with water hardness minerals to form precipitate which gives cloudy or milky appearance to water.

CAUTION: Washer control panels and finishes may be damaged by some laundry pre-treatment soil and stain remover products if such products are sprayed on or have direct contact with the washer. Apply these pre-treatment products away from washer. The fabric may then be washed normally. Damage to your washer caused by pre-treatment products is not covered by your warranty.

Clean washer to avoid discoloration of next load. Go through complete cycle (5-min. wash) using hot water, ½ cup (120 ml) detergent, 1 cup (240 ml) bleach. Wipe exterior parts. Caution: Tinting may discolor plastic in washer. Subsequent washings will reduce discoloration but may never eliminate it.

*For more information on sanitizers, send for Government Bulletin, #57B, "Sanitation in Home Laundering." See page 19 for address.

How to remove stains

1. Try to remove stains as soon as possible. The fresher the stain, the easier it is to remove.
2. Before attempting to remove any stain, take these steps:
 - Find the fabric and the finish in the chart at right, and use only recommended methods.
 - Check the care label instructions that came with the garment.
 - Test stain removal product on an inside seam or sample of the material.
 - Avoid use of hot water on unknown stain. It can set some stains.
3. Follow stain removal with a thorough rinsing.
4. Wash with recommended amount of soap or detergent.

Stain Removal Hint—

Using Chlorine Bleach for

White and Bleachable Fabrics.

Mix ¼ cup (60 ml) chlorine bleach with one gallon (3.8 liter) of cool water—approximately 80°F (27°C)—in a sink or pan. Soak stained area for 5 minutes and launder in washer.

The Case of the “Invisible” Stain.

Food or cooking oils on your synthetic garments may cause stains which are virtually invisible and which you may not notice as you put your clothes into the washer.

If these stains are not completely removed in the wash, the oily spots may pick up dirt from the wash water. Then they will become very visible and you may think they were caused by the wash cycle itself.

Once these spots become visible, how can you remove them?

- Rub in undiluted liquid detergent and let stand 30 minutes.
- Re-wash using hottest water the fabric can stand.

How can you prevent these “After-You-Wash” stains?

- Increase the amount of detergent normally used.
- Increase water temperature where fabric will permit.
- Wash synthetic garments more often.

Stain removal guide

Stain

Adhesives (Chewing Gum, etc.)

Antiperspirants, Deodorants

Blood

Chocolate, Cream, Ice Cream and Milk

Coffee and Tea

Cosmetics: Eye Shadow, Lipstick, Mascara, Liquid or Pancake Make-up, Rouge, Powder; Crayon; Grease, Oil, Tar, Cod Liver Oil.

Fresh Fruit, Fruit Juices, Wine, Vegetables, or Food Coloring

Grass, Foliage, Flowers, Mildew, Scorch

Ink, Ballpoint

Paint and Varnish

Perspiration

Rust

*Caution: Because cleaning fluids tend to be toxic, be sure you are in a well ventilated room when using them. No cleaning fluid should be used unless user is familiar with the limitations and required cautions (usually printed on label). Use extreme caution with flammable compounds.

Under no circumstances should fabrics containing flammable materials (waxes, cleaning fluids, etc.) be washed in washer.

White and Bleachable Fabrics

See Controls Setting Guide, Bleach on Page 6.

Rub with ice or immerse in cold water. *Use dull tool to carefully scrape off as much adhesive or gum as possible.* Sponge with a safe dry cleaning fluid* then launder.

Apply undiluted liquid detergent. Rinse. If stain remains, bleach according to Stain Removal Hint on opposite page. If color has changed, you may be able to restore it by sponging with ammonia** Rinse thoroughly.

Soak in cold water, then launder in warm water. If stain remains, bleach according to Stain Removal Hint on opposite page, launder.

Soak in cold water. Treat stain with a safe dry cleaning fluid*; Apply undiluted liquid detergent, launder, dry. Bleach according to Stain Removal Hint on opposite page, launder and dry.

Without cream: Bleach according to Stain Removal Hint on opposite page. Launder. With cream; Follow chart directions for cream.

Treat stain with safe dry cleaning fluid* Apply undiluted liquid detergent; launder and dry. Bleach according to Stain Removal Hint on opposite page.

Soak stain in cold water. If stain remains, bleach according to Stain Removal Hint on opposite page, launder.

Apply undiluted liquid detergent. Launder. (Treat mildew spots while they are fresh, before mold has a chance to weaken fabric.) If either type stain remains, bleach according to Stain Removal Hint on opposite page, launder. (Severe scorch cannot be removed.)

Fresh stains: Place stain face down on an absorbent towel and sponge with dry cleaning fluid* or use spray cleaner. Apply undiluted liquid detergent. Old stains; bleach according to Stain Removal Hint on opposite page.

Soften with oil, lard or Vaseline, then sponge with turpentine or banana oil. Launder in warm water.

Apply undiluted liquid detergent and launder in warm water. If color has changed you may be able to restore it by treating with ammonia or vinegar.** If any stain remains, treat with safe dry cleaning fluid* or bleach according to Stain Removal Hint on opposite page, launder and dry.

Apply rust remover,** using manufacturer's directions. Rinse and launder.

Other Washable Fabrics

Same as white and bleachable fabrics.

Same as white and bleachable fabrics except use non-chlorine bleach.

Sponge or soak in cold water, then launder.

Soak in cold water. Sponge with a safe dry cleaning fluid* Apply undiluted liquid detergent. Launder in warm water.

Sponge with warm water. If stain remains, apply warm glycerine, let stand 30 minutes and rinse well, or sponge with a safe dry cleaning fluid* Launder.

Sponge with safe dry cleaning fluid* Then launder in warm detergent water.

Sponge with warm water. Bleach remaining stain with non-chlorine bleach.

Sponge with warm water. Apply *undiluted liquid detergent*. Bleach remaining stain with non-chlorine bleach, then launder. Old mildew stains can seldom be removed. Scorch can seldom be removed.

Same as white and bleachable fabrics except launder using non-chlorine bleach.

Same as white and bleachable fabrics.

Launder in warm water. Rinse well. Bleach with non-chlorine bleach.

Same as white and bleachable fabrics.

REFER TO GARMENT MANUFACTURERS' CARE LABELS.

Try the stain removal procedure on a hidden part before applying to the entire garment.

More complete information on stain removal is given in government bulletin, "Removing Stains From Fabrics," 054D. To obtain a copy write to: Consumer Information Center, Pueblo, Colorado 81009. Available at low cost.

**Do not mix chlorine bleach with ammonia or acids such as vinegar and/or rust remover. Mixing can produce a toxic gas which may cause death.

To Save Time and Money— before you call for service, check the Problem Solver

If you have a problem, it may be minor. You may be able to correct it yourself. Just use this Problem Solver to locate your problem and then follow the suggested recommendations.

The Problem Solver

PROBLEM

LINT OR RESIDUE ON CLOTHES

GREASY OR OILY STAINS ON LAUNDERED GARMENTS

POSSIBLE CAUSE AND REMEDY

- Incorrect sorting of clothes. Separate lint-producers (such as terry towels and chenille) from lint-receivers (such as man-made fabrics, velveteen, corduroy).
- Washing too long, especially for smaller loads. For normal soil, wash one-minute per pound of dry clothes.
- Use of non-phosphate detergents which combine with hardness minerals to form a precipitate which can be mistaken for lint. Use a phosphate or liquid detergent; use warmer wash water or soften water with an installed mechanical softener or a packaged water softener.
- Powdery residue from granular detergent may appear to be lint. Predissolve granular detergent in hot water before adding to washer; make sure detergent is completely dissolved before adding clothes; switch to liquid or cold water detergent or use warmer wash water. See page 15.
- Overloading will cause abrasion which creates excessive lint. Wash fewer items with correct water level.
- Too much bleach. Use correct amount of bleach according to package directions.
- Not enough detergent to hold lint in suspension during wash cycle. Increase amount of detergent. See page 15.
- Incorrect use of fabric softener. If used in wash cycle, softeners may react with detergent to create a white deposit. Use softeners in rinse cycle only unless package specifies adding to wash cycle. Use Fabric Softener Dispenser. See page 8.
- Pilling usually on polyester-cotton blends is caused by normal wear and may look like lint. Turning clothes inside-out may provide some help.
- Static electricity caused by overdrying will cause attraction. Use fabric softener in rinse cycle.

These are sometimes called “Invisible Stains” because you may not notice them before washing clothes. However, if oily soils are not completely removed in wash cycle, the oily spots may pick up dirt from the wash water. The spots will then be very visible. They are *not* caused by the washer. Wash synthetic garments as soon as possible after wearing. Use more detergent than normal and hottest water fabric can stand. If spots appear, rub in undiluted liquid detergent, let stand 30-minutes and rewash using hottest water fabric can stand with extra detergent. Use “Extra Cleaning” cycles. See page 5.

PROBLEM

GRAYED CLOTHES

POSSIBLE CAUSE AND REMEDY

- Insufficient detergent. You may need to increase amount of detergent used if load is larger than normal, if soils are oily or heavier than average, if water level is large or if water is Hard to Extremely Hard.
- Water not hot enough for type of load. Be sure water heater is set to deliver hot water at the washer at 140°-150°F. Do not wash when other hot water needs—such as dishwashing or family baths—are heavy.
- Poor or inferior detergent. Change to phosphate detergent, if possible. Follow these steps:
 1. Use water conditioner, (such as Calgon brand)
 2. Pre-treat stains
 3. Use hottest water possible
 4. Use bleach where possible
 5. Use pre-soak aids
 6. Install water softener
- Washer overloaded. Clothes cannot move freely to loosen and remove soil, causing gray appearance. Follow correct loading procedures for size of load.
- Improper soaking with insufficient detergent. Usually a 30-minute soak is sufficient. However, when using extended soaks for heavily soiled garments you may need to use twice the recommended amount of detergent.
- Use of soap in hard water. Switch to a phosphate detergent, or follow six steps described above.
- Washing too long may result in increased soil deposition. Use shorter wash times for smaller loads.
- Detergent dissolves too slowly. Detergent must be present in the wash solution at the start of agitation. See page 15.
- To restore grayed clothes, follow one of these procedures:
 1. Put clothes in washer. Fill with HOT water. Check Manufacturers' Care Labels to determine if hot water is suitable for garment.
 - Add a non-precipitating type of water softener such as Calgon with phosphate—use 2½ times as much as you need for normal water softening.
 - Do not use detergent or soap.
 - Allow clothes to go through complete cycle.
 - Repeat, if necessary.
 2. If you prefer to use the Soak Setting, see page 8. Use the water softener in place of soak agent or prewash detergent and allow clothes to soak for about 20 minutes.
 3. Use "Extra Cleaning" cycles, see page 5.
 4. Use the Mini-Basket tub. See page 9. Increase detergent.

The Problem Solver (continued)

PROBLEM

POSSIBLE CAUSE AND REMEDY

YELLOWED CLOTHES

Incomplete removal of body soil due to constant use of insufficient detergent. Check hem of T-shirt or pillow case. If they are white and center is yellow, it contains body oil. Restore whiteness following procedures on "Grayed Clothes," page 21.

Chlorine bleach may yellow some fabrics with resin finishes. Use non-chlorine bleach (such as Clorox 2 brand). Refer to Garment Manufacturers' Care Labels. Restore color using color remover (such as Rit or Tintex brands), follow package directions.

Iron or manganese in water may cause overall yellowing or yellow spots.

1. Use extra detergent plus a non-precipitating water softener dissolved in water before adding clothes. Use non-chlorine bleach.
2. Have a special filter or chemical feeder installed in your home to remove iron and manganese from water.
3. Run hot water for a few minutes to clean iron residue build-up in lines; drain water heater occasionally.
4. **To remove spots:** spread stained portion over pan of boiling water and squeeze lemon juice through stain. **To remove overall yellow,** use a commercially available rust scale remover, following package instructions. If porcelain damage can occur, do not use in the washer; use a plastic container.

BLUE OR GRAY COLOR STAINS

Improper use of fabric softener. Never pour fabric softener directly on clothes; always dilute before adding to rinse water. Dilute softener before filling your Fabric Softener Dispenser. (See page 8) Also, do not lift lid during spin. This may cause improper dispensing, resulting in stains. **To remove stains:** dampen stained area and rub with undiluted liquid detergent. Re-wash, using chlorine bleach if safe for fabric.

SHRINKAGE, GENERAL

Some fabrics will shrink whether washed in a washer or by hand; others may be safely washed but will shrink in a dryer. Follow Garment Manufacturers' Care Labels exactly. If in doubt, do not machine wash or dry.

SHRINKAGE, KNITS

Relaxation shrinkage can occur in knit fabrics that have been improperly stretched and elongated by the manufacturer. When this occurs, garment may be pressed back into shape after each wash and dry cycle.

Progressive or delayed shrinkage is caused when starch or sizing (in some fabrics) is gradually removed by laundering. May be noticed in older garments that have been washed many times without previous shrinkage. Treat as for Relaxation Shrinkage above.

Shrinkage caused by overheating occurs in certain knit fabrics that have been heat-shaped. When washing, drying or ironing temperatures exceed the temperatures used to shape set, shrinkage may occur. This cannot be corrected, but it can be prevented by washing in cold or warm water; drying on Low or Delicate heat.

PROBLEM

WRINKLING IN
PERMANENT PRESS
AND "NO-IRON"
ITEMS

POSSIBLE CAUSE AND REMEDY

Leaving clothes in dryer after tumbling stops. Remove promptly and hang clothes immediately.

Too many clothes in dryer. Dry only one washer load at a time. Do not combine loads.

Improper loads. Avoid laundering heavy Permanent Press items, such as work clothes with lighter Permanent Press items such as shirts or blouses. Do not wash Permanent Press with regular laundry.

Too many clothes in washer. Permanent Press loads should always be smaller than regular loads...no more than medium loads to give clothes room to move freely.

Incorrect wash and dry cycles. Use Permanent Press Wash cycle which provides a cooldown rinse to minimize wrinkling. Also use Permanent Press Dry cycle.

Incorrect water level. Use Extra Large Water Level for Medium Load, Medium Level for Small Load.

Repeated washing in too hot water. Select Fabric Care Program with warm or cold water temperature. See page 4. Use with plenty of detergent.

Accumulation of lime scale due to use of carbonate detergents. If you must use a non-phosphate detergent, avoid the use of high-carbonate-built detergent.

Failure to use fabric softener. Proper use will minimize wrinkling.

To remove wrinkles:

1. Retumble on "Permanent Press" setting.
2. Rinse and dry on "Permanent Press" setting.
3. If unsuccessful, retumble on high heat for 10-12 minutes and hang immediately.
4. Iron carefully.
5. Send to drycleaners for pressing.
6. Some wrinkles may remain which cannot be removed.

Pins on garments or sharp objects left in pockets. Check to make sure all such objects are removed. Also check wash tub.

Snaps, hooks, sharp buttons, belt buckles, zippers. Fasten hooks, zippers and buttons. Remove sharp buttons and belt buckles. This is especially important in washing knits which snag easily. Turn knits inside-out.

Holes with random square shapes with yellow discoloration may be caused by improper use of chlorine bleach. Use only correct amount of bleach, using Bleach Dispenser. Never add undiluted bleach to wash tub or allow clothes to come into contact with undiluted bleach. Do not wipe up bleach spills with clothes.

Chemicals such as hair bleach, dye, permanent wave solutions, battery acids and toilet bowl cleaners may cause fabric holes. Rinse all towels and other articles that came in contact with these chemicals before putting them in wash. Do not contaminate clothing articles with these chemicals.

Small, unnoticed tears may enlarge during washing process. Check garments before washing and mend all rips and tears.

SNAGS, HOLES,
TEARS, RIPS OR
EXCESSIVE WEAR

The Problem Solver (continued)

PROBLEM

SNAGS, HOLES,
TEARS, RIPS OR
EXCESSIVE WEAR
(continued)

HEAVILY SOILED
AREAS—such as
collars and cuffs


WASHER WON'T
OPERATE

WATER
TEMPERATURE IS
INCORRECT

POSSIBLE CAUSE AND REMEDY


- As Permanent Press garments age they may show fraying at collars and cuffs. This is normal due to weakening of fibers by the Permanent Press process. It is not caused by washer. You can slow this process by washing small Permanent Press loads with a Large Water Level. Do not wash heavy items such as towels with Permanent Press. Remove collar stays, when possible.
- Roughness or burrs on agitator may cause rips or tears. Check agitator and file rough spots if necessary.
- May be caused by use of Cottons Fabric Care Programs for delicate articles. Use Knits or Delicates Fabric Care Programs. Refer to Garment Manufacturers' Care Labels.
- Garments weakened by age, sun or atmosphere. This is inevitable and is not caused by washer. Slow process by washing on any Fabric Care Program which has a Gentle Spin. See page 4.
- Too large loads, or too little water. Load washer only with number of items that will move freely. Select correct water level.

Pretreat with liquid detergent. Use "Extra Cleaning" cycles. See page 5.

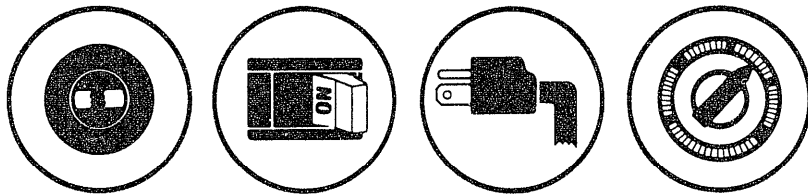

- Make sure cord is plugged into outlet.
- Make sure both hot and cold faucets are turned on.
- Make sure controls are set and Cycle Selector Knob is pulled out to "ON" position.
- Make sure lid is closed. Washer will fill but will not spin or agitate with lid open.
- Check house fuses or circuit breakers. If another appliance is sharing the electrical outlet, remove it. Washer should have separate outlet.

- Make sure you have selected correct Fabric Care Programs for your load. See page 4.
- Make sure hot and cold faucets are turned on and regulated correctly.
- Make sure hoses are connected to correct faucets ... hot to hot, cold to cold.
- Water valve screens may be stopped up. Remove inlet hoses from water valve. Clean the screens and reinstall hoses.

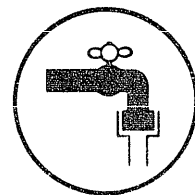

- Check household water heater to make sure it is delivering water at 140° to 150°F.

PROBLEM

WATER WON'T DRAIN

WATER LEAKS

WASHER IS NOISY

WASHER PAUSES IN CYCLE

POSSIBLE CAUSE AND REMEDY

- Make sure drain hose is not kinked.
- Top of drain outlet should be less than 8 ft. above floor.
- Make sure hose connections are tight at faucets.
- Make sure end of drain hose is correctly inserted in and secured to drain facility.
- Make sure washer is level and firm to the floor with rubber foot pads in place and front jam nuts tight. See your Installation Instructions.
- A sharp distinctive sound will be heard at the end of each spin period as the motor stops and the spin brake inside the transmission "locks in". This sound is normal.
- Heavily unbalanced loads can cause the washer to vibrate excessively during spin, and may cause it to move from its original position. In extreme cases, (usually occurs when washing a single, heavy item or a small load when water level is set higher than necessary) the spin basket may strike the outer tub, creating a loud but harmless noise. To correct, open the lid and redistribute the load evenly about the wash basket. Close the lid and restart.
- Washer normally pauses between washing steps ... such as between wash and spin or between spin and rinse.

IF WASHER STILL WILL NOT OPERATE, call for service.

User maintenance instructions

The Tub.

The porcelain is self-cleaning. Leave lid open after washing to allow moisture to evaporate. Do not use harsh or gritty cleansers.

The Exterior.

Wipe off any spills of washing compounds. Wipe or dust with damp cloth. Try not to hit surface with sharp objects.

To store washer:

Ask service technician to remove water from drain pump and hoses to prevent freezing.

Do not store the washer where it will be exposed to the weather.

For long vacations:


Be sure water supply is shut off at faucets and drain all water from hoses if weather will be below freezing.

To move washer:

Contact authorized factory service outlet and have washer crated to protect the suspension system and cabinet.

To reinstall washer:

Call your authorized factory service outlet for installation. Or, install it yourself using the installation instructions you received when you purchased washer.

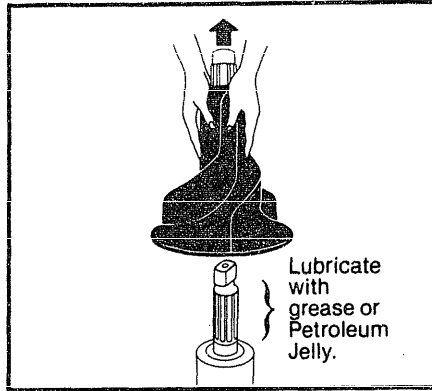

The Activator® agitator

Remove at regular intervals—about 4 to 6 months—and remove any lint that may have accumulated. No tools are needed, simply grasp agitator with both hands and pull straight up sharply. The slotted section at the top of the metal shaft has a light coating of lubricant to prevent parts sticking together. If this area appears to be dry, apply a light coat of grease or Petroleum Jelly around the slotted section of the shaft before replacing the agitator. Do not overgrease. Excess grease may get into clothes load.

When replacing the agitator, carefully lower straight down onto the shaft so that it fits into the slots. Then apply downward pressure until agitator snaps into its normal position.

How to remove limestone deposits from clogged Filter Flo® pan

- Soak filter pan in a preheated 160°F (71°C) solution of half vinegar and half water for 15 minutes. Then brush each side of pan with a stiff bristle brush while flushing with running water.

CAUTIONS:

- Do not soak in porcelain container. Vinegar can damage porcelain.
- Do not exceed 180°F (82°C) or filter pan may warp.



Consumer Services

At General Electric we're committed to providing you with the best appliances we know how to build and we know that you want your appliances to give you many years of dependable service.

Our Consumer Services are designed with your-needs and wants in mind.

1.

Warranty Protection

Before your new appliance left the factory, it went through rigorous tests to detect manufacturing defects.

And you have a written warranty to protect you. See the warranty on the back page of this book for details.

2.

Convenient Service

Whether your appliance is in or out of warranty, you're just a phone call away from our nationwide network of Factory Trained Service professionals.

Simply call our GE service organization. Look in the White or Yellow Pages of your telephone directory for GENERAL ELECTRIC COMPANY, GENERAL ELECTRIC FACTORY SERVICE, GENERAL ELECTRIC-HOTPOINT FACTORY SERVICE or GENERAL ELECTRIC CUSTOMER CARE® SERVICE.

Service can normally be scheduled at your convenience and the technician drives a fully-stocked parts service truck so that, in most cases, the repair can be completed in one visit.

We're proud of our service and want you to be pleased, but if for some reason you are not happy with the service you receive, here are three steps to follow for further help.

FIRST, contact the people who serviced your appliance. Explain why you are not pleased. In most cases, this will solve the problem.

NEXT, if you are still not pleased write all the details—including your phone number to:

Manager, Consumer Relations
General Electric
Appliance Park
Louisville, Kentucky 40225

FINALLY, if your problem is still not resolved, write:


Major Appliance Consumer Action Panel
20 North Wacker Drive
Chicago, Illinois 60606

3.

Service Contracts

For trouble-free service beyond the written warranty period.

If you prefer to budget your repair expenditures instead of being surprised by them, GE offers service contracts for varying lengths of time on all GE major appliances. With a contract, we'll keep your appliance in good operating condition during the contract period at no additional charge.

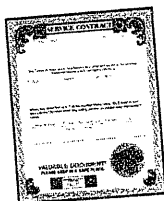

Service contracts let you pay today's prices for service a month, a year, or several years from now. And, you'll receive service from GE trained service technicians using only genuine GE parts. If you have any questions about Service Contracts, call **TOLL-FREE** 800.626.2224. (In Kentucky, call 800.292.2057.)

4.

The Quick Fix® System
You can save money and time by doing it yourself.

For do-it-yourselfers who would prefer to fix GE major appliances themselves . . . GE offers an industry first, the Quick Fix® System.



A program for do-it-yourself appliance repair, the system includes *step-by-step repair manuals* for refrigerators, most non-microwave electric ranges, dishwashers, and standard and large capacity washers and dryers, plus *specialty packaged replacement parts*, and technical help with a toll free 800 number.

5.

Help For You By Phone

Should you need help in the selection and purchase of new appliances, or have questions about the operation of the GE appliances you now own—or have *any* other questions about GE consumer products or services, you are only a **TOLL FREE** call away.

The GE Answer Center™ consumer information service is open 24 hours a day, seven days a week.

Our staff of experts stands ready to assist you anytime.



Your Direct Line to General Electric
The GE Answer Center® 800.626.2000

WARRANTY

Save proof of original purchase date such as your sales slip or cancelled check to establish warranty period.

WHAT IS COVERED**FULL ONE-YEAR WARRANTY**

For one year from date of original purchase, we will provide, free of charge, parts and service labor in your home to repair or replace **any part of the washer** that fails because of a manufacturing defect.

LIMITED ADDITIONAL FOUR-YEAR WARRANTY

For the second through fifth year from date of original purchase, we will provide, free of charge, replacement parts for **any part of the transmission** that fails because of a manufacturing defect. You pay for the service trip to your home and service labor charges. Or, if you desire, we will provide a **completely reconditioned transmission**. You pay for the shop reconditioning labor, the service trip to your home and service labor charges.

This warranty is extended to the original purchaser and any succeeding owner for products purchased for ordinary home use in the 48 mainland states, Hawaii and Washington, D.C. In Alaska the warranty is the same except that it is **LIMITED** because you must pay to ship the product to the service shop or for the service technician's travel costs to your home.

All warranty service will be provided by our Factory Service Centers or by our authorized Customer Care® servicers during normal working hours.

Look in the White or Yellow Pages of your telephone directory for **GENERAL ELECTRIC COMPANY, GENERAL ELECTRIC FACTORY SERVICE, GENERAL ELECTRIC-HOTPOINT FACTORY SERVICE** or **GENERAL ELECTRIC CUSTOMER CARE® SERVICE**.

WHAT IS NOT COVERED

- Service trips to your home to teach you how to use the product.

Read your Use and Care material.

If you then have any questions about operating the product, please contact your dealer or our Consumer Affairs office at the address below, or call, toll free:

The GE Answer Center™
800.626.2000
consumer information service

- Improper installation.

If you have an installation problem, contact your dealer or installer. You are responsible for providing adequate electrical, plumbing and other connecting facilities.

- Replacement of house fuses or resetting of circuit breakers.

- Failure of the product if it is used for other than its intended purpose or used commercially.

- Damage to product caused by accident, fire, floods or acts of God.

WARRANTOR IS NOT RESPONSIBLE FOR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

Warrantor: General Electric Company

If further help is needed concerning this warranty, contact:

Manager—Consumer Affairs, General Electric Company, Appliance Park, Louisville, KY 40225

Part No. 141 A5599 P235
Pub. No. 49-9496