

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# DE'LONGHI GM6000 Owner's Manual

[Shop genuine replacement parts for DE'LONGHI  
GM6000](#)



[Find Your DE'LONGHI Small Appliance Parts - Select From 131 Models](#)

----- Manual continues below part list -----

## Available Replacement Parts for DELONGHI GM6000

 
<a href="#">5320410151</a>	Cover
<a href="#">SC1052010</a>	Belt
<a href="#">5320410171</a>	Knob

**DeLonghi**

**AUTOMATIC GELATO MAKER  
INSTRUCTIONS FOR USE  
SAVE THESE INSTRUCTIONS**

**MACHINE À GLACE ITALIENNE AUTOMATIQUE  
CONSIGNES POUR UNE UTILISATION SÛRE  
CONSERVER LES PRÉSENTES CONSIGNES**

**MÁQUINA AUTOMÁTICA PARA HACER HELADO  
INSTRUCCIONES DE USO  
CONSERVE ESTAS INSTRUCCIONES  
LEA CUIDADOSAMENTE ESTE INSTRUCTIVO ANTES DE USAR  
SU APARATO**

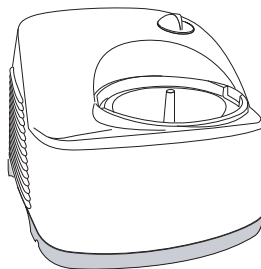

**MODEL/MODÈLE/MODELO  
GM6000**

**NOM**

 


 
 
 
Register this product on-line and receive a free trial issue of Cook's Illustrated. Visit [www.delonghiregistration.com](http://www.delonghiregistration.com).  
Visit [www.delonghiusa.com](http://www.delonghiusa.com) for a list of service centers near you.  
(U.S. Only)

Enregistrez ce produit en ligne et recevez un numéro gratuit de Cook's Illustrated. Visitez [www.delonghiregistration.com](http://www.delonghiregistration.com).  
Visitez [www.delonghiusa.com](http://www.delonghiusa.com) pour y voir une liste des centres de réparation proches de chez vous. (É.-U. uniquement)

Registre este producto en línea y reciba un ejemplar gratis de Cook's Illustrated. Visite [www.delonghiregistration.com](http://www.delonghiregistration.com).  
Visite [www.delonghiusa.com](http://www.delonghiusa.com) para ver la lista de centros de servicios cercanos a usted. (Solamente en los Estados Unidos)

**ELECTRONIC CHARACTERISTICS/CARACTÉRISTIQUES ÉLECTRONIQUES  
CARACTERÍSTICAS ELÉCTRICAS:  
120V ~ 60Hz 200W**

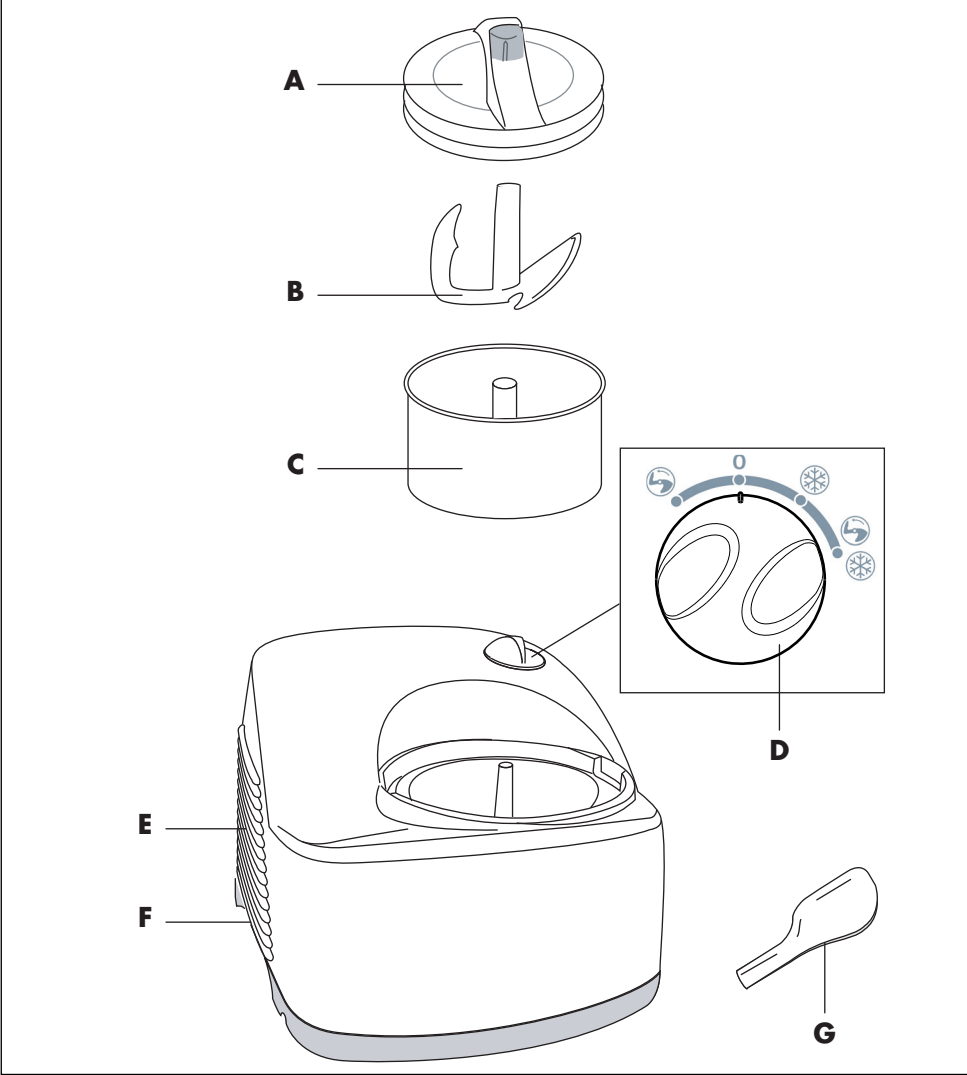

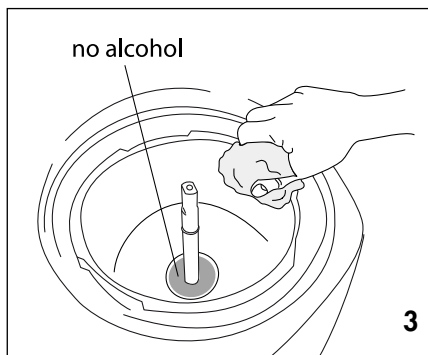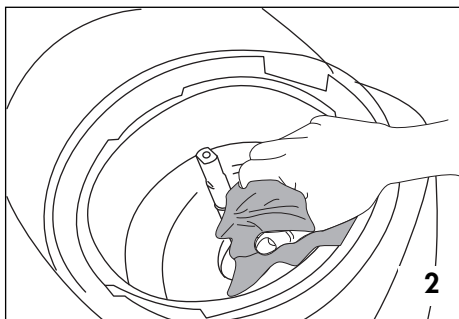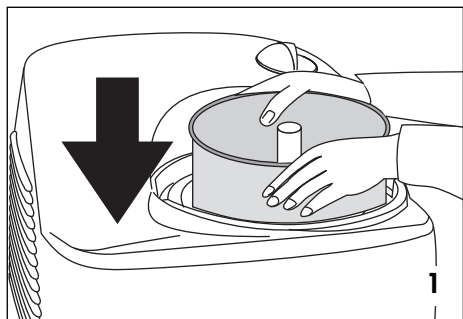

**US**

**DESCRIPTION**

- A) Lid
- B) Paddle
- C) Removable bowl
- D) Function selector
- E) Ventilation grille
- F) Handles
- G) Spatula

**CA**

**DESCRIPTION DE L'APPAREIL**

- A) Couvercle
- B) Palette
- C) Cuve amovible
- D) Sélecteur de fonction
- E) Grille d'aération
- F) Poignées
- G) Spatule

**MX**

**DESCRIPCIÓN DEL APARATO**

- A) Tapa
- B) Paleta
- C) Tazón extraíble
- D) Selector de función
- E) Rejilla de ventilación
- F) Agarraderas
- G) Espátula





## SAFETY PRECAUTIONS

Read this manual thoroughly before using the appliance. This is the only way to ensure the best results and maximum safety for the user. Save these instructions for future reference.

- 1 The appliance must not be modified in any way, as any modifications may be extremely dangerous.
- 2 Before using the appliance, check that the power supply voltage corresponds to the voltage indicated on the rating plate. Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 12A only.
- 3 If the socket and the plug of the appliance are incompatible, the socket should be changed by a qualified professional only.
- 4 The manufacturer cannot be considered responsible for damage caused by the absence of an earth connection on the power supply line. If in doubt, consult a qualified professional.
- 5 If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's Customer Services in order to avoid all risk.
- 6 Never allow the appliance to be used by persons (including children) with psychological, physical or sensory impairments or with insufficient knowledge, unless closely supervised and instructed by someone responsible for their safety. Children must be supervised to ensure they do not play with the appliance.
- 7 After removing the packaging, make sure the appliance is not damaged. If in doubt, do not use the appliance and contact a qualified professional.
- 8 Do not leave packaging (plastic bags, polystyrene foam, etc) within reach of children as it could be dangerous.
- 9 Do not use an extension cable.
- 10 Do not install the appliance in rooms containing gas, oil or sulfur. Do not install near sources of heat.
- 11 Keep the appliance at least 20 in (50 cm) away from flammable substances (alcohol etc) or pressurized containers (e.g. aerosol cans).
- 12 Do not rest heavy or hot objects on top of the appliance.
- 13 This appliance is intended for household use only. It must not be used outdoors. Any other use is considered improper and thus dangerous.
- 14 The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.
- 15 Never touch the appliance with wet or damp hands or feet. Never immerse the appliance in water.
- 16 Never use the appliance in bathrooms.
- 17 Do not pull the power cable.
- 18 Keep fingers and hands outside of bowl while paddle is in motion.
- 19 Before cleaning or servicing, disconnect the appliance by unplugging from the outlet.
- 20 In the event of malfunction or faulty operation, switch off and do not attempt to repair. For all repairs contact the manufacturer's authorized Customer Services only and ask for original spare parts. Failure to respect the above could reduce the safety of the appliance.
- 21 When the appliance is to be discarded, after unplugging from the outlet, the cable should be cut to make the appliance unusable.
- 22 Unplug the appliance when not in use. Do not leave plugged in unnecessarily.
- 23 At the end of its working life, take the appliance to a specialist waste collection center.

**SAVE THESE INSTRUCTIONS**  
**THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY**

### Important:

- This appliance must not be laid on its side or turned upside down.
- Wait at least 1 hour after transporting the appliance before starting it.
- Do not leave the selector in the  position for more than 1 minute.
- After the appliance have been shut off, always wait at least 5 minutes before starting it again.
- Use the appliance away from heat sources. Leave at least 8 in (20cm) between the appliance and walls or objects which could obstruct free air circulation.
- Do not remove the lid while the paddle is moving.
- Make sure ingredients such as milk and cream are cold (refrigerator temperature 41°F/5°C). If ingredients were heated during preparation make sure they are cooled in the refrigerator before pouring into the machine.
- When raw eggs are to be used for gelato preparation, make sure they are fresh by breaking each egg separately into a bowl and check that it does not smell bad, the egg white is dense and sticks to the yolk, and the yolk is round and swollen.
- **IMPORTANT:** After turning the appliance off from "" or "", always wait at least 5 minutes before turning it on again.

### DESCRIPTION OF SELECTOR

The selector has 4 different positions:


#### Paddle rotation (compressor off)

- Use this function to mix the ingredients during the first phase of gelato preparation.
- **Important:** you cannot add ingredients to the bowl while the paddle is in motion.

#### 0 Appliance off.

#### Chilling (compressor operating)


This function to add or taste ingredients during preparation or to stop the paddle to check the texture of the gelato.

If the recipe requires ingredients to be added (pieces of chocolate, raisins, fruit...), turn the selector to the  position for a maximum of 1 minute.

**Important:** you must never leave the appliance in this position for more than 1 minute.

Leaving it in this position for longer could seriously damage the paddle rotation mechanism.



#### Combined paddle rotation and chilling (compressor operating)

 This function to make the gelato through the combined action of the compressor and the paddle.

When the gelato reaches the required texture, place the selector in the 0 position to turn the appliance off. Normally each gelato making cycle lasts about 30 - 40 minutes.

Continuous functioning beyond this time will result in excessively hard gelato and serious damage to the paddle rotation mechanism.

**Important:** if you need to work the ingredients with a whisk (e.g., to froth the egg whites, beat the eggs and sugar, etc.), you are recommended to prepare the ingredients in a separate container and then pour them into the bowl.



Select the  function to start making the gelato.

## INSTRUCTIONS

### ASSEMBLY AND DISSASSEMBLY

The appliance comes assembled in the packaging but should be taken apart for cleaning before use. To take the appliance apart, remove the lid, then remove the paddle from the pin in the center of the bowl. Then remove the bowl. Wash all parts thoroughly as described below in Cleaning section and then dry. To reassemble the appliance, insert the bowl and press downwards on the edge with the hands (fig. 1). Insert the paddle then fit the lid.

### OPERATION

- 1) Assemble the appliance as described above.
- 2) You are recommended (fig. 3) to moisten the aluminum bottom of the appliance evenly with cotton wool dipped in alcohol for food use (such as vodka or rum) taking care not to pour it onto the central plastic area (fig. 3). Remember that alcohol is flammable. You should therefore perform this operation away from flames or hot stoves. This prevents the formation of ice between the bowl and aluminum bottom of the appliance, making it easier to extract the bowl when preparation is complete.
- 3) Place the ingredients required by the recipe in the bowl (note: some ingredients may need to be mixed thoroughly before being placed in the bowl) and fit the lid by turning counterclockwise. Bear in mind that the bowl holds a maximum of 2 3/4 cups (600 g).
- 4) Plug into a suitable outlet. Make sure there are no obstacles preventing air from circulating freely through the grilles at the sides.
- 5) Once you have added all the ingredients to the bowl, turn the appliance on by placing the selector in the   position. Gelato should take 30-40 minutes to reach the desired consistency and should be checked periodically throughout preparation to ensure the gelato does not get too hard and freeze the paddle rotation mechanism.
- 6) Ingredients such as pieces of chocolate, raisins, and nuts should be added separately at the end of the freezing cycle about 5 minutes before gelato is ready.

**Important:** never use the appliance without the bowl. Make sure the outside surface of the bowl is completely dry before inserting it in the appliance.

### ONCE THE GELATO IS READY

position. Remove the lid, the paddle and the bowl, then use the scoop provided to transfer the gelato to another container. If you would like to make multiple batches, clean the paddle and bowl and completely dry and follow the normal gelato preparation procedure. **Do not freeze gelato directly in stainless steel bowl provided with the machine "C".**

### CLEANING AND TRANSPORT

**Before cleaning, always turn the appliance off by placing the selector in the 0 position and unplug the appliance from the outlet.**

Always wash the components of the appliance in direct contact with the ingredients thoroughly whenever you use the appliance.

Paddle, bowl and lid can also be washed in the top rack of a dishwasher.



You are recommended to use a short low temperature program when using the dishwasher.

Dry the bottom of the bowl thoroughly (fig. 2) before use to avoid ice forming during gelato preparation, thus prolonging the gelato preparation time.

**The appliance must not be laid on its side or turned upside down.**

## TROUBLESHOOTING

If the machine is not functioning correctly the following may be checked before calling the customer service center.

PROBLEM	SOLUTION
Gelato is not freezing	If gelato is still in liquid form after about 20 minutes of the machine running, check to make sure control is in the   position. Ensure that ingredients are at refrigerator temperature (41 °F/5°C) and machine was not laid on its side or upside down prior to use.
Compressor is loud and is making an unusual noise	Make sure gelato maker is on a flat surface. If gelato maker was transported ensure that it is allowed to sit 1 hour before use.
Paddle does not rotate	Gelato may be too hard. Ensure that the paddle rotation mechanism is not damaged by running the appliance without the paddle to see if it spins. If it does not spin without the paddle, call customer service.

For more information please visit [www.gelataio.delonghi.com](http://www.gelataio.delonghi.com) and let us know your favorite recipes.



## LIMITED WARRANTY

**This warranty applies to all products with De'Longhi or Kenwood brand names.**

### **What does the warranty cover?**

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current ( AC ) circuit.

### **How long does the coverage last?**

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

### **What is not covered by the warranty?**

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

### **How do you get service?**

If repairs become necessary, see contact information below:

#### **U.S. Residents:**

Please contact our toll free hotline at 800-322-3848 or log onto our website at [www.delonghi.com](http://www.delonghi.com).

For all accessories, spare parts or replacement parts, please contact our parts division at 1-800-865-6330.

**Residents of Canada:** Please contact our toll free hotline at 1-888-335-6644 or log onto our website at [www.delonghi.com](http://www.delonghi.com).

**Residents of Mexico:** Please refer to the Limited Warranty statement for Mexico.

### **Please refer to the back page of the manual for De'Longhi addresses.**

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

### **How does state law apply?**

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.



**De'Longhi America, Inc.**  
Park 80 West, Plaza One  
Saddle Brook, NJ 07663  
1-800-322-3848

**De'Longhi Canada, Inc.**  
6150 McLaughlin Road  
Mississauga, Ontario  
L5R 4E1 Canada  
1-888-335-6644

**Fiducia Italiana S.A de C.V.**  
Pestalozzi 814  
Col. Del Valle  
Del. Benito Juarez  
México D.F. 03100  
tels: 5543 1447 y 5543 6492  
Lada sin costo: 01800 711 8805

[www.delonghi.com](http://www.delonghi.com)

[www.gelataio.delonghi.com](http://www.gelataio.delonghi.com)