

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Landmann 28107 Owner's Manual

[Shop genuine replacement parts for Landmann 28107](#)



[Find Your Landmann Grill Parts - Select From 200 Models](#)

----- Manual continues below -----

LANDMANN THE ASPEN

Model 28107

Assembly Instructions



READ FIRST ! RULES FOR SAFE OPERATION

- FOR OUTDOOR USE ONLY !
- THE ASPEN OUTDOOR FIREPLACE IS FOR ADULT USE ONLY.
- DO NOT LEAVE UNATTENDED AT ANY TIME WHILE IN USE.
- KEEP ALL SCREENS IN PLACE WHILE IN USE.
- KEEP THE ASPEN OUTDOOR FIREPLACE AWAY FROM BUILDINGS, FLAMMABLE ITEMS AND VEHICLES.
- DO NOT USE IN WINDY CONDITIONS.
- DO NOT OVERLOAD OR USE TO BURN LEAVES OR GARBAGE.
- USE CAUTION WHEN TENDING THE FIRE, AS SURFACES WILL BE HOT WHILE IN USE.
- DO NOT MOVE THE ASPEN OUTDOOR FIREPLACE WHILE IN USE.
- USE ONLY ON BRICK, CONCRETE OR ROCK SURFACES.
- DO NOT USE ON LAWNS OR WOODEN DECKS.
- BEFORE EACH USE MAKE SURE THE ASPEN OUTDOOR FIREPLACE IS IN GOOD WORKING CONDITION AND NO BOLTS HAVE WORKED LOOSE.
- USE CAUTION AFTER CHARCOAL OR FIREWOOD HAS BEEN EXTINGUISHED, SURFACES WILL REMAIN HOT FOR SOME TIME.

OPERATING INSTRUCTIONS

The Aspen Outdoor Fireplace can be used to burn firewood or to cook with charcoal.

To burn firewood:

- 1) Remove cooking grate and set off to the side out of the way.
- 2) Place firewood inside the hearth on the bottom, arrange firewood for optimum results and light.
- 3) Keep door screen panel closed at all times to avoid popping embers.

To cook with charcoal:

- 1) Place desired amount of charcoal in a pile in the center of the hearth and light.
- 2) Once charcoal has turned gray, spread charcoal out evenly.
- 3) Carefully place cooking grate inside the hearth and begin cooking.

ASPEN PART LIST

Your carton should contain the following parts:

- (1) Base
- (1) Ash drawer
- (4) Pillars
- (3) Fixed screen panels
- (1) Door screen panel
- (1) Lid
- (1) Top cap
- (1) Grill grate
- (24) 1/2" bolts
- (24) Washers
- (24) Nuts

Turn page over and see page 2 for the assembly diagram.

Thank you for your purchase of the Aspen Outdoor Fireplace. At Landmann USA, we strive to provide you with an easy to use, easy to assemble product. However, in the unlikely event your package should have a missing or defective part, please contact us at: customerservice@landmann-usa.com
-OR-
1-770-606-8903 EXT 224 M-F 8-5 Eastern Time
Proof of purchase may be required.

Landmann USA
Cartersville, GA 30120
Made in China
© 2005 Landmann USA

LANDMANN

THE ASPEN

Model 28107

Assembly Instructions

