

**BRINKMANN®**


**Q-beam®**

**FISH ATTRACTOR®  
FLOATING FISHING LIGHT**

**OWNER'S MANUAL &  
OPERATING INSTRUCTIONS**

**⚠ WARNING**

READ AND FOLLOW ALL WARNINGS  
AND INSTRUCTIONS IN THIS  
MANUAL TO AVOID PERSONAL  
INJURY OR PROPERTY DAMAGE.

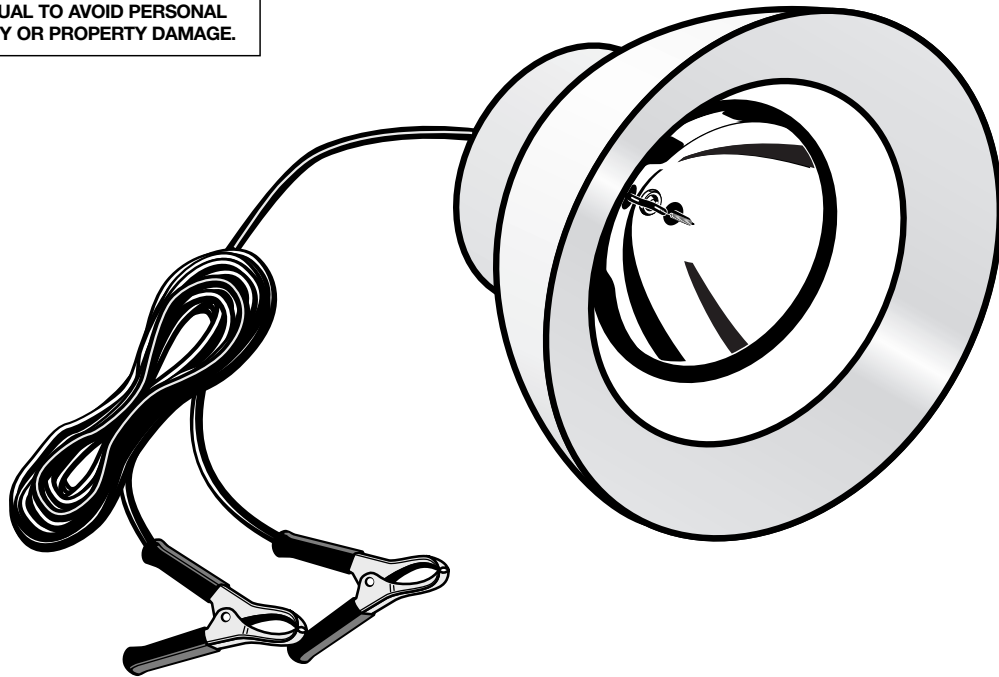

## IMPORTANT SAFETY WARNINGS

**⚠ READ AND FOLLOW ALL SAFETY WARNINGS AND INSTRUCTIONS IN THE OWNER'S MANUAL BEFORE OPERATING THIS FISHING LIGHT.**

### **⚠ WARNING**

- Never place fishing light lens (face) down on any surface other than water when light is on or if it was recently on. Doing so could burn/ignite surfaces such as seats, carpeting, etc. and cause serious property damage. Always turn fishing light off by disconnecting from power source when not in use.
- To prevent serious damage to eyesight, never look into fishing light when light is on. Do not shine light into the face of someone else.
- Do not touch lens of fishing light when light is on or if it was recently on. The lens will be hot and could cause serious burns.
- Keep battery clips dry and out of water at all times.
- Do not place light in water when lamp is hot. Light must be disconnected from power source and cooled before placing in water. Sudden extreme changes in temperature could cause bulb to shatter.
- Always disconnect light from power source and allow to cool for at least one minute before removing light from water. Sudden extreme changes in temperature could cause bulb to shatter.
- Do not allow children to handle or operate this fishing light.
- Do not operate in close proximity of combustible or flammable materials.
- Do not attempt to operate fishing light if styrofoam housing, cord, clips, bulb or any part of the fishing light is damaged or corroded.
- Prior to connecting the light to a battery of an inboard boat, the blower must be activated to remove combustible fumes.
- Do not use this product for other than its intended use.

**⚠ USE CAUTION AND COMMON SENSE WHEN OPERATING YOUR FISHING LIGHT.**

**⚠ FAILURE TO ADHERE TO THE SAFETY WARNINGS AND GUIDELINES IN THIS MANUAL COULD RESULT IN BODILY INJURY OR PROPERTY DAMAGE.**

**⚠ SAVE THIS MANUAL FOR FUTURE REFERENCE.**

# OPERATING INSTRUCTIONS

**⚠ READ AND FOLLOW ALL SAFETY WARNINGS AND INSTRUCTIONS IN THE OWNER'S MANUAL BEFORE OPERATING THIS FISHING LIGHT.**

**⚠ WARNING:** Do not attempt to operate fishing light if styrofoam housing, cord, clips, bulb or any part of the fishing light is damaged or corroded.

## Step 1

Make sure to turn engine off before placing light in water. To activate, connect one of the red clips to positive (+) battery post, then connect the other red clip to negative (-) battery post, chassis or engine block.

**⚠ WARNING:** Keep battery clips dry and out of water at all time.

**⚠ WARNING:** Do not place light in water when lamp is hot. Light must be disconnected from power source and cooled before placing in water. Sudden extreme changes in temperature could cause bulb to shatter.

**⚠ WARNING:** If boat is an inboard, the blower must be activated to remove combustible fumes prior to connecting light.


## Step 2

To deactivate, remove red clip from negative (-) battery post, chassis or engine block, then remove the other red clip from positive (+) battery post.

**⚠ WARNING:** Always disconnect light from power source and allow to cool for at least one minute before removing light from water. Sudden extreme changes in temperature could cause bulb to shatter.

- Cover the battery clips with a light coating of marine grade grease to help protect metal parts from corrosion.
- Hang your fishing light above picnic table, campsite or work area for use as an area light.
- Your fishing light can also be used as a spotlight or emergency/signal light.

## BATTERY CONNECTION

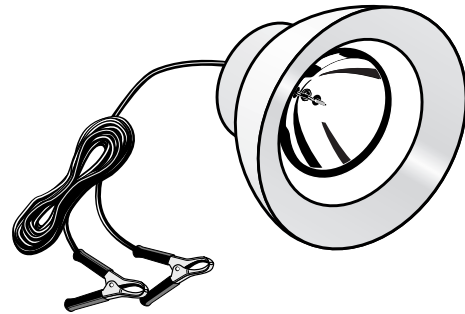

## HELPFUL TIPS

## 30-DAY LIMITED WARRANTY

For 30-days from date of purchase, The Brinkmann Corporation warrants the Q-Beam Fish Attractor Light against defects due to workmanship or materials to the original purchaser. The Brinkmann Corporation's obligations under this warranty are limited to the following guidelines:

- This warranty does not cover fishing lights that have been altered or damaged due to: normal wear, abuse, improper maintenance, improper use, disassembly of parts and/or attempted repair by anyone other than an authorized employee of The Brinkmann Corporation.
- This warranty does not cover surface scratches or weathering as this is considered normal wear.
- Warranty service is limited to repair or replacement of fishing lights which prove defective under normal use and which upon examination shall indicate to Brinkmann's satisfaction, they are defective. If Brinkmann confirms the defect and approves the claim, Brinkmann will elect to repair or replace the fishing light as covered by the terms of this warranty.
- This warranty extends to the original purchaser only and is not transferable or assignable to subsequent purchasers.

The Brinkmann Corporation requires reasonable proof of purchase. Therefore, we strongly recommend that you retain your sales receipt or invoice. To obtain repair or replacement of your Q-Beam Fish Attractor Light under the terms of this warranty, please call Customer Service Department at 1-800-527-0717 for a Return Authorization Number and further instructions. **A receipt will be required. A Return Authorization Number must be clearly marked on the outside of the box.** Fish Attractor Lights returned to Brinkmann must include your name, address and telephone number. Please make sure the light is properly packed, postage prepaid, and insured. The Brinkmann Corporation will not be responsible for any Fish Attractor Lights forwarded to us without a Return Authorization Number.

EXCEPT AS ABOVE STATED, THE BRINKMANN CORPORATION MAKES NO OTHER EXPRESS WARRANTY.

THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO 30-DAYS FROM THE DATE OF PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

ANY LIABILITY FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM THE FAILURE OF THE Q-BEAM FISH ATTRACTOR LIGHT TO COMPLY WITH THIS WARRANTY OR ANY IMPLIED WARRANTY IS EXCLUDED. CUSTOMER ACKNOWLEDGES THAT THE PURCHASE PRICE CHARGED IS BASED UPON THE LIMITATIONS CONTAINED IN THE WARRANTY SET OUT ABOVE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.