


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



Nexgrill 710-0691A Owner's Manual

[Shop genuine replacement parts for Nexgrill 710-0691A](#)

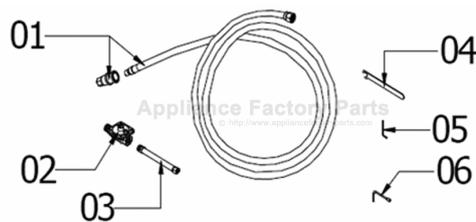

[Find Your Nexgrill Grill Parts - Select From 922 Models](#)

----- Manual continues below -----



5270 Edison Avenue., Chino, CA 91710
(Tel) 800-790-1299 (Fax) 909-718-1949

NOTICE

Dear Customers:

Thank you for choosing our barbeque grill and hope that you enjoy our product.

Our gas valves and components are preset at the factory to operate on Liquid Propane (LP). If you wish to convert your grill from LP to Natural Gas (NG), we strongly recommend that you hire a professionally trained technician to convert the unit. Please understand that we will not be responsible for any liability, personal injury, or property damage resulting from an improperly converted grill.

We will provide warranty parts for this product after it is converted, however, we will not honor any warranty claims for parts damaged during the conversion of the original LP valves and orifices to NG configuration if the conversion is done improperly.

Natural Gas Conversion for Model# 720-0691A

NG Conversion Kit for Model # 720-0691A

▲ WARNING! FAILURE TO HEED THESE WARNINGS COULD RESULT IN A FIRE OR EXPLOSION THAT COULD CAUSE SERIOUS BODILY INJURY, DEATH OR PROPERTY DAMAGE.

Installation of this Natural Gas Conversion kit must be performed by a QUALIFIED GAS TECHNICIAN ONLY. DO NOT ATTEMPT TO INSTALL THIS KIT YOURSELF. Improper installation could result in a gas leak which could cause a fire or explosion and cause serious bodily injury, death or property damage. Leaks due to improper installation could occur immediately or slowly over time. If you hear any unusual noises or leaks, smell gas or unusual odors, or notice anything unusual with the operation of your gas appliance after the installation, immediately shut off the gas supply and discontinue use until the appliance is repaired by a QUALIFIED GAS TECHNICIAN.

If there are damaged or missing parts when you unpack this kit, call 1-800-790-1299. DO NOT have your QUALIFIED GAS TECHNICIAN attempt to install this kit until you receive replacement for any damaged or missing parts.

Orifice Chart

The different burner valves in this grill have different BTU ratings. This means that the amount of gas coming from each orifice varies in order to create the BTU's. The holes in the orifices themselves are drilled to different sizes so as to allow the proper amount of gas to flow through them. Please note the chart below as an easy reference for the various orifice opening sizes for the different valves in the grill.

720-0691A, 730-0691A orifice size(Do not included in NG conversion kit pack)

	Components	Liquid Propane (LP)		Natural Gas (NG)	
		Orifice Size	BTU	Orifice Size	BTU
	Main Burner	0.94mm	10,000	1.54mm	10,000
	Searing Side Burner	1.15mm	15,000	1.90mm	15,000
	Rear Burner	1.07mm	13,000	1.84mm	13,000
Below tools are included in package:					



Allen Key



6mm Wrench



6mm Nut Driver

Natural Gas Conversion for Model# 720-0691A

Warning: Make sure all grill components are completely cool and gas supply is turned off and removed from grill prior to performing the conversion.

NG Hose and Regulator Conversion

Tools required:



Phillips Head Screwdriver (+)



14mm wrench

1. Turn all knobs to OFF. Turn off LP gas supply and remove the LP cylinder from the grill cart. Remove the brass adapter of the LP regulator from the manifold with a wrench.



2. Install the NG regulator hose(150mm) to the manifold and secure using a wrench. Tighten the NG regulator on the side panel with two 5/32*10mm screws that pre-assemble on the NG regulator.



Natural Gas Conversion for Model# 720-0691A

Note: Make sure the orifice will be lined with valve when loose out and replace orifice in Main Tube Burner Conversion, Searing Side Burner conversion and Rear burner Conversion. And then test gas leak accordingly.

Main Tube Burner Conversion

Tools required:



Phillips Head Screwdriver (+)




6 mm Nut Driver

Steps □


1. Remove the warming rack, cooking grids, and flame tamers.
2. Remove the main tube burners by removing the screws securing the burners near the back wall of the firebox and the screw near the front of the firebox that secures the igniter bracket to the burner. Gently lift the tube burners up and out.



3. Remove LP orifice with 6mm nut driver for each of the main burners, and replace with NG orifice by 6mm nut driver. (4 main burner)

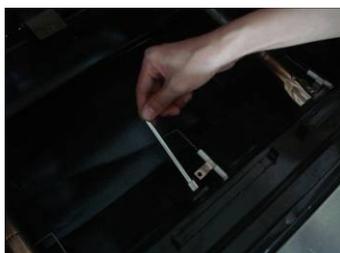

4. Replace the tube burners and screw back into original position.

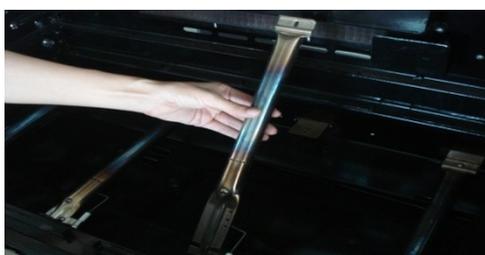

Natural Gas Conversion for Model# 720-0691A

Searing Side Burner Conversion

Tools required:




Phillips Head Screwdriver (+)




6 mm Nut Driver

The step-by-step instruction for converting the searing side burner's orifice are stated below.

1. Remove the screw under C bracket to take off the C bracket, then remove the searing side burner from the firebox by loosening the screws securing the burners near the back wall of the firebox. Lift the burner up and out.

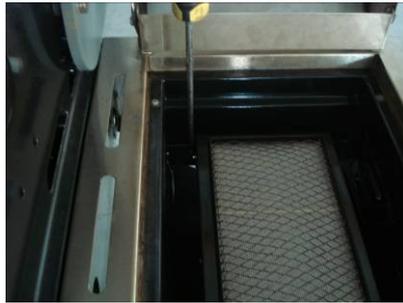

2. Remove the searing side burner LP orifice with 6mm nut driver, replace the NG orifice, then install the searing side burner and screw back in to original position.

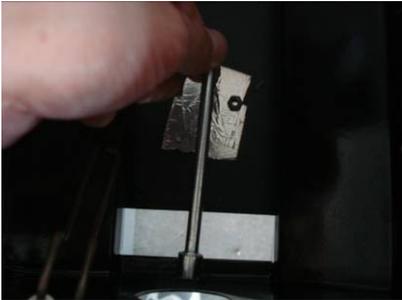

Natural Gas Conversion for Model# 720-0691A

Rear Burner Conversion

Tools required:



Phillips Head Screwdriver (+)



6mm Wrench

Steps □

1. Remove the screws securing the rear baffle from inside the firebox. Remove the Rear Baffle from the back of the grill.



2. Remove the LP orifice with 6mm wrench.



3. Replace the NG orifice with 6mm wrench. Then put rear baffle and screw back into original position.



Natural Gas Conversion for Model# 720-0691A

For Main Tube Burner Conversion Only (The 3 steps below are not necessary for the Sear side burner and Rear burner)


You will need to adjust the High Flame setting screw when converting the barbecue from Propane to Natural Gas. Please follow the steps as detailed below.

1. Remove each Control Knob of main tube burners by loosening the socket head grub screw with the Allen key.
2. Use a screw driver to turn the High Flame Set Screw clockwise approximately 90 degree.
3. Check that burner operates at the new high fire setting - it may be necessary to adjust the screw setting slightly to get the ideal burner flame height.



Warning!! Gas Valves are preset at the factory to operate on LP gas or NG gas. If you wish to convert, be sure to consult your gas supplier or trained technician for the conversion.

- A. After the Natural Gas regulator has been installed, attach the PVC Gas hose to the regulator (See drawing below).
- B. Connect the other end of the PVC Gas Hose to the house gas line using the quick-connect fitting. To use the quick connect fitting, lift the head of the connector back. Insert the end of the PVC hose and release the head of the connector. Ensure connection is secure.

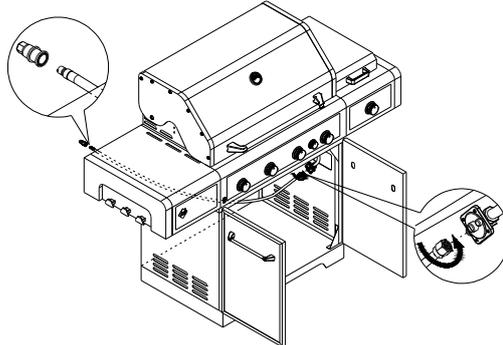

There is a brass adapter for natural gas lines that are pre-regulated. If the gas line is not pre-regulated, remove the brass adapter and connect the regulator directly to the PVC gas hose.



Once conversion is complete, please attach the NG CSA certification sticker to the grill.
If you should have any questions regarding natural gas conversion, please contact customer service at 1-800-790-1299.

WARNING: IMPORTANT! BEFORE LIGHTING...

Inspect the gas supply hose prior to turning the gas "ON". If there is evidence of cuts, wear, or abrasion, it must be replaced prior to use. Do not use the grill if the odor of gas is present. Only the pressure regulator and hose assembly supplied with the unit should be used.

Never substitute regulators and hose assembly for those supplied with the grill. If a replacement is necessary, contact the manufacturer for proper replacement. The replacement must be that specified in the manual.

WARNING: Always keep your face and body as far away from the burner as possible when lighting.

TO LIGHT THE MAIN BURNER

Make sure all knobs are "OFF" then turn on the gas. Always keep your face and body as far from the grill as possible when lighting.

Your grill has an exclusive patented built-in ignition. The igniter is built into the valve. To ignite each burner simply push and turn the control knobs to the HI setting, you will hear the valve click as it sends a spark to the pilot flame. If the burner does not light wait 5 minutes for any excess gas to dissipate and then retry.

TO MATCH LIGHT THE SIDE BURNER

Hold a lit extended match near the side burner ports, turn the control knob counterclockwise to "IGNITE/HI". Move your hand immediately once the burner is lit. Rotate the control knob to the desired setting.

Do not attempt to light the grill if odor of gas is present. Call for service 1-800-790-1299

FLAME CHARACTERISTICS

Check for proper burner flame characteristics.

Burner flames should be blue and stable with no yellow tips, excessive noise, or lifting. If any of these conditions exist call our customer service line. If the flame is yellow, it indicates insufficient air. If the flame is noisy and tends to lift away from the burner, it indicates too much air.

Each burner is adjusted prior to shipment; however, variations in the local gas supply may make minor adjustments necessary.

TO LIGHT THE SEARING SIDE BURNER

To light the searing side burner, remove any cooking utensils from the burner grate. Push and turn the control knob counterclockwise to the "IGNITE/ON" position. If the burner does not light, turn the control knob to "OFF". If the smell of gas is detected and the igniter is not functioning, immediately turn the control knob "OFF". Allow 5 minutes for any accumulated gas to dissipate. If the side burner igniter is not functioning, see the following section for match lighting.

TO MATCH LIGHT THE GRILL

If the burner will not light after several attempts then the burner can be match lit.

Match light extension rod is located on the inside panel of the door.

If you've just attempted to light the burner with the igniter, allow 5 minutes for any accumulated gas to dissipate. Keep your face and hands as far away from the grill as possible.

Insert a lit match attached to the lighting rod through the cooking grids to the burner.

Press the control knob and rotate left to the HI/ON setting continue to press the knob until the burner ignites.

Burner should light immediately.



If the burner does not light in 4 seconds turn the knob off, wait 5 minutes and try again.




Visually check the burner flames prior to each use, The flames should look like this picture, if they do not, refer to the burner maintenance part of this manual.

Natural Gas Conversion for Model# 720-0691A

Note: Remove all packaging, including straps, before using the grill

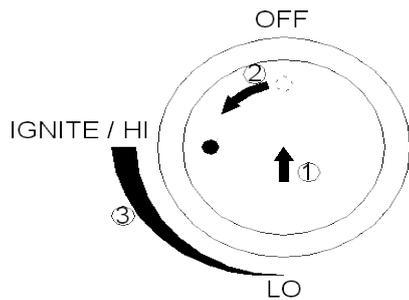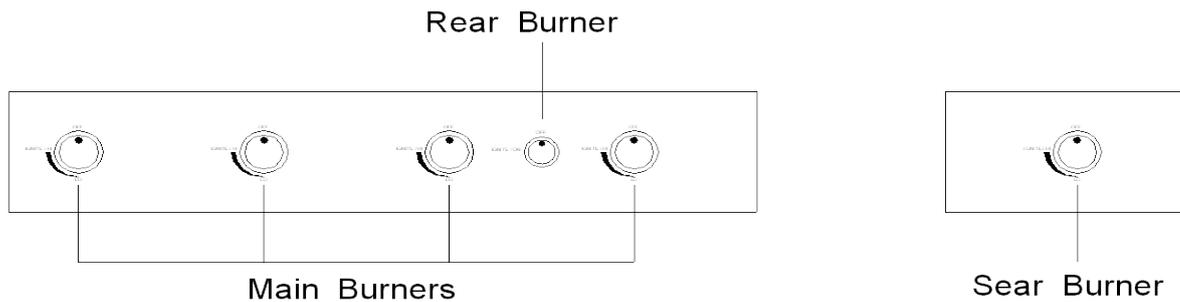


- 1 Make sure the lid is open.
- 2 Push and turn Main Burner knob slowly to IGNITE/HI. Keep knob pressed in until the burner is lit.
- 3 If burner does not light within 5 seconds, turn the knob to OFF and repeat the lighting instruction.
- 4 If burner does not light up after step 3, turn the knob to OFF, wait 5 minutes, and repeat the lighting procedure or light by match.

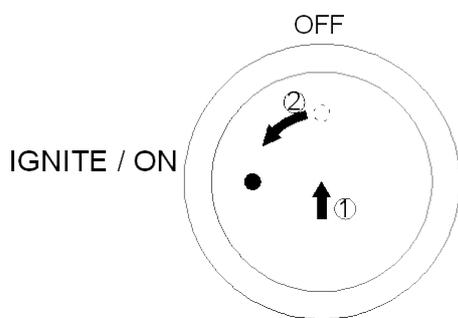

- 1 Make sure the lid is open.
- 2 Push and slowly turn the Rear Burner knob to IGNITE/ON position. Keep knob pressed in until the burner is lit. Once it is lit, continue to press and hold for another 15 seconds to ensure the burner stays lit.
- 3 If burner does not light within 5 seconds, turn the knob to OFF position and repeat the lighting procedure.
- 4 If burner fails to light after step 3, turn the knob to OFF position, wait 5 minutes, then repeat the lighting procedure or light by match.


Natural Gas Conversion for Model# 720-0691A

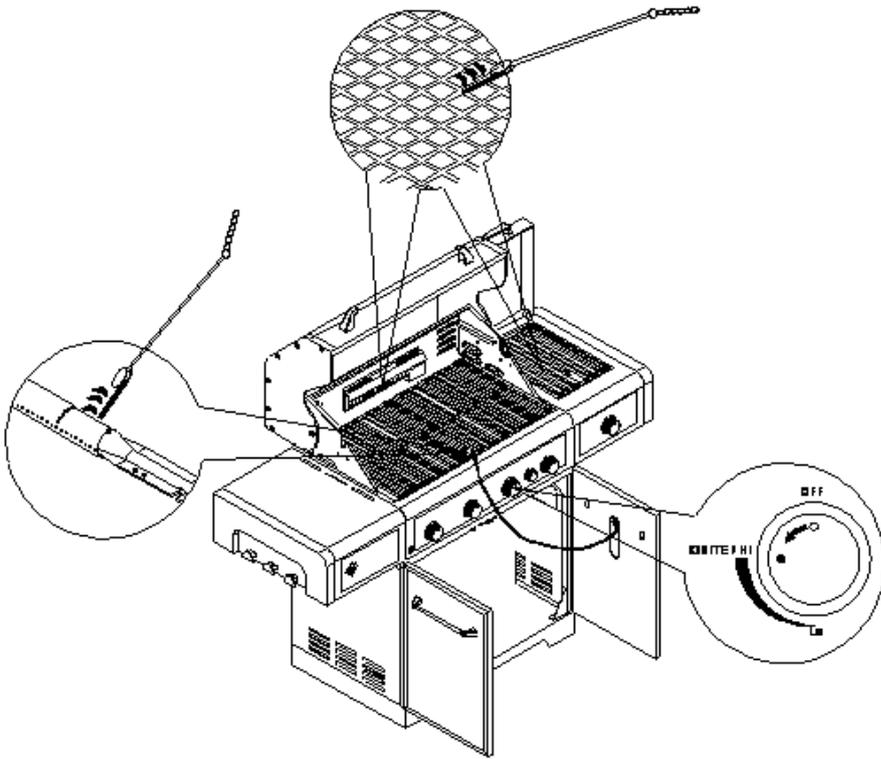

Match light

1. If the burner will not light after several attempts then the burner can be match lit, before using the match allow 5 minutes for any accumulated gas to dissipate.
2. Clip a paper match on one end of the lighting rod.
Light match.
3. Hold lighting rod and insert lighted match right next to the burner ports or ceramic file.
4. Push and turn the designated control knob to IGNITE/HI.
5. Burner should ignite immediately.

Exploded View

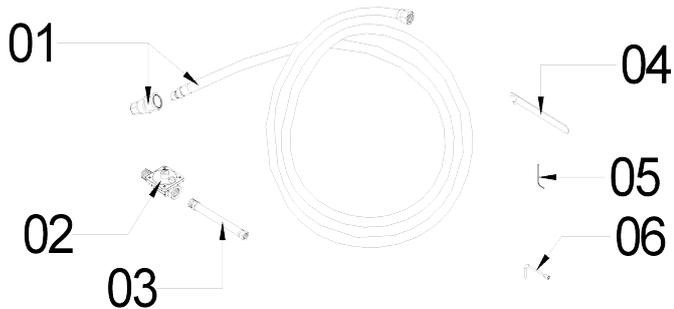

Part List

No.	Part (Description)	QTY	No.	Part (Description)	QTY
01	NG hose	1	04	6mm Wrench	1
02	NG regulator	1	05	Allen key	1
03	NG regulator hose	1	06	6 mm Nut Driver	1