

**CT30E PARTS LIST**

<b>Ref #</b>	<b>Part #</b>	<b>Description</b>
1	803795	Glass Ceran Assy W/Keypad Stainless, 30", Sst
	803796	Glass Ceran Assy W/Keypad, Black, 30", Blk
	803797	Glass Ceran Assy W/Keypad, Platinum, 30", Plt
2	801351	Screw, 6x3/8"
3	807070	Board, Control, 30"
4	803143	Cable, Ribbon, 15" & 30"
5	802613	Light, Indicator
6	801863	Element Assy., Double, 2200 Watt, 30", 36"
7	801865	Element Assy., Double, 1900 Watt, 30"
9	801860	Element Assy., Single, 1200 Watt, 30", 36"
10	801861	Element Assy., Single, 1500 Watt, 30", 36"
11	801866	Box, Burner, Inner, Insulation, 30"
12	806702	Box, Burner, Inner Assy., 30" (See S/N Breaks)
13	800414	Blower, Transverse
14	807071	Board, Relay, 30"
15	806700	Outer Burner Box Assy., 30" (See S/N Breaks)
16	802668	Guard, Fan
17	802669	Retainer, Fan, Rivet
18	800511	Spring, Leeco
19	806654	Moisture Barrier, CT30E
20	806035	Power Board Mtg Bracket 30
22	806023	Cooktop Fan Mounting Bracket
22	800413	Power Conduit

**Not Shown**

<b>Part #</b>	<b>Description</b>
800413	Power Conduit w/Terminal Block
800419	Terminal Block
801046	Scraper, Cooktop
801048	Gasket, Rubber, Cooktop Surround
801101	Cleaning Cream
802671	Harness, Element, 30"
802709	Hold Down Clamp Kit
802733	Harness, Fan, 15", 30", 36"
802772	Grommet, Edge

**CT30E EXPLODED VIEW**

