


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Bissell 1631-1 Owner's Manual

[Shop genuine replacement parts for Bissell 1631-1](#)

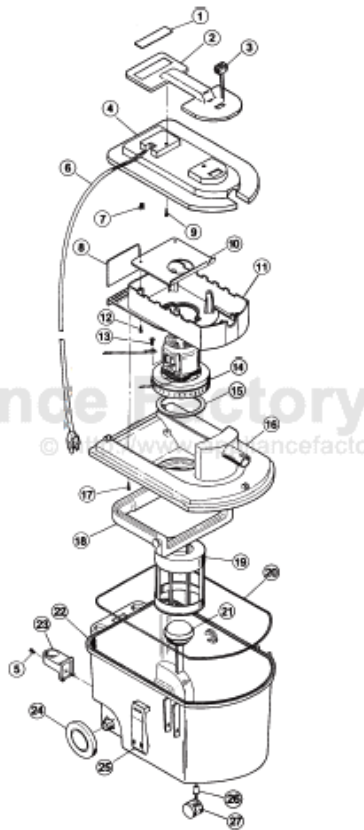

[Find Your Bissell Vacuum Cleaner Parts - Select From 377 Models](#)

----- Manual continues below -----

Original & Replacement **BISSELL**

POWER STEAMER Model 1631-1

Figure A

KEY	PART NO.	DESCRIPTION
1	NLA	Nameplate
2	NLA	Grip
3	B-010-8852	Switch
4	NLA	Cover - Motor
5	NLA	Screw #6 x 1/2"
6	NLA	Cord 3 Wire
7	NLA	Wire Nut
8	NLA	Label - Motor Rating
9	NLA	Screw #10 x 3/4"
10	NLA	Plate - Motor Support
11	NLA	Housing - Motor
12	NLA	Screw #8 x 3/4"
13	NLA	Screw - Ground Wire
14	NLA	Motor 1 Stage 2 Speed
15	NLA	Gasket - Motor
16	NLA	Cover Ass'y
17	NLA	Screw #8 x 1/2"
18	NLA	Handle
19	NLA	Cage - Ball Float
20	NLA	Gasket - Tank
21	B-010-0327	Ball - Float
22	NLA	Tank Ass'y Without Latch Or Wheels
23	NLA	Bracket - Wand
24	NLA	Wheel
25	NLA	Latch
26	NLA	Socket
27	NLA	Castor & Socket Ass'y

Figure A

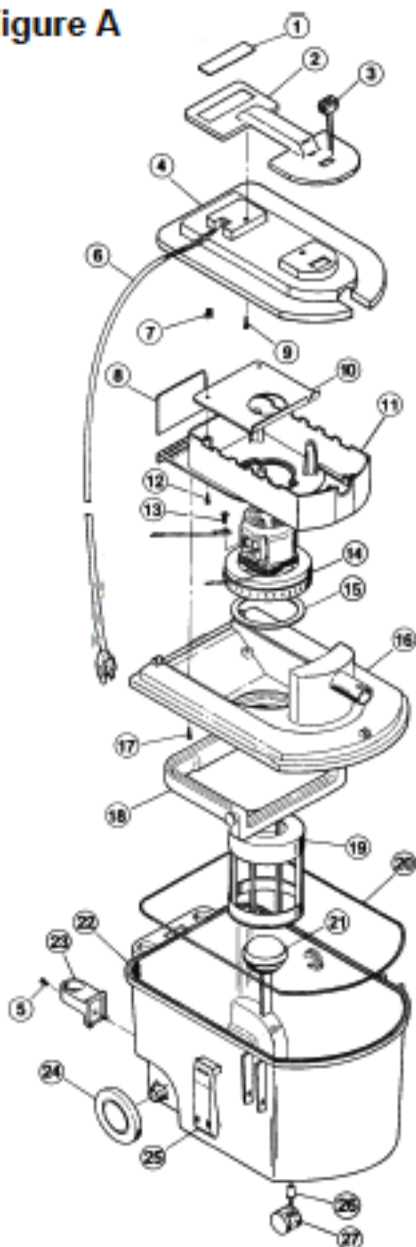


Figure B

CARPET MACHINE Universal Parts

1	B-016-4181	Handle Grip Tube Ass'y
2	NLA	Grip Tube Ass'y (Order B-016-4181)
3	B-010-9872	Aluminum Wand
4	B-016-8985	Floor Nozzle Ass'y
5	B-015-9151	Upholstery Tool Ass'y
6	B-010-9484	Solution Tube
7	NLA	Adaptor/Washer Set

NLA = NO LONGER AVAILABLE

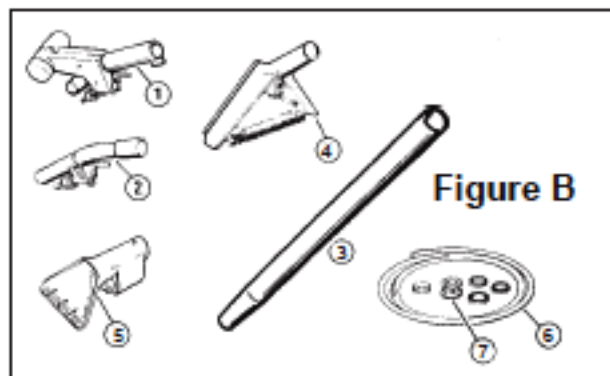


Figure B

BISSELL Original & Replacement

POWER STEAMER Extraction Wand

Figure C

KEY	PART NO.	DESCRIPTION
28	B-803-1659	Valve Cap Ass'y, W/O-Ring & Washer
29	NLA	O-Ring (Order B-803-1659)
30	NLA	Cap - Valve (Order B-803-1659)
31	NLA	Washer (Order B-803-1659)
32	B-016-4181	Grip & Trigger Ass'y
33	NLA	Shaft - Valve (Order B-016-4181)
34	NLA	Spring (Order B-016-4181)
35	NLA	Button - Lock (Order B-016-4181)
36	NLA	Screw #8 x 3/4" (Order B-016-4181)
37	NLA	Cap, Grip End (Order B-016-4181)
38	NLA	Grip, Wand R.H. (Order B-016-4181)
39	NLA	Grip, Wand L.H. (Order B-016-4181)
40	NLA	Grip (Order B-016-4181)
41	NLA	Hose - Flexible
42	NLA	Trigger (Order B-016-4181)
43	NLA	Collar
44	NLA	Cap Swivel & Short Hose Ass'y
45	NLA	Stem Hose
46	NLA	O-Ring (Order B-016-4181)
47	NLA	Retainer - Spring (Order B-016-4181)
48	NLA	Washer
49	NLA	Screen - Filter
50	NLA	Stem - Faucet
51	NLA	Nut Hose
52	NLA	Clamp
53	NLA	Hose 2 1/2"
54	NLA	Shroud 1-Piece Ass'y
55	NLA	Injector Ass'y Without Shroud
56	NLA	Hose Only 50 ft.
57	NLA	Hose & Injector Ass'y 50'
58	NLA	Shroud (one piece)
59	B-880-7028	Screw
60	NLA	Cap - Check Valve
61	NLA	Ball Valve
62	NLA	O-Ring
63	NLA	Orifice - Metering
64	NLA	Tube
65	B-010-3528	Filter
66	B-010-9672	Wand
67	NLA	Tube Transfer (Order B-015-9151)
68	NLA	Gasket (Order B-015-9151)
69	NLA	Spray Tip (Order B-015-9151)
70	B-015-9151	Upholstery Nozzle Ass'y
71	B-010-7387	Nut - Retainer
72	NLA	Plate (Order B-016-8985)
73	NLA	Nozzle (Order B-016-8985)
74	B-015-8150	Nozzle - Spray
75	B-880-7007	Screw #8 x 5/8"
76	NLA	Tool Clean-Out
77	B-013-2453	Clip - Hose
78	B-010-9464	Tube
79	B-010-1181	Brush Ass'y
80	B-880-7028	Screw #8 x 1/2"
81	B-013-0469	Bare Floor Ass'y
82	NLA	Brush (Order B-013-0469)
	NLA	Squeegee (Order B-013-0469)
	B-016-8985	Nozzle Ass'y, Complete

NLA = No Longer Available

Figure C

