 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# Bissell 1696 Owner's Manual

[Shop genuine replacement parts for Bissell 1696](#)

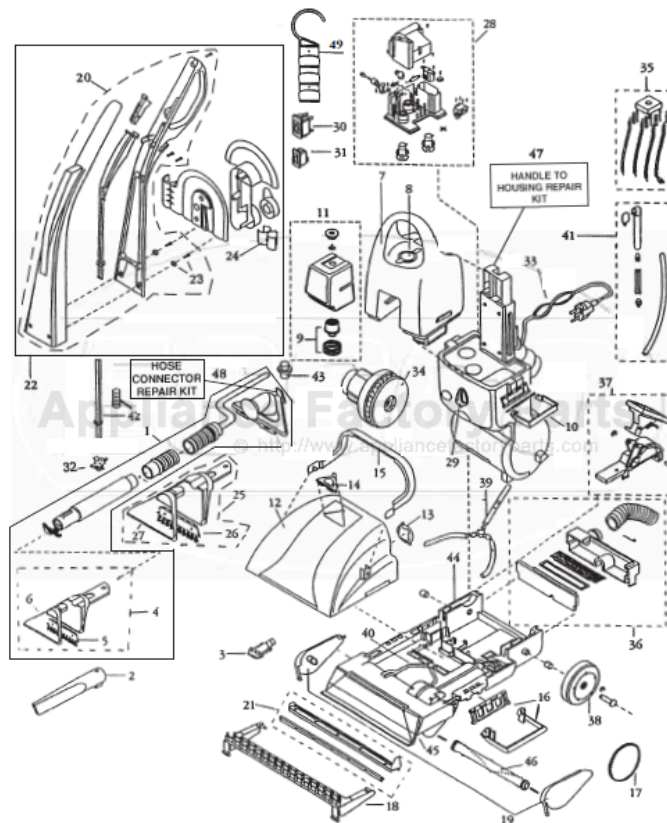

[Find Your Bissell Vacuum Cleaner Parts - Select From 377 Models](#)

----- Manual continues below part list -----

 
## Available Replacement Parts for Bissell 1696

[B-603-0983](#)

BRUSH/ NOZZLE HEAD.

# BISSELL Original & Replacement

POWERSTEAMER Models 1690, 1691, 1695, 1696

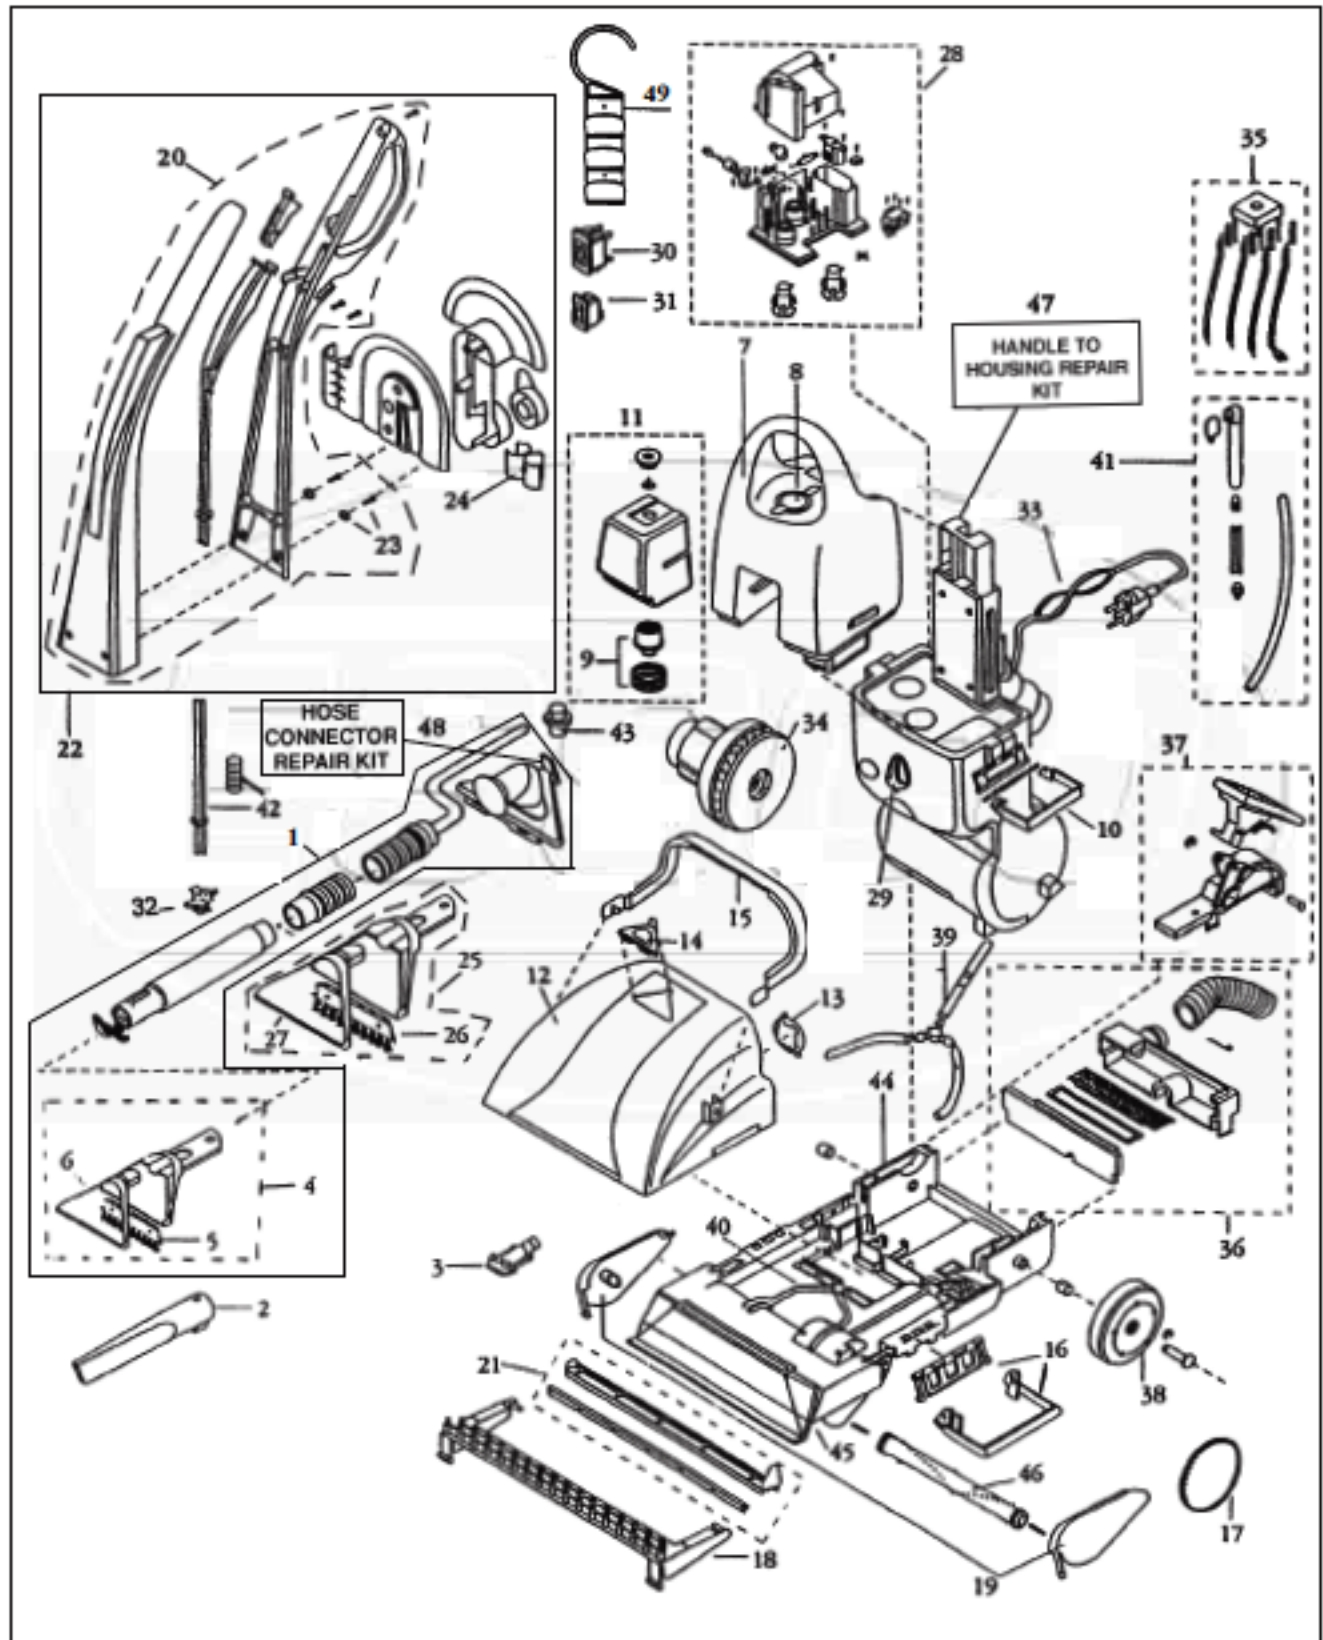

# Original & Replacement **BISSELL**

POWERSTEAMER Models 1690, 1691, 1695, 1696

KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION
1	NLA	Hose Ass'y (Incl. Key #4)	25	NLA	Utility Nozzle Ass'y 6"
2	B-010-9148	Crevice Tool	26	NLA	Brush Insert 6"
3	NLA	Spray Tip	27	NLA	Spray Window 6"
4	B-603-0983	Upholstery Nozzle Ass'y 4"	28	NLA	Pump Ass'y 1690, 1695
5	B-603-0966	Brush Insert 4"	28	NLA	Pump Ass'y 1691, 1696
6	NLA	Spray Window (Order B-010-9201)	29	NLA	Smart-Mix Knob 1690, 1695
7	NLA	Clean Tank Ass'y 1690, 1695	30	NLA	Power Rocker Switch
7	NLA	Clean Tank Ass'y 1691, 1696	31	NLA	Brushroll Switch 1695, 1696
8	NLA	Filler Cap	32	B-603-8456	Valve Ass'y
9	NLA	Cap & Insert Ass'y	33	NLA	Power Cord
10	NLA	Latch Ass'y (Clean Tank)	34	NLA	Motor Ass'y
11	NLA	Smart-Mix Ass'y 1690, 1695 (Order B-603-9040)	35	NLA	Diode & Wire Ass'y
12	NLA	Dirty Tank Ass'y 1690, 1695	36	NLA	Air Box & Hose Ass'y (Hose Only Order H-43431196)
12	NLA	Dirty Tank Ass'y 1691	37	NLA	Detent Lever Ass'y
12	NLA	Dirty Tank Ass'y 1696	38	NLA	Wheel Ass'y With Clip & Axle
13	NLA	Drain Cap	39	NLA	Drain Tube
14	NLA	Triangular Cap	40	NLA	Spray Tips & Tube Ass'y
15	NLA	Carrying Handle	41	NLA	Breather Valve Ass'y
16	NLA	Latch Ass'y (Dirty Tank)	42	NLA	Push Rod With Spring
17	NLA	Geared Belt 1695, 1696	43	NLA	Solution Tube Connector
18	NLA	Brush Strip 1690, 1691	44	NLA	Base Ass'y With Brush Motor
19	NLA	Pivot Arm Ass'y (2 Retainers With Screws)	45	NLA	Nozzle Ass'y With Intake Seal
20	NLA	Handle Ass'y 1691, 1696	46	NLA	Brush Roll Ass'y 1695, 1696
21	NLA	Bare Floor Attachment Ass'y	47	NLA	Handle Housing Repair Kit
22	NLA	Handle Ass'y 1690	48	NLA	Hose Connector Repair Kit
22	NLA	Handle Ass'y 1695	49	NLA	Hose Hanger 1691, 1696
23	NLA	Handle Bolt & Nut (2 Sets)			
24	NLA	Hose Clip 1690, 1695			

NLA = NO LONGER AVAILABLE

# Original & Replacement **BISSELL**

## POWERSTEAMER Models 1690, 1691, 1695, 1696

KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION
1	NLA	Hose Ass'y (Incl. Key #4)	25	NLA	Utility Nozzle Ass'y 6"
2	B-010-9148	Crevice Tool	26	NLA	Brush Insert 6"
3	NLA	Spray Tip	27	NLA	Spray Window 6"
4	B-603-0983	Upholstery Nozzle Ass'y 4"	28	NLA	Pump Ass'y 1690, 1695
5	B-603-0966	Brush Insert 4"	28	NLA	Pump Ass'y 1691, 1696
6	NLA	Spray Window (Order B-010-9201)	29	NLA	Smart-Mix Knob 1690, 1695
7	NLA	Clean Tank Ass'y 1690, 1695	30	NLA	Power Rocker Switch
7	NLA	Clean Tank Ass'y 1691, 1696	31	NLA	Brushroll Switch 1695, 1696
8	NLA	Filler Cap	32	B-603-8456	Valve Ass'y
9	NLA	Cap & Insert Ass'y	33	NLA	Power Cord
10	NLA	Latch Ass'y (Clean Tank)	34	NLA	Motor Ass'y
11	NLA	Smart-Mix Ass'y 1690, 1695 (Order B-603-9040)	35	NLA	Diode & Wire Ass'y
12	NLA	Dirty Tank Ass'y 1690, 1695	36	NLA	Air Box & Hose Ass'y (Hose Only Order H-43431196)
12	NLA	Dirty Tank Ass'y 1691	37	NLA	Detent Lever Ass'y
12	NLA	Dirty Tank Ass'y 1696	38	NLA	Wheel Ass'y With Clip & Axle
13	NLA	Drain Cap	39	NLA	Drain Tube
14	NLA	Triangular Cap	40	NLA	Spray Tips & Tube Ass'y
15	NLA	Carrying Handle	41	NLA	Breather Valve Ass'y
16	NLA	Latch Ass'y (Dirty Tank)	42	NLA	Push Rod With Spring
17	NLA	Geared Belt 1695, 1696	43	NLA	Solution Tube Connector
18	NLA	Brush Strip 1690, 1691	44	NLA	Base Ass'y With Brush Motor
19	NLA	Pivot Arm Ass'y (2 Retainers With Screws)	45	NLA	Nozzle Ass'y With Intake Seal
20	NLA	Handle Ass'y 1691, 1696	46	NLA	Brush Roll Ass'y 1695, 1696
21	NLA	Bare Floor Attachment Ass'y	47	NLA	Handle Housing Repair Kit
22	NLA	Handle Ass'y 1690	48	NLA	Hose Connector Repair Kit
22	NLA	Handle Ass'y 1695	49	NLA	Hose Hanger 1691, 1696
23	NLA	Handle Bolt & Nut (2 Sets)			
24	NLA	Hose Clip 1690, 1695			

NLA = NO LONGER AVAILABLE