 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://Appliance Factory Parts).



# Bissell 1699-8 Owner's Manual

[Shop genuine replacement parts for Bissell 1699-8](#)

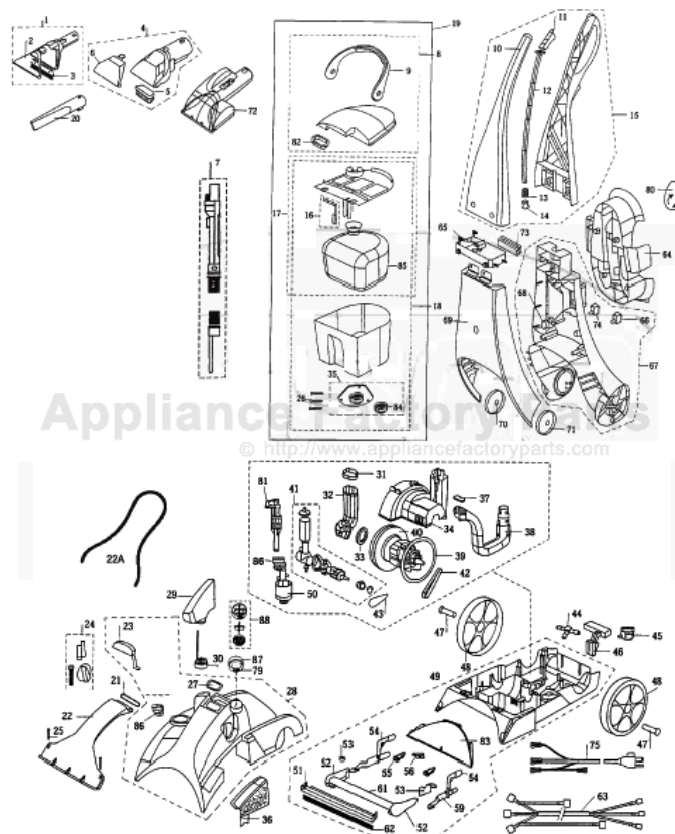

[Find Your Bissell Vacuum Cleaner Parts - Select From 377 Models](#)

 
----- Manual continues below part list -----

## Available Replacement Parts for Bissell 1699-8

<a href="#">B-010-0620</a>	BELT BISSELL PUMP BELT 1 PACK
<a href="#">B-603-0983</a>	BRUSH/ NOZZLE HEAD.
<a href="#">B-010-0621</a>	REPLACEMENT BRUSH BELT
<a href="#">br-1075</a>	Geared brushroll belt .

# BISSELL Original & Replacement

PROHEAT CLEARVIEW POWERSTEAMER Models 1699, 1699-1, 1699-5, 1699-8, 1699-A, 1699-B, 1699-F, 1699-P, 7901, 7920, 8905, 8910

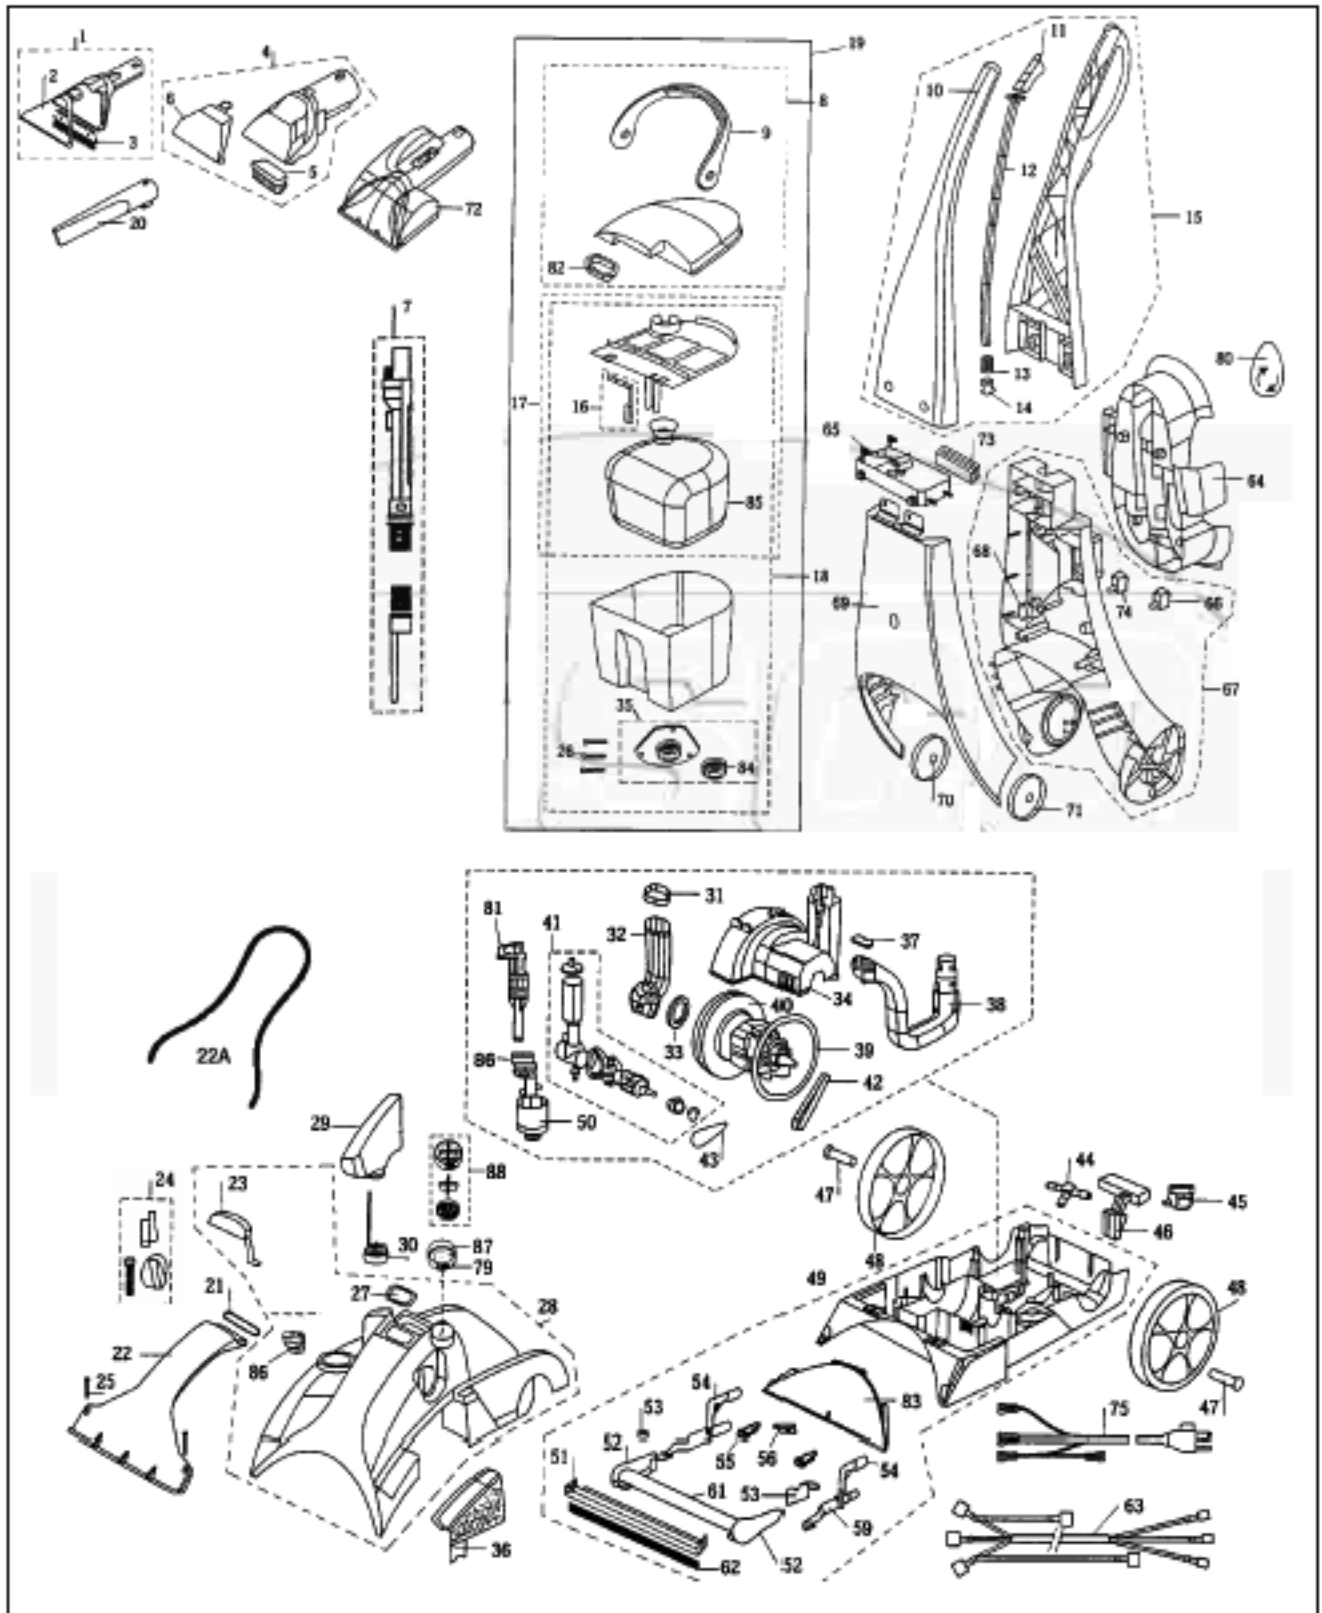

# Original & Replacement **BISSELL**

**PROHEAT CLEARVIEW POWERSTEAMER Models 1699, 1699-1, 1699-5, 1699-8, 1699-A, 1699-B, 1699-F, 1699-P, 7901, 7920, 8905, 8910**

KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION
1	B-603-0983	Upholstery Nozzle Ass'y	41	B-010-7185	Pump Ass'y
2	NLA	Spray Window 4" (Order B-010-9201)	42	B-010-0620	Pump Belt
3	NLA	Brush Insert 4"	42	BR-1020	Pump Belt
4	B-015-9155	Tuff Stain Tool 3"	43	B-010-0621	Geared Brushroll Belt
5	B-214-9155	Brush Insert 3"	43	BR-1075	Geared Brushroll Belt
6	NLA	Spray Window 3 (Order B-015-9155)	44	B-015-8001	Barbed "T" Connector
7	B-010-9210	Hose Ass'y (Inc. Key #38)	45	B-014-0710	Autoload Receiver
8	B-015-4439	Top Ass'y With Handle	46	B-013-5580	Handle Release Pedal
9	B-603-4435	Tank Handle	47	B-010-0170	Axle
10	B-013-4407	Handle Front 1699-1/B	48	B-013-9754	Wheel
10	B-014-4401	Handle Front 1699/5/8/A, 8905	49	B-014-0449	Base Ass'y
10	NLA	Handle Front 1699-P (Order B-014-4401)	50	B-010-0106	Automix Ass'y Less Knob
10	NLA	Handle Front 1699-F (Order B-014-4401)	51	B-014-9131	Bare Floor Attachment
10	NLA	Handle Front 7901	52	NLA	Left & Right Pivot Arm (Order B-210-1128)
10	B-014-4475	Handle Front 7920	53	B-555-9113	Left & Right Pivot Arm Retainers
11	B-213-9168	Handle Trigger (All Models Except 8910)	54	B-200-0010	Left & Right Elevator Lever
11	B-213-9169	Handle Trigger 8910	55	B-010-6105	Spray Tip
12	B-013-7511	Control Rod & Spring Ass'y	56	B-010-2602	Regular "T" Connector
13	B-210-8422	Spring	59	NLA	Elevator Lever Spring (Order B-200-0010)
14	B-010-9592	Valve Ass'y	61	B-210-1128	Brushroll Ass'y With Pivot Arms
15	NLA	Handle Ass'y 1699-1/B	62	NLA	Bare Floor Squeegee
15	B-214-4406	Handle Ass'y 1699/5/8/A, 8905, 8910	63	NLA	Wiring Harness
15	NLA	Handle Ass'y 1699-P (Order B-214-4406)	64	B-013-6750	Tool Storage Caddy Ass'y
15	NLA	Handle Ass'y 1699-F (Order B-214-4406)	65	B-010-4503	Heater 700 Watt 5 3/10" x 2 3/5"
15	NLA	Handle Ass'y 7901	65	NLA	Heater 500 Watt 6 1/2" x 3"
15	B-014-4503	Handle Ass'y 7920	66	B-010-8827	Power Switch
16	B-014-0325	Float Ass'y	67	NLA	Main Body Ass'y 1699-1/B
17	B-013-0212	Tank Baffle & Bladder Ass'y	67	NLA	Main Body Ass'y 1699/5/8/A, 8905, 8910
18	B-015-9041	Tank & Bladder Ass'y	67	B-014-4307	Main Body Ass'y 1699-P
19	B-015-9043	Tank & Lid Ass'y	67	NLA	Main Body Ass'y 1699-F
20	B-010-9148	Crevice Tool	67	NLA	Main Body Ass'y 7901
21	B-010-4052	Oval Window Seal	67	B-014-4301	Main Body Ass'y 7920
22	B-014-9863	Base Window	68	B-010-5601	Heater Light Ass'y
22A	B-210-3418	Base Window Gasket	69	NLA	Panel Ass'y 1699-1/B (Order B-014-4404)
23	B-013-6986	Diverter Valve	69	B-014-4404	Panel Ass'y 1699/5/8/A, 8905, 8910
24	B-014-5170	Diverter Knob Ass'y (All Models Except 8910)	69	NLA	Panel Ass'y 1699-P (Order B-014-4404)
24	B-214-5172	Diverter Knob Ass'y 8910	69	NLA	Panel Ass'y 1699-F (Order B-014-4404)
25	B-880-7030	Screw	69	B-014-4355	Panel Ass'y 7901
26	B-880-7075	Screw	69	B-014-4350	Panel Ass'y 7920
27	B-010-4054	Diverter Gasket	70	B-010-6215	E-Clip
28	NLA	Housing Ass'y 1699-1/B	71	NLA	Wheel Bushing
28	B-214-5010	Housing Ass'y 1699/5/8/A, 8905, 8910	72	B-010-1183	Turbo Brush Ass'y
28	NLA	Housing Ass'y 1699-P (Order B-214-5010)	73	B-010-8550	Rubber Block
28	NLA	Housing Ass'y 1699-F (Order B-214-5010)	74	B-710-8617	Heater Switch
28	B-014-4922	Housing Ass'y 7901			1699/5/8/A/B/F, 7901, 7920, 8905, 8910
28	NLA	Housing Ass'y 7920 (Order B-214-5010)	74	NLA	Lighted Heater Switch 1699-1/P
29	B-010-1785	Shampoo Bottle Ass'y (Inc. Key #30)	75	B-010-2850	Power Cord 35' 1699-1/P, 7901, 7920
30	B-010-1795	Cap & Insert Ass'y	79	B-010-0489	Flow Indicator Base (Inc. Key #87)
31	B-010-4050	Duct Gasket	80	B-013-3722	Cord Hook
32	NLA	Short Air Duct	81	B-010-8722	Automix Piston
33	B-010-4051	Motor Intake Gasket	82	B-015-3500	Lint Screen
34	B-013-2984	Motor Cover	83	B-014-9867	Clearview Window With Tab Before Ser. # 02120000
35	B-010-7041	Auto Load Ass'y (Inc. Key #4)	83	B-214-9851	Clearview Window Without Tab After Ser. # 02120000
36	B-213-2991	Belt Cover 1699/B	84	B-010-6241	Tank Seal
36	B-013-2993	Belt Cover 1699/5/8/A, 8905, 8910	85	B-010-0315	Bladder
36	B-013-2980	Belt Cover 1699-P	86	B-010-5108	Automix Knob
36	B-013-2952	Belt Cover 1699-F	87	NLA	Flow Indicator O-Ring (Order B-010-0489)
36	B-013-2982	Belt Cover 7901	88	B-555-6503	Flow Indicator Ass'y
36	B-013-2935	Belt Cover 7920			
37	B-010-4053	Air Duct O-Ring			
38	NLA	Long Air Duct			
39	B-010-4056	Motor Gasket			
40	B-010-5970	Motor Ass'y			

NLA = NO LONGER AVAILABLE