


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



Bissell 34000 Owner's Manual

[Shop genuine replacement parts for Bissell 34000](#)

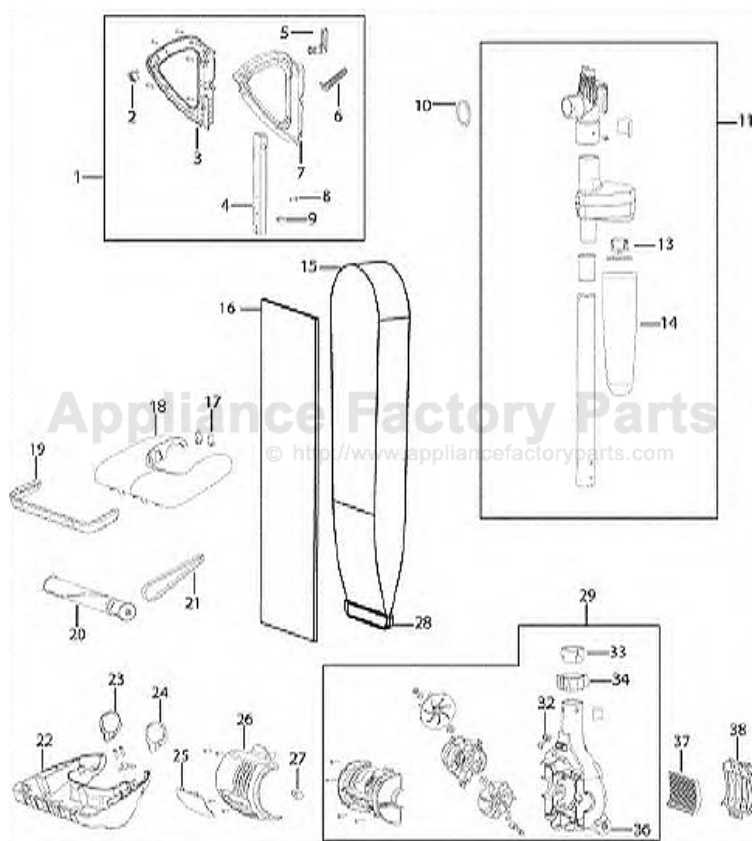

[Find Your Bissell Vacuum Cleaner Parts - Select From 377 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for Bissell 34000

[V252](#)

VACUUM BAG



UPRIGHT VACUUM

ProLite Model 34000

Key No.	Part No.	Part Desc.
01	5550023	CLOSED GRIP ASSY
02	2108828	Switch
03	2103982	Grip, Right - 34000
04	2109420	Handle Tube
05	2133931	Cord Wrap
06	2104524	Cord & Harness Assy - Grey
07	2103983	LT Grip
08	2807024	Screw - Sheet Metal #10 x 1/2"
09	2101506	Cable Clamp
10	2103834	TUBE CONNECTORE SEAL 34000REPL
11	2109020	Cyclone Assy w/ Fill Tube
12	2136025	Tube Connector w/ Seal
13	2032051	Cyclone Insert
14	2132031	Dirt Cup
15	2140250	Cloth Outer Bag Assy
16	2100190	Filter Bag Prolite Rev.
17	2101602	DETENT COVER, 34000 EPL
18	2143983	Foot Cover - Jazz Blue
19	2133972	Furniture Protection Guard
20	2101131	Brush Assy
21	2100631	Belt (2-pack)
22	2144034	Foot Base Assy
23	2135040	Bushing - Right Side
24	2135030	Bushing - Left Side
25	2133929	Lens
26	2133976	Lens Cover - Jazz Blue
27	5559069	BULB-GE T5/921 12.8V
28	2133967	Bag Clip
29	2146060	Motor Assy
32	2108455	SPRING BAG RETAINER REPL
33	2136035	Collar
34	2133962	Support Yoke
36	2103920	WHEEL - REAR 2 PK, 34000 REPL
38	2143940	Filter Cover Assy
xx	2103150	Hair Cutter
xx	2103917	WIDER BLADE-PROLITE REPL
xx	2107321	Receptacle
xx	5556100	Front Wheel & Axle (2-pack)

