


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



# CIRRUS CR69 Owner's Manual

[Shop genuine replacement parts for CIRRUS CR69](#)

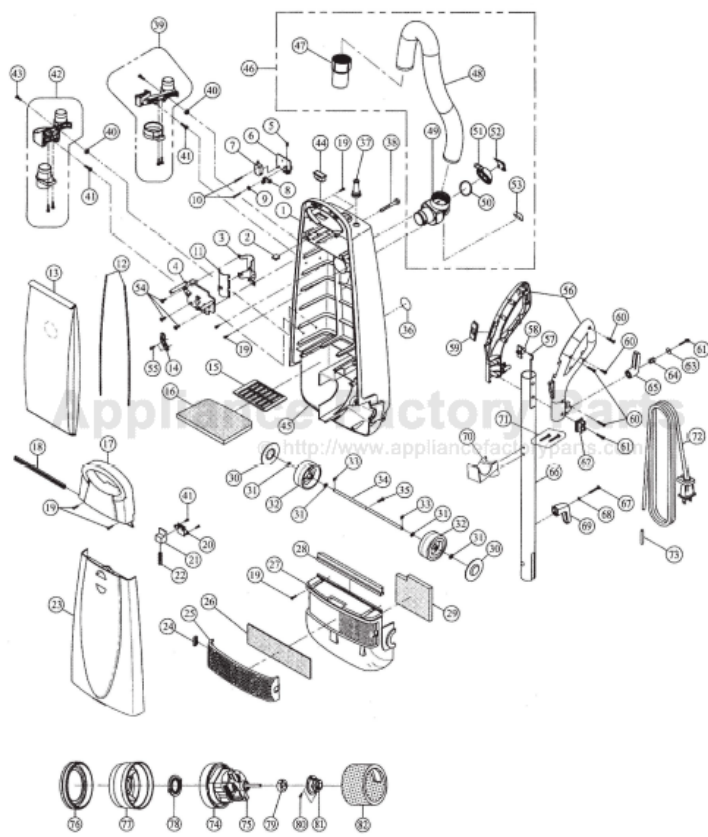


[Find Your CIRRUS Vacuum Cleaner Parts - Select From 13 Models](#)

----- Manual continues below -----

# CIRRUS/PROGRADE Original & Replacement

Model CR69

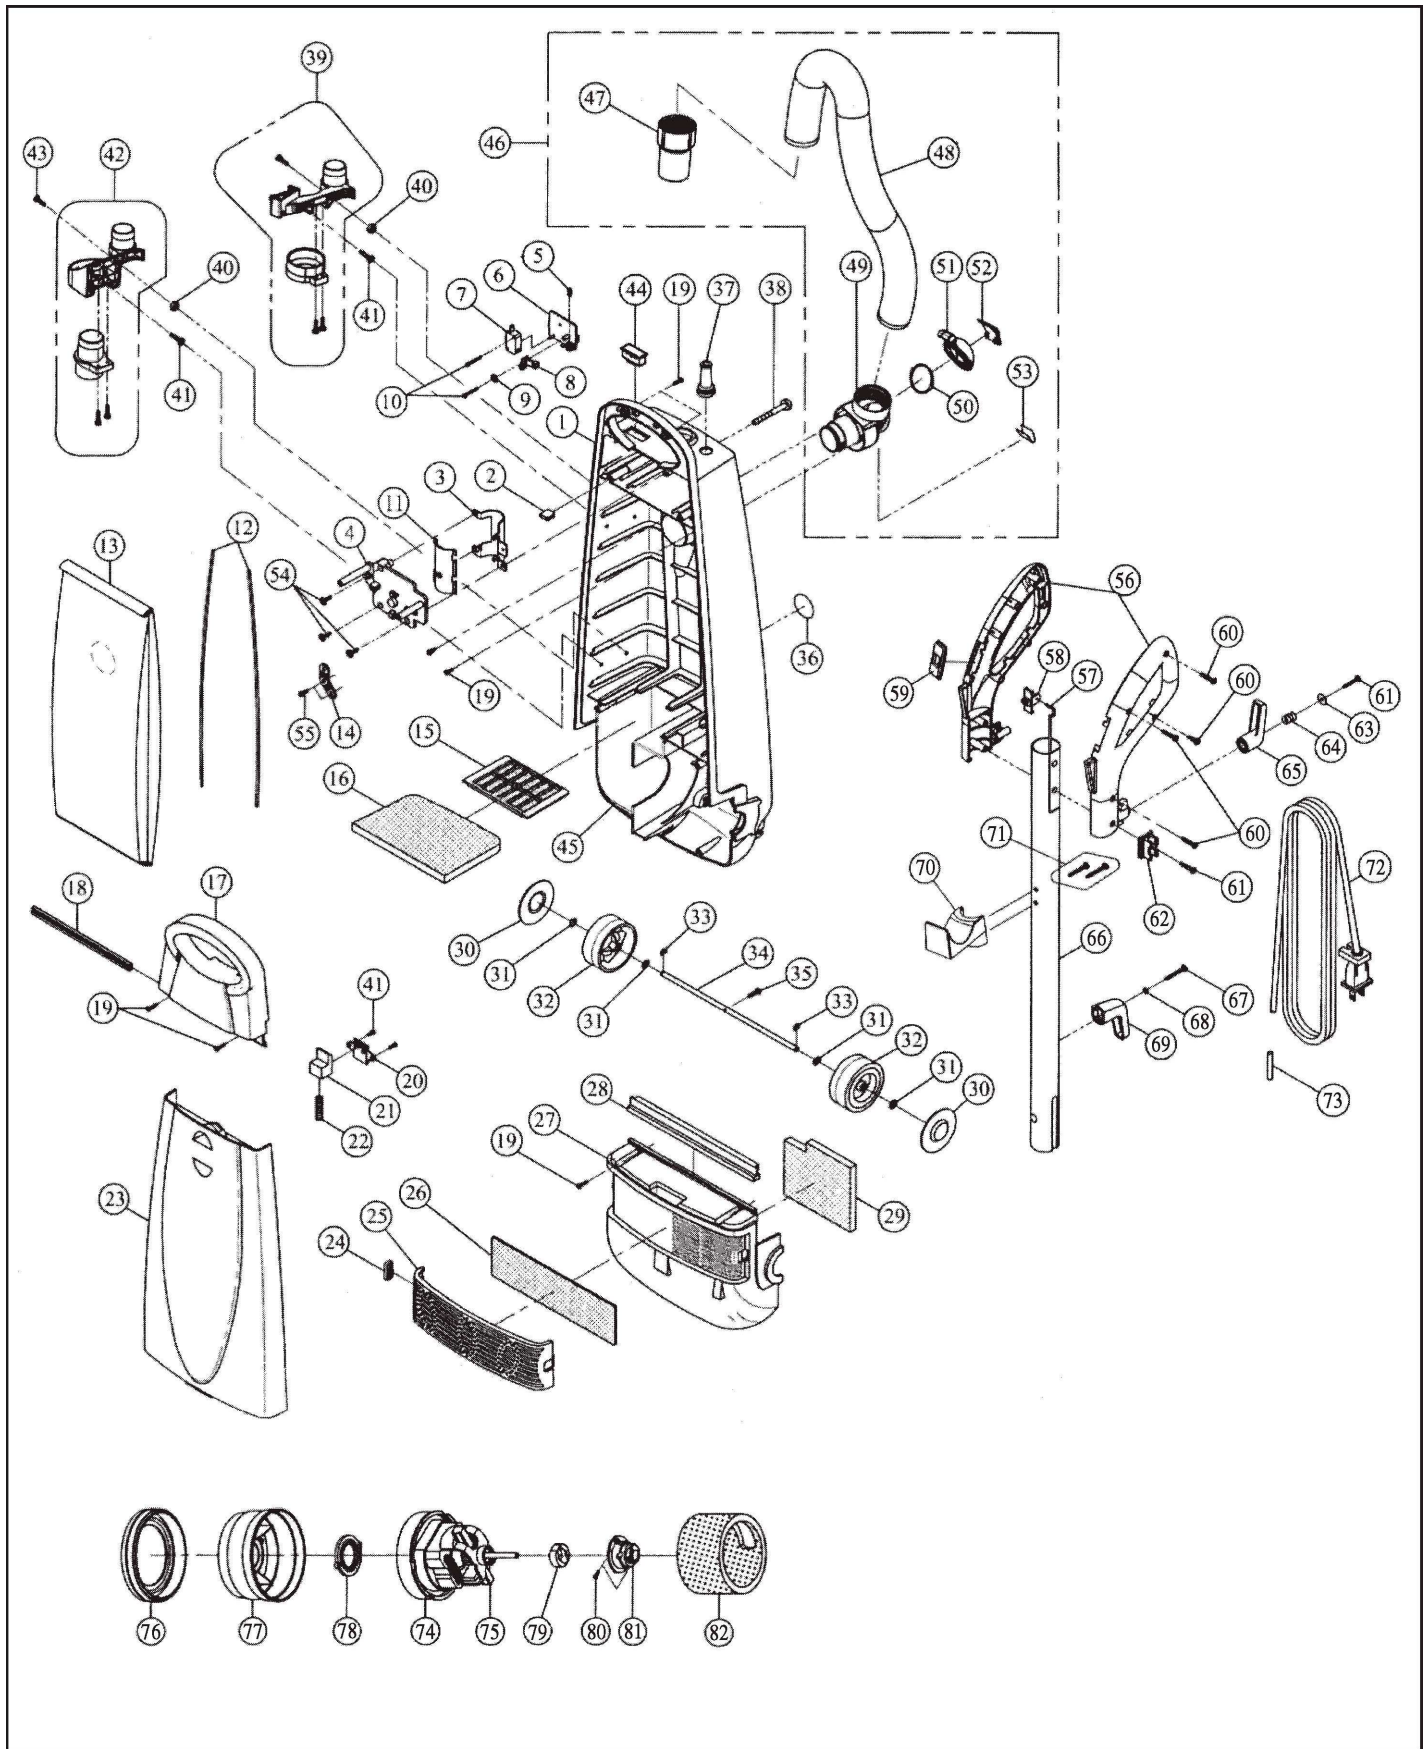


# Original & Replacement **CIRRUS/PROGRADE**

Model CR69

KEY	PART NO	DESCRIPTION	KEY	PART NO.	DESCRIPTION
1	C-75000	Dust Compartment (White)	44	C-75053	Switch Filler Plug
2	C-75900	Vented Support Rubber	45	C-76022	Motor Cover Seal Lower
3	C-70590	Handle Fitting (Rear)	46	PR0-40000	Stretch Hose Ass'y
4	C-75090	P.C. Board Holder	47	C-45005	Hose Cuff
5	C-77023	Switch Activator Spring	48	C-45052	Stretch Hose Only
6	C-75092	Switch Mounting Plate	49	C-75060	Suction Inlet
7	C-36000	Switch	50	C-76020	Suction Inlet Cover Seal
8	C-34520	Switch Activator	51	C-75051	Suction Inlet Lid (Black)
9	C-77024	Plastic Washer	52	C-75052	Suction Slide Control (Black)
10	C-77025	Screw	53	C-77031	Suction Inlet Lid Spring
11	C-70591	Handle Fitting (Front)	54	C-77003	Screw
12	C-76900	Dust Compartment Side Seals	55	C-77032	Screw, Internal Cord Holder
13	C-14000	Paper Bag HEPA Type 6 Pk	56	C-70250	Handle Grip RH & LH (Black)
13	C-14005	Paper Bag Micro Filtration 12 Pk	57	C-34500	Handle Lever Rod
14	C-32025	Cord Holder (Black)	58	C-34505	Switch Knob
15	C-18420	Filter Supporter Screen	59	C-34510	Switch Cover (Black)
16	C-18002	Secondary Carbon Filter	60	C-77000	Screw
17	C-75902	Switch Housing Cover (White)	61	C-77003	Screw
18	C-76902	Dust Cover Seal	62	C-70520	Cord Clip (Black)
19	C-77026	Screw	63	C-77005	Washer
20	C-75802	Latch Bracket (Black)	64	C-77010	Cord Hook Spring
21	C-75025	Cover Latch (Black)	65	C-70500	Upper Cord Hook (Black)
22	C-77027	Cover Latch Spring	66	C-70000	Handle Tube
23	C-75500	Dust Compartment Cover (White)	67	C-77012	Screw
24	C-75950	Post Cover Knob (Black)	68	C-77014	Washer
25	C-75820	Post Cover (White)	69	C-70501	Lower Cord Hook (Black)
26	C-18051	Electrostatic Exhaust Filter	70	PR0-75062	Hose Rack
27	C-75036	Motor Cover (White)	71	C-77019	Screw
28	C-76010	Motor Cover Seal Upper	72	C-30000	Power Cord 24' 17/2 (Black)
29	C-18050	Exhaust Filter	73	C-32090	Cord Protector
30	C-71500	Rear Wheel Hubcap	74	C-60000	Motor 1000W
31	C-77029	Washer Rear Wheel	75	C-63005	Carbon Brush
32	C-71000	Rear Wheel (Black)	76	C-62003	Motor Mount (Rear)
33	C-77028	E-Clip Rear Wheel	77	C-62034	Motor Support Housing (Black)
34	C-71002	Rear Wheel Shaft	78	C-76025	Motor Gasket
35	C-77025	Screw	79	C-62010	Motor Mount (Front)
36	C-74000	Warning Label	80	C-77000	Set Screw
37	C-32000	Rubber Boot (Black)	81	C-62015	Motor Pivot Sleeve (Black)
38	C-77030	Handle Screw	82	C-18700	Noise Suppressor
39	PR0-75060	Tool Holder			
40	PR0-77010	Nut			
41	C-77000	Screw			
42	PR0-75061	Wand Retainer			
43	PR0-77005	Screw			

# CIRRUS/PROGRADE Original & Replacement

Model CR69

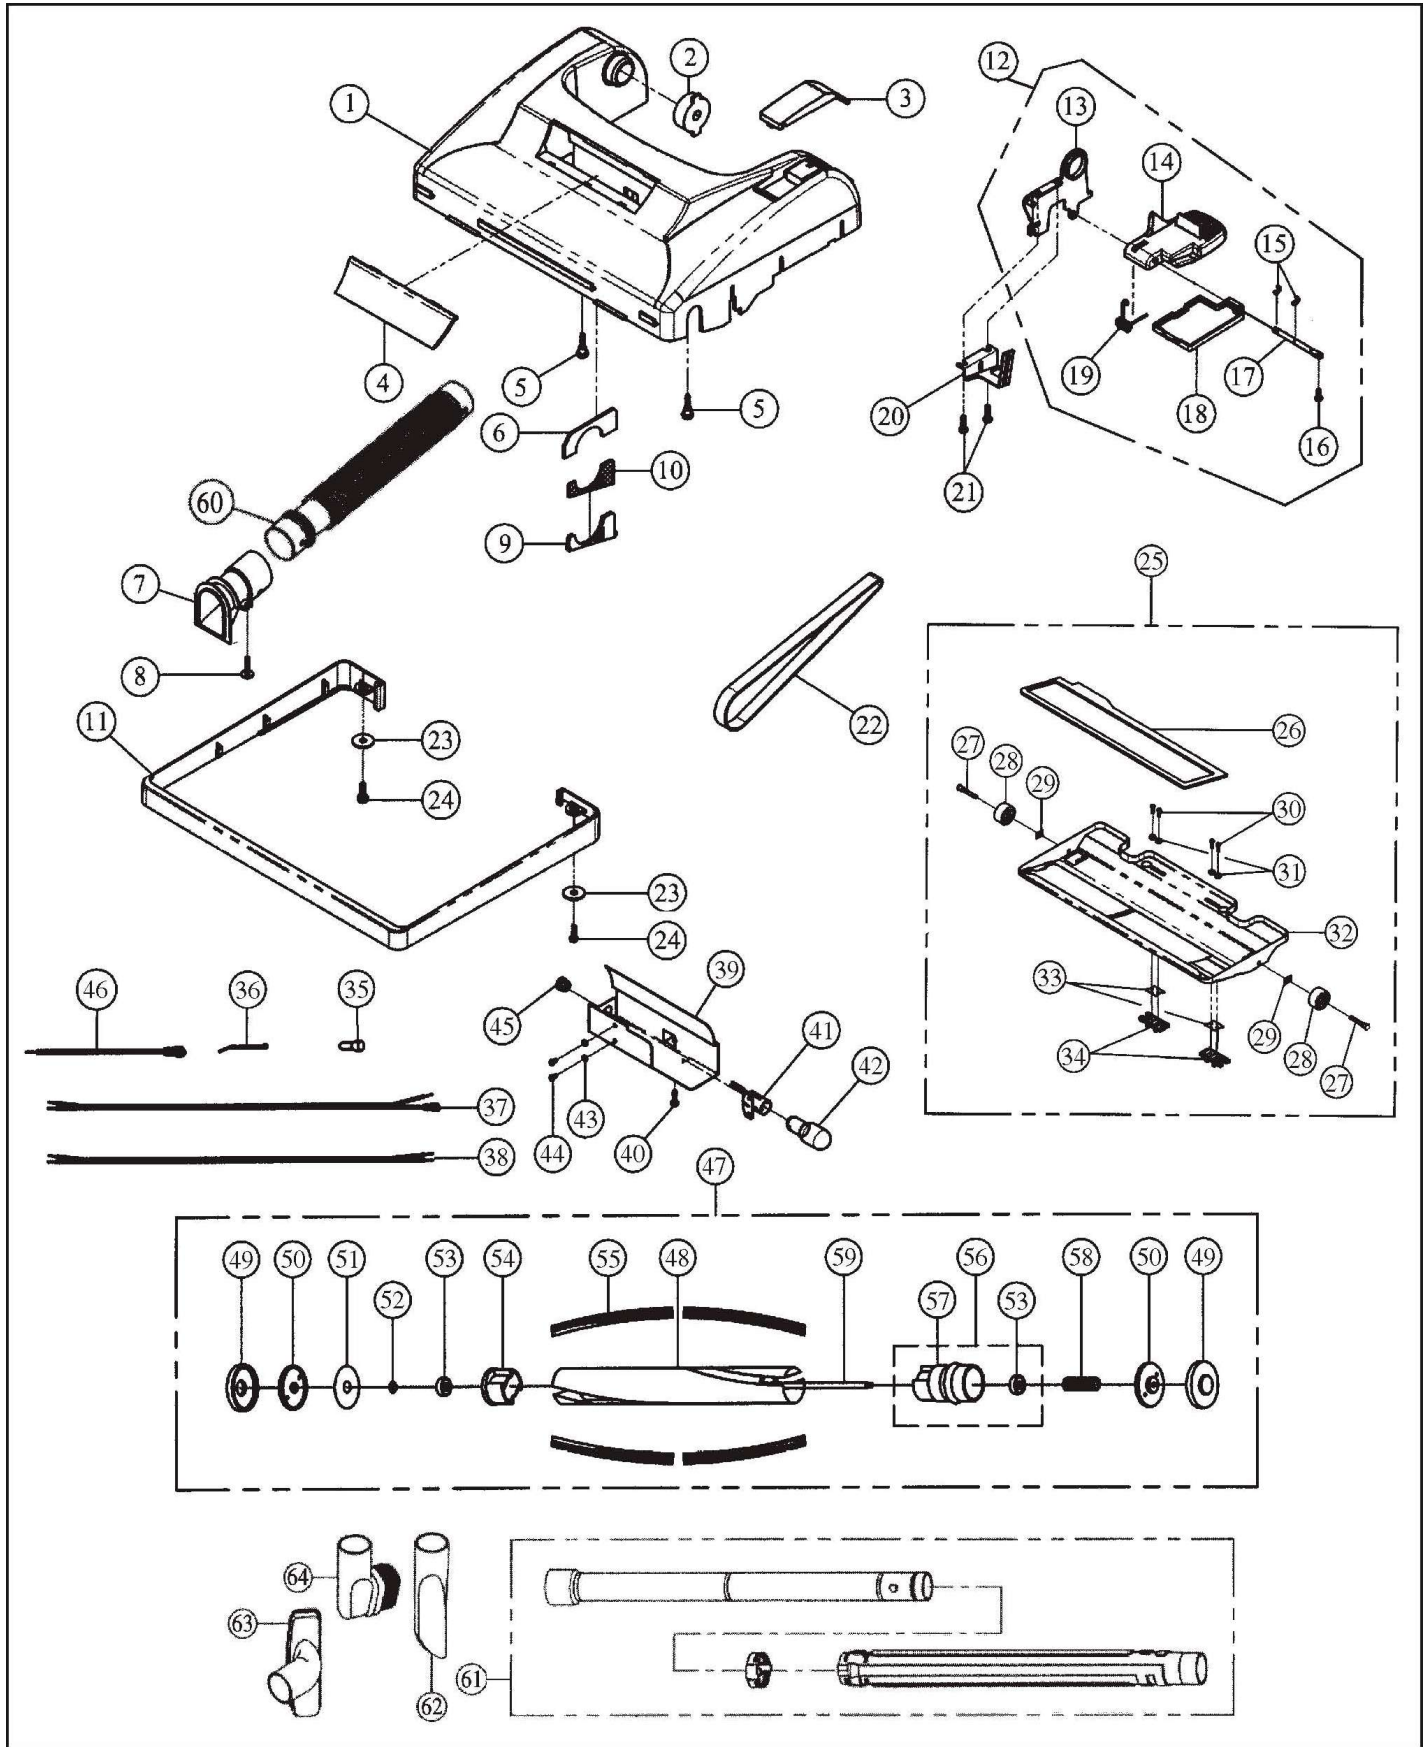

# Original & Replacement **CIRRUS/PROGRADE**

Model CR69

KEY	PART NO	DESCRIPTION	KEY	PART NO.	DESCRIPTION
1	C-73000	Nozzle Housing (White)	35	SS-3270	Wire Connector
2	C-73400	Plastic Bushing (Black)	36	C-32003	Cord Clip
3	C-73450	Carpet/Floor Pedal Cover (White)	37	C-36900	Lead Wire (Black)
4	C-73410	Clear Lens	38	C-36902	Lead Wire (White)
5	C-77039	Bottom Plate Lock Screw	39	C-73412	Lamp Reflector
6	C-73480	Nozzle Housing Felt Packing	40	C-77000	Screw
7	C-73430	Hose Inlet Fitting (Red)	41	C-73414	Bulb Socket
8	C-77040	Screw	42	FA-3515	Light Bulb
9	C-73482	Vented Support Fitting	43	C-77045	Spring Washer
10	C-73484	Vented Support Felt Packing	44	C-77046	Screw
11	C-74100	Furniture Guard (Black)	45	C-36914	Wire Bushing
12	C-73720	Foot Pedal Complete (Black)	46	C-36908	Lead Wire (Black)
13	C-73780	Pedal Frame	47	C-20000	Agitator Assembly (Metal)
14	C-73722	Foot Pedal (Black)	48	C-20500	Agitator Core (Metal)
15	C-77041	E-Clip	49	C-20510	Rubber End Cover (Black)
16	C-77032	Screw	50	C-20512	End Cap
17	C-73782	Foot Pedal Shaft	51	C-77036	Agitator Felt Washer
18	C-73790	Rear Belt Cover (Black)	52	C-77037	Washer
19	C-77042	Foot Pedal Spring	53	C-62000	Agitator Bearing
20	C-73486	Belt Guard	54	C-20514	Agitator Bearing Holder
21	C-77043	Screw	55	C-22000	Brush Strip
22	C-10000	Belt 2 Pk	56	C-20516	Agitator Pulley Complete
23	C-77044	Washer	57	C-20519	Agitator Pulley
24	C-77000	Set Screw	58	C-20530	Agitator Pulley Bushing
25	C-76100	Bottom Plate Assembly	59	C-20522	Agitator Shaft
26	C-76001	Bottom Plate Gasket	60	PRO-40005	Nozzle Hose
27	C-71010	Front Wheel Pin	61	PRO-50000	2 Piece Wand
28	C-71011	Front Wheel (Black)	62	C-54005	Crevice Tool
29	C-77015	Push-On Nut	63	C-52005	Upholstery Tool
30	C-77016	Screw	64	C-53005	Dust Brush
31	C-77017	Washer			
32	C-76101	Bottom Plate			
33	C-77018	Bottom Plate Latch Spring			
34	C-76400	Bottom Plate Latch (Black)			