 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



CIRRUS CR68 Owner's Manual

[Shop genuine replacement parts for CIRRUS CR68](#)

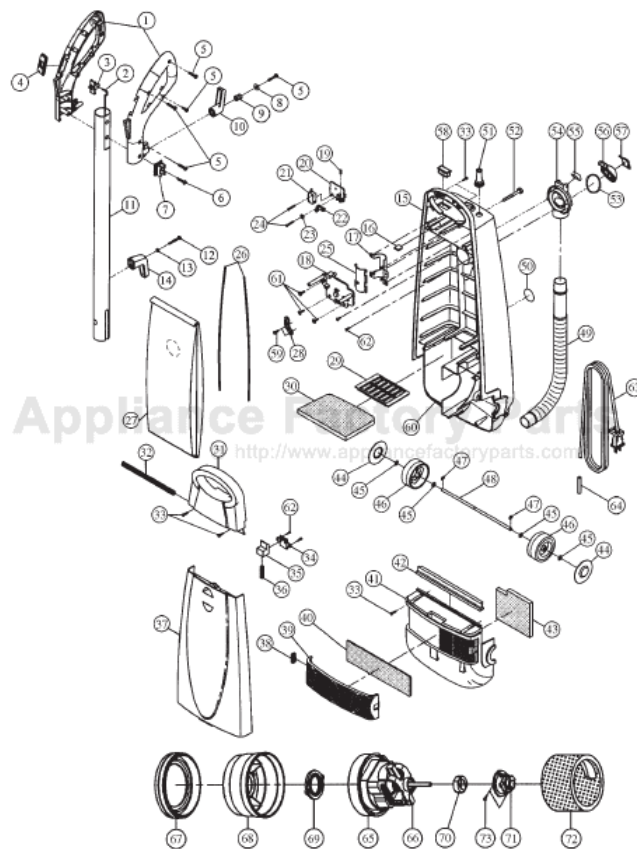

[Find Your CIRRUS Vacuum Cleaner Parts - Select From 13 Models](#)


----- Manual continues below part list -----

Available Replacement Parts for CIRRUS CR68

FA-3515	LAMP T4840
C-14000	PAPER BAG HEPA TYPE (6 PACK)
C-14005	PAPER BAG, STYLE A (12 PACK)
C-18051	ELECTROSTATIC EXHAUST FILTER
C-75052	SUCTION CONTROL DIAL BLACK
C-60000	Lamb Motor 1000W .
C-10000	BELT (2 PACK)
C-71011	Front Wheel .

CIRRUS/PROGRADE Original & Replacement

 Model CR68

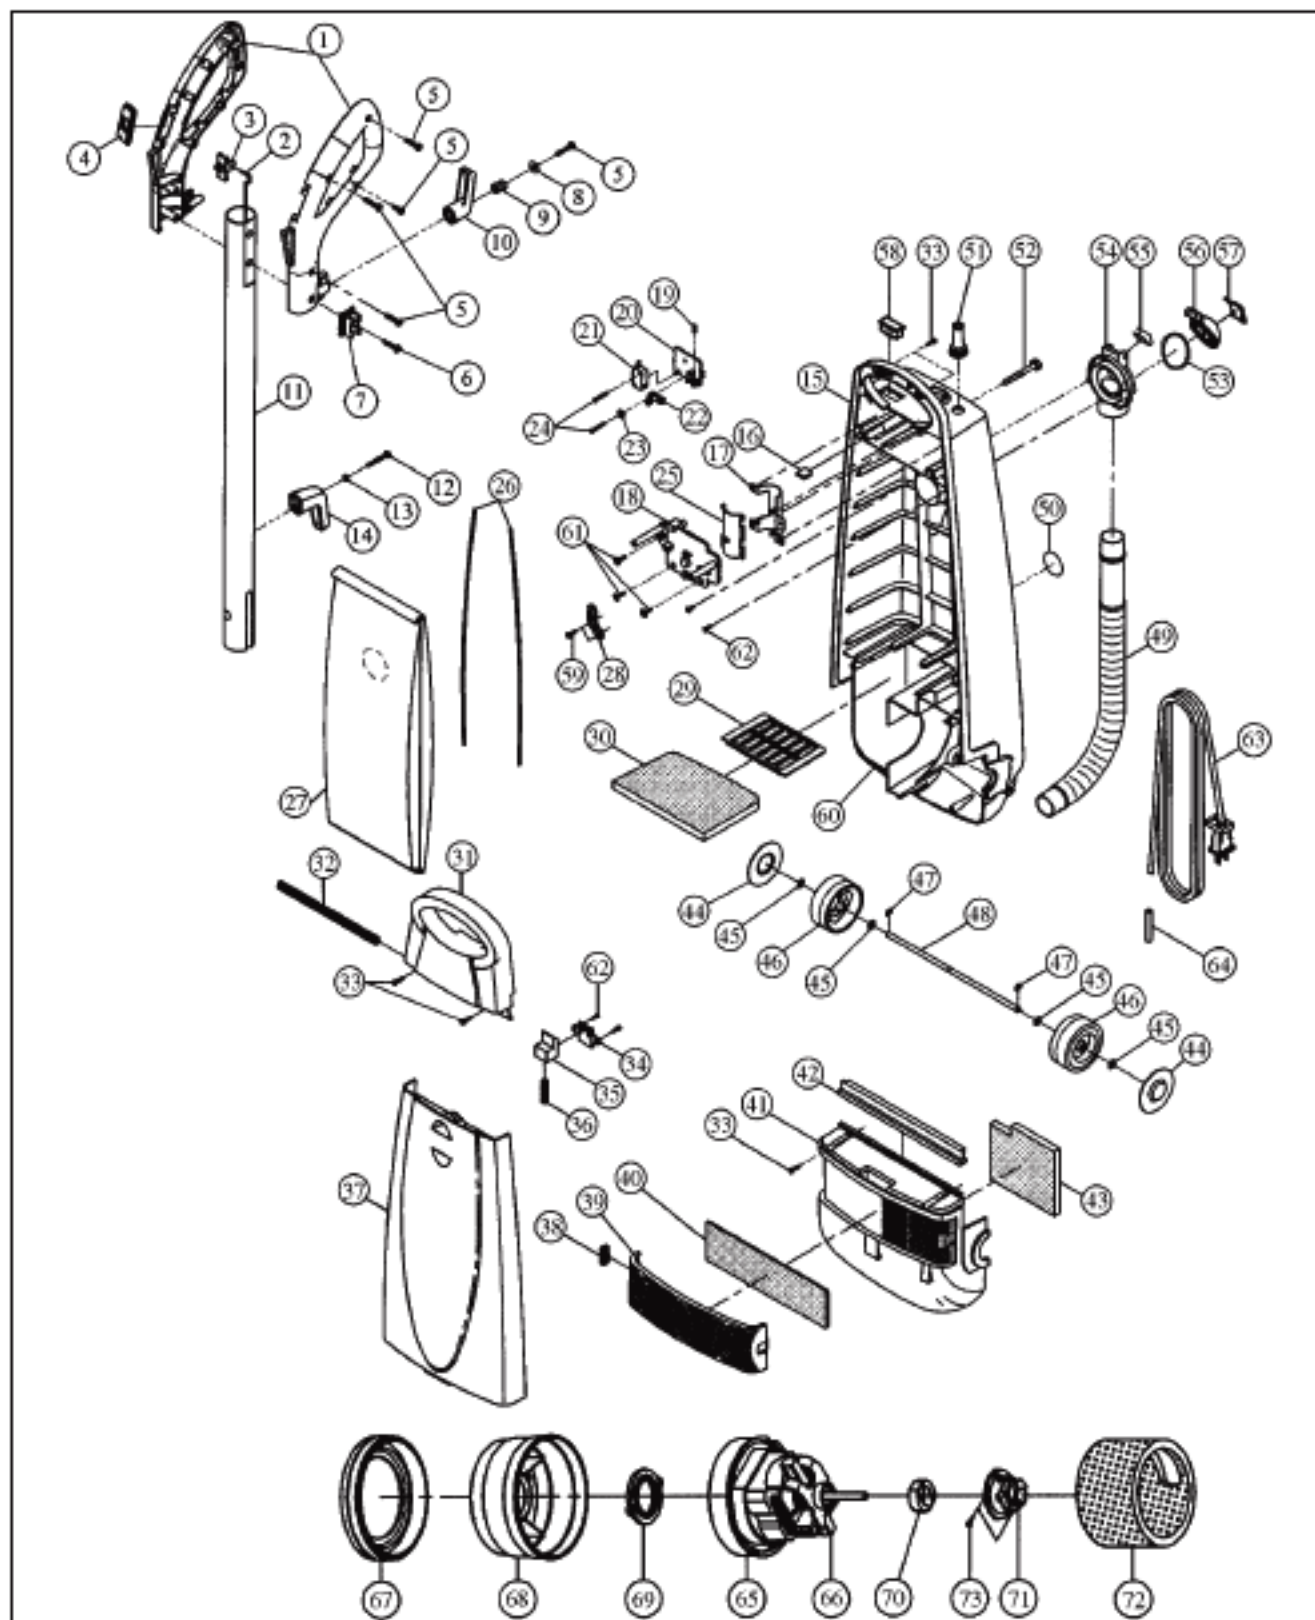


Original & Replacement **CIRRUS/PROGRADE**

Model CR68

KEY	PART NO	DESCRIPTION	KEY	PART NO.	DESCRIPTION
1	C-70250	Handle Grip RH & LH (Black)	41	C-75036	Motor Cover (White)
2	C-34500	Handle Lever Rod	42	C-76010	Motor Cover Seal Upper
3	C-34505	Switch Knob	43	C-18050	Exhaust Filter
4	C-34510	Switch Cover (Black)	44	C-71500	Rear Wheel Hubcap
5	C-77000	Screw	45	C-77029	Washer Rear Wheel
6	C-77003	Screw	46	C-71000	Rear Wheel (Black)
7	C-70520	Cord Clip (Black)	47	C-77028	E-Clip Rear Wheel
8	C-77005	Washer	48	C-71002	Rear Wheel Shaft
9	C-77010	Cord Hook Spring	49	C-40000	Nozzle Hose Blow Molded (Black)
10	C-70500	Upper Cord Hook (Black)	50	C-74000	Warning Label
11	C-70000	Handle Tube	51	C-32000	Rubber Boot (Black)
12	C-77012	Screw	52	C-77030	Handle Screw
13	C-77014	Washer	53	C-76020	Suction Inlet Cover Seal
14	C-70501	Lower Cord Hook (Black)	54	C-75050	Suction Inlet (Black)
15	C-75000	Dust Compartment (White)	55	C-77031	Suction Inlet Lid Spring
16	C-75900	Vented Support Rubber	56	C-75051	Suction Inlet Lid (Black)
17	C-70590	Handle Fitting (Rear)	57	C-75052	Suction Slide Control (Black)
18	C-75090	P.C. Board Holder	58	C-75053	Switch Filler Plug
19	C-77023	Switch Activator Spring	59	C-77032	Screw, Internal Cord Holder
20	C-75092	Switch Mounting Plate	60	C-76022	Motor Cover Seal Lower
21	C-36000	Switch	61	C-77003	Screw
22	C-34520	Switch Activator	62	C-77000	Screw
23	C-77024	Plastic Washer	63	C-30000	Power Cord 24' 17/2 (Black)
24	C-77025	Screw	64	C-32090	Cord Protector
25	C-70591	Handle Fitting (Front)	65	C-60000	Motor 1000W
26	C-76900	Dust Compartment Side Seals	66	C-63005	Carbon Brush
27	C-14000	Paper Bag HEPA Type 6 Pk	67	C-62003	Motor Mount (Rear)
27	C-14005	Paper Bag Micro Filtration 12 Pk	68	C-62034	Motor Support Housing (Black)
28	C-32025	Cord Holder (Black)	69	C-76025	Motor Gasket
29	C-18420	Filter Supporter Screen	70	C-62010	Motor Mount (Front)
30	C-18000	Secondary Filter	71	C-62015	Motor Pivot Sleeve (Black)
31	C-75902	Switch Housing Cover (White)	72	C-18700	Noise Suppressor
32	C-76902	Dust Cover Seal	73	C-77000	Set Screw
33	C-77026	Screw			
34	C-75802	Latch Bracket (Black)			
35	C-75025	Cover Latch (Black)			
36	C-77027	Cover Latch Spring			
37	C-75500	Dust Compartment Cover (White)			
38	C-75950	Post Cover Knob (Black)			
39	C-75820	Post Cover (White)			
40	C-18051	Electrostatic Exhaust Filter			

CIRRUS/PROGRADE Original & Replacement

 Model CR68

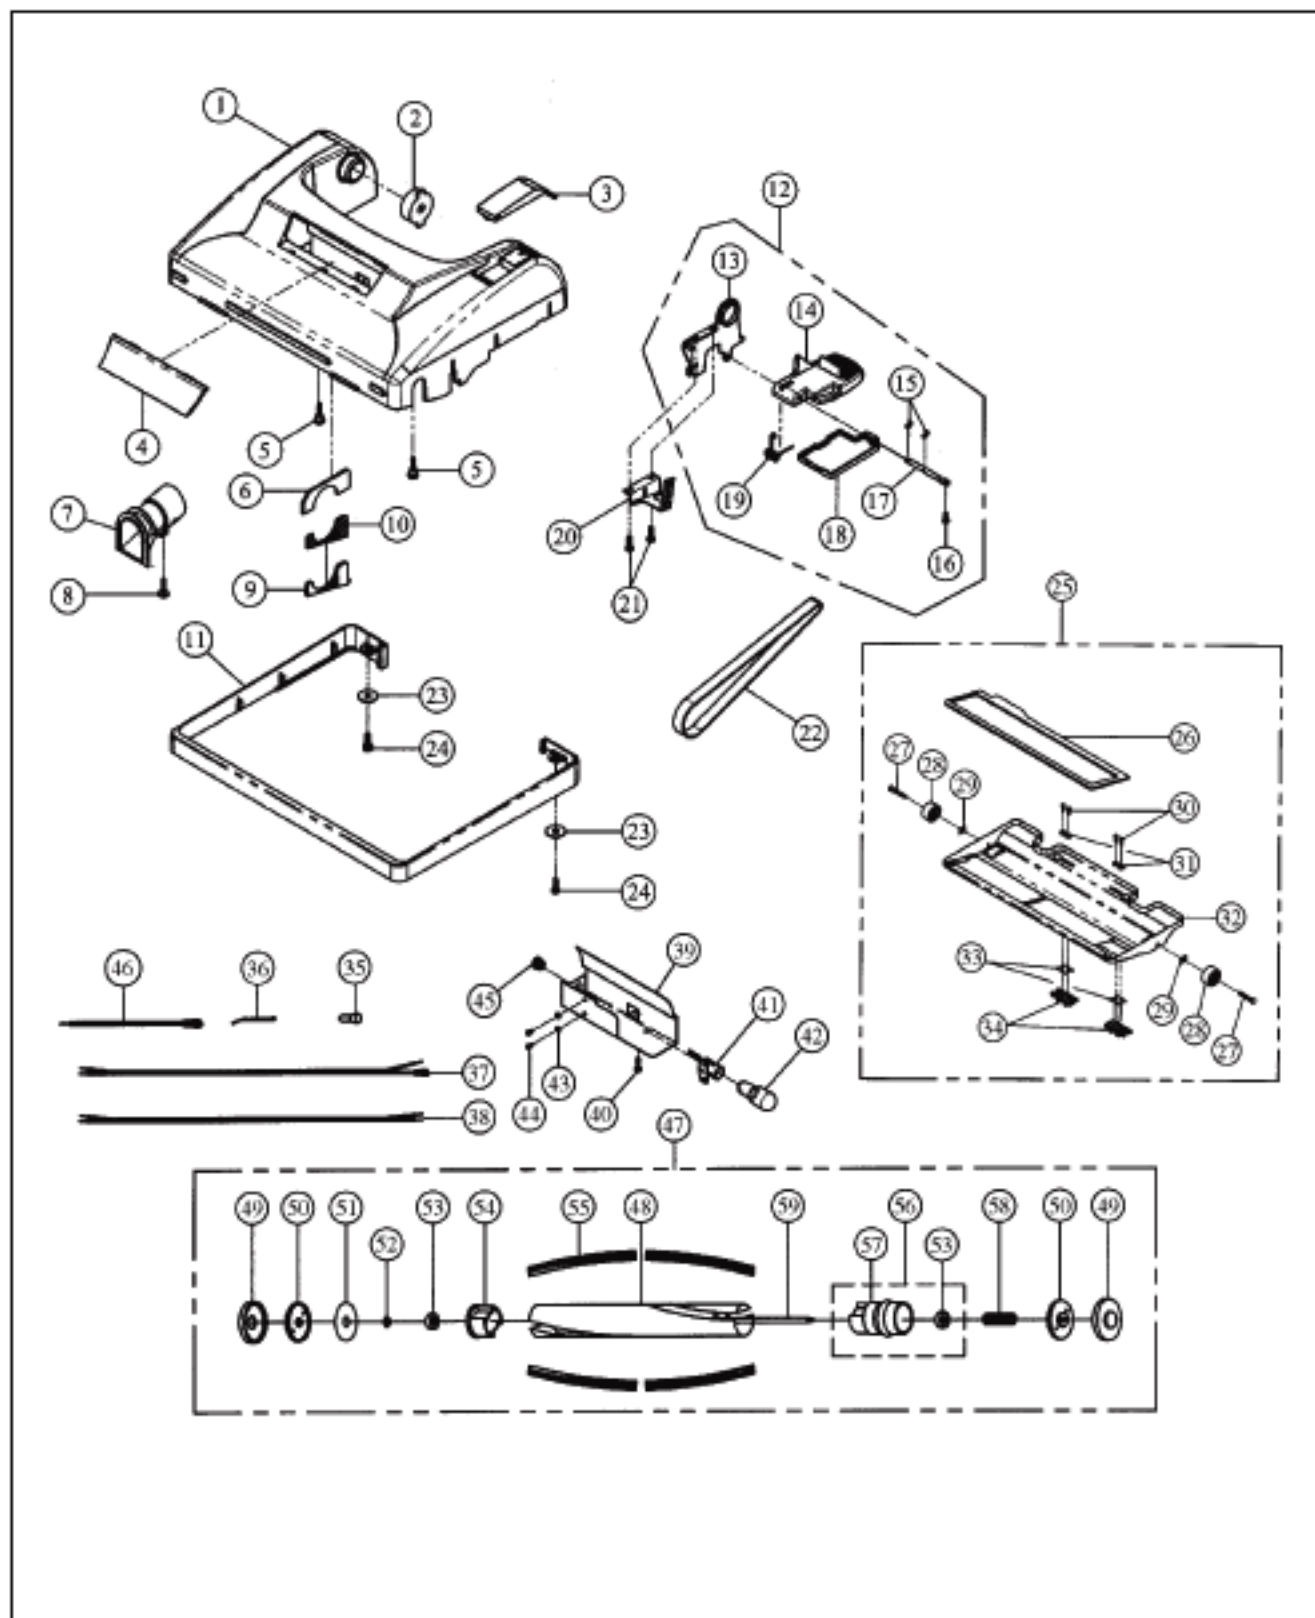

Original & Replacement **CIRRUS/PROGRADE**

Model CR68

KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION
1	C-73000	Nozzle Housing (White)	32	C-76101	Bottom Plate
2	C-73400	Plastic Bushing (Black)	33	C-77018	Bottom Plate Latch Spring
3	C-73450	Carpet/Floor Pedal Cover (White)	34	C-76400	Bottom Plate Latch (Black)
4	C-73410	Clear Lens	35	SS-3270	Wire Connector
5	C-77039	Bottom Plate Lock Screw	36	C-32003	Cord Clip
6	C-73480	Nozzle Housing Felt Packing	37	C-36900	Lead Wire (Black)
7	C-73430	Hose Inlet Fitting (Red)	38	C-36902	Lead Wire (White)
8	C-77040	Screw	39	C-73412	Lamp Reflector
9	C-73482	Vented Support Fitting	40	C-77000	Screw
10	C-73484	Vented Support Felt Packing	41	C-73414	Bulb Socket
11	C-74100	Furniture Guard (Black)	42	FA-3515	Light Bulb
12	C-73720	Foot Pedal Complete (Black)	43	C-77045	Spring Washer
13	C-73780	Pedal Frame	44	C-77046	Screw
14	C-73722	Foot Pedal (Black)	45	C-36914	Wire Bushing
15	C-77041	E-Clip	46	C-36908	Lead Wire (Black)
16	C-77032	Screw	47	C-20000	Agitator Assembly (Metal)
17	C-73782	Foot Pedal Shaft	48	C-20500	Agitator Core (Metal)
18	C-73790	Rear Belt Cover (Black)	49	C-20510	Rubber End Cover (Black)
19	C-77042	Foot Pedal Spring	50	C-20512	End Cap
20	C-73486	Belt Guard	51	C-77036	Agitator Felt Washer
21	C-77043	Screw	52	C-77037	Washer
22	C-10000	Belt 2 Pk	53	C-62000	Agitator Bearing
23	C-77044	Washer	54	C-20514	Agitator Bearing Holder
24	C-77000	Set Screw	55	C-22000	Brush Strip
25	C-76100	Bottom Plate Assembly	56	C-20516	Agitator Pulley Complete
26	C-76001	Bottom Plate Gasket	57	C-20519	Agitator Pulley
27	C-71010	Front Wheel Pin	58	C-20530	Agitator Pulley Bushing
28	C-71011	Front Wheel (Black)	59	C-20522	Agitator Shaft
29	C-77015	Push-On Nut			
30	C-77016	Screw			
31	C-77017	Washer			