


CIRRUS/PROGRADE Original & Replacement

Model VC248

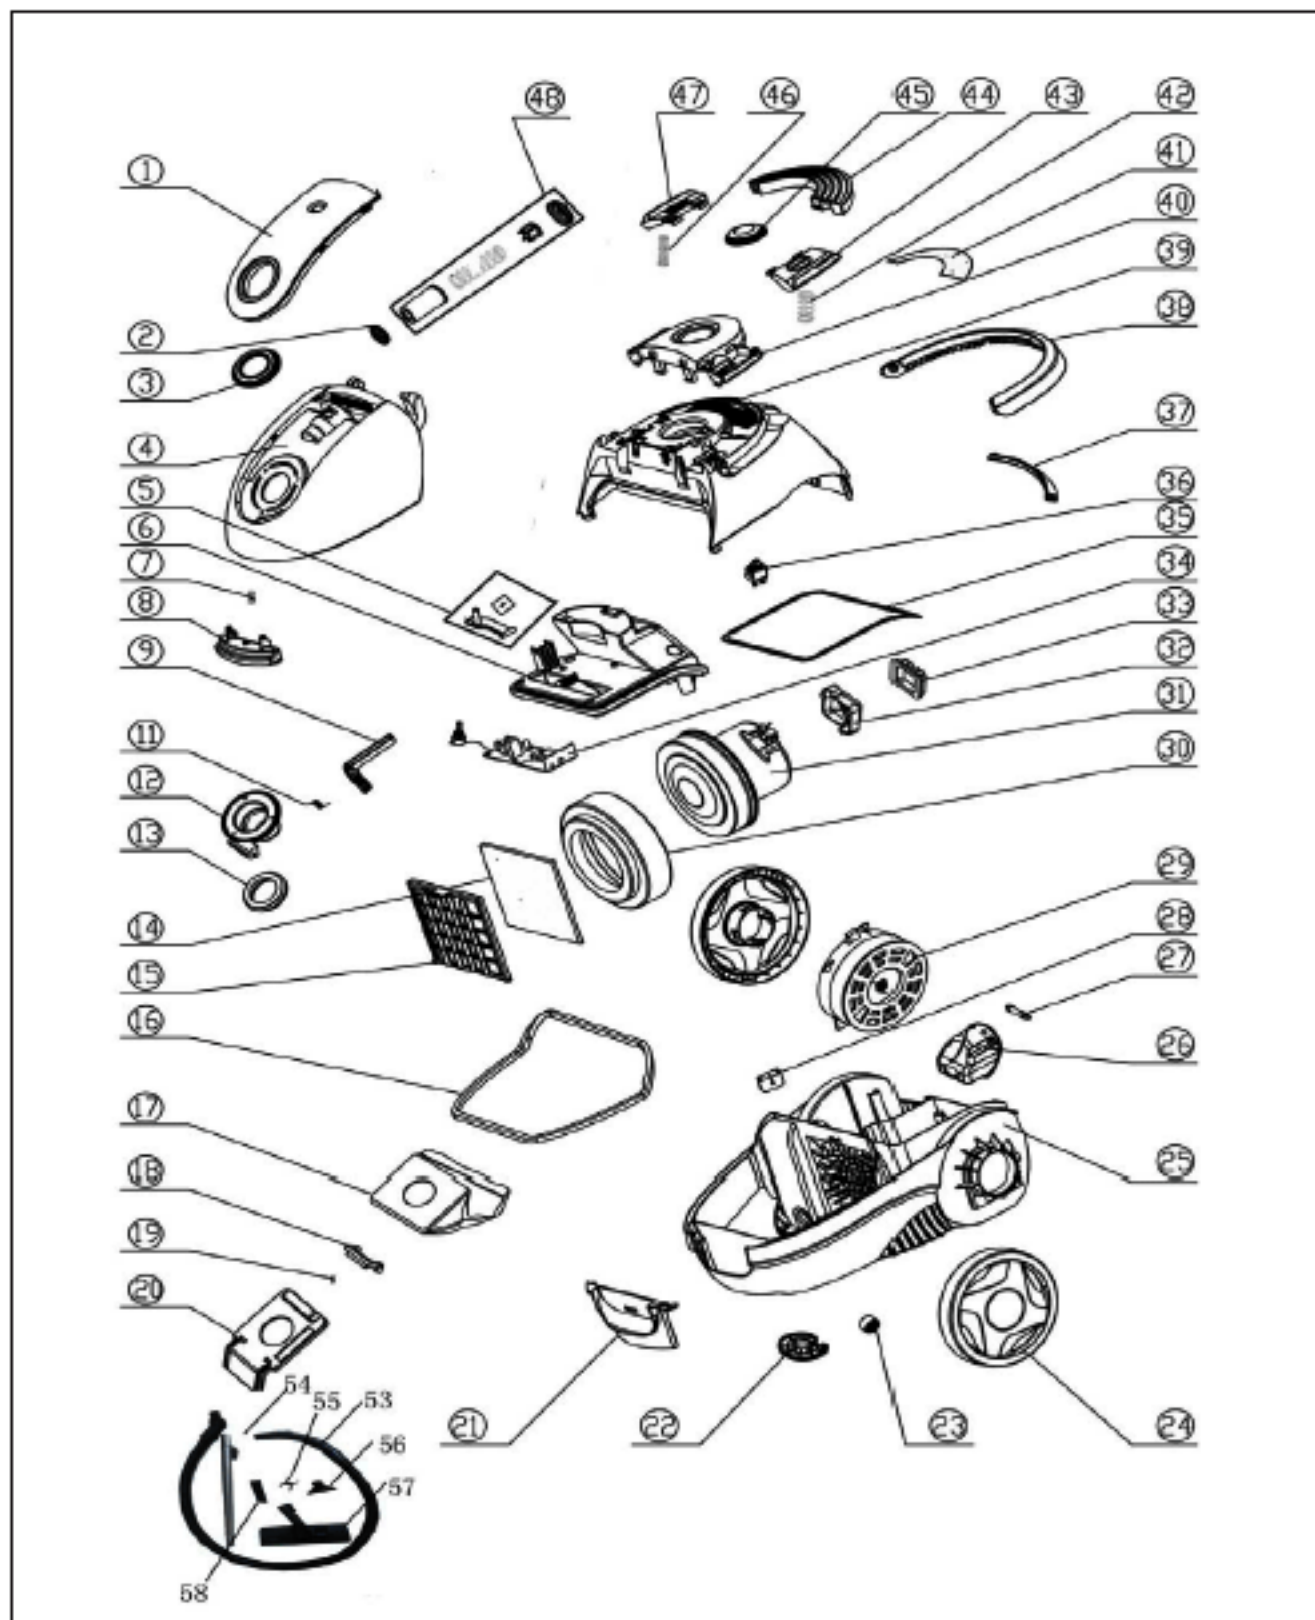

Original & Replacement **CIRRUS/PROGRADE**

Model VC248

KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION
1	C-75030	Front Cover Panel	53	C-40248	Hose
2	C-76035	Seal	54	C-50248	Telescopic Wand
3	C-76050	Gasket	55	C-57025	Tool Holder
4	C-75032	Front Cover	56	C-53024	Upholstery Tool
5	C-75220	Cord Rewind Actuator	57	C-55248	Rug/Floor Tool
6	C-75021	Motor Cover	58	C-54248	Crevice Tool
7	C-75200	Front Cover Lock Spring			
8	C-75202	Front Cover Lock			
9	C-75204	Bag Door Lockout Lever			
11	C-75206	Bag Door Lockout Lever Spring			
12	C-75208	Suction Inlet			
13	C-75210	Dirt Seal			
14	C-18020	Motor Filter			
15	C-18520	Motor Filter Frame			
16	C-76045	Front Cover Seal			
17	C-14020	Paper Bag 6 PK			
18	C-16024	Bag Holder Lock			
19	C-16022	Bag Holder Lock Spring			
20	C-16020	Bag Holder			
21	C-75020	Bag Door Cover Release Lever			
22	C-71025	Wheel Caster			
23	C-71022	Front Wheel			
24	C-71020	Rear Wheel			
25	C-75022	Main Body			
26	C-75212	Cord Outlet			
27	C-75214	Cord Rewind Roller			
28	C-75216	Cord Insert			
29	C-30020	Cord Reel			
30	C-62520	Motor Ring			
31	C-60020	Motor Ass'y			
32	C-62522	Motor Holder			
33	C-62521	Motor Holder Socket			
34	C-34400	PCB			
35	C-76040	Motor Housing Gasket			
36	C-34020	Switch			
37	C-70024	Handle Cover			
38	C-70020	Handle			
39	C-75031	Rear Base Top			
40	C-75034	Rear Base Top Cover			
41	C-18021	Exhaust Filter			
42	C-77072	Switch Pedal Spring			
43	C-75023	Switch Pedal			
44	C-74020	Exhaust Filter Frame			
45	C-75026	Speed Control Knob			
46	C-77070	Cord Rewind Pedal Spring			
47	C-75024	Cord Rewind Pedal			
48	C-75218	Full Bag Indicator Assembly			