

EXPLOSION PARTS & LIST

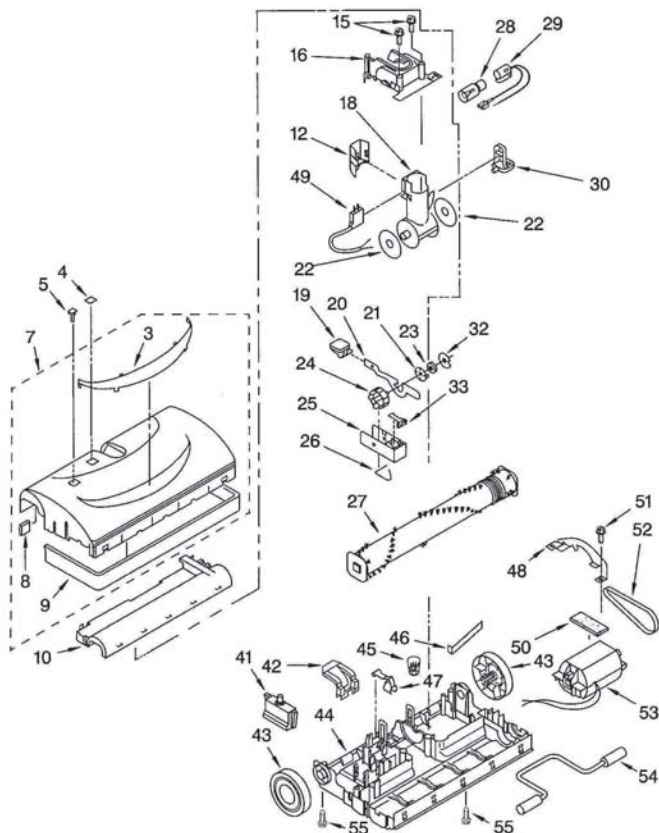


DIAGRAM #	STOCK #	DESCRIPTION	DIAGRAM #	STOCK #	DESCRIPTION
3	EB26003	Window, Cover (Light)	28	EB26028	Light Bulb
4	EB26004	Window, Cover (Height Adj.)	29	EB26029	Socket, Bulb
5	EB26005	Button, Extension	30	EB26030	Foot Pedal
7	EB26007	Floor Nozzle Upper Unit	32	EB26032	Washer, Thrust
8	EB26008	Filter, Intake/Exhaust (2)	33	EB26033	Ratchet Catch
9	EB26009	Guard, Furniture	41	EB26041	Protector, Overload
10	EB26010	Cover, Agitator	42	EB26042	Handle, Release Pedal
12	EB26012	Cover, Plug	43	EB26043	Wheel (Rear)
15	EB26015	Screw	44	EB26044	Floor Nozzle Lower
16	EB26016	Swivel Cap Thermal Unit	45	EB26045	Wire Nut
18	EB26018	Swivel	46	EB26046	Spring, Motor Adj.
19	EB26019	Pad, Foot Pedal	47	EB26047	Lifter
20	EB26020	Indicator, Lever	48	EB26048	Motor Bridge
21	EB26021	Catch Indexing	49	EB26049	Cord and Plug
22	EB26022	Swivel Seal	50	EB26050	Motor Gasket
23	EB26023	Washer (2)	51	EB26051	Screw (2)
24	EB26024	Cam, Indicator	52	EB26052	Belt
25	EB26025	Indicator Block	53	EB26053	Motor
26	EB26026	Spring Assist	54	EB26054	Front Axle Assembly
27	EB26027	Agitator Unit	55	EB26055	Screw (2)