 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



# FULLER BRUSH FBP-HD1 Owner's Manual

[Shop genuine replacement parts for FULLER BRUSH FBP-HD1](#)

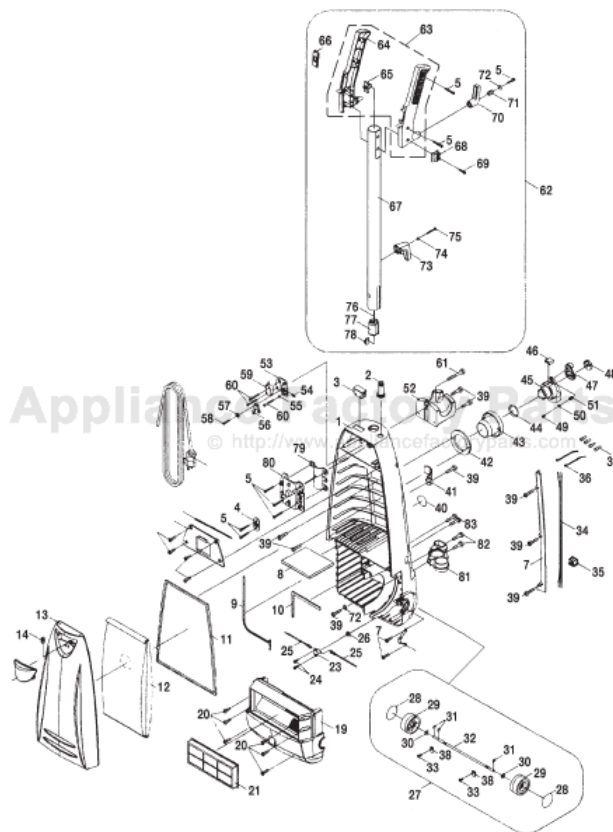

[Find Your FULLER BRUSH Vacuum Cleaner Parts - Select From 23 Models](#)

----- Manual continues below part list -----

 
## Available Replacement Parts for FULLER BRUSH FBP-HD1

<a href="#">FB-74010</a>	Furniture Guard Black.
<a href="#">CP-54006</a>	BOTTOM PLATE ASSEMBLY
<a href="#">RSR-1431-10</a>	PAPER BAG 10 PACK

# FULLER BRUSH

# Original & Replacement

Models FB-HD1T, FBP-HD2T

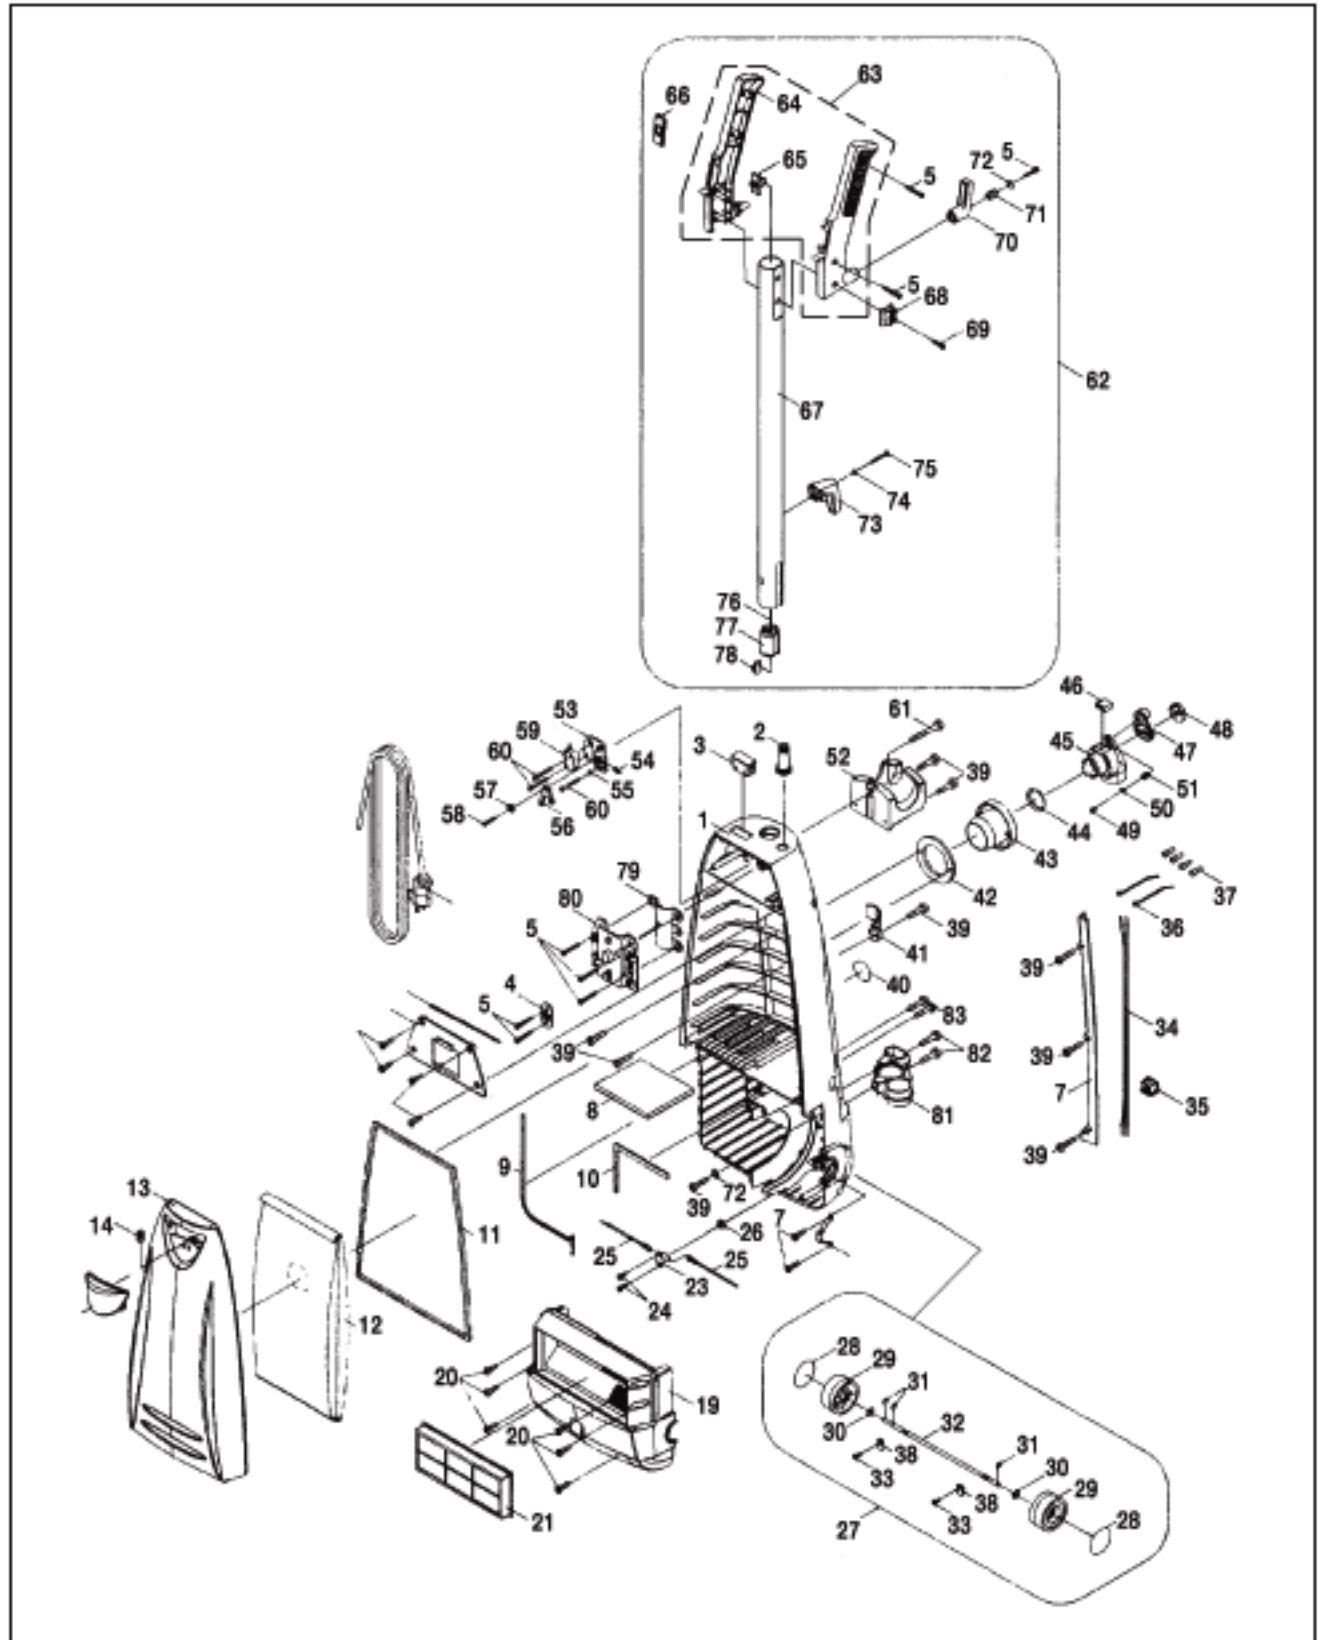

# Original & Replacement

# FULLER BRUSH

## Models FB-HD1T, FBP-HD2T

KEY	PART NO	DESCRIPTION
1	CP-75000	Dust Compartment
2	CP-32600	Cord Strain Relief
3	FB-71306	Plate Cover For Dust Compartment
4	CP-32010	Cord Restraining Strap
5	CP-77000	Screw For Restraining Strap
6	CP-34500	Inner Switch Cover
7	FB-77450	Screw Inner Switch Cover
8	FB-18210	Filter Secondary Electrostatic
9	CP-76000	Motor Cover Seal 1
10	CP-76010	Motor Cover Seal 2
11	CP-76020	Dust Compartment Seal
12	FB-14000	Paper Bags 6 Pk
12	FB-14000-12	Paper Bags 12 Pk
13	FB-53060	Dust Cover FB-HD1T Gray
13	FB-53064	Dust Cover FB-PHD2T Black
14	FB-54123	Dust Cover Latch Spring
15	FB-54124	Dust Cover Latch
16	CP-76030	Seal Inner Switch Cover
17	CP-75040	Wire Harness Cover
18	CP-75050	Support Strap
19	FB-75065	Motor Black
20	CP-77000	Screw Motor Cover
21	FB-1801	Hepa Filter 1 Pk
22	CP-30000	Power Cord 30' 17/2 Black
22	FB-30000	Power Cord 40' 17/3 Red
23	CP-34501	Thermal Switch
24	CP-77012	Screw Thermal Switch
25	CP-34502	Temperature Wire W/Switch
26	CP-76040	Seal Temperature Switch
27	CP-71004	Wheel Axle Assembly
28	CP-74001	Decal Rear Wheel
29	CP-71001	Wheel Rear Black
30	CP-71002	Washer Rear Wheel
31	CP-71003	E-Clip Ring Rear Wheel
32	FB-54135	Axle Rear Wheel
33	CP-77013	Screw Rear Axle
34	FB-30314	Cord Motor FB-HD1T
34	FB-33614	Cord Motor FB-HD2T
35	CP-36043	Wire Bushing
36	CP-36054	Zip Tie
37	CP-36070	Wire Connector
38	CP-71010	Washer Rear Axle
39	CP-77020	Screw Wire Harness/Hose Clip
40	FB-74000	Warning Label
49	CP-77033	Screw Suction Inlet
50	CP-71022	Washer Suction Inlet
51	CP-77055	Spring Suction Inlet
52	CP-75140	Hose Hanger
53	FB-34500	Switch Mount Plate
54	FB-77719	Spring Switch Activator
55	FB-71625	Washer Switch Activator

KEY	PART NO	DESCRIPTION
56	FB-34505	Switch Activator
57	FB-71332	Washer Switch Activator
58	FB-77206	Screw Switch Activator
59	FB-34367	Main Switch
60	FB-77275	Screw Switch Activator
61	FB-77320	Screw Handle
62	FB-18107	Handle Assembly Household
62	FB-18112	Handle Assembly Commercial
63	FB-70255	Grip Assembly Both Sides
64	N/A	Order Key #63
65	FB-34307	Switch Knob
66	FB-3456W	Switch Window
67	FB-18110	Handle Tube
68	FB-L06	Cord Holder On Grip
69	CP-77000	Screw Lower Grip
70	FB-70050	Cord Hook Upper Black
71	FB-77430	Spring Upper Cord Hook
72	FB-71434	Washer Upper Cord Hook
73	CP-70518	Cord Hook Lower Black
74	FB-71323	Lock Washer Lower Cord Hook
75	FB-77330	Screw Lower Cord Hook
76	FB-34515	Handle Lever Rod
77	FB-34514	Holder Handle Lever Rod
78	FB-34414	Lever Knob Black
79	CP-70354	Handle Fitting
80	FB-75333	Wire Harness Support
81	FB-70139	On Board Tool Holder
82	FB-77437	Screw Tool Holder
83	CP-77033	Screw Dust Compartment

 
### Handle Parts List For FB-PHD2T Not Shown

FB-70000	Handle Tube
CP-70025	Foam Grip
CP-70035	Handle Cap
FB-34428	Switch Knob
FB-34806	Guard For Switch Knob
FB-77400	Screw For switch Guard
CP-54035	L Bolt
FB-70540	Cord Hook Holder
FB-71437	Lock Washer
CP-54033	Nut For L Bolt
FB-70433	Upper Cord Hook
FB-40074	Hose Attachment Complete

# FULLER BRUSH

# Original & Replacement

Models FB-HD1T, FBP-HD2T

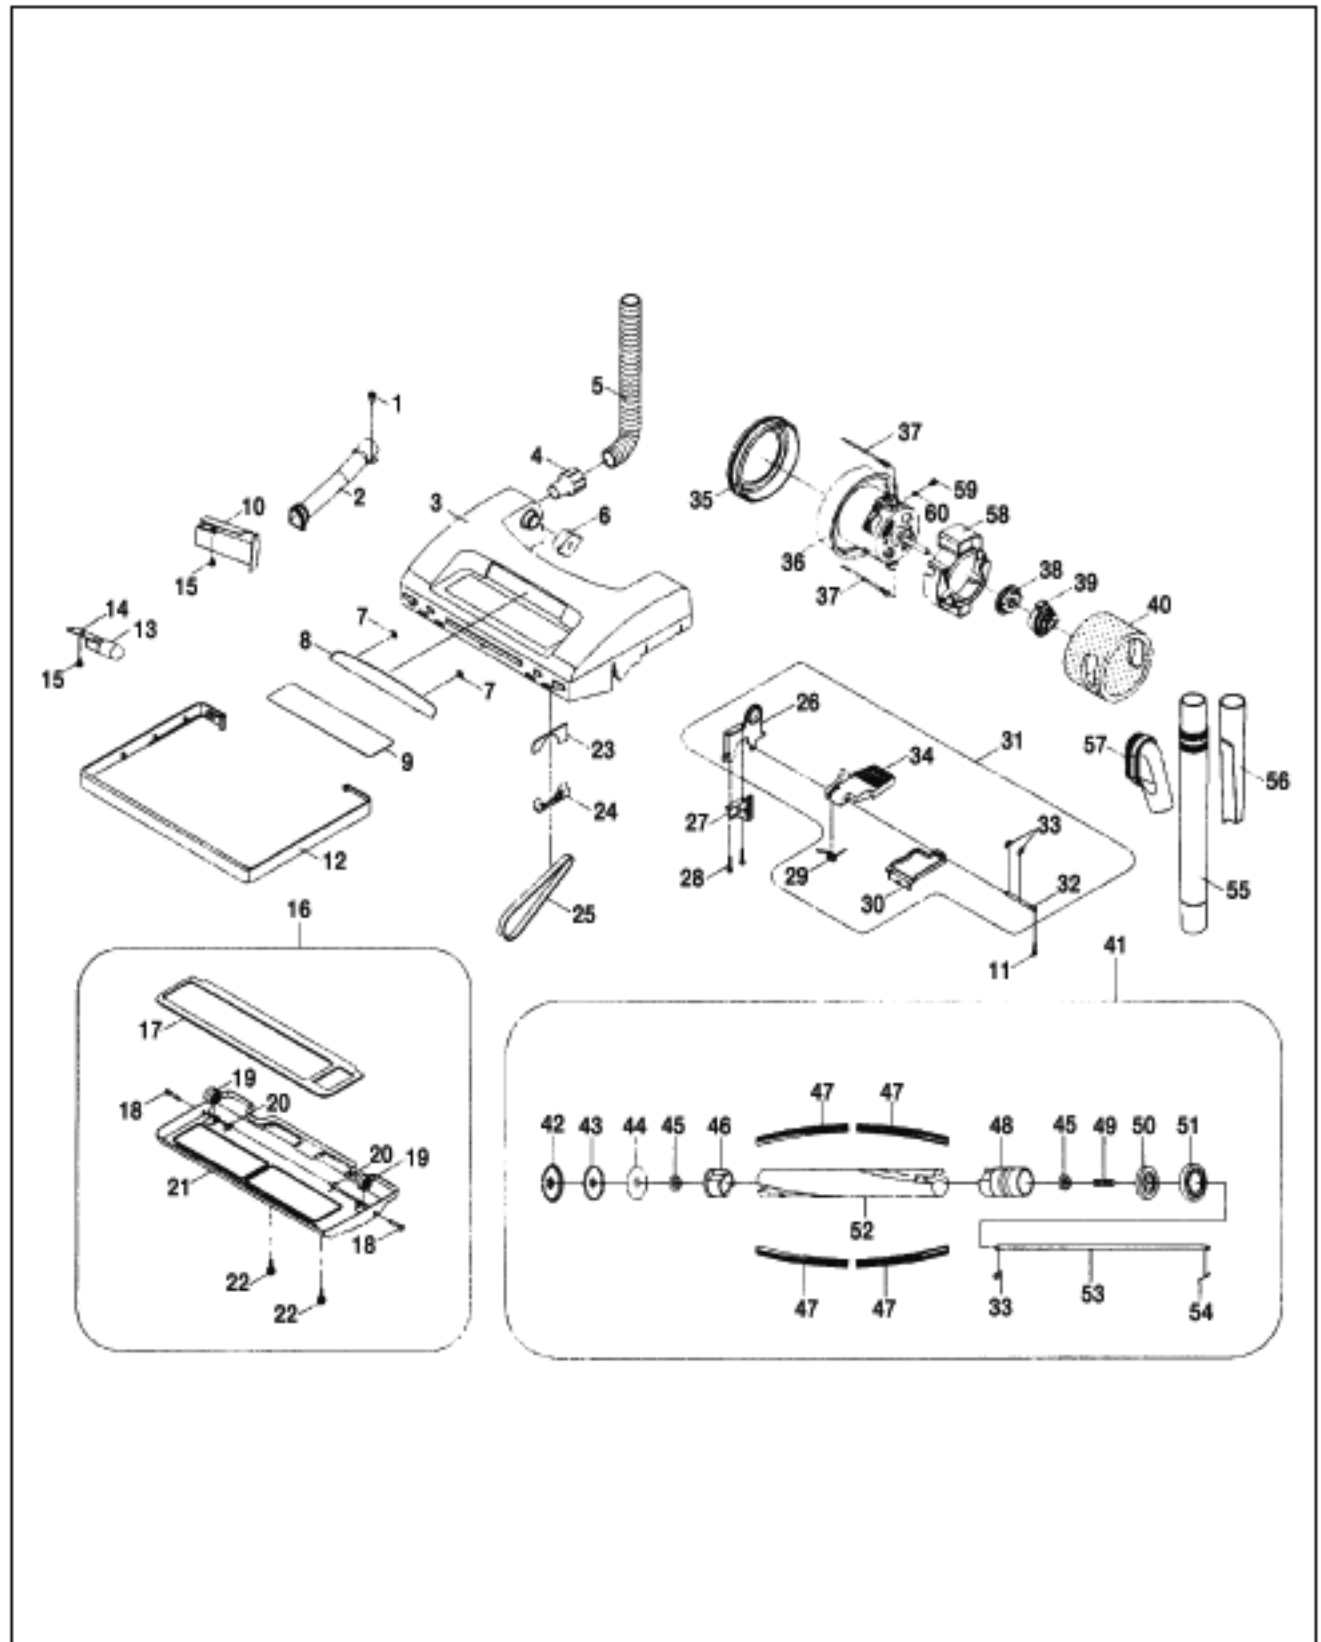

# Original & Replacement

# FULLER BRUSH

Models FB-HD1T, FBP-HD2T

KEY	PART NO	DESCRIPTION	KEY	PART NO	DESCRIPTION
1	CP-77250	Screw Nozzle Inlet Tube	31	FB-73733	Pedal Frame Assembly
2	CP-73006	Nozzle Inlet Tube	32	CP-71030	Pedal Shaft
3	FB-73068	Nozzle Housing FB-HD1T Gray	33	CP-71732	E-Clip 4mm
3	FB-73069	Nozzle Housing FB-PHD2 TBlack	34	CP-73716	Foot Pedal
4	CP-73018	Hose Cuff	35	CP-62148	Motor Mount Rear
5	FB-73307	Nozzle Hose	36	CP-60002	Motor Assembly
6	CP-73200	Pivot Bushing Nozzle Housing	37	CP-36149	Temperature Wire
7	CP-73145	Lens Clip	38	CP-62150	Motor Mount Front
8	CP-73149	Headlight Lens	39	CP-62231	Pivot Sleeve Metal
9	FB-73071	Name Plate FB-HD1T	40	CP-62139	Foam Sound Suppressor
9	FB-73072	Name Plate FB-PHD2T	41	FB-20010	Brushroll Complete
10	CP-77430	Washer Furniture Guard	42	CP-20512	End Cap Rubber Cover Left
11	CP-77000	Screw For Furniture Guard	43	CP-20527	End Cap Left
12	FB-74010	Furniture Guard Black	44	CP-20560	Felt Cover
13	CP-35060	Headlight Bulb 15w	45	CP-62008	Agitator Bearing
14	CP-73181	Headlight Socket	46	CP-62808	Bearing Holder
15	CP-77732	Screw Headlight Socket	47	FB-22005	Brush Strip Natural Bristle (Sold Each)
16	CP-76006	Bottom Plate Assembly	48	CP-20570	Agitator Pulley
17	CP-54006	Bottom Plate Gasket	49	CP-77624	Spacing Spring
18	CP-71043	Pin Wheel Bottom Plate	50	CP-20528	End Cap Right Pulley Side
19	CP-71104	Wheel Bottom Plate 24.5mm	51	CP-20513	End Cap Rubber Cover Right
20	CP-77546	Spring Nut Wheel Pin	52	N/A	Order Key #41
21	N/A	(Order Key #16)	53	CP-20511	Agitator Shaft
22	CP-77220	Screw Bottom Plate	54	CP-77412	Spring Clip
23	CP-73409	Felt Packing Top	55	CP-50000	Wand Assembly 2 Pc
24	CP-73410	Vented Support Packing Bottom	56	CP-54000	Crevice Tool
25	FB-10020	Belt Bulk	57	CP-52000	Upholstery Brush
26	CP-73147	Pedal Frame	58	FB-60537	Motor Shroud
27	CP-73050	Belt Guard	59	FB-77424	Set Screws M4x6
28	CP-77000	Screw Pedal Frame	60	FB-77415	Washer
29	CP-77204	Pedal Spring			
30	FB-73200	Cover Belt Rear			