


54011-20 BAG COVER ASS'Y.
57471-1 GASKET

64103-9 UPPER SHELL & LATCH ASS'Y. (INCLUDES)
37956 WIRING SHIELD
55807 RETAINER RING
65918-1 GASKET
36653-14 BUTTON LATCH
35794 SPRING (2)
26651-4 CONNECTOR ASS'Y.

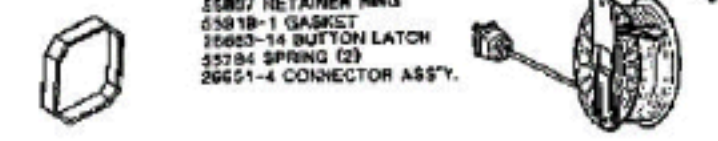


63679-7 LOWER SHELL & WHEEL ASS'Y. (INCLUDES)
37405-1 CASTER ASS'Y
56374 WASHER
52235-22 SCREW

52358
PACKAGE OF
(3) BAGS


PARTS1 - 3985A

Ref #	Part	Description	Comments	Qty
1	26440-22	WHEEL - REAR		
2	26649A-13	BUTTON - SWITCH		
3	26650-7	BUTTON - CORD REEL		
4	26651-4	CONNECTOR ASSY (26651-3)		
5	26653-14	BUTTON - LATCH		
6	26715	GASKET - MOTOR MOUNTING		
7	37403-1	CASTER		
8	37657	FILTER-MOTOR		
9	37710	Discontinued, use 37710- (NLA)		
10	37761-1	BAG INDICATOR ASSY		
11	37781-1	CORD GUIDE (NLA)		
12	37966	SOUND FOAM		
13	52358	PAPER BAG PKG ASSY (STYLE		
14	53141	TIE - CABLE (PURCHASED)		
15	53197-1	SCREWS-PKG 10 (55372-1		
16	53214-2	Discontinued, use 60192- (NLA)		
17	53238-1	SCREW PKG (EW312-6T5Z		
18	53238-22	SCREW PACKAGE		
19	54292	MOTOR ASSY - CTND		
20	55446	NUT - SWITCH (155437)		
21	55463	GASKET - MOTOR STACK		
22	55794	SPRING		
23	55919-1	SHELL GASKET use 58853-1 (NLA)		
24	56326-1	WIRE TUBE (NLA)		
25	56376	WASHER		
26	56750	Discontinued, use 56750- (NLA)		
27	57471-1	Discontinued, use 57471- (NLA)		
28	57580	THERMOSTAT		


28074A SOLE PLATE ASS'Y
 26008 GASKET
 26009
 54522

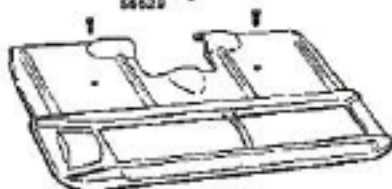

53412-1 DISTURBULATOR ASS'Y (INCLUDED)
 42262-4 BRISTLE STRIP SET
 13238 DISTURBULATOR TUBE
 53262 TUBE END (2)
 REPAIR KIT
 53136 LOCKNUT
 53088 PULLEY
 53182 WASHER (2)
 53155 KLIPRING
 08101 FELT WASHER (2)
 53282 BEARING & RETAINER ASS'Y (2)
 REPAIR KIT
 53105 HEX NUT
 53262 DIST. REPAIR PKG.

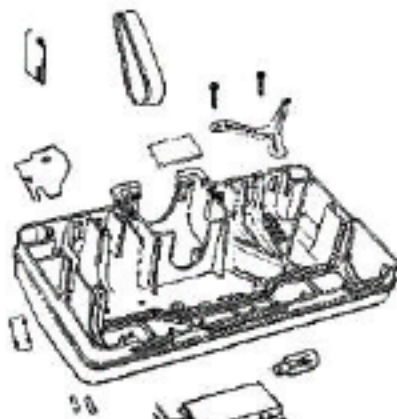


54067-1 LENS HOUSING
 51471 NAMEPLATE

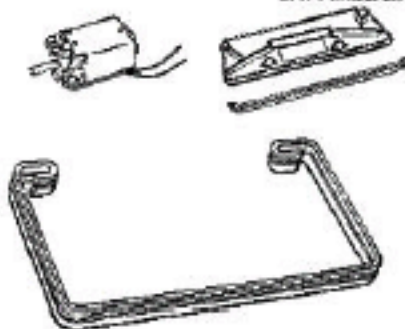

PARTS2 - 3985A

Ref #	Part	Description	Comments	Qty
1	13236	use 13236-3 (NLA)		
2	25903	GASKET - SOLE PLATE (NLA)		
3	26028-1	WINDOW - BELT (155410)		
4	26047	LENS		
5	36660	GASKET - SOLE PLATE (NLA)		
6	36954A	COVER - GROUNDING (NLA)		
7	37959-1	POWER HD LAMP ASSY		
8	48815	LAMP - HEADLIGHT		
9	49110A	GUARD-BELT (NLA)		
10	52201A	BELT PACKAGE ASSY - STYLE		
11	52282-5	BRISTLE STRIP PACKAGE		
12	53155	KUFRING PACKAGE		
13	53158	LOCKNUTS-PKG 10 (49175)		
14	53182	WASHER PACKAGE		
15	53195	NUTS-HEX PACKAGE		
16	53214-2	Discontinued, use 60192- (NLA)		
17	53238-20	SCREW PKG		
18	53238-8	SCREW PKG (15543)(EW312-8-8Z)		
19	53282	DIST.REPAIR KIT(53526		
20	53412-1	DISTURBULATOR ASSY - CRTN		
21	53419-1	POWERHEAD MOTOR (155406)		
22	54087-11	LENS HOUSING & GRAPHICS -		
23	54090-11	HOUSING & GRAPHICS ASSY -		
24	56191	FELT WASHER (NLA)		

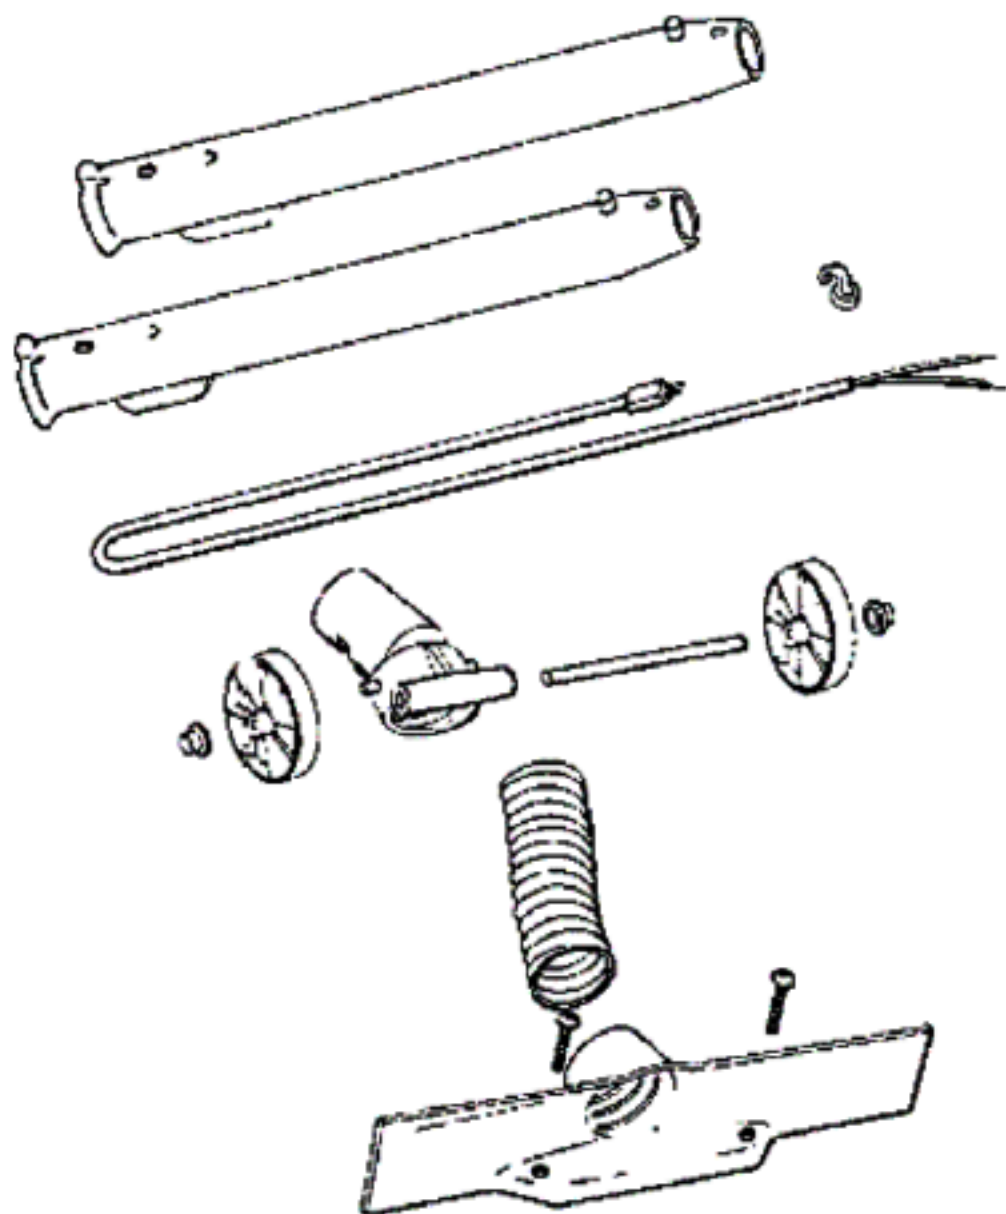

PARTS3 - 3985A

Ref #	Part	Description	Comments	Qty
1	12578B-1	INLET DIVIDER (155310)		
2	25789-1	HOSE use 25789-2 (NLA)		
3	35970-13	POLARIZED CORD & PLUG AS (NLA)		
4	36555-3	WHEEL - BLACK		
5	36769-13	HANDLE SOCKET ASSY		
6	36879-3	STRAIGHT WAND ASSEMBLY		
7	48334	AXLE - WHEEL (155314)		
8	53190-1	BUSHING-PKG 10 (155318)		
9	53200	AXLE BEARING PK (55505 (NLA)		
10	53238-8	SCREW PKG (15543)(EW312-8-8Z)		

ATTACHMENTS FOR MODEL 3985A



53579-2 HOSE ASSEMBLY
34272-5 BLEEDER



53584-1 RADIATOR TOOL



53454-8 UPHOLSTERY NOZZLE
46186 BRUSH INSERT



53355-5 FLOOR & WALL BRUSH
33405 BRISTLE STRIP
25991-3 ELBOW
36677 INSERT (FRONT)
36678 INSERT (REAR)



53455-4 DUSTING BRUSH
33787 INSERT

ACCESSORIES - 3985A

Ref #	Part	Description	Comments	Qty
1	25991-3	ELBOW		
2	33405	BR STRIP-FL & WALL BRUSH		
3	33787	INSERT - RINGLOCK BRUSH (NLA)		
4	34272-5	BLEEDER		
5	36877	INSERT-FLOOR & WALL BRUSH		
6	36878	INSERT-FLOOR & WALL BRUSH		
7	46186	BRUSH (NLA)		
8	53355-5	FLOOR & WL BRUSH & ELBOW-		
9	53454-6	UPHOLSTERY NOZZLE ASSY -		
10	53455-4	DUSTING BRUSH - PACKAGED		
11	53579-2	HOSE ASSY		
12	53584-1	TOOL - CREVICE		