


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



Eureka 4351A Owner's Manual

[Shop genuine replacement parts for Eureka 4351A](#)

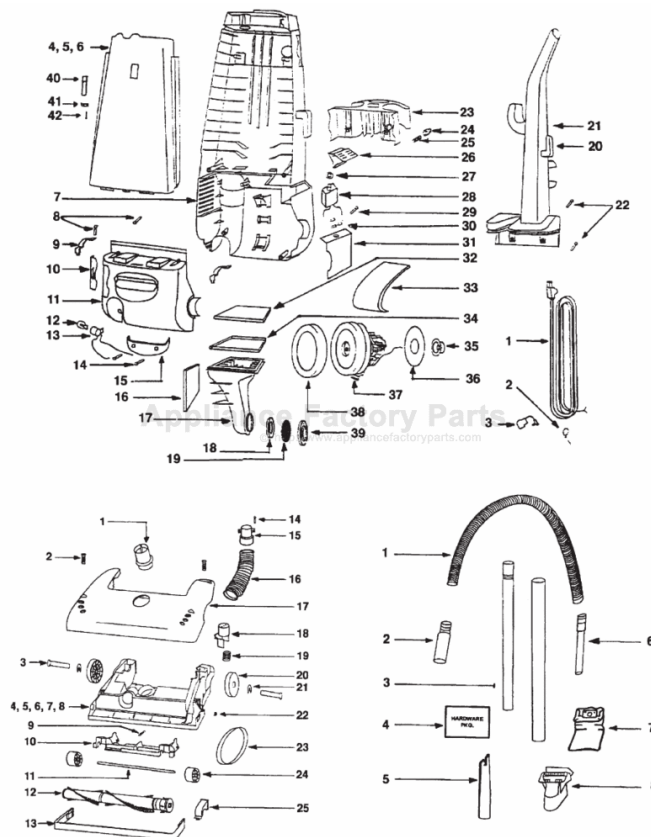

[Find Your Eureka Vacuum Cleaner Parts - Select From 855 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for Eureka 4351A

ER-1035	Belt for Eureka Bravo 28118
E-60844-5	BRUSH ROLL, 12 INCH UPRIGHT
E-58236	BAG EUREKA OEM AA 3 PACK
E-54943	Spring,
er-1401	paper Bag style AA 3 pk .

EUREKA Original & Replacement

VICTORY UPRIGHT

Models 4351A & 4440A Shown

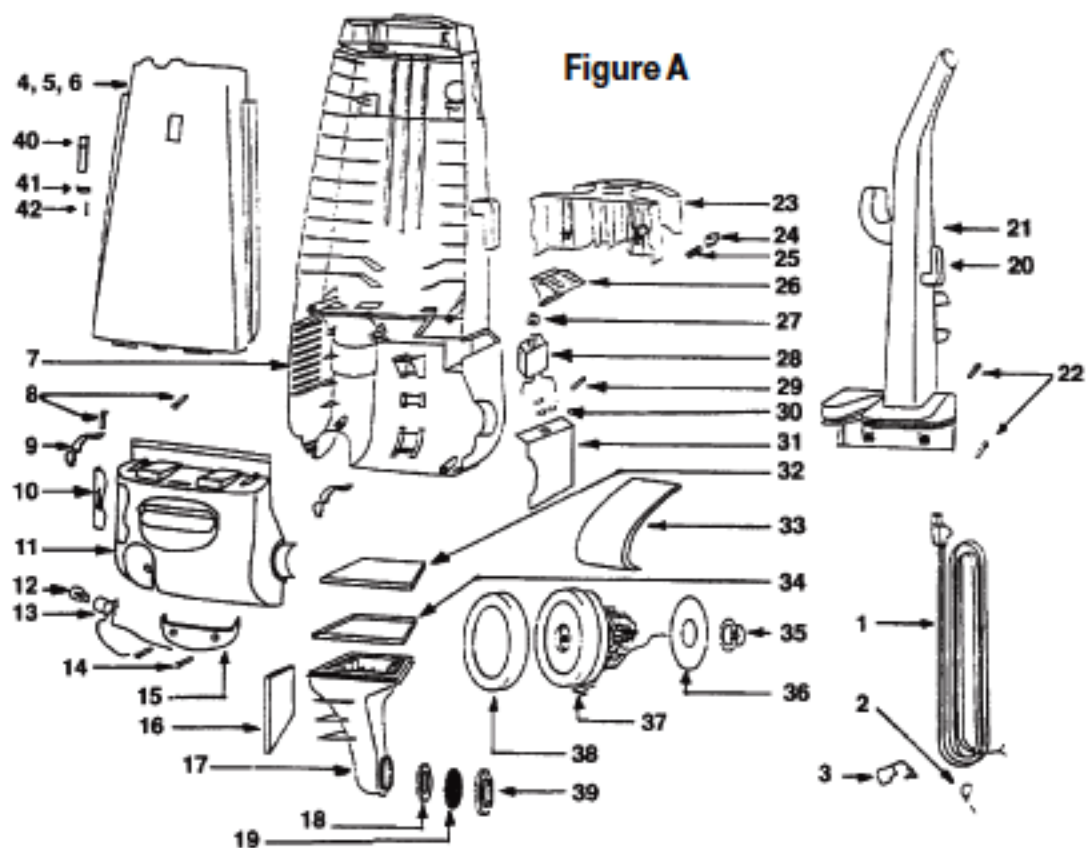


Figure B


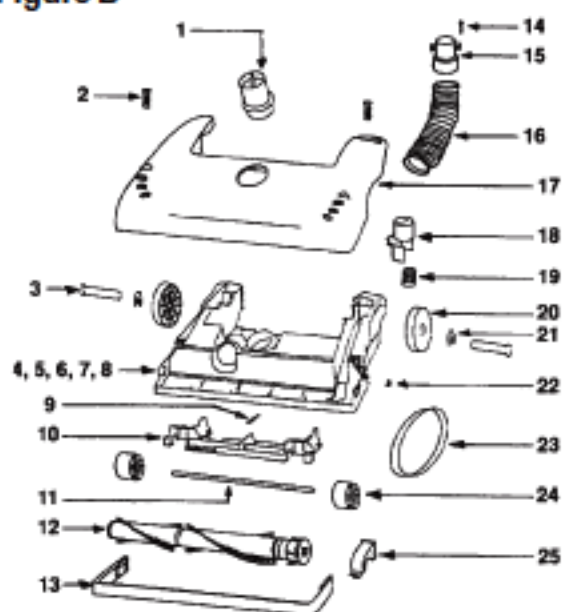


Figure C

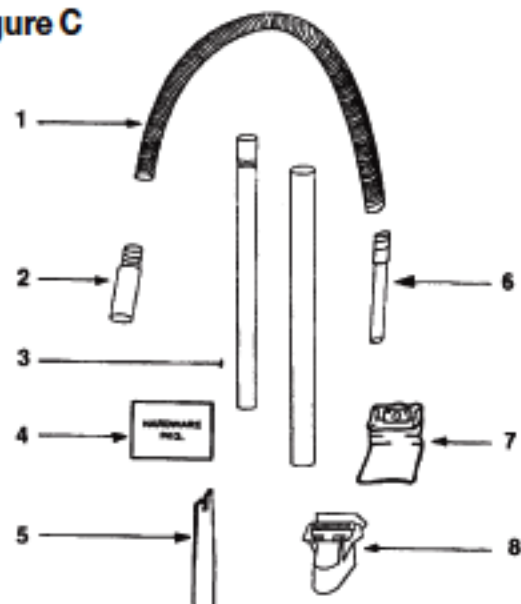

Original & Replacement **EUREKA**

VICTORY UPRIGHT
Models 4351A & 4440A Shown

Figure A

KEY	PART NO.	DESCRIPTION
1	E-38680-3	Supply Cord
2	E-46713-1	Cable Tie
3	E-53190-1	Strain Relief Bushing
4	E-54936-5	Bag Cover Ass'y 4440A
4	E-54936-3	Bag Cover Ass'y 4351A
5	E-58505	Bag Gasket
6	E-38613	Bag Gasket - Bottom
7	E-02069A-119N	Rear Housing
8	E-53197-1	Screw
9	E-38420-2	Clamp
10	E-27549-288N	Filter Door
11	E-54937-5	Motor Cover 4440A
11	E-54937-3	Motor Cover 4351A
12	E-48815	Headlight
13	E-38611	Headlight Socket
14	E-54938-1	Screw 4440A
14	E-60068-1	Screw 4351A
15	E-15072-313N	Leak
16	E-38755	Micron Filter
17	E-15218-119N	Air Duct
18	E-38663	Motor Intake Gasket
19	E-38701	Air Screen
20	E-38517-119N	Cord Release Hook
	E-38482-119N	Handle Cap 4351A
21	E-15294-1	Handle Ass'y 4440A
21	E-15277-1	Handle Ass'y 4351A
22	E-53197-1	Screw
23	E-02093-288N	Tool Caddy
24	E-38678-119N	Plunger
25	E-55794	Spring
26	E-27474-288N	Switch Pedal
	E-60134	Spring, Switch Pedal
27	E-55446	Switch Nut
28	E-15182-2	Switch Ass'y
29	E-53197-1	Screw
30	E-53214-2	Wire Nut
30	SS-3270	Wire Nut
31	E-38689	Rear Housing Shield
32	E-38469	Secondary Filter
32	ER-1810	Secondary Filter
	E-28425	Filter Screen
33	E-38661	Sound Foam
34	E-38662	Air Duct Gasket
35	E-27552	Grommet
36	E-38688	Motor Shield
37	E-54940	Motor Ass'y
38	E-27492	Motor Gasket
39	E-38638	Motor Intake Flange
40	E-37761-2	Bag Indicator Ass'y
41	E-56750-1	Bag Indicator Clip
42	E-53238-1	Bag Indicator Screw

Figure B

KEY	PART NO.	DESCRIPTION
1	E-27462-288N	Height Adjustment Knob
2	E-54669-2	Screw
3	E-38590	Rear Axle
4	E-60071-1	Base Ass'y 4440A
4	E-54935-3	Base Ass'y 4351A
5	E-38063	Belt Guard (Not Illustrated)
6	E-58506-2	Gasket 4440A
6	E-58506-1	Gasket 4351A
7	E-57569	Felt Gasket
8	E-58417	Brushroll Rib
9	E-54943	Spring
10	E-14993-119N	Wheel Carriage
11	E-58206-1	Wheel Axle
12	E-54647	Brushroll Ass'y 4440A 14"
12	E-54941-1	Brushroll Ass'y 4351A 12"
13	E-15234-288N	Furniture Guard 4440A
13	E-15237-288N	Furniture Guard 4351A
14	E-53197-1	Screw
15	E-27468-119N	Hose Cuff
16	E-38479-1	Hose
17	E-60069-3	Hood Ass'y 4440A
17	E-54933-2	Hood Ass'y 4351A
18	E-27467-288N	Handle Release
19	E-58371	Compression Spring
20	E-27493-288N	Rear Wheel 4440A
20	E-27201-288N	Rear Wheel 4351A
21	E-54432	Retaining Ring
22	E-54942	Push-On Nut
23	E-38441	Belt
23	ER-1035	Belt
24	E-38236A-119N	Front Wheel
25	E-54376-1	Belt Cap Ass'y

Figure C

1	E-54646	Hose Ass'y 4440A
1	E-54945-1	Hose Ass'y 4351A
	E-54638	Stretch Hose
2	E-27461A-119N	Hose Adapter
3	E-58728A	Nesting Wand Set
4	E-58607	Hardware Package
5	E-54780	Crevice Tool
6	E-27624-119N	Straight Wand
7	E-58236	Paper Bag Style AA 3 Pk
7	ER-1401	Paper Bag Style AA 3 Pk
8	E-54784	Dual Purpose Brush