


This Owner's Manual is provided and hosted by Appliance Factory Parts.




Electrolux GLWS1749FS1 Owner's Manual

[Shop genuine replacement parts for Electrolux
GLWS1749FS1](#)

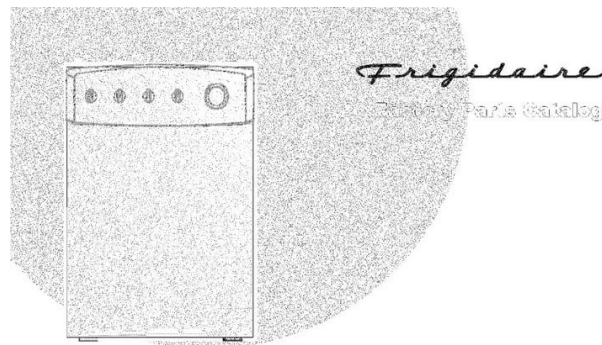

Product No.	GLWS1749FS1
Series	Frig Gallery
Market	North America
Color	white
Volts	120
Wiring Diagram	134755600
Owner's Guide	134752500
Installation Instructions	134752400
Operating Instructions	134753300
Energy Guide	134757300

 Electrolux Major Appliances North & Latin America P.O. BOX 212278 AUGUSTA, GA 30917	TOP-LOAD WASHING MACHINE Model No. GLWS1749F
---	---

Publication No.
5995492757
07/06/13
(EN/SERVICE/WTC)
361

Copyright © 2007 Electrolux Home Products, Inc.
All rights reserved.


[Find Your Electrolux Washer Parts - Select From 440 Models](#)

----- Manual continues below part list -----


Available Replacement Parts for Electrolux GLWS1749FS1

134737100	DAA TRANSMISSION
WV-2	UNIV WASHER WATER VALVE WITH THERMISTOR

CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

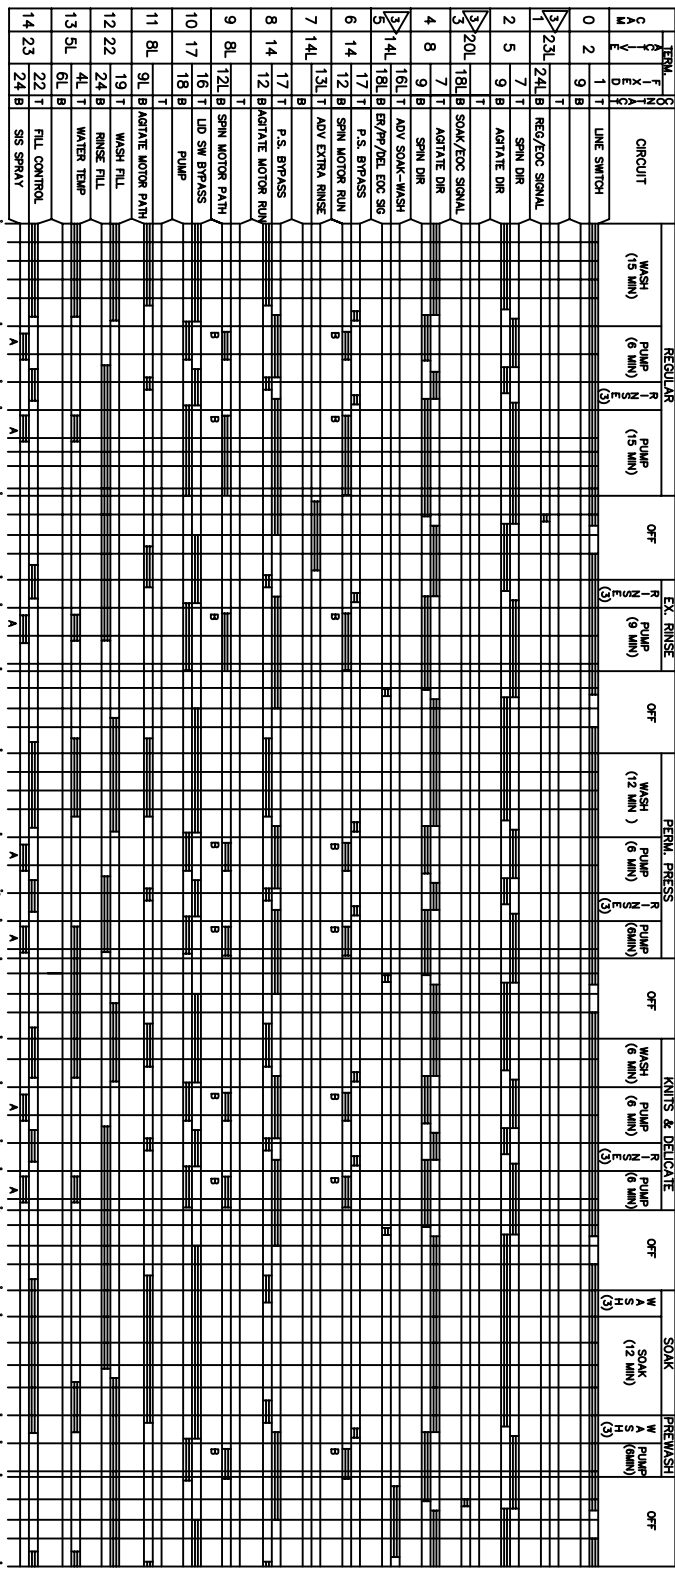

CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

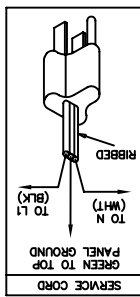

OPTION SWITCH


POSITION	2-4	1-5	1-3
EXTRA RINSE	X		
EX RINSE/EQC SIG	X	X	X
EQC SIGNAL		X	

X=CLOSED

TEMPERATURE SWITCH CIRCUIT

WASH/RINSE	F-H	FF-H	FF-C	F-D
R H/C	X			X
W/C		X		
C/C		X		
W/W		X		

H=HOT R=REGULATED
W=WARM
C=COLD

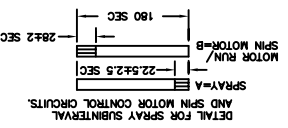



SPEED SWITCH CIRCUIT

AIGT/SPIN	2-5	2-7	4-7	4-5
N/N	X			X
N/S		X		
S/N (OPT)			X	
S/S		X		

N=NORMAL S=SLOW X=CLOSED

WIRING CODES

- ⊙ PLUG IN TIMER TERMINAL
- QUICK DISCONNECT TERMINAL
- ⊕ SCREW TERMINAL
- ⊖ CONNECTION
- ⊕ NO CONNECTION
- ⊖ MOTOR SWITCH
- ⊕ SPICE
- ⊖ MOTOR PROTECTOR
- ⊕ CHASSIS (CABINET) GROUND

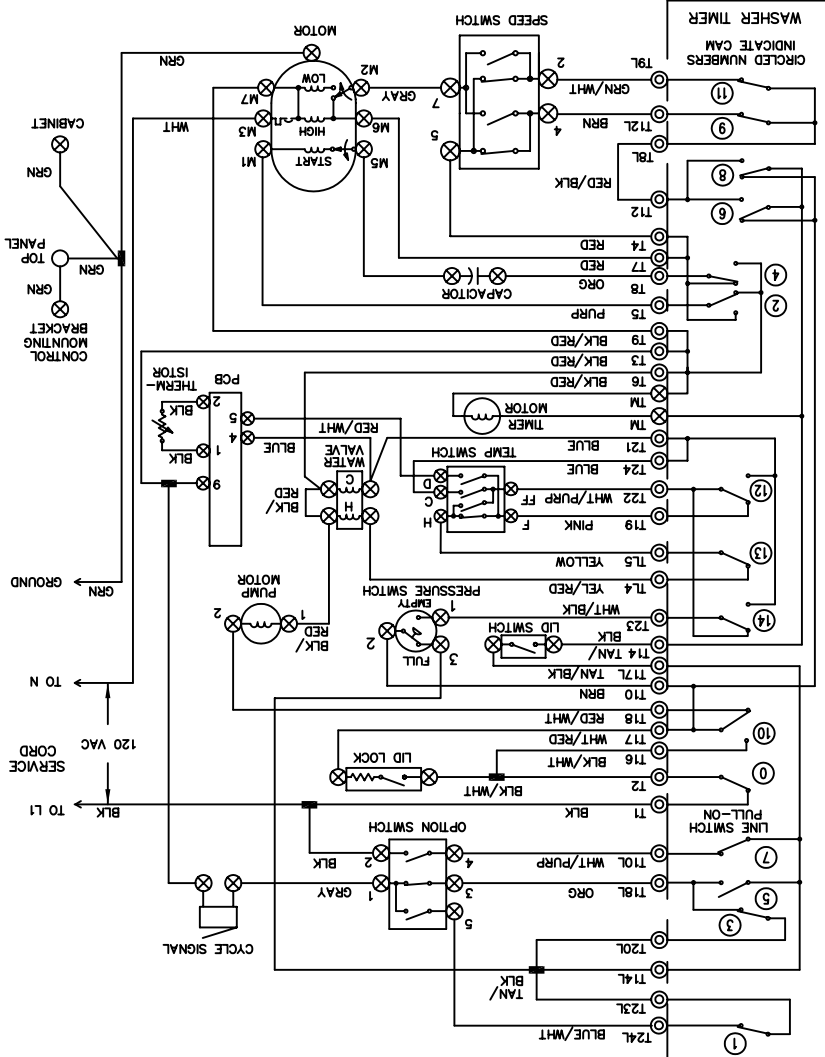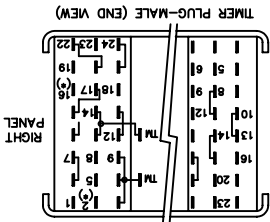

WIRING DIAGRAM PART NO. 134755600