


This Owner's Manual is provided and hosted by Appliance Factory Parts.



Electrolux GLWS1749FS2 Owner's Manual

[Shop genuine replacement parts for Electrolux
GLWS1749FS2](#)

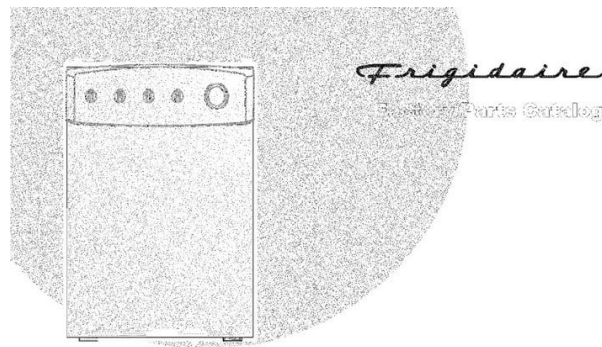

Product No.	GLWS1749FS2
Series	Frigidaire
Market	North America
Color	white
Volts	120
Wiring Diagram	137108500
Owner's Guide	137123500
Installation Instructions	134782400
Operating Instructions	137123100
Energy Guide	134757300

Electrolux

Electrolux Major Appliances
North & Latin America
P.O. BOX 212278
AUGUSTA, GA 30917

Publication No.
596530614
06/2/15
(EN/SERVICE/WTC)
361

TOP-LOAD WASHING
MACHINE

Model No.
GLWS1749F

Copyright © 2008 Electrolux Home Products, Inc.
All rights reserved.




[Find Your Electrolux Washer Parts - Select From 440 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for Electrolux GLWS1749FS2

134737100	DAA TRANSMISSION
134936800	LOCK AFTERMARKET
WV-2	UNIV WASHER WATER VALVE WITH THERMISTOR

CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

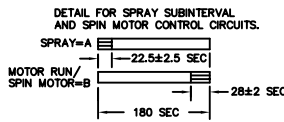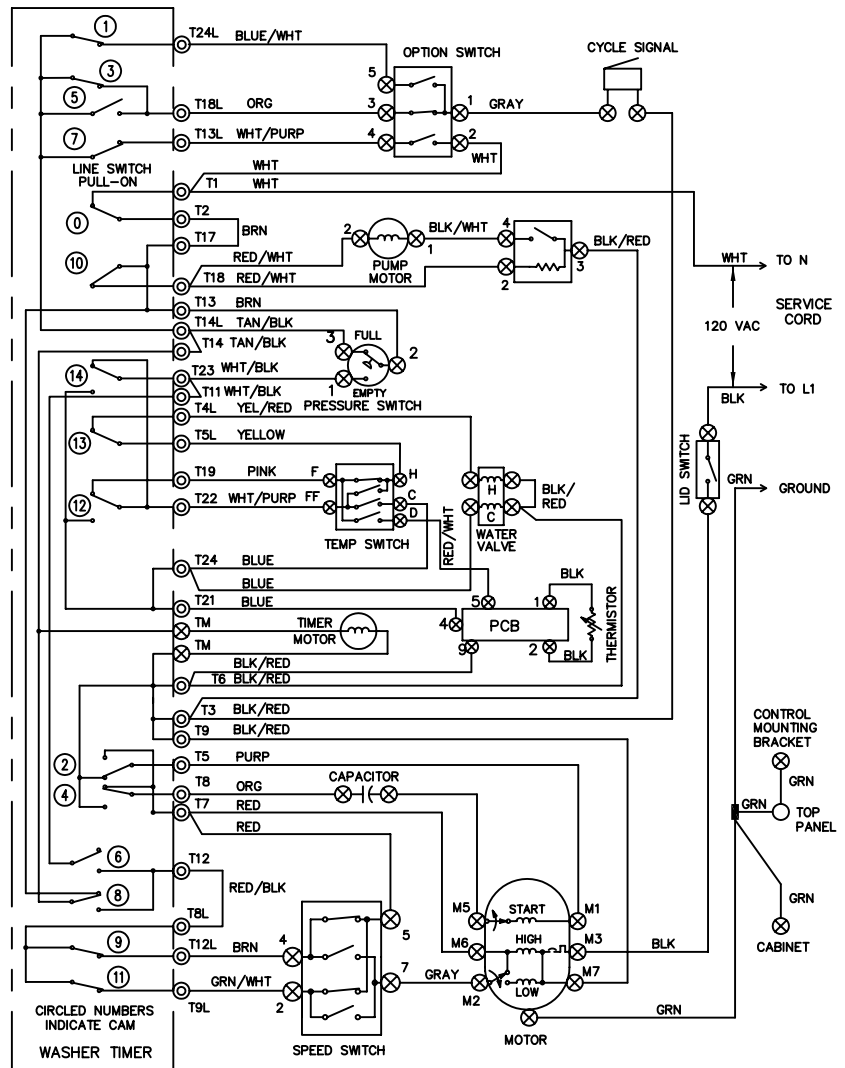
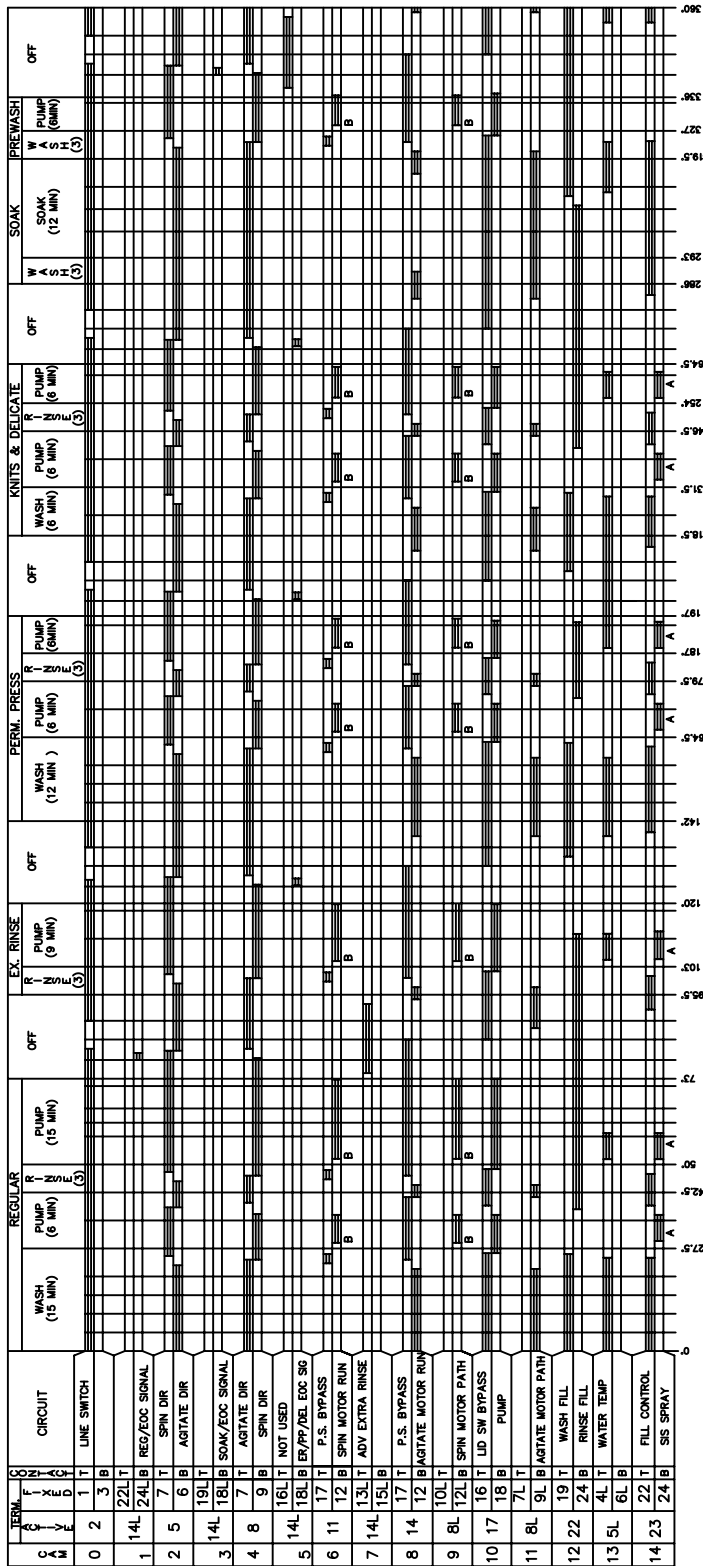


TEMPERATURE SWITCH CIRCUIT				
WASH/RINSE	F-H	FF-H	FF-C	F-D
R H/C	X			X
W/C	X		X	
C/C			X	
W/W		X	X	

H=HOT R=REGULATED
C=COLD
W=WARM

OPTION SWITCH		
POSITION	2-4	1-5
EXTRA RINSE	X	
EX RINSE/EOC SIG	X	X
EOC SIGNAL		X
OFF		X

X=CLOSED

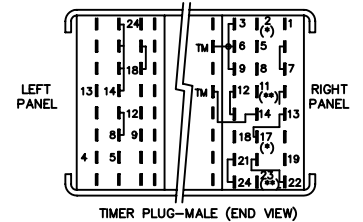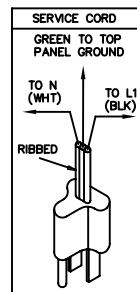

WIRING CODES				
⊗	PLUG IN TIMER TERMINAL			
⊙	QUICK DISCONNECT TERMINAL			
○	SCREW TERMINAL			
+	CONNECTION			
+	NO CONNECTION			
⊕	MOTOR SWITCH			
⊖	SPLICE			
⊖	MOTOR PROTECTOR			
⊖	CHASSIS (CABINET) GROUND			

SPEED SWITCH CIRCUIT				
AGIT/SPIN	2-5	2-7	4-7	4-5
N/N	X			X
N/S	X		X	
S/N (OPT)		X		X
S/S		X	X	

N=NORMAL S=SLOW X=CLOSED

CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

WIRING DIAGRAM PART NO. 137108500 A