


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



Electrolux FTW3011KW0 Owner's Manual

[Shop genuine replacement parts for Electrolux FTW3011KW0](#)

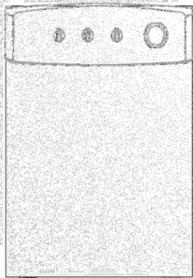

Frigidaire
Appliance Parts Catalog

| | |
|---------------------------|---------------|
| Product No. | FTW3011KW0 |
| Market | North America |
| Color | white |
| Volts | 120 |
| Wiring Diagram | 137155300 |
| Owner's Guide | 137153200 |
| Installation Instructions | 137153100 |
| Energy Guide | 137152300 |

Electrolux
Electrolux Major Appliances
North & Latin America
P.O. BOX 212278
AUGUSTA, GA 30917

Publication No.
5965639375
08/05/04
(EN)SERVICE/WTC)
381

TOP-LOAD WASHING
MACHINE

Model No.
FTW3011K

Copyright © 2009 Electrolux Home Products, Inc.
All rights reserved.



[Find Your Electrolux Dryer Parts - Select From 57 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for Electrolux FTW3011KW0

| | |
|---------------------------|---|
| 134737100 | DAA TRANSMISSION |
| 134936800 | LOCK AFTERMARKET |
| WV-2 | UNIV WASHER WATER VALVE WITH THERMISTOR |




CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING.

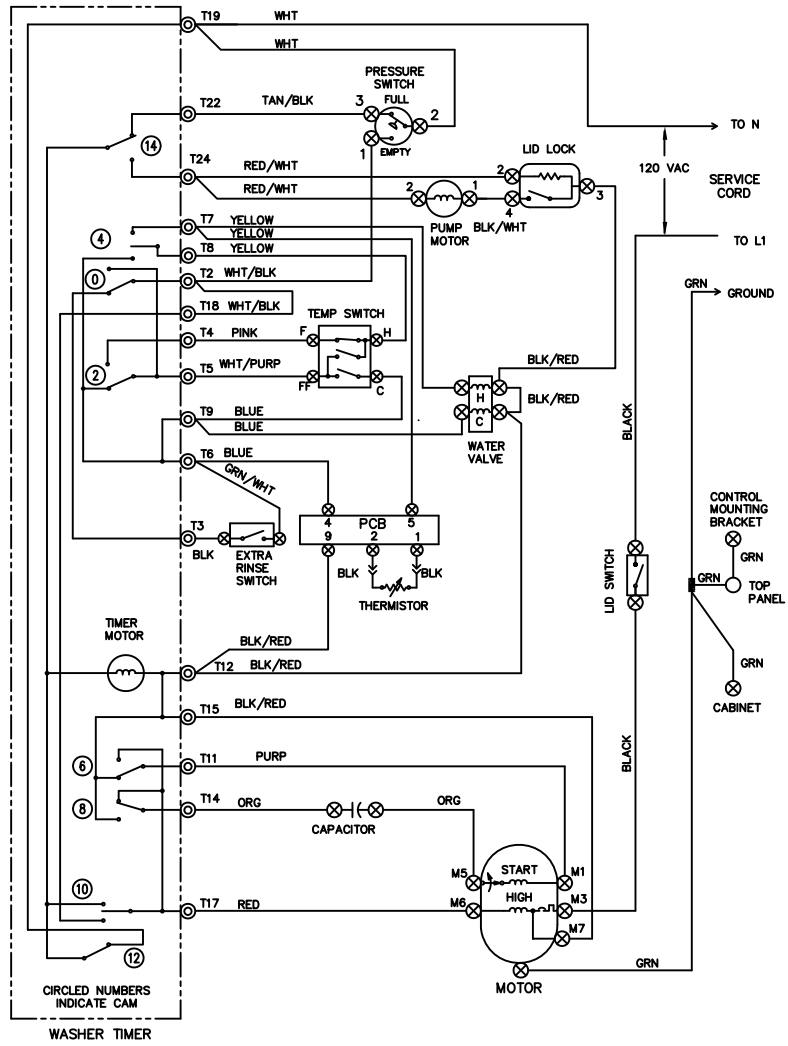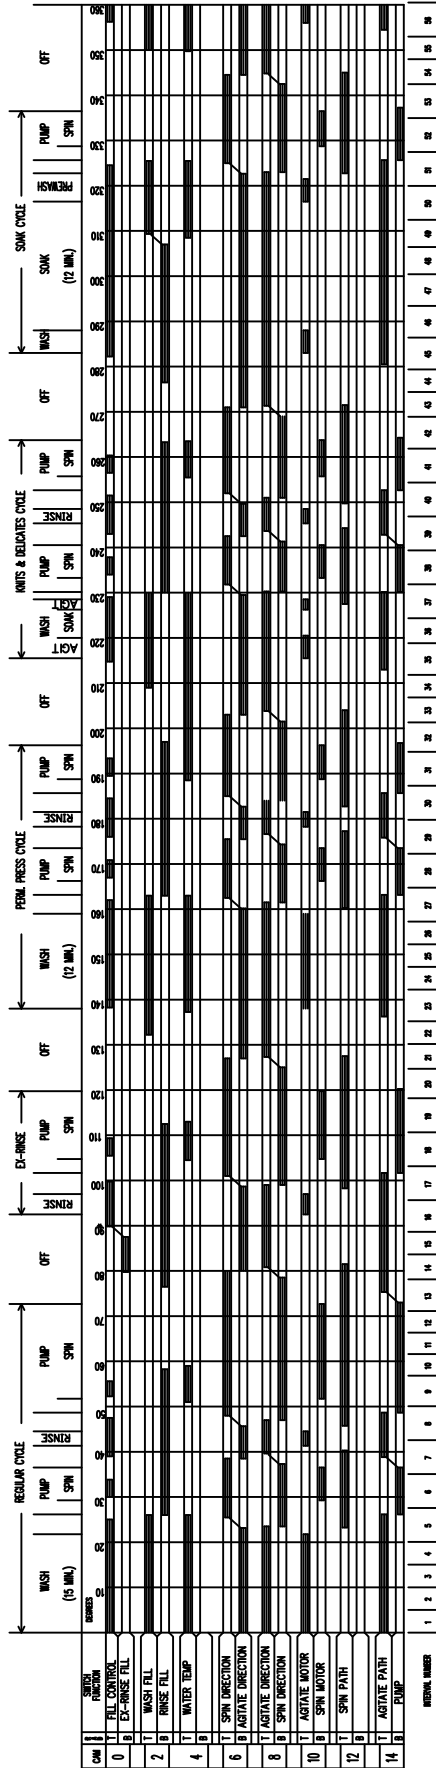

| TEMPERATURE SWITCH CIRCUIT | | | |
|----------------------------|-----|------|------|
| WASH/RINSE | F-H | FF-H | FF-C |
| HOT/COLD | X | 0 | 0 |
| WARM/WARM (OPT) | 0 | X | X |
| COLD/COLD | 0 | 0 | X |
| WARM/COLD | X | 0 | X |

X=CLOSED 0=OPEN



| WIRING CODES | |
|--------------|---------------------------|
| ⊙ | PLUG-IN TIMER TERMINAL |
| ⊗ | QUICK DISCONNECT TERMINAL |
| + | CONNECTION |
| + | NO CONNECTION |
| ⊕ | MOTOR SWITCH |
| ⊕ | SPLICE |
| ⊕ | MOTOR PROTECTOR |
| ⊕ | CHASSIS (CABINET) GROUND |
| ⊕ | SCREW TERMINAL |
| ⊕ | HARNES CONNECTOR TERMINAL |
| ⊕ | INSULATED TERMINAL |

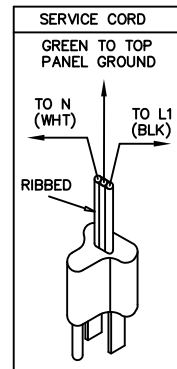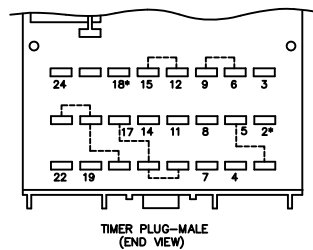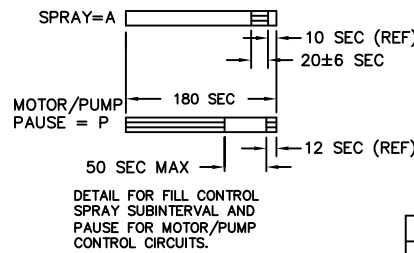

CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING.

WIRING DIAGRAM 137155300 A


ATTENTION : DÉBRANCHEZ L'ALIMENTATION ÉLECTRIQUE AVANT D'EFFECTUER L'ENTRETIEN

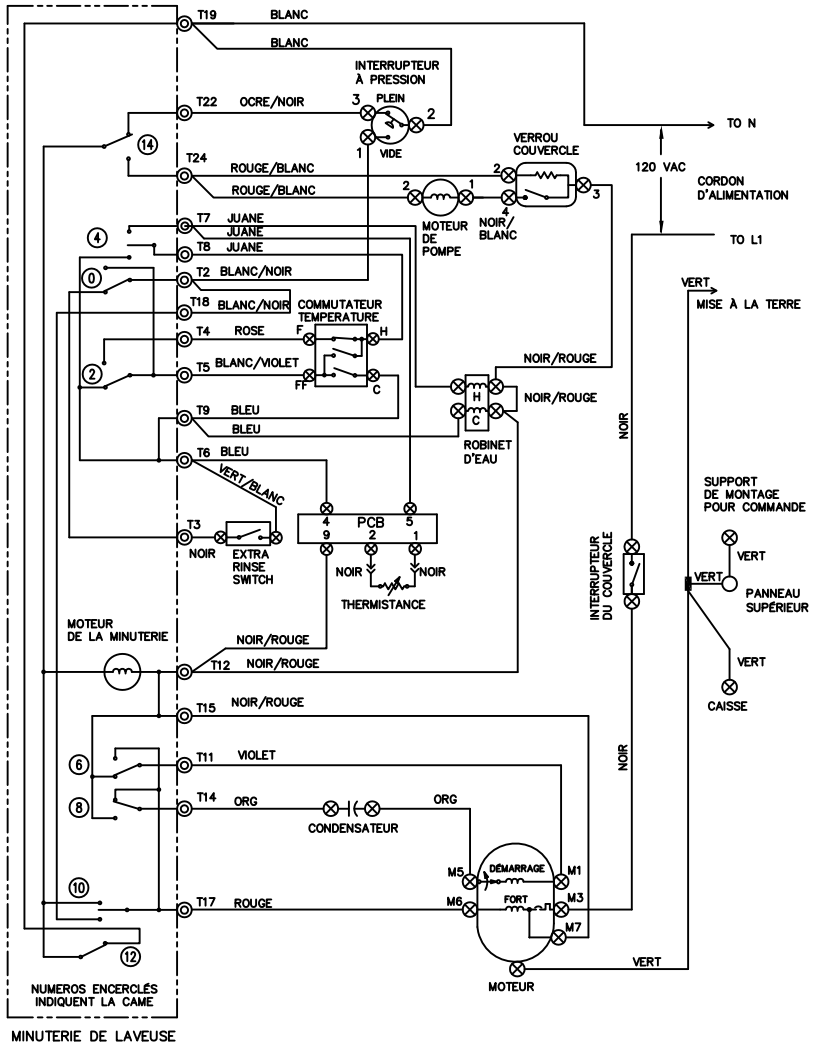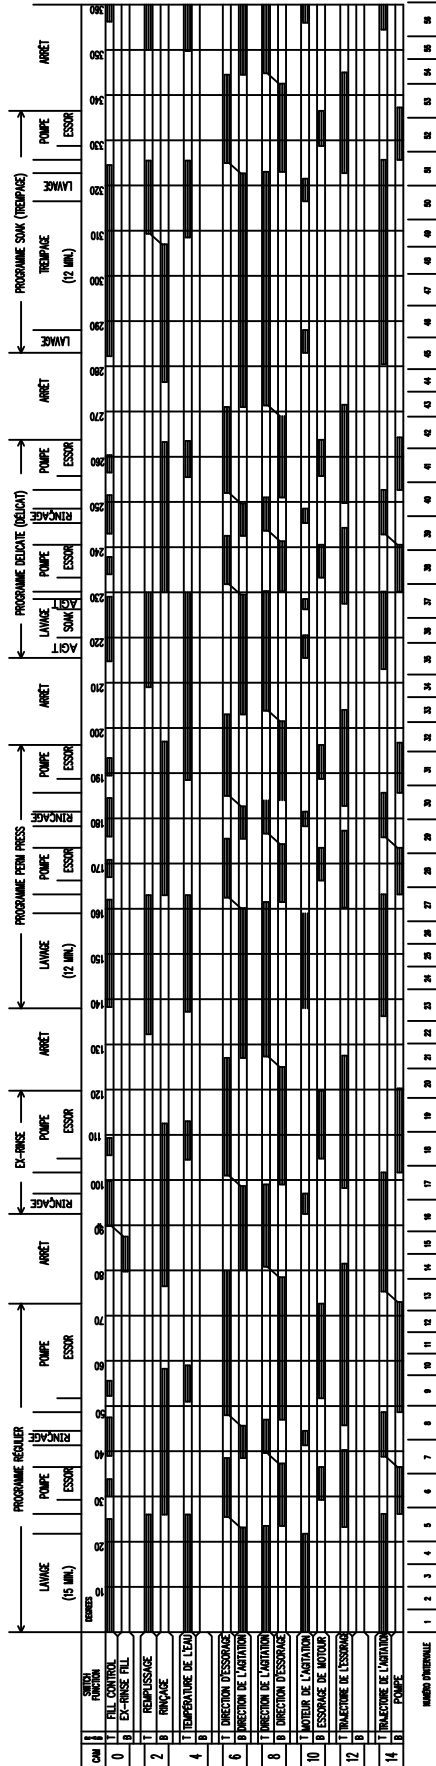


TEMPERATURE SWITCH CIRCUIT

| LAVAGE/RINÇAGE | F-H | FF-H | FF-C |
|-------------------|-----|------|------|
| CHAUD/FROID | X | O | O |
| TIÈDE/TIÈDE (OPT) | O | X | X |
| FROID/FROID | O | O | X |
| TIÈDE/FROID | X | O | X |

X=FERMÉ O=OUVERT

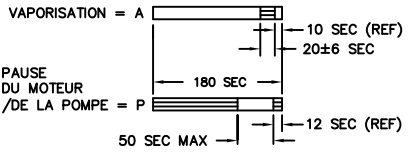


DÉTAIL POUR LE SOUS-INTERVALLE DE JET DE COMMANDE DE SUFFISANCE ET PAUSE POUR DES CIRCUITS DE COMMANDE DE MOTOR/PUMP.

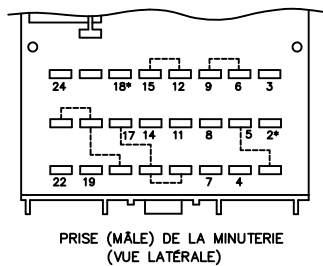

CODES DE CÂBLAGE

- ⊙ BRANCHÉ À LA BORNE DE LA MINUTERIE
- ⊗ BORNE À DÉCONNEXION RAPIDE
- + CONNEXION
- AUCUNE CONNEXION
- ⊗ INTERRUPTEUR DE MOTEUR
- JONCTION DE FIL
- PROTECTION DU MOTEUR
- ⊕ MISE À LA TERRE SUR LE CHÂSSIS (LA CAISSE)
- BORNE À VIS
- BORNE DE CONNECTEUR DE HARNAIS
- ⊗ BORNE ISOLÉE

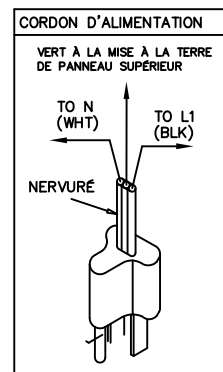

ATTENTION : DÉBRANCHEZ L'ALIMENTATION ÉLECTRIQUE AVANT D'EFFECTUER L'ENTRETIEN

DIAGRAMME DE CÂBLAGE 137155300 A