
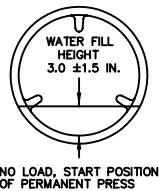
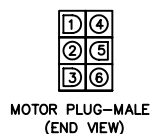


WARNING TO REDUCE THE RISK OF ELECTRICAL SHOCK DISCONNECT THIS APPLIANCE FROM THE POWER SUPPLY BEFORE ATTEMPTING ANY USER MAINTENANCE. TURNING THE CONTROLS TO THE OFF POSITION DOES NOT DISCONNECT THIS APPLIANCE FROM THE POWER SUPPLY.

WIRING CODES	
	CONNECTION
	NO CONNECTION
	CABINET GROUND
	LOCAL GROUND

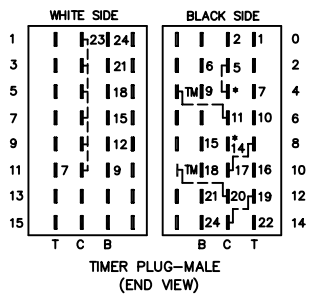


STEP NO.	STEP TIME (MIN.)	CIRCUIT	FUNCTION
1	3.0	DOOR LOCK COIL	DOOR LOCK
2	2.0	DOOR LAMP	DOOR OPEN
3	6.7	WASH LAMP	WASH
4	6.0	RINSE LAMP	RINSE
5	2.5	FINAL SPIN LAMP	FINAL SPIN
6	5.9	DISPENSER VALVE	DISPENSER VALVE
7	2.5	WATER VALVE	WATER VALVE
8	1.0	WATER VALVE	WATER VALVE
9	2.0	WATER VALVE	WATER VALVE
10	3.0	WATER VALVE	WATER VALVE
11	8.12	WATER VALVE	WATER VALVE
12	2.6	WATER VALVE	WATER VALVE
13	2.0	WATER VALVE	WATER VALVE
14	6.0	WATER VALVE	WATER VALVE
15	1.0	WATER VALVE	WATER VALVE
16	2.0	WATER VALVE	WATER VALVE
17	3.0	WATER VALVE	WATER VALVE
18	2.0	WATER VALVE	WATER VALVE
19	8.12	WATER VALVE	WATER VALVE
20	2.6	WATER VALVE	WATER VALVE
21	2.0	WATER VALVE	WATER VALVE
22	6.0	WATER VALVE	WATER VALVE
23	1.0	WATER VALVE	WATER VALVE
24	2.0	WATER VALVE	WATER VALVE
25	3.0	WATER VALVE	WATER VALVE
26	1.0	WATER VALVE	WATER VALVE
27	3.0	WATER VALVE	WATER VALVE
28	3.0	WATER VALVE	WATER VALVE
29	7.2	WATER VALVE	WATER VALVE
30	2.6	WATER VALVE	WATER VALVE
31	10.0	WATER VALVE	WATER VALVE
32	1.0	WATER VALVE	WATER VALVE
33	3.0	WATER VALVE	WATER VALVE
34	3.0	WATER VALVE	WATER VALVE
35	2.0	WATER VALVE	WATER VALVE
36	1.0	WATER VALVE	WATER VALVE
37	5.1	WATER VALVE	WATER VALVE
38	2.6	WATER VALVE	WATER VALVE
39	3.0	WATER VALVE	WATER VALVE
40	3.0	WATER VALVE	WATER VALVE
41	2.0	WATER VALVE	WATER VALVE
42	1.0	WATER VALVE	WATER VALVE
43	5.1	WATER VALVE	WATER VALVE
44	2.6	WATER VALVE	WATER VALVE
45	3.0	WATER VALVE	WATER VALVE
46	3.0	WATER VALVE	WATER VALVE
47	2.0	WATER VALVE	WATER VALVE
48	1.0	WATER VALVE	WATER VALVE
49	5.1	WATER VALVE	WATER VALVE
50	2.6	WATER VALVE	WATER VALVE
51	3.0	WATER VALVE	WATER VALVE
52	3.0	WATER VALVE	WATER VALVE
53	2.0	WATER VALVE	WATER VALVE
54	1.0	WATER VALVE	WATER VALVE
55	5.1	WATER VALVE	WATER VALVE
56	2.6	WATER VALVE	WATER VALVE
57	3.0	WATER VALVE	WATER VALVE
58	3.0	WATER VALVE	WATER VALVE
59	2.0	WATER VALVE	WATER VALVE
60	1.0	WATER VALVE	WATER VALVE
61	5.1	WATER VALVE	WATER VALVE
62	2.6	WATER VALVE	WATER VALVE
63	3.0	WATER VALVE	WATER VALVE
64	3.0	WATER VALVE	WATER VALVE
65	2.0	WATER VALVE	WATER VALVE
66	1.0	WATER VALVE	WATER VALVE
67	5.1	WATER VALVE	WATER VALVE
68	2.6	WATER VALVE	WATER VALVE
69	3.0	WATER VALVE	WATER VALVE
70	3.0	WATER VALVE	WATER VALVE
71	2.0	WATER VALVE	WATER VALVE
72	1.0	WATER VALVE	WATER VALVE
73	5.1	WATER VALVE	WATER VALVE
74	2.6	WATER VALVE	WATER VALVE
75	3.0	WATER VALVE	WATER VALVE
76	3.0	WATER VALVE	WATER VALVE
77	2.0	WATER VALVE	WATER VALVE
78	1.0	WATER VALVE	WATER VALVE
79	5.1	WATER VALVE	WATER VALVE
80	2.6	WATER VALVE	WATER VALVE
81	3.0	WATER VALVE	WATER VALVE
82	3.0	WATER VALVE	WATER VALVE
83	2.0	WATER VALVE	WATER VALVE
84	1.0	WATER VALVE	WATER VALVE
85	5.1	WATER VALVE	WATER VALVE
86	2.6	WATER VALVE	WATER VALVE
87	3.0	WATER VALVE	WATER VALVE
88	3.0	WATER VALVE	WATER VALVE
89	2.0	WATER VALVE	WATER VALVE
90	1.0	WATER VALVE	WATER VALVE
91	5.1	WATER VALVE	WATER VALVE
92	2.6	WATER VALVE	WATER VALVE
93	3.0	WATER VALVE	WATER VALVE
94	3.0	WATER VALVE	WATER VALVE
95	2.0	WATER VALVE	WATER VALVE
96	1.0	WATER VALVE	WATER VALVE
97	5.1	WATER VALVE	WATER VALVE
98	2.6	WATER VALVE	WATER VALVE
99	3.0	WATER VALVE	WATER VALVE
100	3.0	WATER VALVE	WATER VALVE
101	2.0	WATER VALVE	WATER VALVE
102	1.0	WATER VALVE	WATER VALVE
103	5.1	WATER VALVE	WATER VALVE
104	2.6	WATER VALVE	WATER VALVE
105	3.0	WATER VALVE	WATER VALVE
106	3.0	WATER VALVE	WATER VALVE
107	2.0	WATER VALVE	WATER VALVE
108	1.0	WATER VALVE	WATER VALVE
109	5.1	WATER VALVE	WATER VALVE
110	2.6	WATER VALVE	WATER VALVE
111	3.0	WATER VALVE	WATER VALVE
112	3.0	WATER VALVE	WATER VALVE
113	2.0	WATER VALVE	WATER VALVE
114	1.0	WATER VALVE	WATER VALVE
115	5.1	WATER VALVE	WATER VALVE
116	2.6	WATER VALVE	WATER VALVE
117	3.0	WATER VALVE	WATER VALVE
118	3.0	WATER VALVE	WATER VALVE
119	2.0	WATER VALVE	WATER VALVE
120	1.0	WATER VALVE	WATER VALVE
121	5.1	WATER VALVE	WATER VALVE
122	2.6	WATER VALVE	WATER VALVE
123	3.0	WATER VALVE	WATER VALVE
124	3.0	WATER VALVE	WATER VALVE
125	2.0	WATER VALVE	WATER VALVE
126	1.0	WATER VALVE	WATER VALVE
127	5.1	WATER VALVE	WATER VALVE
128	2.6	WATER VALVE	WATER VALVE
129	3.0	WATER VALVE	WATER VALVE
130	3.0	WATER VALVE	WATER VALVE
131	2.0	WATER VALVE	WATER VALVE
132	1.0	WATER VALVE	WATER VALVE
133	5.1	WATER VALVE	WATER VALVE
134	2.6	WATER VALVE	WATER VALVE
135	3.0	WATER VALVE	WATER VALVE
136	3.0	WATER VALVE	WATER VALVE
137	2.0	WATER VALVE	WATER VALVE
138	1.0	WATER VALVE	WATER VALVE
139	5.1	WATER VALVE	WATER VALVE
140	2.6	WATER VALVE	WATER VALVE
141	3.0	WATER VALVE	WATER VALVE
142	3.0	WATER VALVE	WATER VALVE
143	2.0	WATER VALVE	WATER VALVE
144	1.0	WATER VALVE	WATER VALVE
145	5.1	WATER VALVE	WATER VALVE
146	2.6	WATER VALVE	WATER VALVE
147	3.0	WATER VALVE	WATER VALVE
148	3.0	WATER VALVE	WATER VALVE
149	2.0	WATER VALVE	WATER VALVE
150	1.0	WATER VALVE	WATER VALVE
151	5.1	WATER VALVE	WATER VALVE
152	2.6	WATER VALVE	WATER VALVE
153	3.0	WATER VALVE	WATER VALVE
154	3.0	WATER VALVE	WATER VALVE
155	2.0	WATER VALVE	WATER VALVE
156	1.0	WATER VALVE	WATER VALVE
157	5.1	WATER VALVE	WATER VALVE
158	2.6	WATER VALVE	WATER VALVE
159	3.0	WATER VALVE	WATER VALVE
160	3.0	WATER VALVE	WATER VALVE
161	2.0	WATER VALVE	WATER VALVE
162	1.0	WATER VALVE	WATER VALVE
163	5.1	WATER VALVE	WATER VALVE
164	2.6	WATER VALVE	WATER VALVE
165	3.0	WATER VALVE	WATER VALVE
166	3.0	WATER VALVE	WATER VALVE
167	2.0	WATER VALVE	WATER VALVE
168	1.0	WATER VALVE	WATER VALVE
169	5.1	WATER VALVE	WATER VALVE
170	2.6	WATER VALVE	WATER VALVE
171	3.0	WATER VALVE	WATER VALVE
172	3.0	WATER VALVE	WATER VALVE
173	2.0	WATER VALVE	WATER VALVE
174	1.0	WATER VALVE	WATER VALVE
175	5.1	WATER VALVE	WATER VALVE
176	2.6	WATER VALVE	WATER VALVE
177	3.0	WATER VALVE	WATER VALVE
178	3.0	WATER VALVE	WATER VALVE
179	2.0	WATER VALVE	WATER VALVE
180	1.0	WATER VALVE	WATER VALVE
181	5.1	WATER VALVE	WATER VALVE
182	2.6	WATER VALVE	WATER VALVE
183	3.0	WATER VALVE	WATER VALVE
184	3.0	WATER VALVE	WATER VALVE
185	2.0	WATER VALVE	WATER VALVE
186	1.0	WATER VALVE	WATER VALVE
187	5.1	WATER VALVE	WATER VALVE
188	2.6	WATER VALVE	WATER VALVE
189	3.0	WATER VALVE	WATER VALVE
190	3.0	WATER VALVE	WATER VALVE
191	2.0	WATER VALVE	WATER VALVE
192	1.0	WATER VALVE	WATER VALVE
193	5.1	WATER VALVE	WATER VALVE
194	2.6	WATER VALVE	WATER VALVE
195	3.0	WATER VALVE	WATER VALVE
196	3.0	WATER VALVE	WATER VALVE
197	2.0	WATER VALVE	WATER VALVE
198	1.0	WATER VALVE	WATER VALVE
199	5.1	WATER VALVE	WATER VALVE
200	2.6	WATER VALVE	WATER VALVE


TEMPERATURE SWITCH	CIRCUIT				
	WASH/RINSE	1-3	1-5	2-6	2-4
H/C				X	X
W/C, OPT		X			X
C/C, OPT		X			X
W/W, OPT	X	X		X	X
REG C/C		X	X		X
REG W/C			X	X	X
REG W/W	X			X	X

H=HOT W=WARM C=COLD
REG=REGULATED X=CLOSED
OPT=OPTIONAL (NOT IN ALL MODELS)

COMPONENT RESISTANCE TABLE		
ELECTRICAL COMPONENT	RESISTANCE Ω @ 77°F (25°C)	
WATER VALVE SOLENOIDS	880 ±10%	
DOOR LOCK SOLENOID	380 ±10%	
TIMER MOTOR	2425 ±6%	
PUMP MOTOR	15 ±7%	
DISPENSER VALVE SOLENOIDS	1100 ±7%	
MOTOR	M1 TO M2	2.6 ±7%
	M2 TO M3	2.6 ±7%
	M1 TO M3	2.6 ±7%
	M5 TO M6	184 ±7%


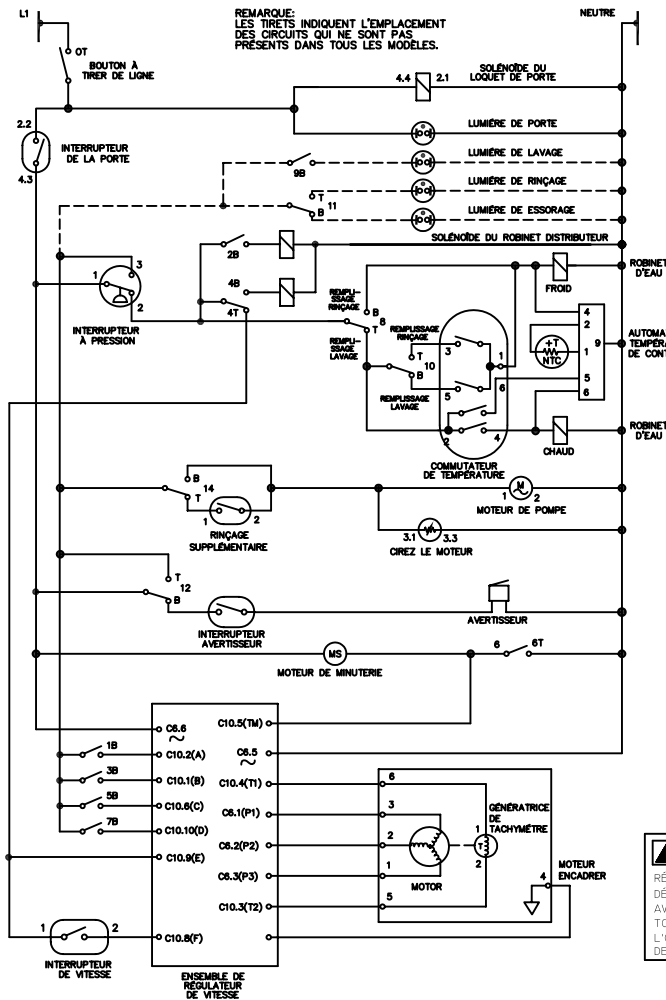


REMARQUE: LES TIRETS INDIQUENT L'EMPLACEMENT DES CIRCUITS QUI NE SONT PAS PRÉSENTS DANS TOUS LES MODÈLES.

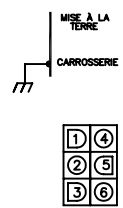

PRISE MÂLE MOTEUR (VUE EXTR)


TABLEAU DE RÉSISTANCE DES COMPOSANTS		
COMPOSANT ÉLECTRIQUE	RÉSISTANCE Ω @ 77°F (25°C)	
SOLENOÏDE DU ROBINET D'EAU	880 ±10%	
SOLENOÏDE DU LOQUET DE PORTE	380 ±10%	
MOTEUR DE MINUTERIE	2425 ±6%	
MOTEUR DE POMPE	15 ±7%	
SOLENOÏDE DU ROBINET DISTRIBUTEUR	1100 ±7%	
MOTEUR	M1 VERS M2	2.6 ±7%
	M2 VERS M3	2.6 ±7%
	M1 VERS M3	2.6 ±7%
	M5 VERS M6	184 ±7%

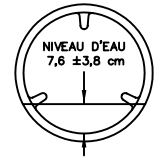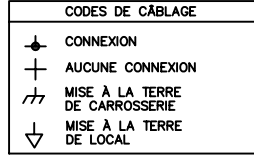

SANS CHARGE, POSITION DE DÉMARRAGE DU CYCLE POUR TISSU À PRESSAGE PERMANENT

COMMUTATEUR DE TEMPÉRATURE				
CIRCUIT				
LAVAGE/RINÇAGE	1-3	1-5	2-6	2-4
C/F		X		X
T/F, OPT		X		X
F/F, OPT	X	X		X
T/T, OPT	X	X		X
AUTO F/F	X	X		X
AUTO T/F		X	X	X
AUTO T/T	X		X	X


C=CHAUD T=TIÈDE F=FROID
AUTO=AUTOMATIQUE X=FERMÉS
OPT=EN OPTION

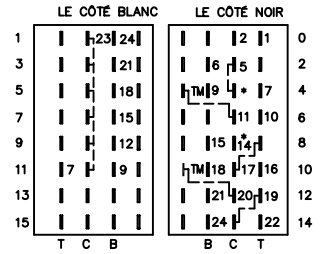


PRISE MÂLE MINUT (VUE EXTR)

AVERTISSEMENT POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, DÉBRANCHER CET APPAREIL DE L'ALIMENTATION AVANT DE PROCÉDER À L'ENTRETIEN. EN TOURNANT LES COMMANDES À LA POSITION ARRÊT, L'ON NE COUPE PAS L'ALIMENTATION ÉLECTRIQUE DE L'APPAREIL.

SCHÉMA DE CÂBLAGE 134832200 B

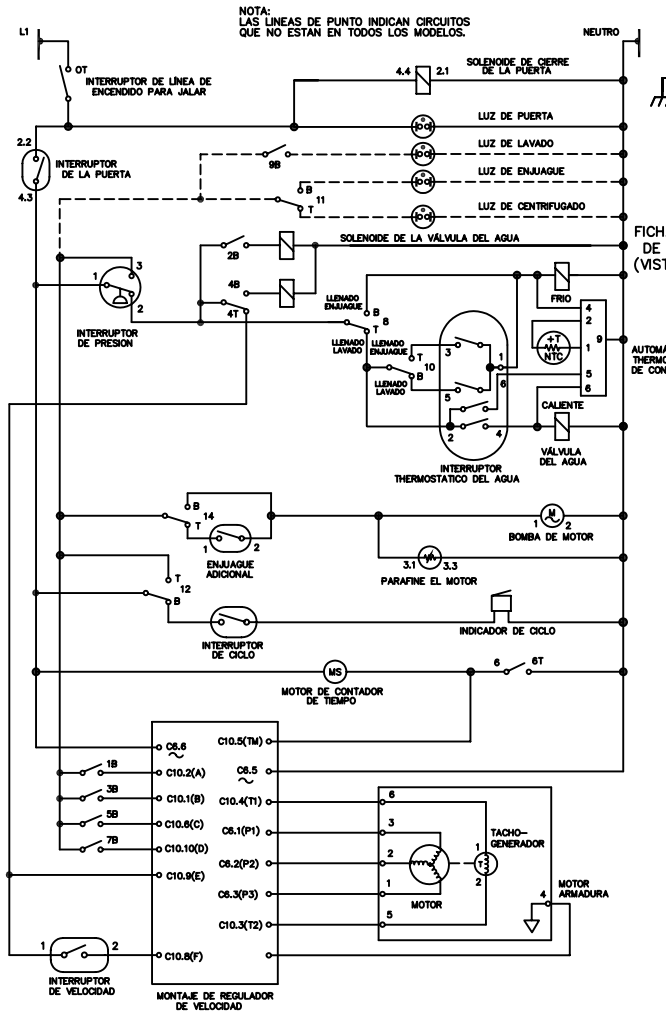


NOTA: LAS LÍNEAS DE PUNTO INDICAN CIRCUITOS QUE NO ESTÁN EN TODOS LOS MODELOS.

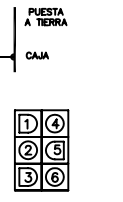

FICHA DE CONTADOR DE MACHO MOTOR (VISTA DE EXTREMO)


TABLA DE RESISTENCIA DE LOS COMPONENTES		
COMPONENTE ELÉCTRICO	RESISTENCIA Ω @ 77°F (25°C)	
SOLENOÏDE DE LA VÁLVULA DEL AGUA	880 ±10%	
SOLENOÏDE DE CIERRE DE LA PUERTA	380 ±10%	
MOTOR DE CONTADOR DE TIEMPO	2425 ±6%	
BOMBA DE MOTOR	15 ±7%	
SOLENOÏDE DE LA VÁLVULA DEL DISTRIBUIDOR	1100 ±7%	
MOTOR	M1 A M2	2.6 ±7%
	M2 A M3	2.6 ±7%
	M1 A M3	2.6 ±7%
	M5 A M6	184 ±7%

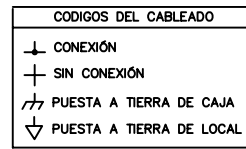

SIN CARGA, POSICIÓN DE ARRANQUE DEL CICLO PARA TALAS DE PLANCHADO PERMANENTE.

INTERRUPTOR TERMOSTÁTICO DEL AGUA				
CIRCUITO				
LAVADO/ENJUAGUE	1-3	1-5	2-6	2-4
C/F		X		X
T/F, OPC		X		X
F/F, OPC	X	X		X
T/T, OPC	X	X		X
AUTO F/F	X	X		X
AUTO T/F		X	X	X
AUTO T/T	X		X	X

C=CALIENTE T=TEMPERADO F=FRIO
AUTO=AUTOMÁTICO X=CERRADOS
OPC=OPCIONAL

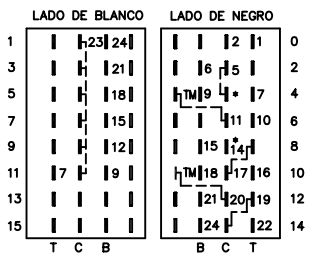

FICHA DE CONTADOR DE MACHO TIEMPO (VISTA DE EXTREMO)


ADVERTENCIA PARA REDUCIR EL RIESGO DE CHOQUE ELÉCTRICO, DESENCHUFE ESTE APARATO DE LA ALIMENTACIÓN ELÉCTRICA ANTES DE EFECTUAR EL MANTENIMIENTO. AL GIRAR LOS CONTROLES A LA POSICIÓN OFF (APAGADO) NO SE CORTA LA ALIMENTACIÓN ELÉCTRICA AL ARTEFACTO.

DIAGRAMA DE CONEXIONES NO. DE PIEZA 134832200 B

TECH SHEET - RETAIN FOR SERVICE TECHNICIAN



WARNING Disconnect from Electrical Supply Before Servicing Washer.

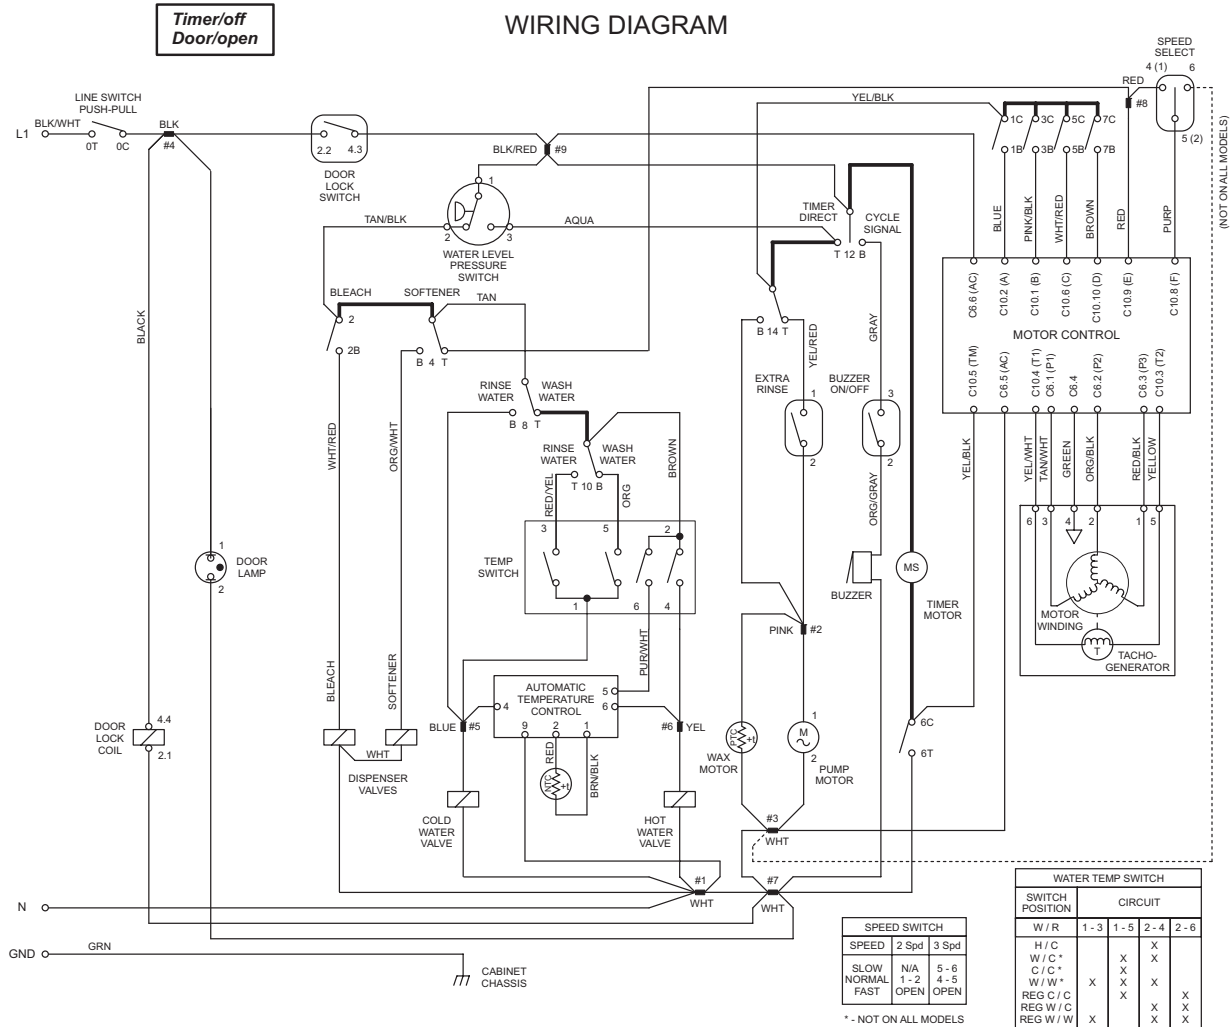

Motor Will Not Run

1. CHECK FOR POWER:


Advance the timer knob to the drain increment. If the drain pump does not run, check household safety circuit. If the drain pump runs go to step 2.

2. CHECK FOR MOTOR MOVEMENT:

Turn the water off to the washer. Remove electrical power from the washer and remove the back panel. Remove the motor drive belt. Reconnect electrical power and set the timer to the start of the Regular wash cycle and pull the knob out. If motor does not rotate, check for a poor connection in the timer line switch or door lock switch. If good, and motor does not run go to step 3.


3. MEASURE VOLTAGES:

Remove the six pin plug from the speed control unit. Measure the voltage between pins 5 and 6 on the harness. If the meter reads 0 check the connection in the timer line switch or door lock. If the meter reads 120 Vac go to step 4.

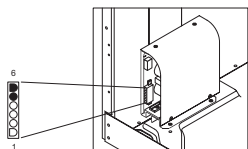

Speed Control

- Set the timer to the Heavy Wash position of the Regular wash cycle. Remove the ten pin plug from the speed control unit. Measure the voltage between pins 1, 2, 6 and 10 of the ten pin plug to pin 5 of the 6 pin plug on the harness. The voltage at pins 2, 6, and 10 should read 120 Vac and 0 Vac at pin 1. If not, check timer contacts 1C to 1B, 5C to 5B, and 7C to 7B for closed contacts, and 3C to 3B for open contacts. If the voltage readings are correct, go to step 5.

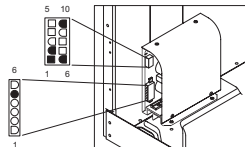


Speed Control

5. MEASURE RESISTANCES:

Check the fuse on the speed control board. If the fuse is open, replace the speed control board. If good, go to step 6.

- Remove the 6 pin plug from the speed control unit. Measure the resistance between pins 1 and 2, 2 and 3, and 3 and 1 of the speed control unit. If the meter reads other than 3 Meg ohms \pm 10%, replace the speed control board.

- Remove electrical power from the washer. With an ohmmeter check the resistance between pins 1 and 2, 2 and 3, and 3 and 1 of the six pin plug on the harness. If the meter reads other than 2.6 ohms \pm 7%, replace the motor.

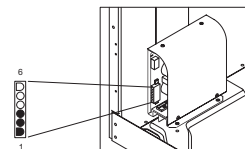

Speed Control

Quick Facts

- The timer motor will not run continuously. The speed control unit controls the timer motor and advances the timer when needed.
- In some tumble modes, the tub may not tumble for the first 16 to 20 seconds after start-up.
- Extremely low water pressure may cause tub rotation to stop until WLC satisfied.

IMPORTANT SAFETY NOTICE


This information is intended for use by technicians possessing adequate background of electrical, electronic and mechanical experience. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use.

IMPORTANT

If grounding wires, screws or clips used to complete a path to ground are removed for service, they must be returned to their original position and properly fastened. Certain internal parts are intentionally NOT grounded and may present a risk of electric shock only during servicing. Do not contact the following parts while the appliance is energized: pump, drive motor and electronic control boards.


WARNING

This information is intended for use by persons having electrical and mechanical training and a level of knowledge of these subjects generally considered acceptable in the appliance repair trade. The manufacturer or seller can not be responsible, nor assume any liability, for injury or damage of any kind arising from the use of this data.

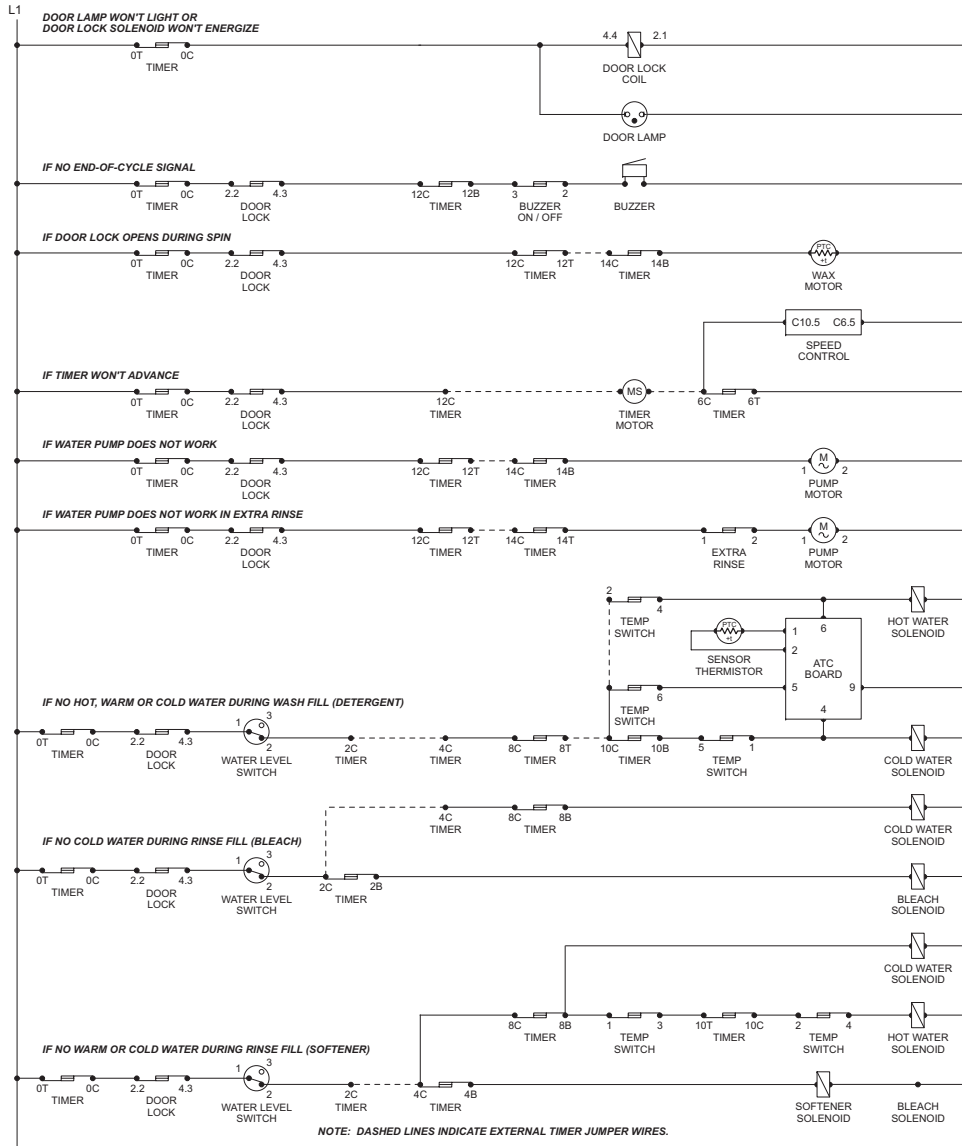

IMPORTANT

If grounding wires, screws or clips used to complete a path to ground are removed for service, they must be returned to their original position and properly fastened. Certain internal parts are intentionally NOT grounded and may present a risk of electric shock only during servicing. Do not contact the following parts while the appliance is energized: pump, drive motor and electronic control boards.

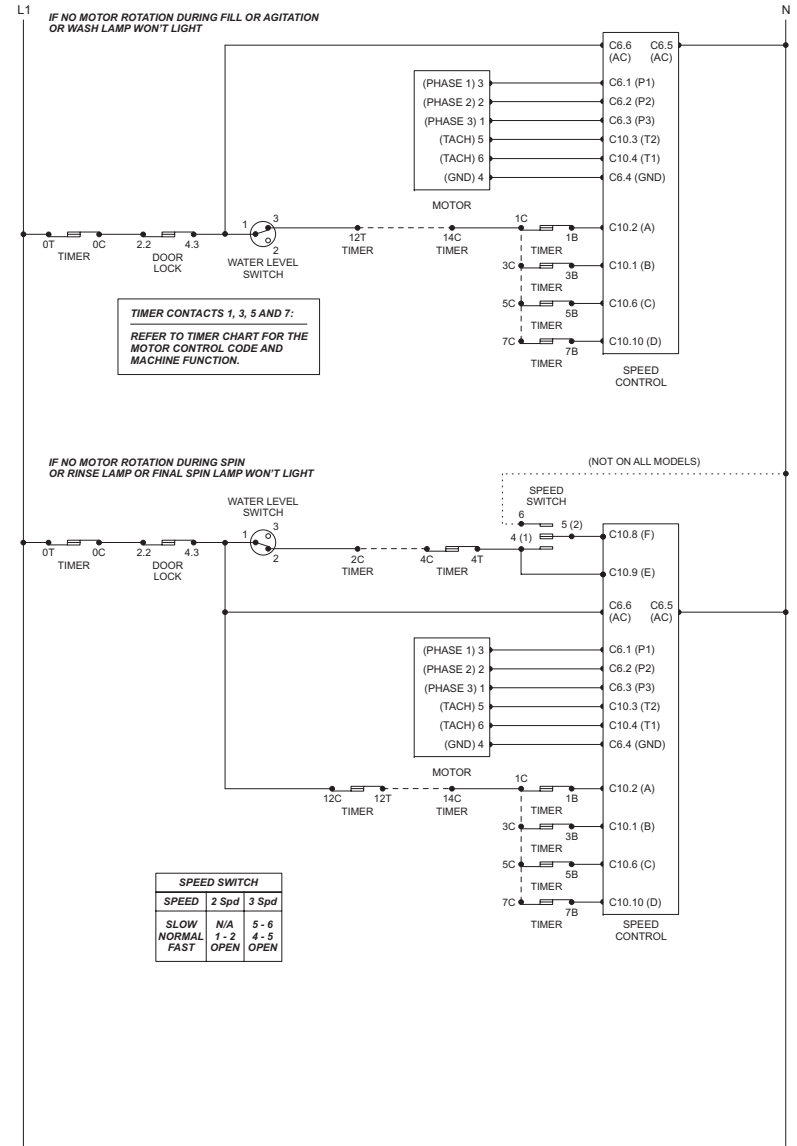


DIAGNOSTIC STRIP CIRCUITS

FEUILLE DE TECHNOLOGIE-MAINTENEZ POUR LE TECHNICIEN DE SERVICE.

AVERTISSEMENT Débranchez L'Alimentation Avert Tout Travail De Réparation Ou D'Entretien

MINUTERIE/FERMÉ PORTE/OUVERT

SCHÉMA DE CÂBLAGE

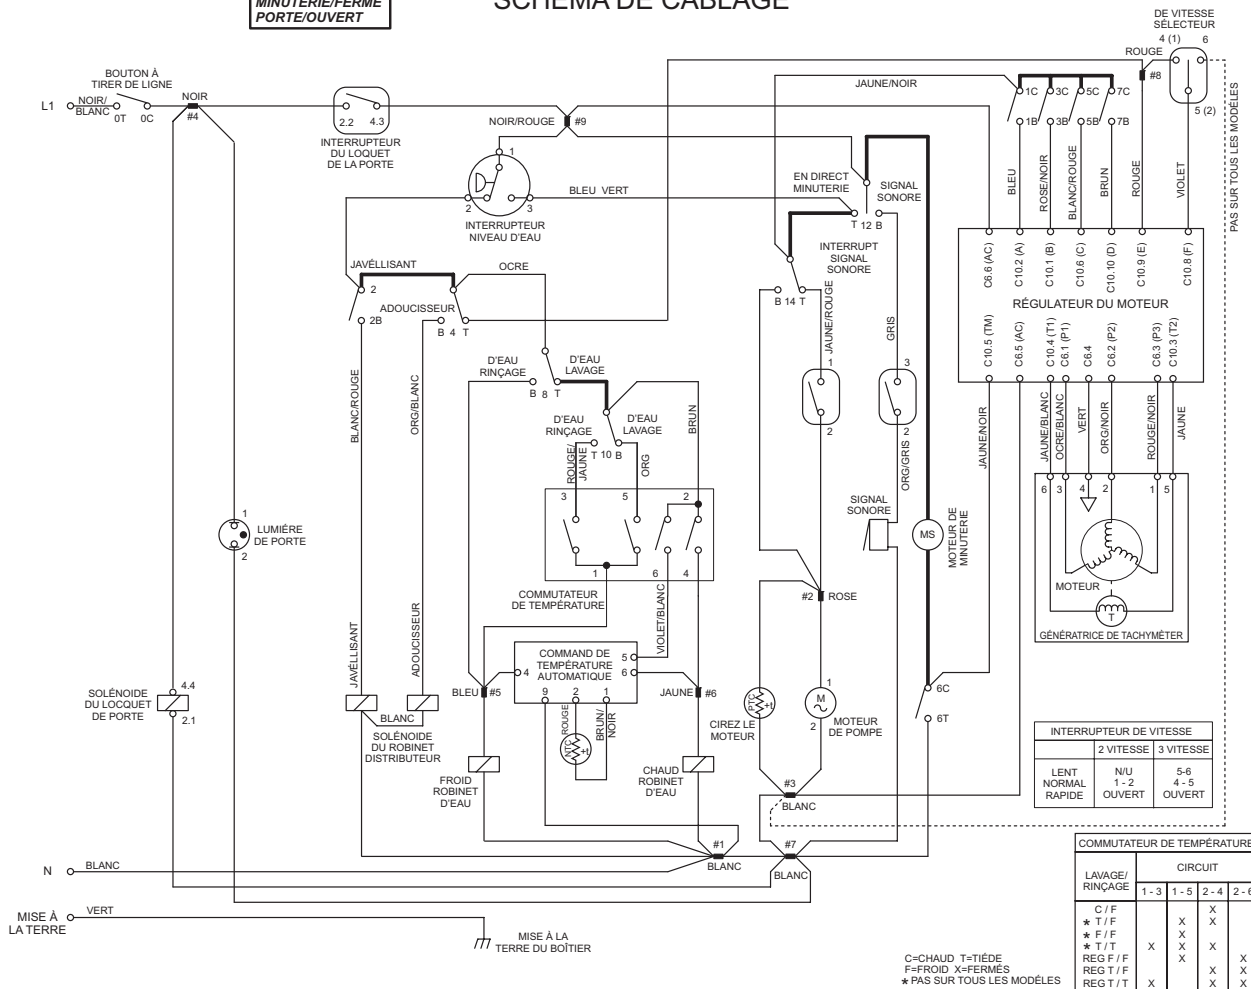

Non Fonctionner Moteur

1. VÉRIFIEZ L'ALIMENTATION :


Tournez le bouton de la minuterie en position vidange. Si la pompe de vidange ne fonctionne pas, vérifiez le circuit d'alimentation de la résidence. Si la pompe de vidange fonctionne, passez à l'étape 2.

2. VÉRIFIEZ LE FONCTIONNEMENT DU MOTEUR :

Fermez l'arrivée d'eau à la machine à laver. Coupez l'alimentation à l'appareil et retirez le panneau arrière. Retirez la courroie d'entraînement du moteur. Rebranchez l'alimentation et placez le bouton de la minuterie en position départ cycle de lavage régulier et tirez le bouton. Si le moteur ne fonctionne pas, vérifiez s'il existe de mauvais contact dans le circuit de l'interrupteur de la minuterie ou de l'interrupteur de la porte. Si ces circuits sont corrects et que le moteur ne fonctionne pas, passez à l'étape 3.


3. MESUREZ LA TENSION :

Retirez les six connecteurs à broche de l'unité de commande de vitesse. Mesurez la tension entre les connecteurs 5 et 6 sur le harnais. Si le lecteur indique 0, vérifiez la connexion dans le circuit de l'interrupteur de la minuterie ou de l'interrupteur de la porte. Si la lecture indique 120 Vac, passez à l'étape 4.

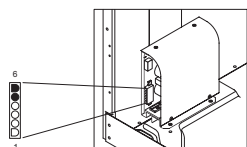

Régulateur de Vitesse

4. Placez le bouton de la minuterie en position Gros Lavage du cycle de lavage régulier. Retirez les dix connecteurs en broches de l'unité de commande de vitesse. Mesurez la tension entre les connecteurs 1, 2, 6 et 10 des dix connecteurs en broche au connecteur 5 des 6 connecteurs en broche du harnais. La tension au connecteur 2, 6 et 10 devrait indiquer 120 Vac et 0 Vac au connecteur 1. Si ce n'est pas le cas, vérifiez les contacts de la minuterie de 1C à 1B, 5C à 5B et 7C à 7B pour les contacts ouverts et 3C à 3B pour les contacts fermés. Si les lectures de tension sont correctes, passez à l'étape 5.

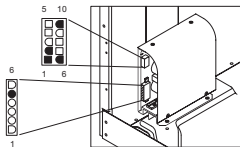

Régulateur de Vitesse

5. MESUREZ LA RÉSISTANCE :


Vérifiez les fusibles sur la carte de commande de vitesse. Si le fusible est fermé, remplacez la carte de commande de vitesse. Si le fusible est bon, passez à l'étape 6.

6. Retirez les 6 connecteurs à broche de l'unité de commande de vitesse. Mesurez la résistance entre le connecteur 1 et 2, 2 et 3, et 3 et 1 de l'unité de commande de vitesse. Si les lectures indiquent 3 Meg ohms 10%, remplacez la carte de l'unité de commande de vitesse.

IMPORTANT

Ces renseignements sont destinés aux techniciens ayant l'expérience adéquate en électricité, électronique et mécanique. Toute tentative de réparer un gros appareil électroménager peut causer des blessures ou des dommages. Le fabricant ou le vendeur ne peut être responsable de l'interprétation de ces renseignements, ni assumer quelque responsabilité que ce soit relative à leur utilisation.

7. Débranchez l'alimentation de la machine à laver. Avec un ohmmètre, vérifiez la résistance entre les connecteurs 1 et 2, 2 et 3, et 3 et 1 des six connecteurs à broche du harnais. Si les lectures ne sont pas 2.6 ohms 7%, remplacez le moteur.

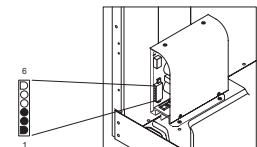

Régulateur de Vitesse

À TITRE D'INFORMATION


- Le moteur de la minuterie ne fonctionne pas continuellement. L'unité de commande de vitesse contrôle le moteur de la minuterie et fait avancer la minuterie s'il y a lieu.
- Dans certains modes de culbutage, il est possible que la cuve ne puisse culbuter durant les 16 à 20 premières secondes qui suivent le démarrage.
- Une pression d'eau extrêmement basse peut arrêter la rotation de la cuve jusqu'à ce que le niveau d'eau requis (WCL) soit atteint.

AVIS SÉCURITÉ IMPORTANT

Si les fils, vis ou attaches de mise à la terre utilisés pour mettre à la terre un circuit sont démontés pour fins de tout travail d'entretien ou de réparation, ils doivent être remontés à leur emplacement original et solidement fixés. Certaines pièces internes sont intentionnellement NON mises à la terre et peuvent présenter des risques de choc durant tout travail d'entretien ou de réparation. N'entrez pas en contact avec les pièces suivantes si l'appareil est alimenté : la pompe, le moteur d'entraînement et les cartes de commande électroniques.


AVERTISSEUR

Cette information est destinée aux techniciens ayant des connaissances et de l'expérience en électricité, électronique et mécanique. Toute tentative de réparer un appareil majeur peut entraîner des blessures et des dommages. Le fabricant ou le vendeur ne peuvent être tenus responsables d'une compréhension ou d'une interprétation erronée de cette information ni assumer quelque responsabilité que ce soit relative à son usage.

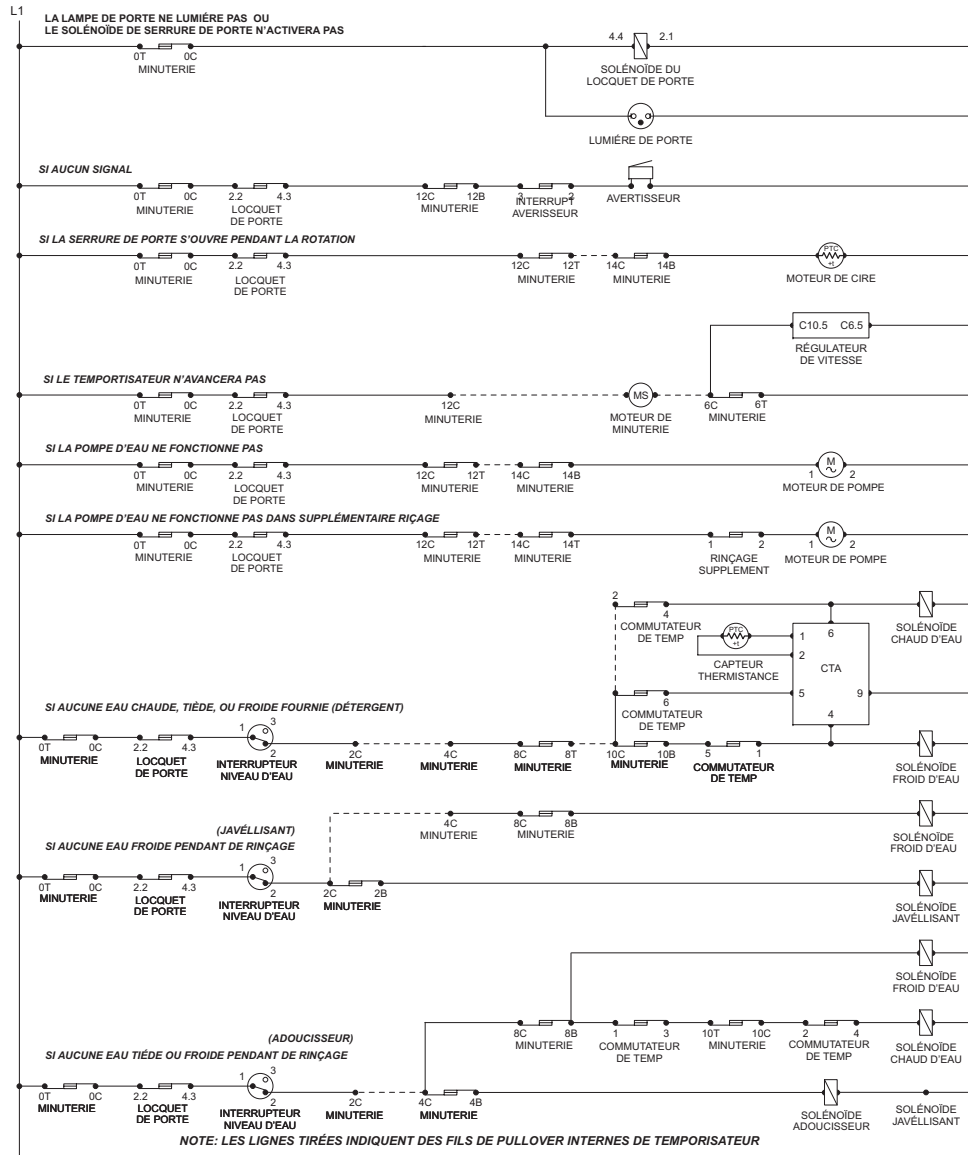

IMPORTANT

Si des fils de masse, les vis, ou les agrafes utilisées pour accomplir un chemin pour rectifier sont enlevés pour le service, ils doivent être remis en leur position originale et être correctement attachés. Certaines pièces internes ne sont pas intentionnellement fondus et peuvent présenter un risque de décharge électrique seulement pendant l'entretien. N'entrez pas en contact avec les pièces suivantes tandis que l'appareil active: pompe, moteur d'entraînement et tableaux de commande électronique.

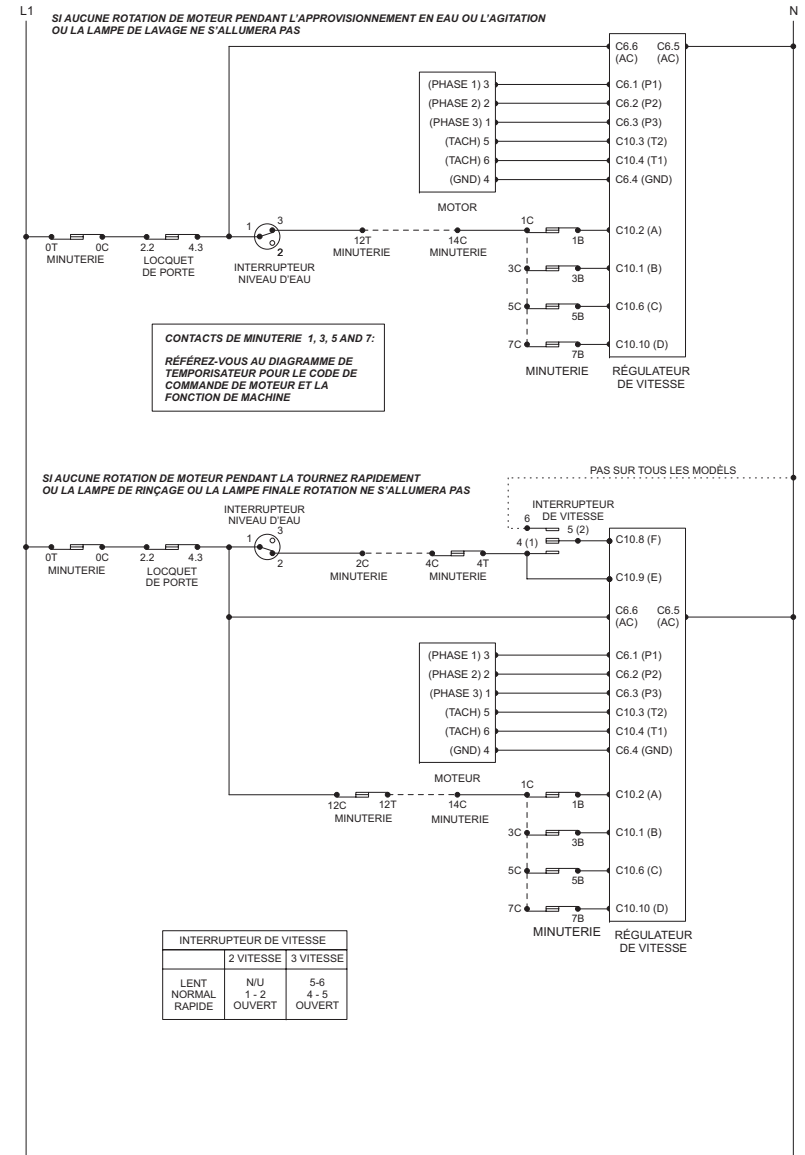

CIRCUIT DIAGNOSTIQUE

NO DE PIÈCE 134832200 B