 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).

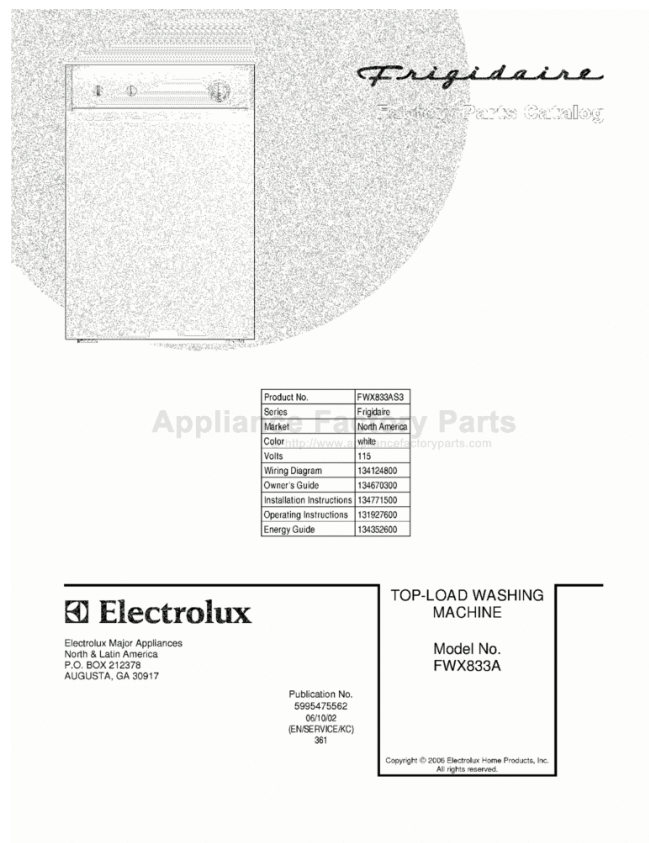

# Electrolux FWX833AS3 Owner's Manual

[Shop genuine replacement parts for Electrolux  
FWX833AS3](#)



[Find Your Electrolux Washer Parts - Select From 440 Models](#)

 
 
 
 
 
 
----- Manual continues below part list -----

## Available Replacement Parts for Electrolux FWX833AS3

[134211400](#)


VALVE AFTERMARKET

CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

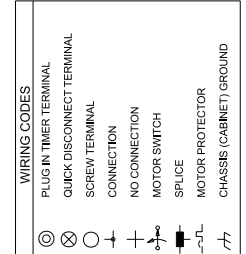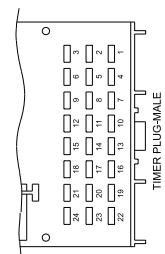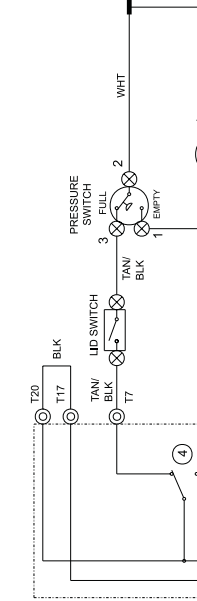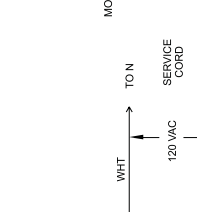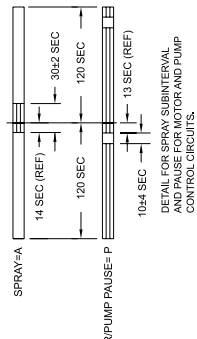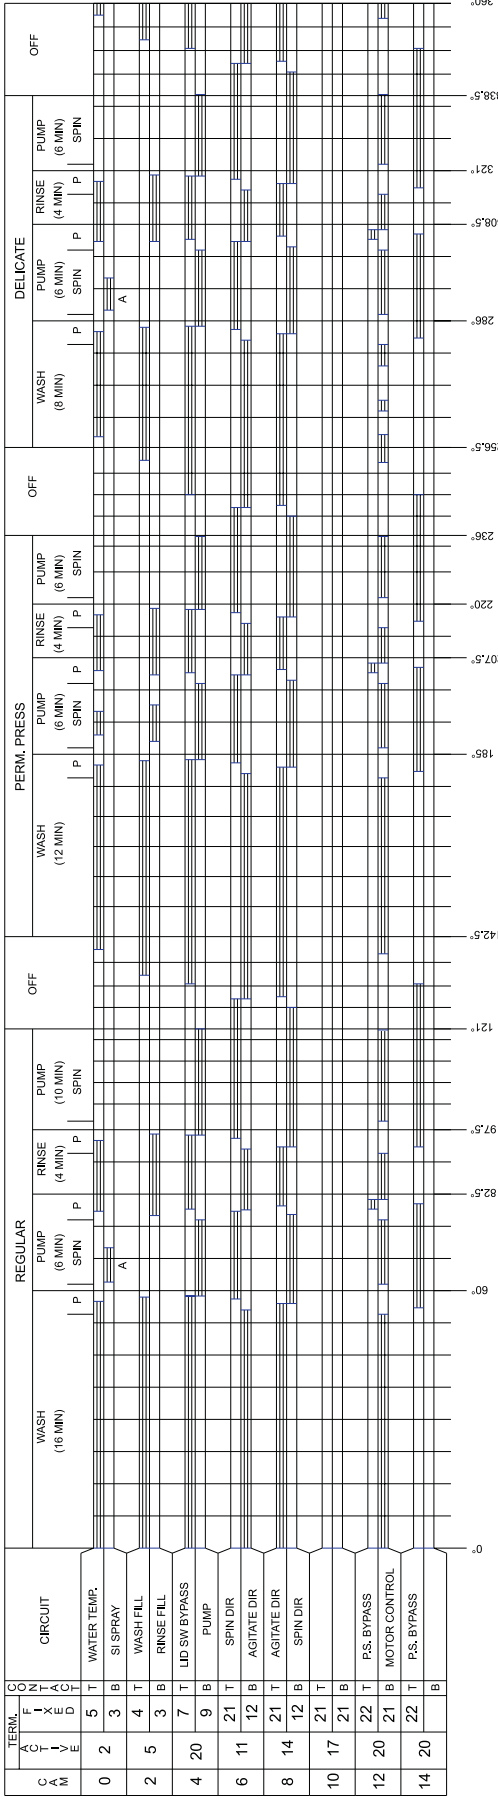



TEMPERATURE SWITCH CIRCUIT			
	F-H	FF-H	FF-C
WASH/RINSE	X	O	O
HOT/COLD	X	O	X
WARM/COLD	X	O	X
COLD/COLD	O	O	X
WARM/WARM (OPT)	O	X	X

 O=OPEN X=CLOSED  
(OPT)=OPTIONAL ON SOME MODELS

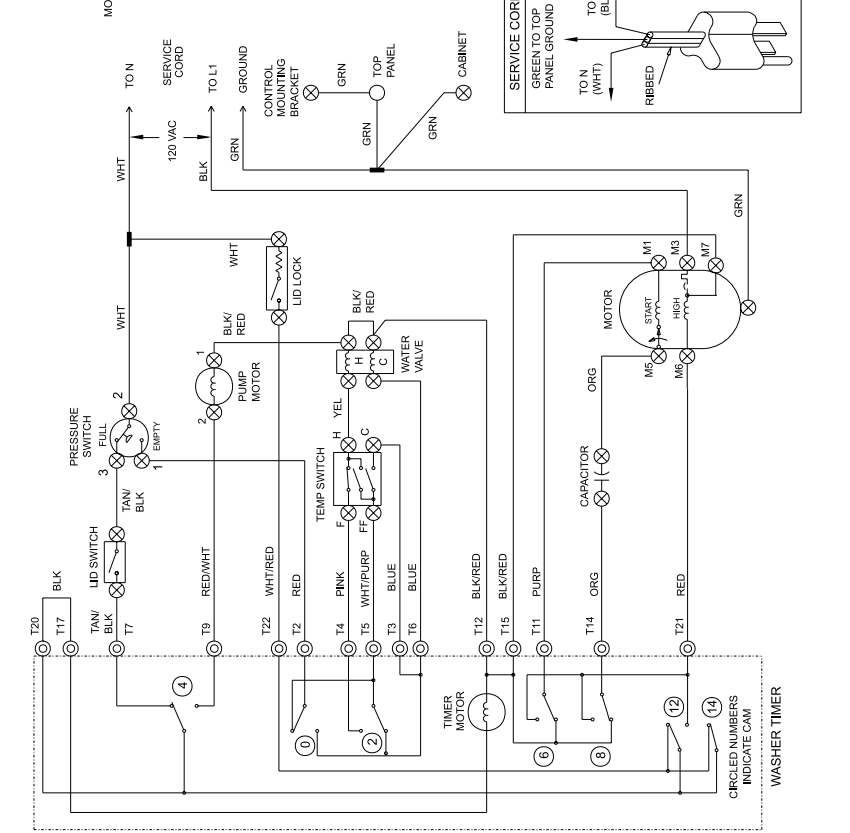


WIRING DIAGRAM  
134124800

# ATTENTION: COUPER L'ALIMENTATION ÉLECTRIQUE AVANT DE DÉPANNER L'APPAREIL

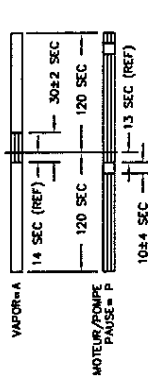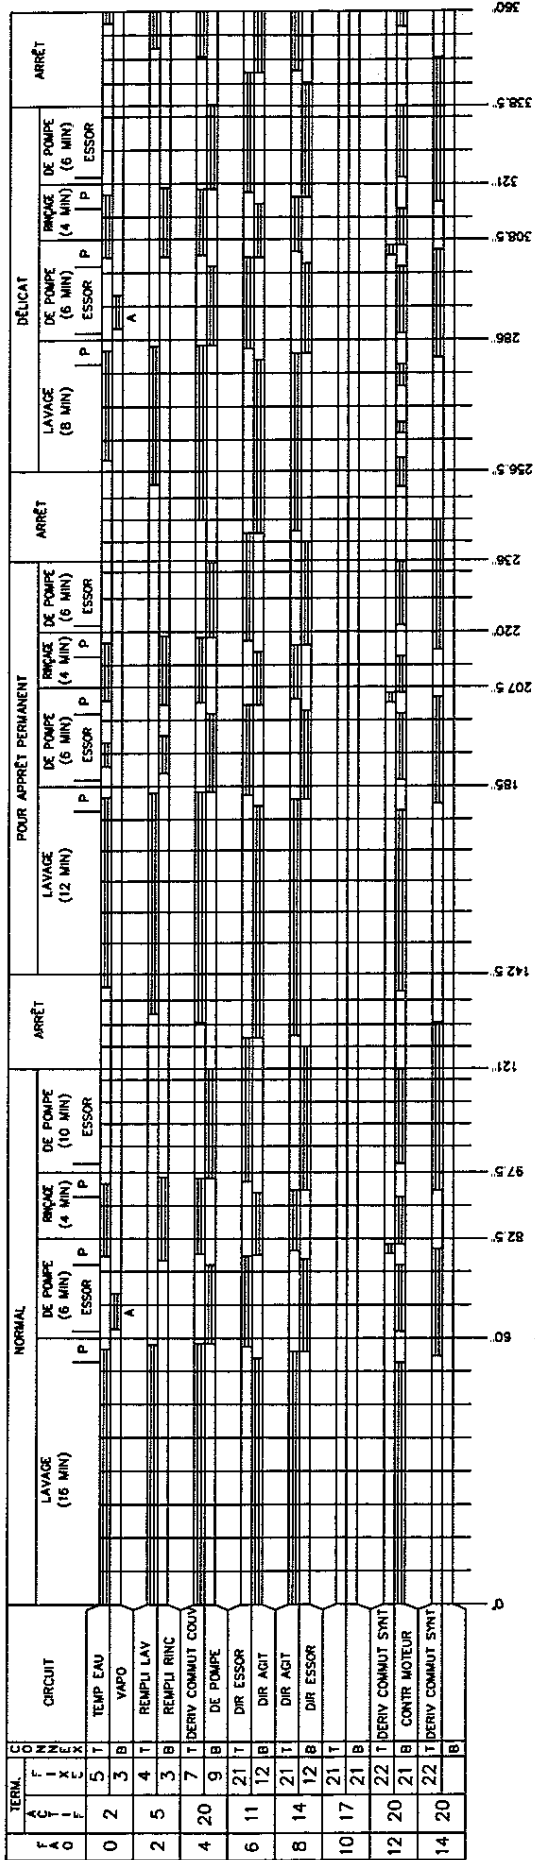  

 DETAI DES SOUS-INTERVALLES D'ASPERSSION ET DE PAUSE POUR LES CIRCUITS DE CONTRÔLE DU MOTEUR A LA POMPE.


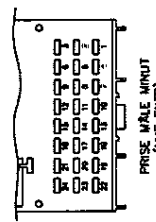


**CODES DE CÂBLAGE**

- ⊙ BORNE À FICHE DE MINUT
- ⊗ BORNE DE COUPEUR RAPIDE
- BORNE À V5
- ⊕ CONNEXION
- ⊖ ABSENCE DE CONNEXION
- ⊕ COMMUT MOTEUR
- ⊖ ÉPISSURE
- ⊖ PROTECTEUR MOTEUR

CIRCUIT COMMUT TEMPÉRATURE	
LAVAGE/RINÇAGE	F-H FF-H FF-C
CHAUD/FROID (OPT)	X 0 0 0
TIEDE/FROID	X 0 0 X
FROID/FROID	0 0 0 X
TIEDE/TIEDE (OPT)	0 X X X

  0=COMMUT OVERT X=COMMUT FERME (OPT)=EN OPTION SUR CERTAINS MODÈLES

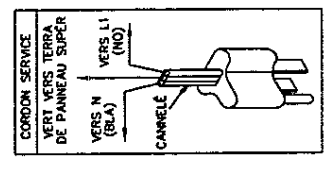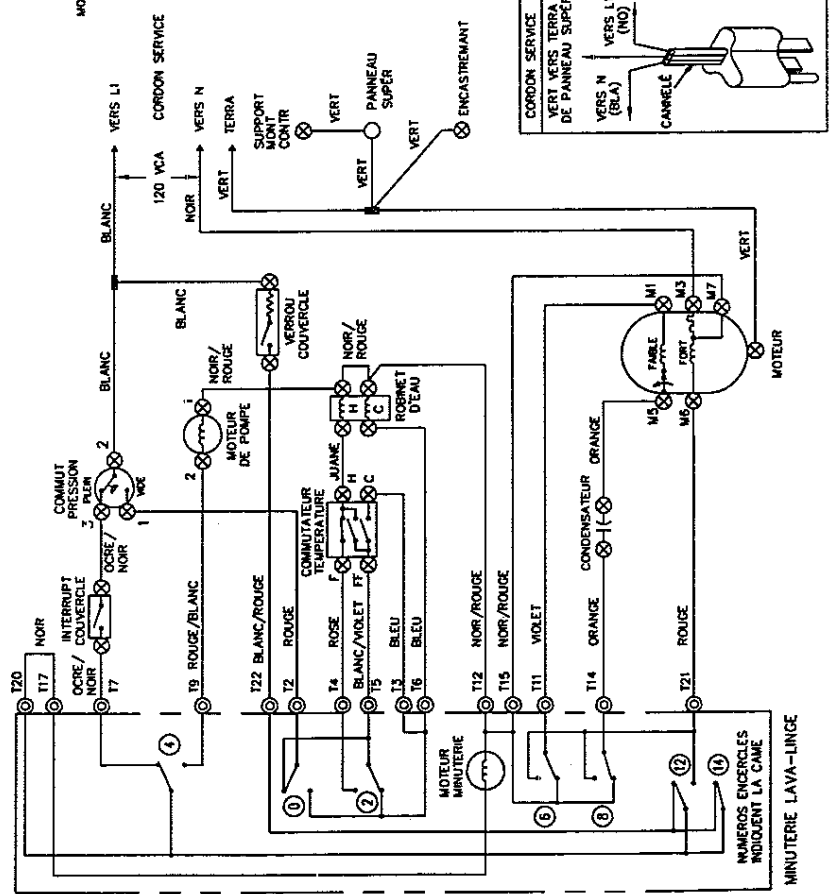

REMARQUES: LE LETTRE INDIQUE LA POSITION DES CONTACTS DE L'INTERRUPTEUR DE LA MINUTERIE  
T=HAUS  
B=BAS

SCHEMA DE CÂBLAGE  
134124800