 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.ApplianceFactoryParts.com).



HOOVER F6055-900 Owner's Manual

[Shop genuine replacement parts for HOOVER
F6055-900](#)

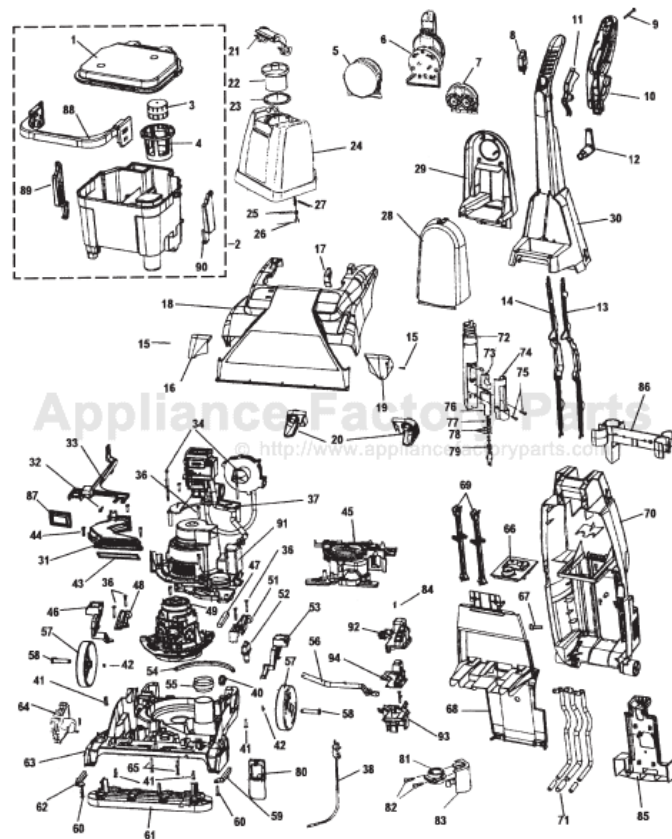

[Find Your HOOVER Vacuum Cleaner Parts - Select From 1456 Models](#)

----- Manual continues below part list -----


Available Replacement Parts for HOOVER F6055-900

H-38784062	Gasket .
H-38613040	NOZZLE BODY, WITH RELEASE TAB

HOOVER Original

STEAMVAC – MAX EXTRACT LS

 Models F6055-900, F6056-900

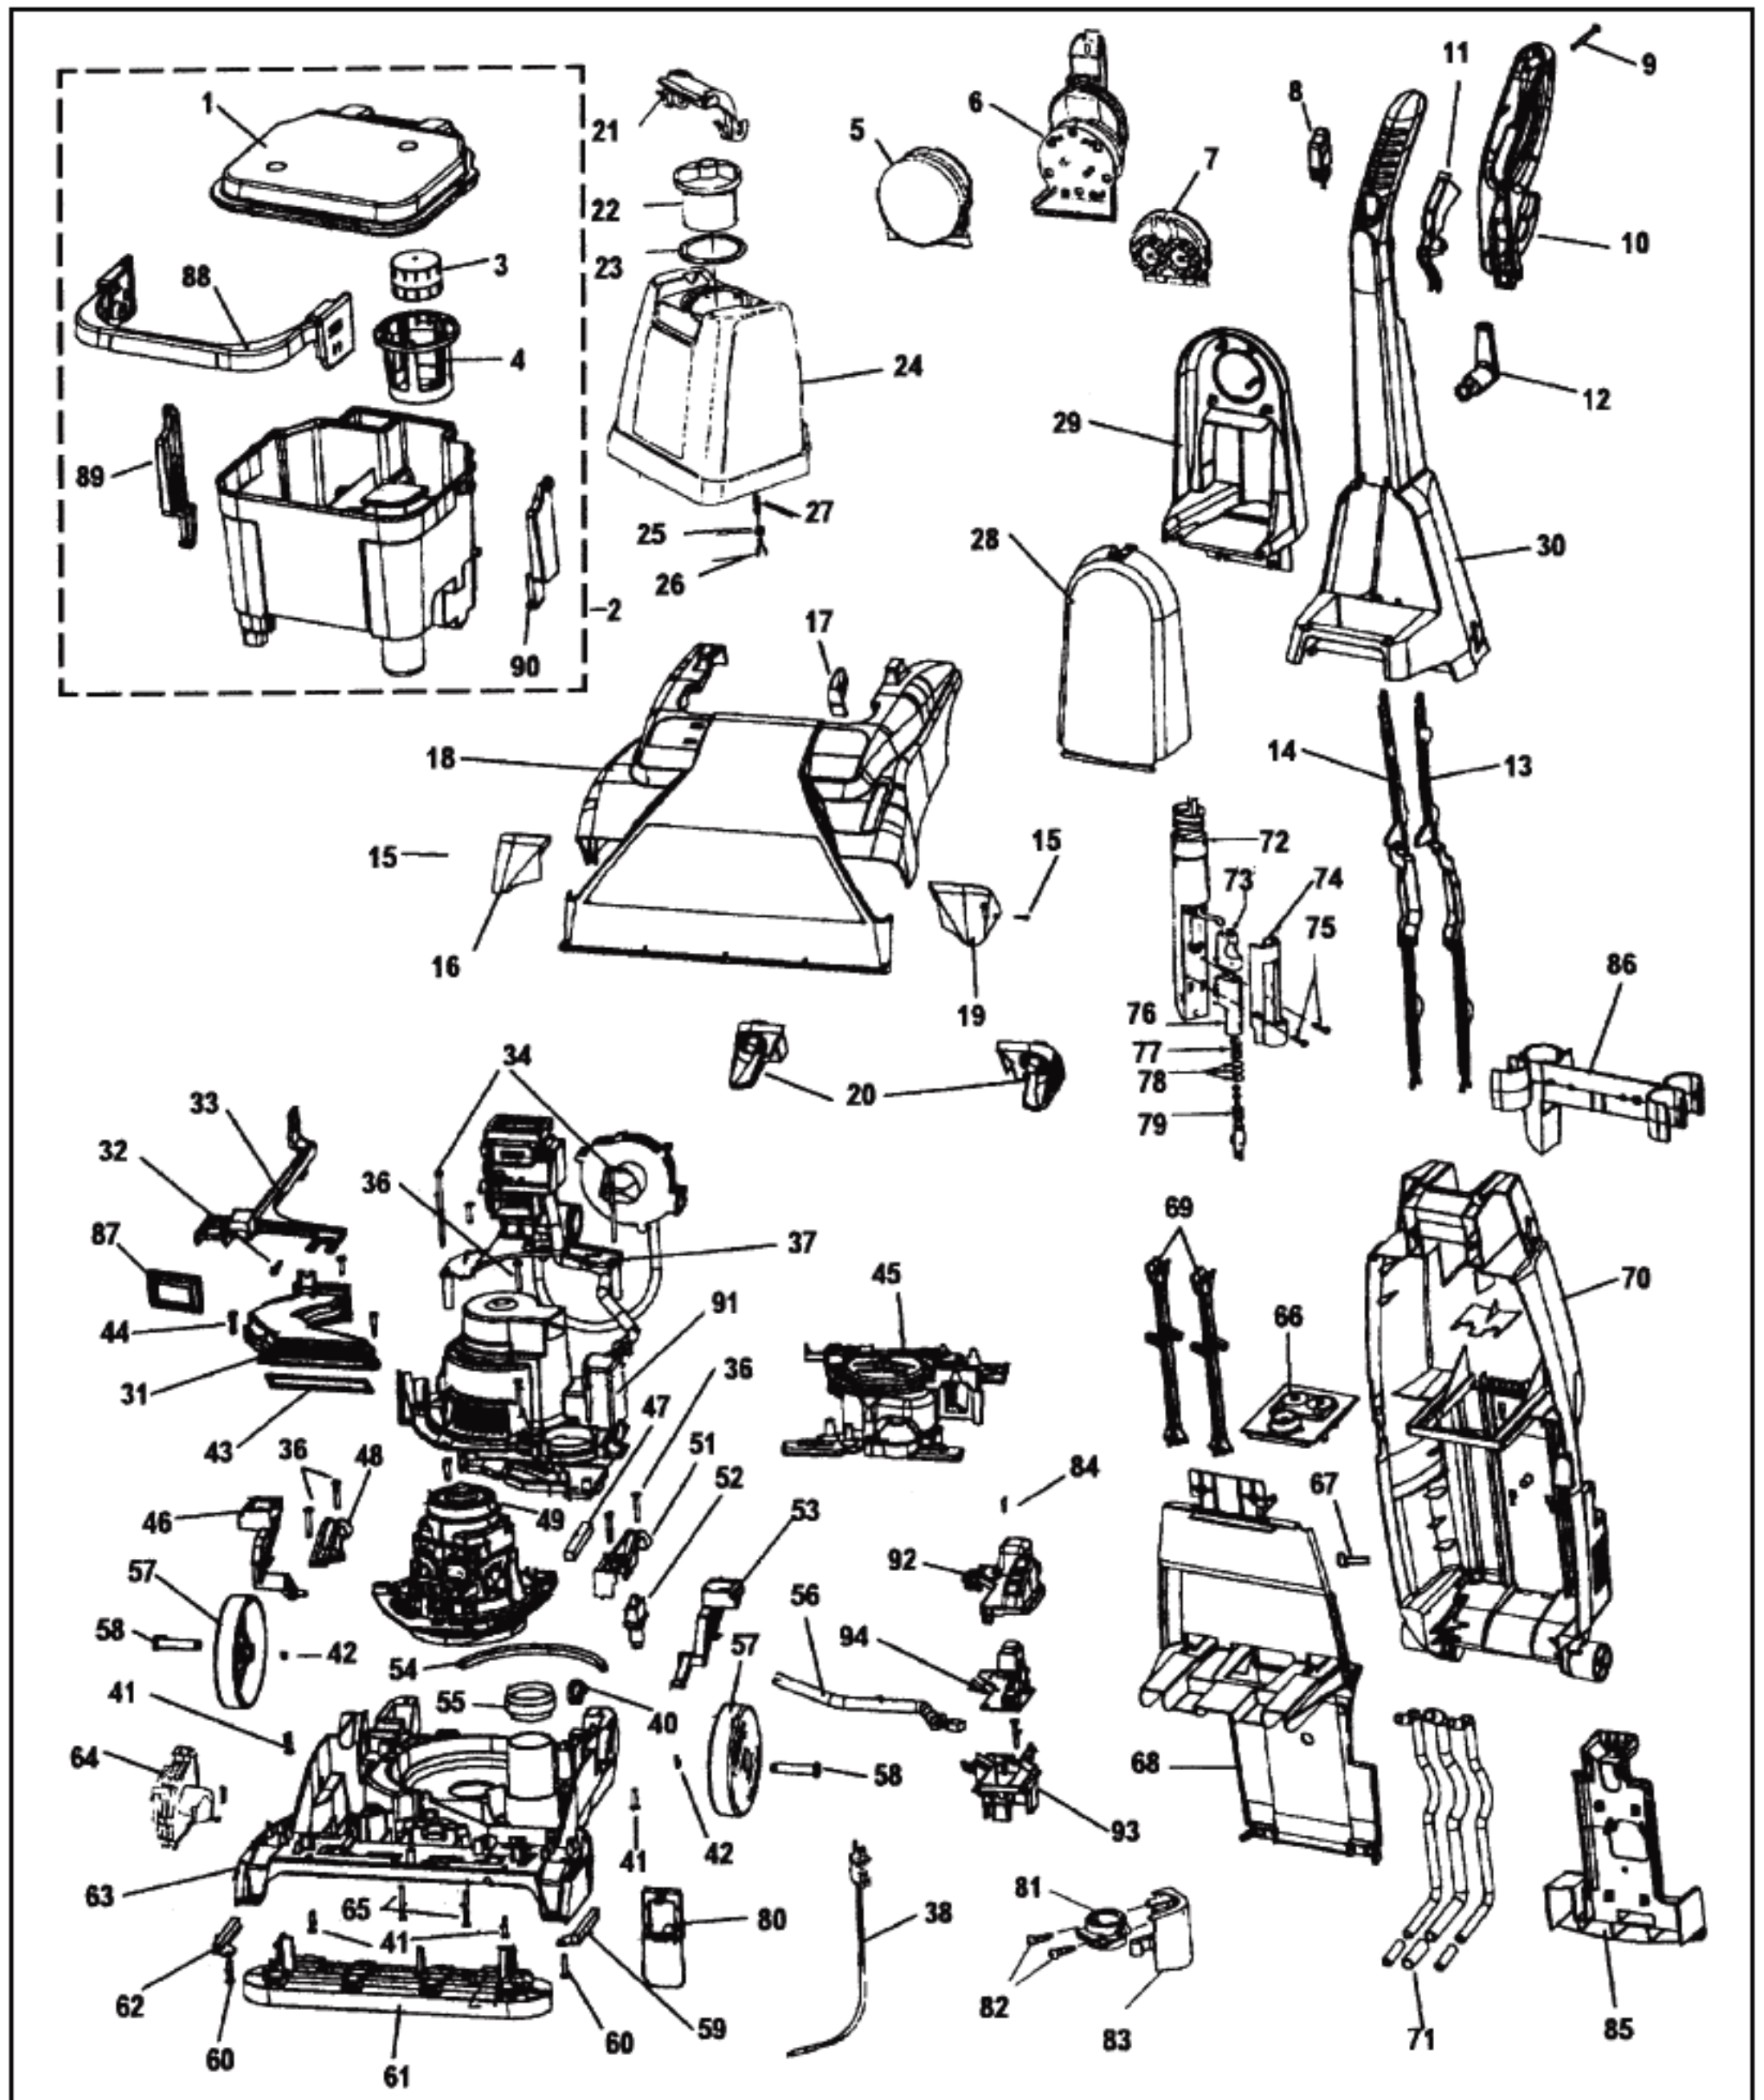

Original **HOOVER**

STEAMVAC – MAX EXTRACT LS

Models F6055-900, F6056-900

KEY	PART NO	DESCRIPTION
1	H-42272122	Recovery Tank Lid (Does not inc. its 3,4)
2	H-38777056	Recovery Tank Assem Comp (Inc. its 1,3,4, 88,89,90)
3	H-43538001	Float
4	H-38719043	Float Retainer
5	H-48437028	Scrub Module Assembly (Incl. 1 scrub pad)
6	H-48439003	Powered Hand Tool (Incl. It. 7)
7	H-48437027	Upholstery Module Ass'y
8	H-38433077	Solution Button - AG
9	H-21447255	Screw Self Tapping
10	H-39458007	Handle Lever Guard
11	H-38434029	Control Lever - AG
12	H-39442044	Cord Wrap - ABU
13	H-38458055	Control Rod Upper - Back
14	H-38458056	Control Rod Upper- Front
15	H-21479432	Screw Self Tapping
16	H-39383104	Lens Cover- R.H.
17	H-38421092	Indicator Knob - AG
18	H-37271070	Hood - AEC - F6055-900,
18	H-37271075	Hood - AEX - F6056-900
19	H-39383103	Lens Cover - L.H.
20	H-47173035	Lamp / Light Housing Ass'y
	H-27313106	Lamp - (2 req'd) Not Shown
21	H-39457016	Solution Tank Handle
22	H-42272002	Solution Tank Cap (Inc. item 23)
23	H-38784062	Gasket
24	H-42272105	Soluton Tank Ass'y Without Handle (Inc. items 22, 23, 25, 26, 27)
25	H-38784061	Valve Seal
26	H-38717009	Valve Stem
27	H-38312014	Spring
28	H-37276012	Tool Door - ACW
29	H-36433141	Tool Holder
30	H-39466039	Upper Handle Ass'y (Inc. its 8 thru 14)
31	H-43484003	Duct Ass'y (Includes Item 87)
32	H-23149002	Screw Self Tapping
33	H- 38458024	Turbine Actuator Arm
34	H- 21447246	Screw Self Tapping
35	H-21447242	Screw Self Tapping
36	H-21447020	Screw Self Tapping
37	H-43582010	Hose Conversion Ass'y w/Pump (includes item 64)
38	H-46583056	Attachment Cord
39	H-21447232	Screw Self Tapping
40	H-36172016	Cord Retainer
41	H-21447217	Screw Self Tapping
42	H-160017	Retaining Ring
43	H-38783025	Duct Seal
44	H-21447072	Screw Self Tapping
45	H-43191004	Turbine & Gear Ass'y
46	H-38458059	Handle Release Pedal
47	H-34122024	Motor Cover Seal
48	H-36131106	Trunnion Cover RH -AG
49	H-43576197	Motor Assembly - 12 Amp
50	H-21447020	Screw Self Tapping
51	H-36131107	Trunnion Cover L.H.-AG
52	H-28218048	Switch
53	H-38458060	Switch Actuator Pedal
54	H-38781048	Motor Base Seal
55	H-38784063	Standpipe Seal
56	H-46526017	Lead/Tube Ass'y - Power Supply
57	H-38522076	Rear Wheel - ADB

KEY	PART NO	DESCRIPTION
58	H-32434007	Rear Axle
59	H-48445011	Brush Back Ass'y - L.H.
60	H-21447257	Screw Self Tapping
61	H-48437026	Brush Block Ass'y
62	H-48445007	Brush Back Ass'y R.H.
63	H-42274004	Main Body Ass'y
64	H-43582005	Pump Ass'y Complete
65	H-21479438	Screw Self Tapping
66	H-43526016	Reservoir Ass'y
67	H-21447244	Screw - Special
68	H-37276003	Handle Cover
69	H-38458033	Control Rod - Lower
70	H-39466044	Lower Handle
71	H-40309029	Service Tubing Pack
72	H-43436023	Hose Ass'y Comp.
73	H-38433074	Trigger - AG
74	H-37276006	Wand Cover
75	H-21447239t	Screw Self Tapping
76	H-43513011	Wand / Valve Ass'y
77	H-38312019	Spring
78	N/A	O - Ring
79	H-43412007	Nozzle / Valve Ass'y
80	H-43613018	Filter Cassette & Screen Ass'y
81	H-36131097	Hose Cover
82	H-21447228	Screw - Self Tapping
83	H-36171032	Hose Clamp
84	H-21447223	Screw-Self Tapping
85	H-36433107	Tool Rack (Lower)
86	H-36433128	Hose / Nozzle Holder (Upper)
87	H-38783024	Valve Duct Seal (Located on back of item 31)
88	H-39457017	Recovery Tank Handle
89	H-36153059	Latch Arm - RH
90	H-36153060	Latch Arm - LH
91	H-37196157	Motor Cover
92	H-37278010	PCB Cover
93	H-37278011	PCB Bracket
94	H-46851033	PCB Ass'y
Items Not Illustrated		
	H-34113004	Motor Seal
	H-21447041	Screw - Tool Rack
	H-38717013	Check Valve (Sol. Tank Cap)
	H-40201171	Handle Hardware
	H-36132003	Over Center Spring
	H-36439001	Valve Crank Arm
	H-38783023	Valve Tank Seal (Located on top of valve)
	H-56518138	Owners Manual
Tools / Chemicals		
	H-38617028	Crevice Tool
	H-39514001	Nozzle Clean Out Tool
	H-40308001	Scrub Pad Poly Pack (Inc. 2 scrub pads and 1 triangular Velcro pad)
	H-38613040	Nozzle Body
	H-48417004	Bare Floor Cleaning Tool -
	H-57333016	Carpet Solution - 16 oz
	H-40303032	Bare Floor Solution - 32 oz. -
	H-40302032	Pre Spray Cleaner - 32 oz. -
	H-40301064	Carpet Solution - 64 oz
	H-40302016	Pre Spray Cleaner w/Sprayer - 16 oz.
	H-43412003	Sprayer Only - Pre Spray Cleaner