 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://Appliance Factory Parts).



# HOOVER H3030 Owner's Manual

[Shop genuine replacement parts for HOOVER H3030](#)

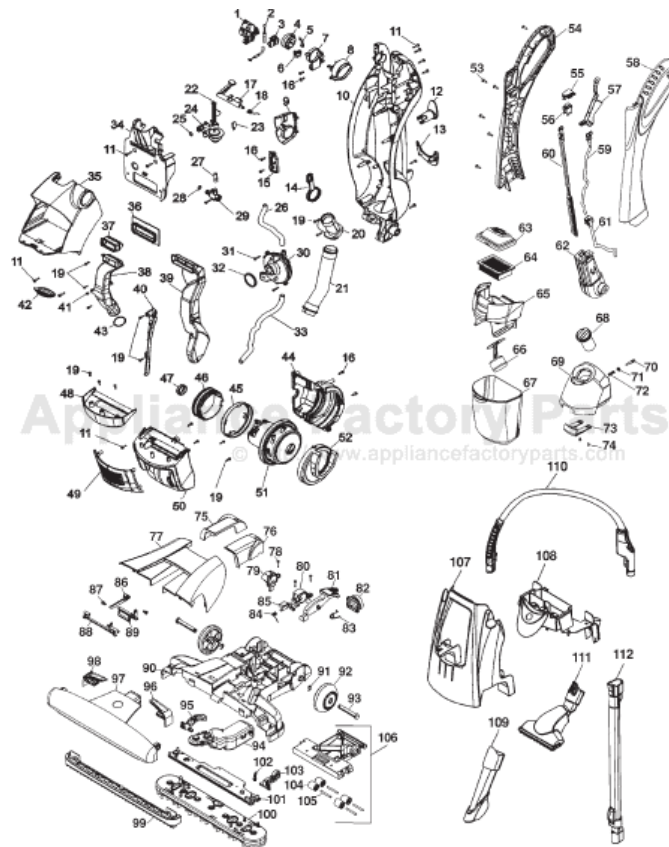

[Find Your HOOVER Vacuum Cleaner Parts - Select From 1456 Models](#)

----- Manual continues below part list -----

## Available Replacement Parts for HOOVER H3030

 
[H-40112050](#)

FILTER, FLOORMATE RECOVERY TANK (1 EACH)

# HOOVER Original

FLOOR MATE

Model H3030, H3032 H3060-900 SHOWN

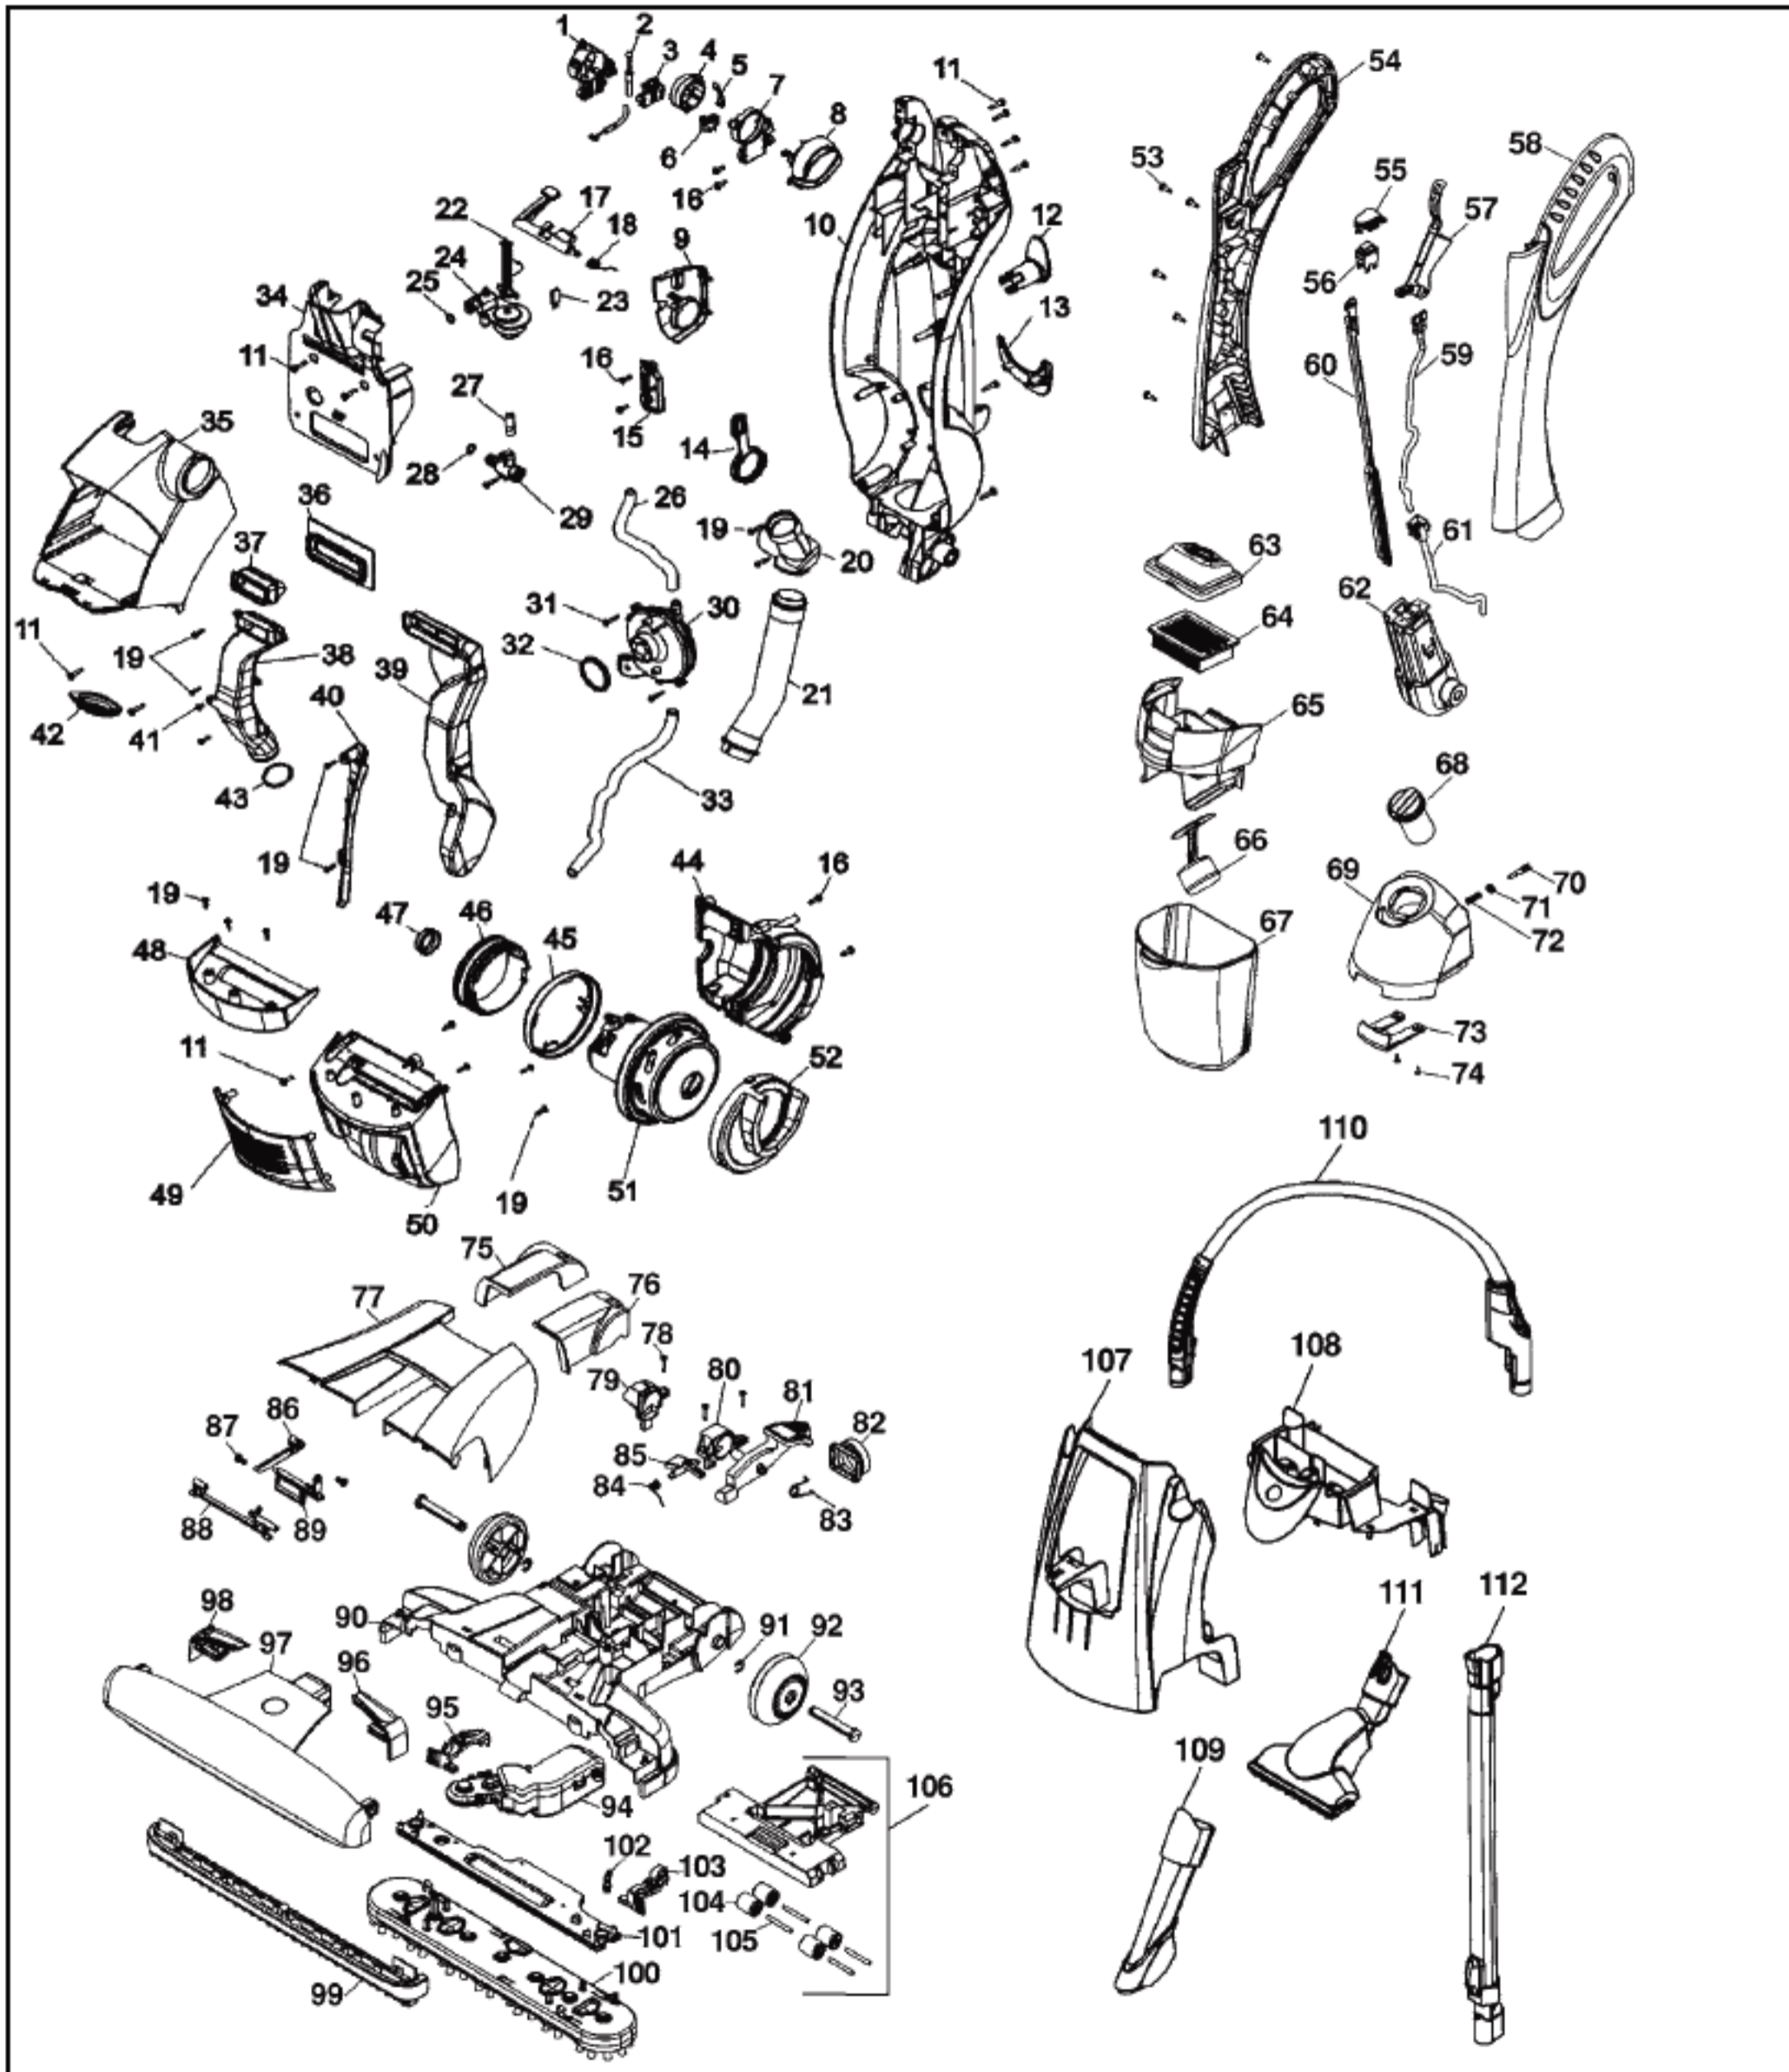

# Original **HOOVER**

FLOOR MATE

MODEL H3030, H3032 H3060-900 SHOWN

KEY	PART NO.	DESCRIPTION
1	H-93001119	Mode Control Bearing - RH
2	H-93001120	Mode Control Cable
3	H-93001136	Cable Retainer
4	H-93001121	Mode Control Actuator
5	H-93001122	Mode Control Spring
6	H-93001135	Mode Control Switch
7	H-93001123	Mode Control Bearing - LH
8	H-93001124	Mode Control Knob
9	H-93001132	Tool Door
10	H-93001128	Tank Housing
11	H-93001736	Screw #8-12 3/4"L
12	H-93001203	Attachment Cord
12	H-93001130	Upper Cord Hook
13	H-93001131	Lower Cord Hook
14	H-93001164	Tool Port Seal
15	H-93001127	Cord Retainer
16	H-93001733	Screw #8-12 1/2"L
17	H-93001156	Upper Handle Latch
18	H-93001159	Spring
19	H-93001734	Screw #6-10 1/2"L
20	H-93001172	Lower Suction Duct
21	H-93001191	Hose Ass'y
22	H-93001161	Lower Control Rod
23	H-93001160	Reset Switch
24	H-93001162	Reservoir Ass'y
25	H-93001155	O-Ring
26	H-93001134	Tubing - Pump
27	H-93001169	Tubing - Quick Disconnect
28	H-93001171	O-Ring
29	H-93001170	Quick Disconnect
30	H-93001163	Pump
31	H-93001734	Screw #6-10 1/2"L
32	H-93001168	Turbine Pump Duct Seal
33	H-93001165	Distributor Tubing
34	H-93001154	Handle Retainer
35	H-93001176	Carry Handle
36	H-93001174	Suction Duct Seal
37	H-93001175	Recovery Duct Seal
38	H-93001201	Recovery Duct
39	H-93001167	Suction Duct
40	H-93001166	Tank Housing Cord Cover
41	H-93001735	Screw #6-24 3/8"L
42	H-93001743	Seal
43	H-93001202	O-Ring
44	H-93001173	Motor Cover - Rear
45	H-93001186	Motor Seal Retainer
46	H-93001185	Motor Mount
47	H-93001184	Motor End Bearing Seal
48	H-93001198	Motor Cover Cap
49	H-93001194	Motor Cover Vent
50	H-93001193	Motor Cover
51	H-93001189	Motor Ass'y
52	H-93001190	Motor Fan Seal
53	H-93001733	Screw #8-12 1/2"L
54	H-93001138	Upper Handle - RH
55	H-93001111	Switch Boot
56	H-93001114	Main Switch

KEY	PART NO.	DESCRIPTION
57	H-93001109	Control Lever
58	H-93001116	Upper Handle - LH
59	H-93001115	Wiring Harness
60	H-93001110	Control Rod Upper
61	H-93001141	Wiring Harness
62	H-93001137	Upper Handle Core Ass'y
63	H-93001179	Filter Lid
64	H-59177051	Filter
65	H-93001180	Recovery Tank Lid Ass'y
66	H-93001183	Float
67	H-93001195	Recovery Tank
68	H-93001142	Solution Tank Cap Ass'y
69	H-93001145	Solution Tank Ass'y
70	H-93001148	Valve Stem
71	H-93001149	Valve Seal
72	H-93001150	Spring
73	H-93001151	Latch
74	H-93001735	Screw #6-24 3/8"L
75	H-93001040	Hood Rear Cover - RH
76	H-93001037	Hood Rear Cover - LH
77	H-93001057	Hood
78	H-93001736	Screw #8-12 3/4"L
79	H-93001056	Trunnion Cover - RH
80	H-93001055	Trunnion Cover - LH
81	H-93001046	Handle Release Pedal
82	H-93001052	Water Channel Grommet
83	H-93001049	Spring Handle Release Pedal
84	H-93001051	Handle Release Spring
85	H-93001050	Handle Release
86	H-93001068	Lifter Link
87	H-93001066	Pinch Pin Fastener
88	H-93001069	Brush Block Cam Arm
89	H-93001067	Front Wheel Carriage Cam Arm
90	H-93001045	Main Body H3030
90	H-93001043	Main Body H3060
91	H-59177088	Lock Ring
92	H-93001060	Rear Wheel Ass'y
93	H-93001059	Rear Wheel Axle
94	H-93001079	Brush Motor Ass'y
95	H-93001080	Brush Block Latch RH
96	H-93001072	Nozzle Latch LH H3030
96	H-93001070	Nozzle Latch LH H3060
97	H-93001078	Nozzle H3030
97	H-93001076	Nozzle H3060
98	H-93001075	Nozzle Latch RH H3030
98	H-93001073	Nozzle Latch RH H3060
99	H-93001096	Squeegee H3030
99	H-93001094	Squeegee H3060
100	H-93001090	Brush Block Ass'y H3060 (7 Brush)
100	H-93001092	Brush Block Ass'y H3060- Grout (7 Brush)
100	H-93001091	Brush Block Ass'y H3030, H3032 (6 Brush)
100	H-93001093	Brush Block Ass'y H3030, H3032 Grout)
101	H-93001085	Distributor Ass'y H3030
101	H-93001083	Distributor Ass'y H3032, H3060
102	H-93001086	Elbow Connector
103	H-93001087	Brush Block Latch LH
104	H-93001064	Front Wheel
105	H-93001065	Front Wheel Shaft
106	H-93001063	Front Wheel Ass'y
107	H-93001097	Tool/Hose Caddy
108	H-93001099	Tool/Hose Caddy Insert
109	H-93001103	Grout Tool With Brush Ass'y
110	H-93001101	Hose/Grip Ass'y
111	H-93001105	Squeegee Tool Ass'y
112	H-93001107	Extension Tube Ass'y