

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



MHP WRG4DDNS Owner's Manual

[Shop genuine replacement parts for MHP WRG4DDNS](#)



[Find Your MHP Grill Parts - Select From 101 Models](#)

----- Manual continues below -----

Supplementary Owner's Manual

WRG4 and TRG2 Infrared Gas Grills

Chef's
Gas Grill

Congratulations on your purchase of a Modern Home Products Corporation Cast Aluminum Infrared Grill. We have selected the highest quality, best cooking gas grill, manufactured by the people that invented and marketed the world's first outdoor gas grill in 1960.


The WRG4 and TRG2 feature 3 infrared burners combined with our revolutionary SearMagic® cooking combination provides one of the most versatile, reliable and intensely heated grills in the industry.

SUPPLEMENTARY ASSEMBLY INSTRUCTIONS FOR COLUMN, PATIO BASE AND IN-GROUND


Prior to assembling your WRG4 or TRG2 grill with the **Optimum Console, Patio Base or In-Ground** instructions must be followed to gain access to the mounting holes in the grill head bottom. Assembly for **WCP** or **WCN** base begins on page 6 of the enclosed MHP Owner's Manual.

1. With a slotted screwdriver or 1/4" wrench, remove the rear mounting screw on the back of the burner venturi where it meets the grill head bottom. Use a 11/32" or adjustable wrench on the nut on the outside of the grill head bottom (Fig. 1).

CAUTION: DO NOT BREAK CERAMIC ELECTRODE WHEN REMOVING OR REINSTALLING BURNERS!

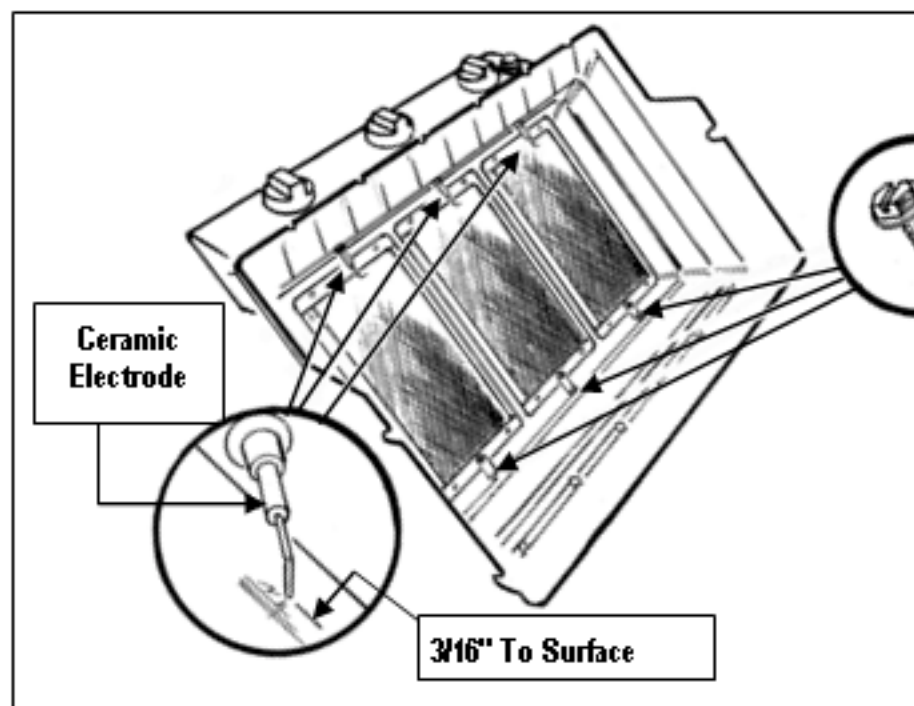

2. Under the control panel, remove the screw on the burner where it meets the orifice. Use a 1/4" wrench or a slotted screwdriver for this. (Fig. 2)

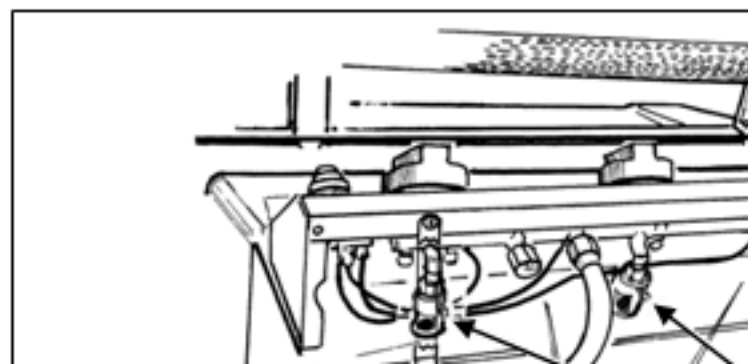

ASSEMBLY

- Once these screws are removed from the burner, carefully lift each out of the grill. For the Column, the right and left infrared burners need to be removed. For the MPB Patio Base and the MPP In-Ground Post, only the center infrared burner needs to be removed.
- Be careful not to damage the igniter when removing the burner.
- For mounting the grill head on the Column, follow the instructions on page 10 and 11 of the MHP Owner's Manual.

- For mounting the grill head on the MPP, follow the instructions on page 8 of the MHP Owner's Manual.
- For mounting the grill head on the MPP, follow the instructions on page 9 of the MHP Owner's Manual.
- After the grill head is mounted, reinstall the grill head bottom. Insert the venturi tube through the front of the grill head, and over the orifice. The burner venturi is fully engaged over the venturi tube. Tighten the venturi set screw securely.

INFRARED GRILL LIGHTING INSTRUCTION

- Always open the hood before lighting.
- Keep your head and body at least 1 foot away when lighting the grill. Do not lean over an open grill.
- Turn one burner on the "HIGH" position, and depress the electronic igniter until the burner lights.
- Proceed to light the next burner in the same fashion.

Each burner needs to be lit independently. They will not light off of each other.

- If the burners fail to light, turn control knobs off, wait 5 minutes for gas to clear and try lighting again.
- If the igniter doesn't spark, check the gap between the wire probe burner screen. It should be approximately 3/16 inches wide. If it is too small, the spark may be inefficient. Gently readjust the wire probe as needed. If the gap is normal, check the wire connections at the spark module and igniter probes, located underneath the control panel.

- If the igniter still doesn't work, try replacing the battery. Turn the collar around the igniter button clockwise. Replace the AAA battery, "+" side up.
- If ignition does not occur after replacing the battery, turn burner control knob OFF, wait 5 minutes, and repeat the lighting procedure. If the ignition system still does not work, the burners may be ignited manually. **FOR MANUAL LIGHTING:** The wire match holder (supplied with grill) holds two or three paper (safety) matches or a single long match. To light the right burner insert the match through the lower right side match hole and hold the match. Turn the burner control knob to HIGH setting. For the left burners, the lighted match(es) may be inserted through the opening on the cooking grid and held between the burners.
- After grilling, turn each burner control knob OFF. **"TURN OFF LP** supply at cylinder when not in use. **DO NOT** store extra cylinders under grill.

GRILL HEAD AND MOUNTING AT A GLANCE

WRG4 Heritage Series



TRG2 Optimum Series



INFRARED COOKING TIPS

1. Infrared gas grills get very hot. **Do not leave food unattended on the grill for any length of time.**
2. Estimate cooking times to be 30% to 50% less than a conventional grill.
3. Always thaw food thoroughly before cooking to achieve better, more predictable results.
4. Always use long handled grill tools for grilling. A grilling mitt may be useful for handling hot items.
5. The use of a fork is not recommended for grilling on your new MHP grill. A fork may mar the surface of the cooking grids. Piercing foods while cooking will allow the juices to escape, causing the finished product to be less than desired.
6. To minimize flare-up, trim fat from meats or remove skin from poultry.
7. If a flare-up occurs, don't try to control it with water. Water can cause burner damage. Instead, move the food to another part of the grill, lower the heat setting or place food on the Secondary Cooking Surface.

Burner Failure Caused By Water Damage Is Not Covered Under Warranty.

8. Cooking can be done with the hood opened or closed. With the hood open, the heat will be less intense and the smoke flavor will be less pronounced. With the hood closed, the heat will be more intense with an increase in the smoke flavor.
9. Allow the grill to heat up for 5 minutes on high before cooking.
10. Place the food on the SearMagic® cooking grids - while the grill is on high—to sear the food thoroughly. This is the key to locking in the juices for that delicious grilled flavor.
11. After searing for 2-3 minutes per side, lower the temperature to finish cooking the food as desired.
12. The SearMagic® cooking grids allow for greater versatility when grilling. Chicken breasts, steaks, and hamburgers can be seared over the ribbed side at a higher temperature. Delicate foods like seafood can be cooked over a lower temperature with the smooth side up. This can be done over each of the two sides independently, so be as creative as you want to be!
13. The Secondary Cooking Surface is more than just a warming rack. Very delicate items, such as sausages and delicate fish can be grilled, even with the intense heat that infrared burners provide.
14. Never cook over an unlit infrared burner. The drippings could cause the burner to crack when released. Use a drip pan to protect the unlit burner when cooking indirectly.

Burner Failure Caused By Cooking Over An Unlit, Unprotected Burner Is Not Covered Under Warranty.

15. To clean the grill after cooking, burn all 3 burners on high for at least 5 minutes with the hood closed. Then, on high, clean the grids with a long-handled brass bristle brush. Then use the supplied "Forked Cleaning Tool" to clean the valley areas between the main rungs. Regular cleaning will ensure optimum performance of your MHP Gas Grill.

INFRARED CARE AND MAINTENANCE

1. After each use, close the lid and turn the burners to "High" for 5 minutes. This will burn off any food drippings and enhance the grills performance and increase the burner longevity.
2. Never use water or liquid chemicals to clean the ceramic burners. Burners may be damaged.
Burner failure caused by improper care and Maintenance is not covered under warranty.
3. If the burner develops ash over the surface, clean it gently with a vacuum cleaner. Use a brush attachment so as not to damage the burner.

4. If the burners should get wet, it is important to dry it out completely before attempting to use the grill. First remove the affected burner following the instructions in the "Supplementary Assembly Instructions for Column, Patio Base, and In-Ground Post" section of the Supplementary Owner's Manual. Then, turn the burner(s) upside down to allow the water to drain out. Let the burner dry overnight before reinstalling into the grill.
5. Never let anything heavy, hard or sharp fall onto the burner. The ceramic is very fragile and can easily be damaged.

WARRANTY

LIFETIME Warranty: Top Casting • Bottom Casting • Control Panel • Side Shelf Brackets • Bottom Shelf Frame • Tank Ring • Cast Legs • Stainless Steel Fasteners • In-Ground & Patio Base Post • Stainless Steel & Aluminum Column • Stainless Steel Side Shelves • Stainless Steel Burner • Cast Stainless Steel Burners • Venturi Tube • Stainless Steel & SearMagic® Cooking Grids • Stainless Steel & SearMagic® Warming Racks

5-Year Warranty: Infrared Burners • Venturi Tubes • Porcelain Briquettes

1-Year Warranty: All Other Components Including, • Igniter System • Gas Valve • NuStone Shelves • Patio Base • Knobs • Briquette Grate

30 Day Warranty: Paint

WHAT IS NOT COVERED:

- Transportation and shipping costs.
- Labor for replacement or repairs.
- Damage from accident, misuse, alteration, abuse, improper installation or storage.
- Removal and reinstallation costs.
- Finishes on surfaces that are damaged by improper installation, improper storage, accident, misuse, abuse or alteration.
- Inoperable due to improper installation or storage.
- The costs of a service call to diagnose a problem.
- All warranties are non-transferable and apply only to the original purchaser.
- Warranties are null and void if grills are put into commercial or community use.

This warranty does not imply or assume any responsibility for consequential damages that might result from use, misuse, or improper installation of this cooking appliance.

This warranty does not cover claims, which do not involve defective workmanship or materials.

A bill of sale, cancelled check, or payment record should be kept to verify purchase date and establish warranty period.

**Modern
Home Products
Corporation**

150 South Ram Road • Antioch, Illinois 60002

Phone: (888) 647-4745 • (847) 395-6556

Fax: (800) 637-2918 • (847) 395-9121

www.mhpgrills.com • Email: customerservice@mhpgrills.com

©2008 Modern Home Products Corporation. MHP configuration, Chef's Choice, SearMagic are trademarks of Modern Home Product Corp. NuStone is a registered trademark of IDI, Inc. MHP Grills are covered by U.S. Patent Nos. 4,267,816; 4,373,505; 4,267,816; 4,488,534. Because of constant product improvement, Modern Home Products reserves the right to change specifications without notice. Rev. 2/08