 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



HOOVER S3079-030 Owner's Manual

[Shop genuine replacement parts for HOOVER
S3079-030](#)

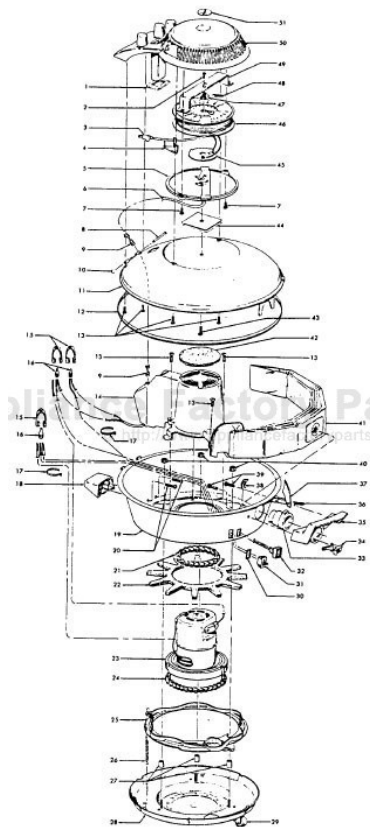


[Find Your HOOVER Vacuum Cleaner Parts - Select From 1456 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for HOOVER S3079-030

H-43267002	AGITATOR BEARING ASM
H-4010009H	PAPER BAG, 3 PK
H-43414073	Floor brush.
H-43414064	DUSTING BRUSH (ONE PEICE)

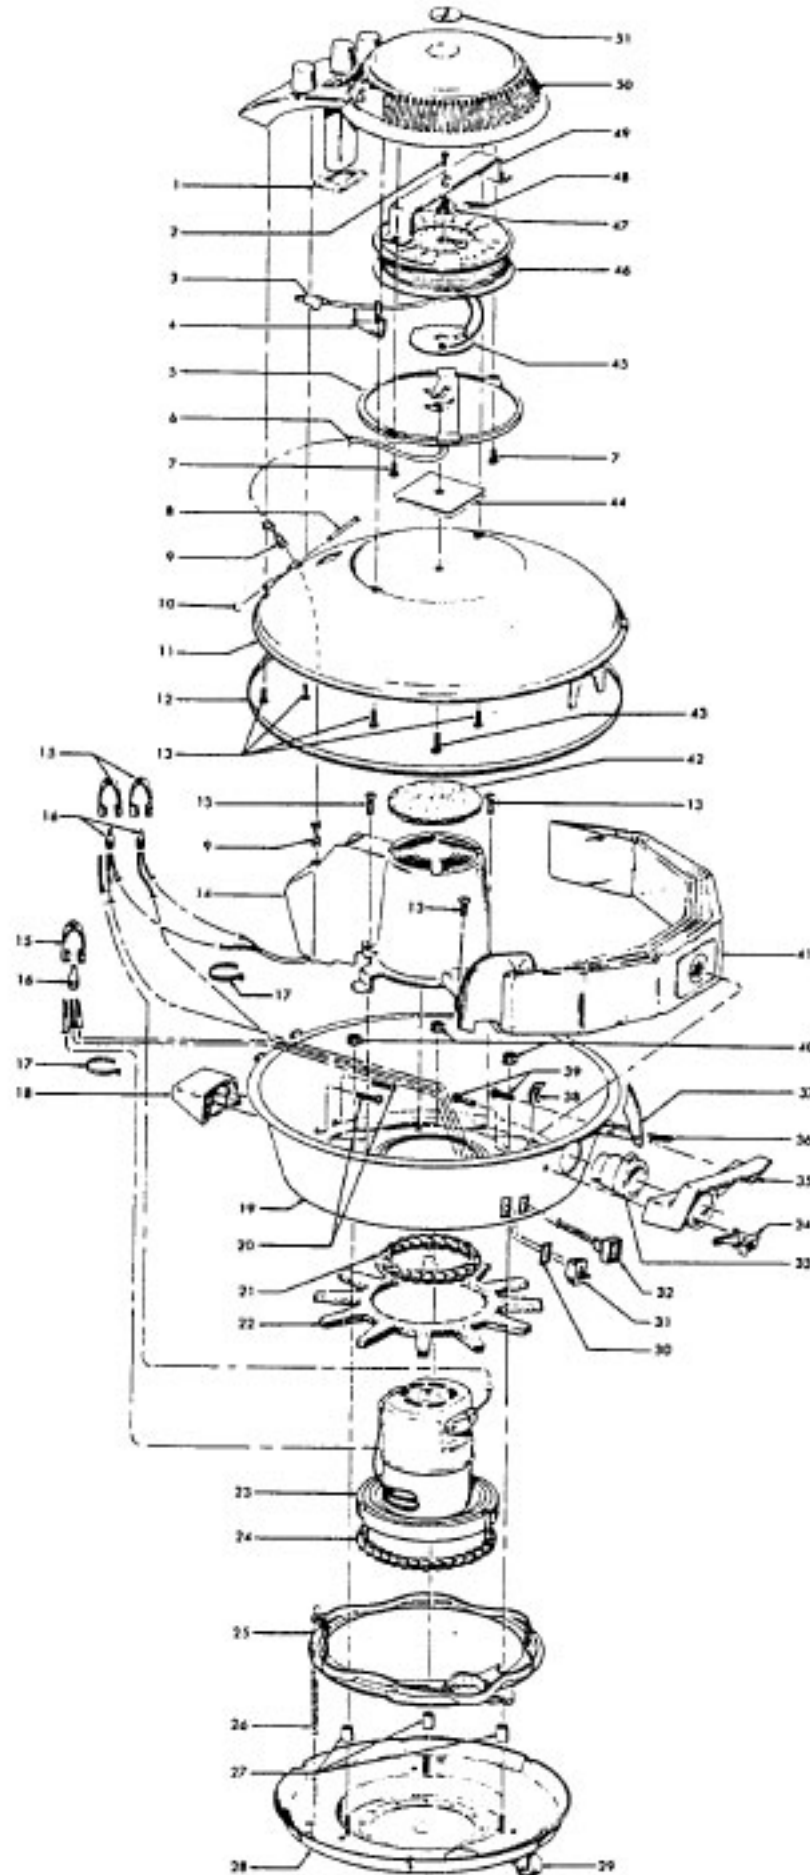 

Celebrity II


**Models S3059, S3059-030, S3079, S3079-030, S3079-035
S3127, S3149, S3161**

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	170334AG	Gasket	31	28162004	Switch
2	19765	Screw		12971	Switch - S3079, S3079-030, S3079-035, S3127, S3149, S3161
3	46383303	Cord	32	46326076	Connector
4	170368JM	Plug Insert	33	170352AG	Bag Collar Connector
5	47348006	Brush Block Comp. - S3059, S3059-030, S3079, S3079-030	34	36151012	Latch
	47348034	Brush Block Comp.	35	39457006	Handle
6	46311029	Pigtail Cord - S3059, S3059-030, S3079, S3079-030	36	48512FW	Shell Cover Latch Spring
	46313036	Pigtail Cord	37	16439EW	Shell Cover Latch
7	17001FW	Screw (2)		16439JX	Shell Cover Latch - S3079, S3079-030, S3079-035, S3127, S3149, S3161
8	47938	Hinge Pin	38	34341006	Retaining Clip - S3059, S3059-030
9	27482227	Strain Relief Bushing (2)		13312	Retaining Clip
10	48123AV	Lock Ring	39	166735EF	Screw (2)
11	42211187	Upper Shell	40	21652003	Nut - Hex (3)
	42211157	Upper Shell - S3079, S3079-030, S3079-035	41	4010009H	Throw Away Bag (3 Pk.)
	42211002	Upper Shell - S3127	42	170332BZ	Secondary Filter
	42211158	Upper Shell - S3149	43	21447003	Screw
	42211159	Upper Shell - S3161	44	34165002	Brush Block Insulator (2)
12	170361JM	Furniture Guard	45	46831076	Commutator
13	12619	Screw (7)	46	46831015	Cord Reel Comp.
14	170375JM	Motor Cover	47	19999	Ratchet
	37196054	Motor Cover - S3079-035, S3161	48	38331004	Detent Spring
	37196033	Motor Cover - S3127, S3149	49	170343AY	Cord Reel Bracket
15	161881	Terminal Lock (3)	50	37215011	Cord Reel Housing
16	48969	Wire Nut (3)		37215052	Cord Reel Housing - S3079, S3079-030, S3079-035
17	27479307	Wire Tie (2)		37215053	Cord Reel Housing - S3127, S3149
18	170359FP	Rear Rest Pad		37215054	Cord Reel Housing - S3161
19	42213120	Intermediate Shell Comp.	51	51661008	Medallion
	42213335	Intermediate Shell Comp.			
20	21447014	Screw (2)			
21	169293	Motor Mount - Upper			
22	31194005	Muffler			
23	43577074	Motor - 3.7 - (P - 60)			
	43177008	Motor - S3079, S3079-030, S3079-035, S3127, S3149, S3161 - 7.2 - (P - 39)			
24	169294	Motor Mount - Lower			
25	170374JM	Blower Valve			
26	170339	Spring			
27	31721004	Spacer (3)			
	31721025	Spacer (3) - S3161			
28	41421311	Bottom Pan Comp.			
	41421169	Bottom Pan Comp.			
	41421180	Bottom Pan Comp.			
	41421189	Bottom Pan Comp. - S3079, S3079-030, S3079-035, S3127, S3149			
	41421318	Bottom Pan Comp. - S3161			
29	23737202	Caster Wheel (3)			
30	34138005	Switch Sealing Gasket			



ITEMS NOT ILLUSTRATED		
	170351AW	Hinge Leaf Upper (Upper Shell)
	34353001	Switch Insulation - S3079, S3079-030, S3079-035, S3127, S3149, S3161

PACKAGING MATERIAL		
	58185091	Carton - Celebrity w/ Power. Nozzle
	58185001	Carton - S3059, S3059-030
	58185062	Carton - S3079, S3079-030, S3079-035, S3127
	58185024	Carton - S3149
	58185038	Carton - S3161
	58132009	Nozzle Carton
	58332001	Nozzle Support
	56513099	Owner Manual

 Powermatic Nozzle

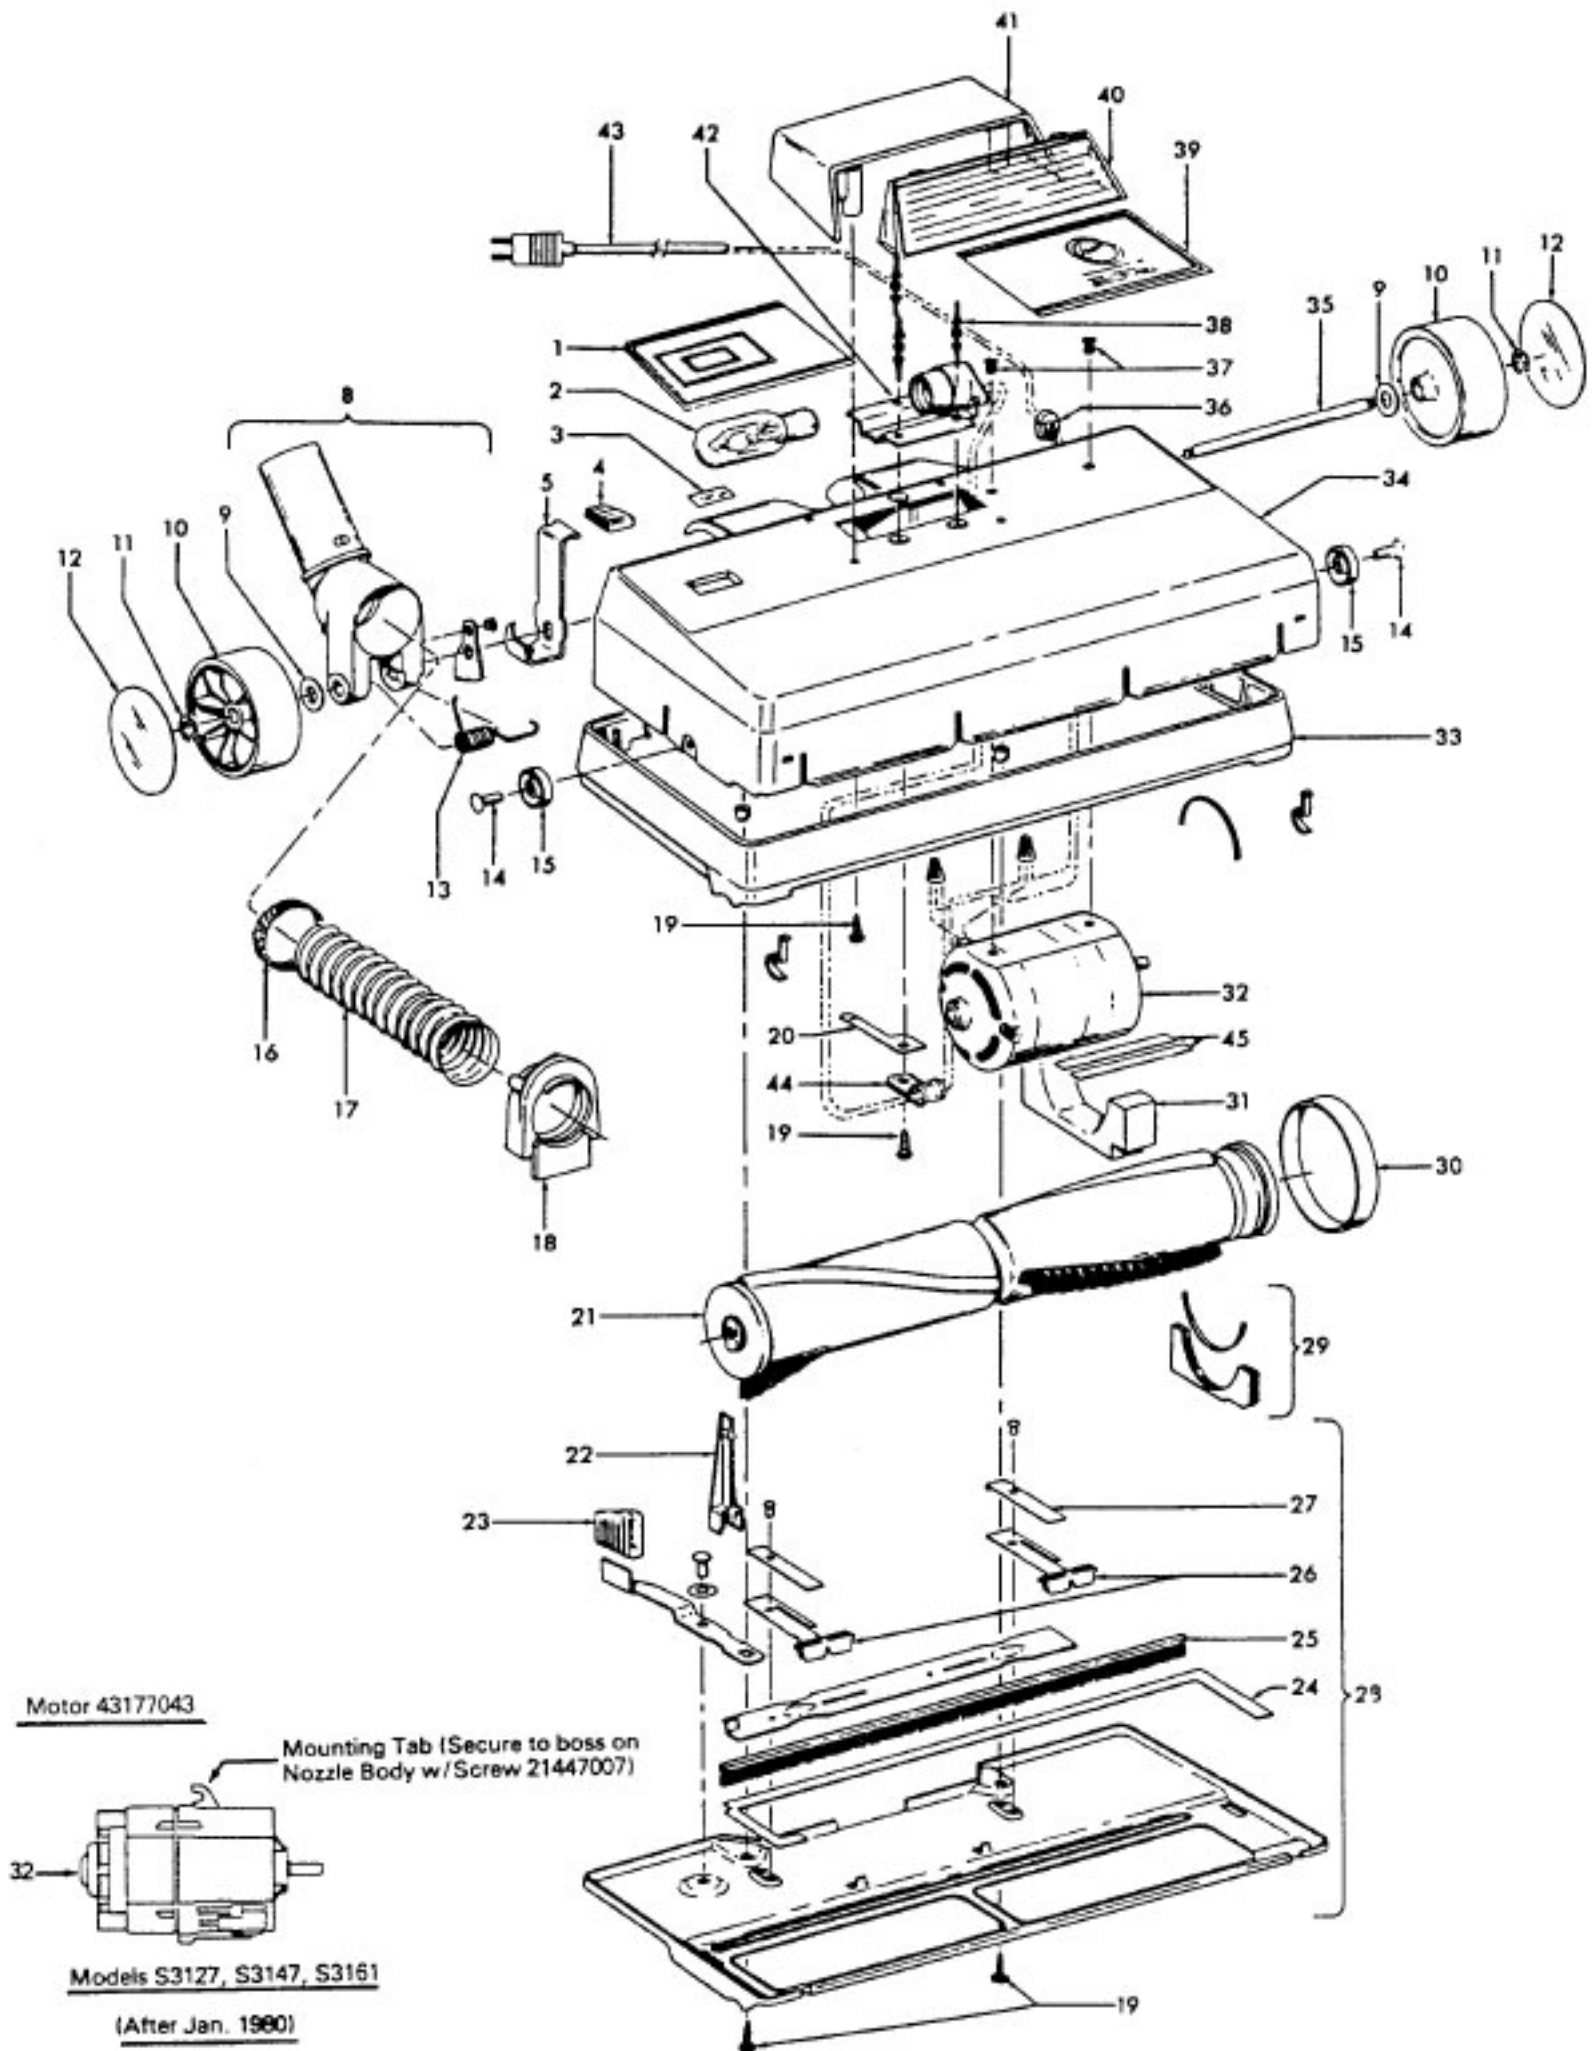


  Models S3057, S3059, S3059-030, S3061, S3061-030, S3077, S3079, S3079-030, S3079-035, S3081, S3083, S3083-030, S3093, S3127, S3131, S3131-030, S3133, S3135, S3137, S3139, S3139-035, S3141, S3147, S3149, S3153, S3161, S3173

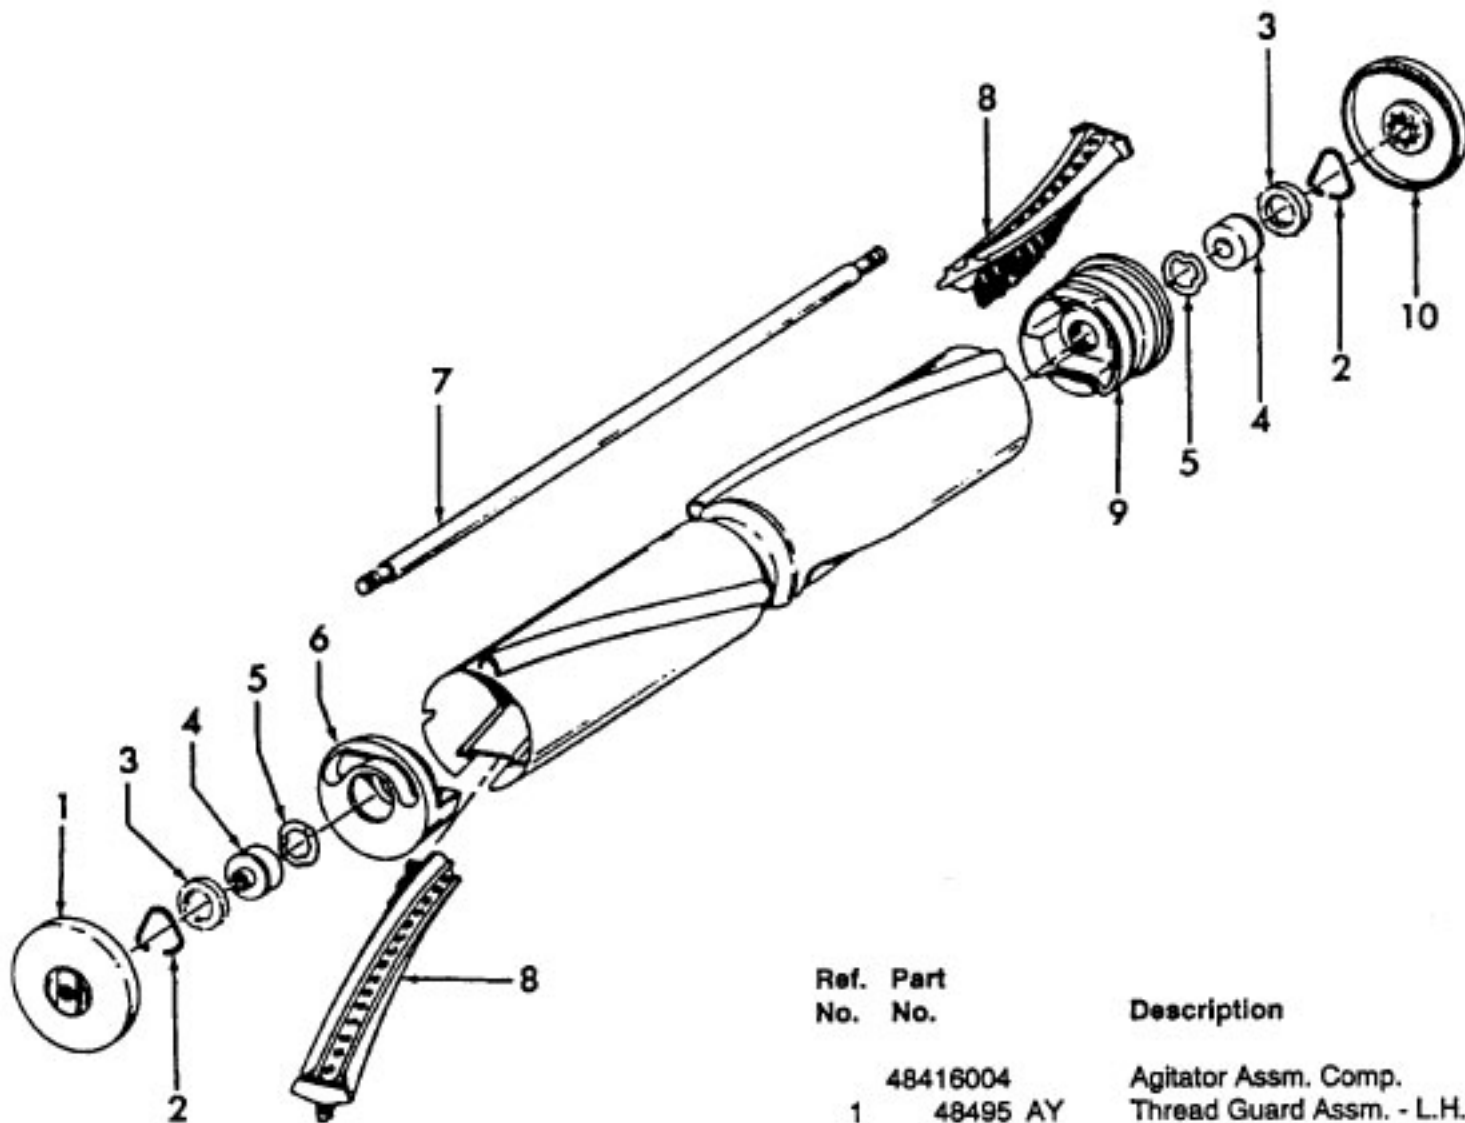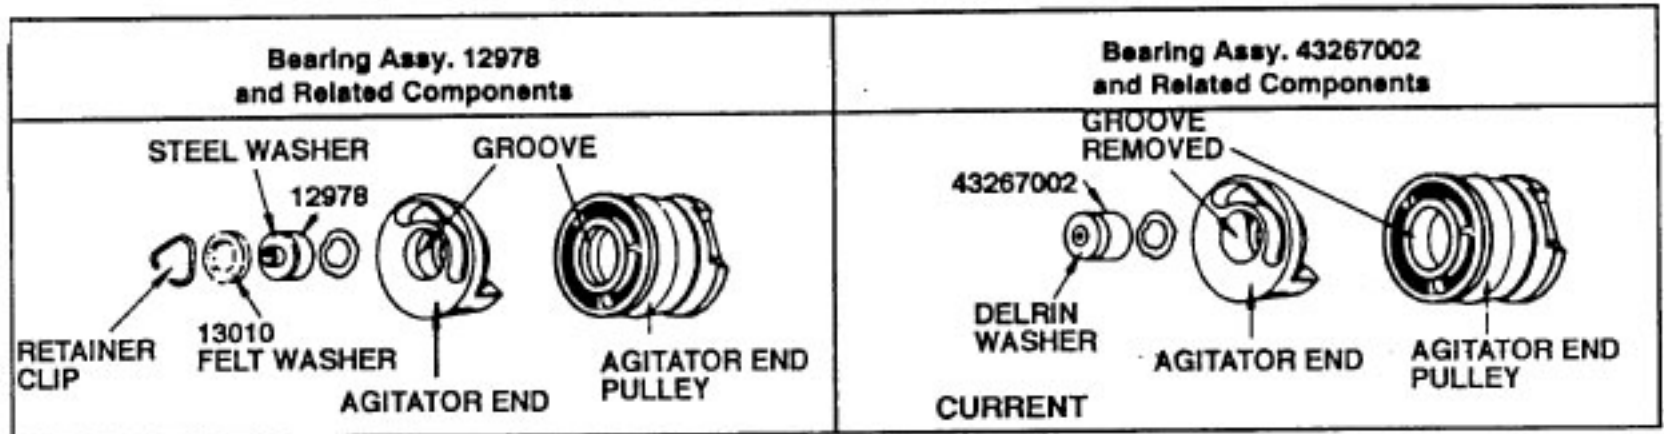

Ref. No.	Part No.	Description
	48416004	Agitator Assm. Comp.
1	48495 AY	Thread Guard Assm. - L.H.
2	12987	Retainer Clip (2)
3	13010	Washer - Felt (2)
4	12978	Agitator Bearing Assm. (2) (Use w/item 2 & 3)
	43267002	Agitator Bearing Assm. (2) (Current)
5	21347003	Washer (2)
6	160542	Agitator End Assm.
7	160070	Agitator Shaft
8	160646 BZ	Agitator Brush Back Assm. (2)
9	160538	Agitator End Pulley
10	12985 AY	Agitator Thread Guard Assm. - R.H.

 
S3073, S3073-030, S3079, S3079-030, S3079-035, S3081,
 S3083, S3083-030, S3093, S3121, S3123, S3125, S3125-030,
 S3127, S3131, S3131-030, S3133, S3135, S3147, S3149, S3159
 S3161, S3165, S3167, S3169, S3215

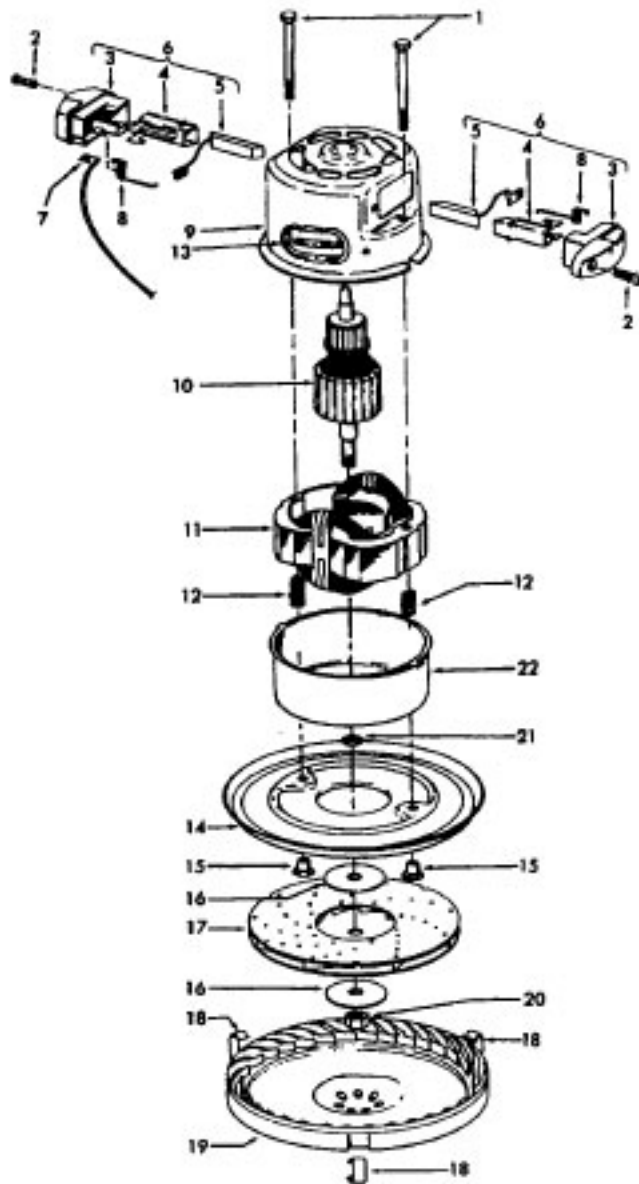

Ref. No.	Part No.	Description
1	33421004	Field Lamination Bolt
2	21429406	Screw
3	167696AG	Brush Housing - Only
4	N/A	Brush Holder - Use Brush Carrier Assem. 47318008 It. 6.
5	167681	Carbon Brush & Terminal
6	47318008	Brush Housing - Comp.
7	27666551	Terminal
8	38353004	Spring
9	169707	Motor Housing - Upper
10	168479	Armature
11	168470	Field
12	167721FW	Spring
13	169702BZ	Bushing
14	169713FW	Motor Mounting Plate
15	167695EF	Nut
16	21312774	Washer
17	43566006	Fan
18	34785004	Spring Clip
19	169714AG	Diffuser
20	33426001	Nut
21	31148002	Spacer
22	41823002	Motor Housing - Lower

Cleaning Tools

 Models S3059, S3059-030, S3061, S3061-030, S3079,
S3079-030, S3083, S3083-030, S3127, S3147, S3149, S3161

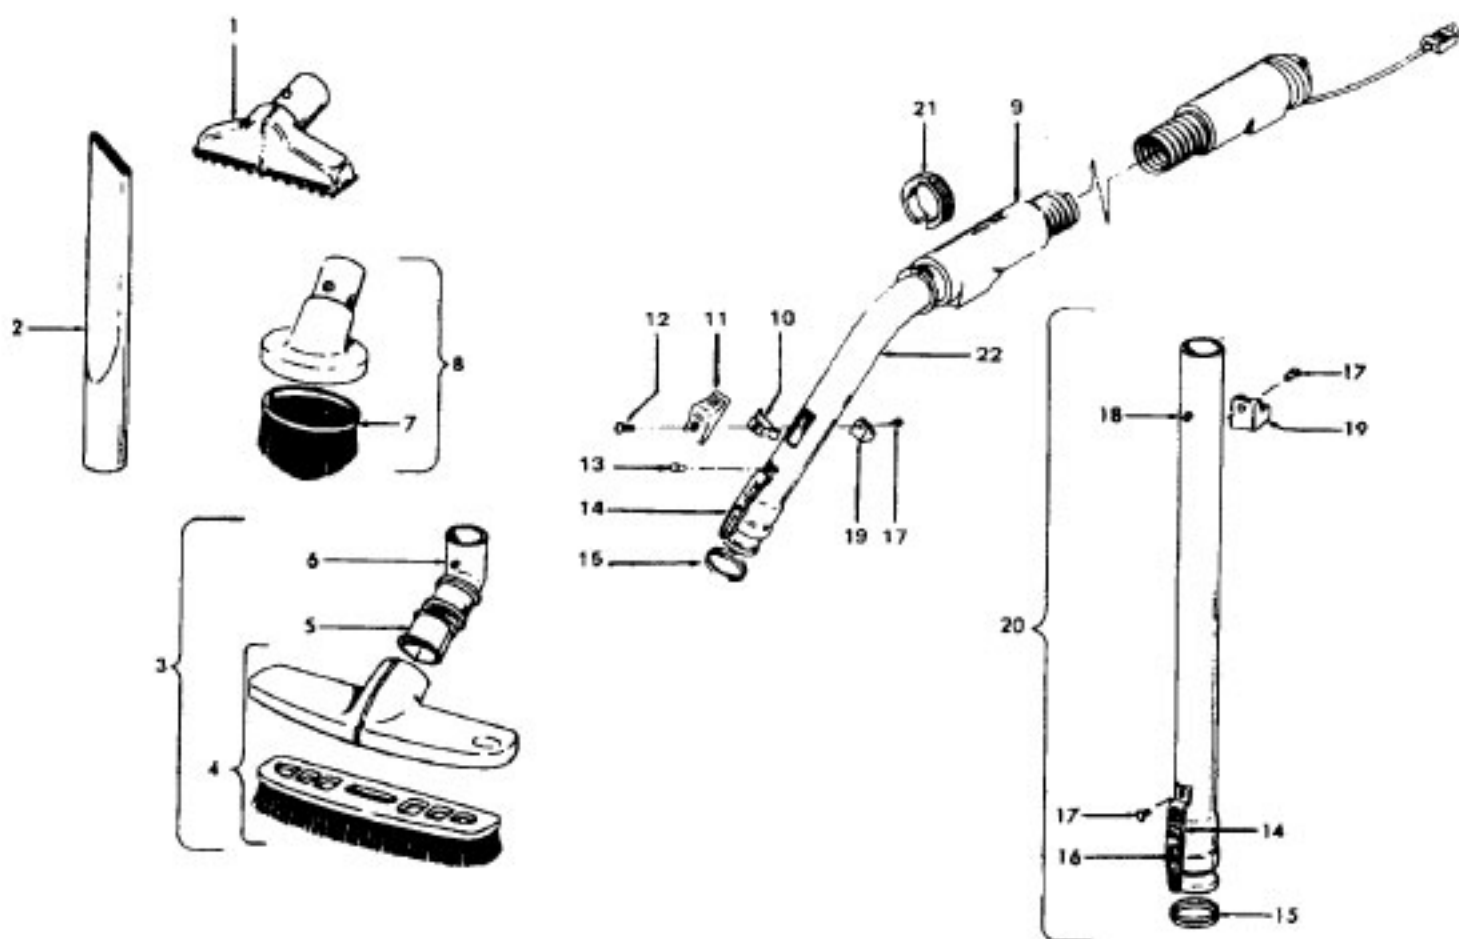

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	43414057	Furniture Nozzle Comp.	10	13257BZ	Suction Regulator Support
2	38617017	Crevice Tool	11	13142AG	Suction Regulator Control
3	13077JM	Floor Brush Assm.	12	13275	Screw
	43414073	Floor Brush Assm.	13	12783	Rivet
4	13155JM	Brush Back & Nozzle Assm. (Use w/13077JM)	14	12846AG	Tube Latch (2)
5	13276	Floor Brush Swivel Bushing (Use w/13154JM)	15	12845JM	Gasket (2)
	33712007	Split Ring (Use w/38644040)	16	12772	Rivet
6	13154JM	Swivel Connector (Use w/13077JM)	17	12783	Rivet (2)
	38644040	Swivel Connector (Use w/48473025)	18	12763AW	Rivet
7	13263BZ	Brush (Use w/ 61851 JM)	19	36171005	Cord Clip
8	161851JM	Dusting Brush Comp.	20	43453085	Ext. Tube (2) (17")
	43414064	Dusting Brush (One Piece)		43453052	Ext. Tube 20 - AX- S3127, S3161
9	43438022	Current Carrying Hose & Tube	21	36153009	Latch Ring
	43433085	Current Car in Hose	22	43468055	Hose Tube (Early)
				43453023	Ext. Tube - AX- 20 - S3127, S3161 (Current)
				170110	Shag Vac Rake - S3161 S3149