


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



# HOOVER S3219 Owner's Manual

[Shop genuine replacement parts for HOOVER S3219](#)

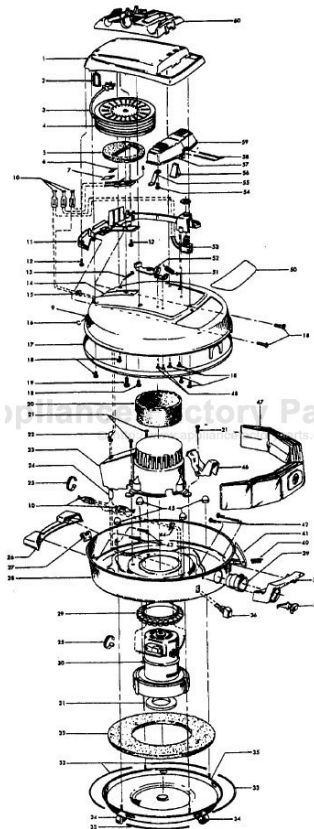


[Find Your HOOVER Vacuum Cleaner Parts - Select From 1456 Models](#)

----- Manual continues below part list -----

## Available Replacement Parts for HOOVER S3219

<a href="#">H-4010009H</a>	PAPER BAG, 3 PK
<a href="#">H-43414073</a>	Floor brush.
<a href="#">H-43414064</a>	DUSTING BRUSH (ONE PEICE)
<a href="#">HR-5000</a>	EXTENSION TUBE

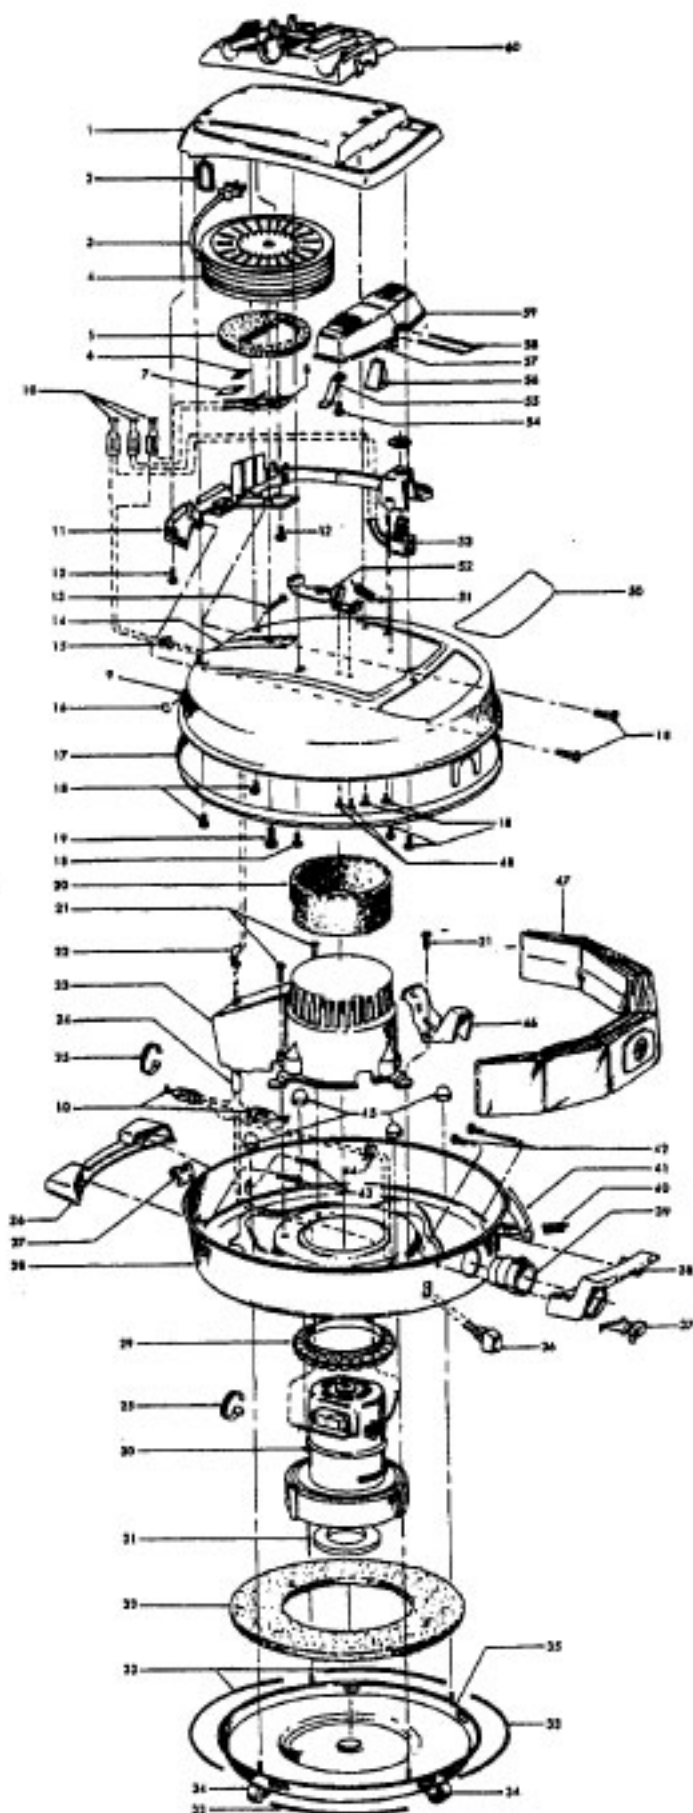

Ref. No.	Part No.	Description
1	37215125	Cord Reel Cover - LB
2	36218014	Cord Guide - LZ
3	46363224	Attach. Cord - AAP - 20
4	46831106	Cord Reel - AAP
5	31193010	Seal
6	21366004	Speed Nut
7	34141004	Wire Shield
8	47348045	Brush Block
9	35214004	Hinge Leaf - Upper
10	48969	Wire Nut
11	37215135	Cover Plate - LB
12	21447003	Screw
13	47938	Hinge Pin
14	42211304	Upper Shell - LB
15	27482120	Strain Relief
16	48123AV	Lock Ring
17	170361JM	Furniture Guard
18	21447014	Screw
19	21447003	Screw
20	38764006	Filter
21	17001FW	Screw
22	27482227	Strain Relief
23	37196070	Motor Cover - JM
24	46311142	Pigtail Cord
25	27479307	Wire Tie
26	36921008	Rest Pad - LU
27	170348AW	Hinge Leaf - Lower
28	42213029	Intermediate Shell - LU
29	169293	Resilient Mount - Upper
30	43577101	Motor - 2.6 - (P - 90)
31	31178015	Compression Pad
32	31178012	Muffler
33	34111002	Gasket
34	23737202	Caster Wheel
35	41421109	Bottom Pan - LU
36	46326096	Receptacle - JM
37	36151012	Latch
38	39457009	Handle - LU
39	170352AG	Bag Collar Connector
40	48512FW	Spring
41	16439JX	Latch
42	21447024	Screw
43	21447014	Screw
44	34723001	Retainer Clip
45	21851003	Nut
46	37959020	Wire Cover - JM
47	4010009H	Throw Away Bag (3 Pk.)
48	38198	Screw
50	52125055	Nameplate - S3195
	52125069	Nameplate - S3219
51	38332001	Spring
52	43138024	Brake Assm. w/Pad
53	28212008	Switch
54	21447017	Screw
55	34661007	Cam
56	34783003	Spring
57	38433060	Brake Pedal - LU
58	31514004	Shaft
59	38433053	Switch Pedal - LU
60	36433031	Tool Rack - LB
58	35214004	Hinge Leaf - Upper

ITEMS NOT ILLUSTRATED


46831076	Commutator (Component of Cord Reel Assm.)
56513129	Owner Manual
58185079	Carton - S3219
58343015	Bottom Support
58346003	Top Support
58177087	Carton - Celebrity w/o Power Nozzle

# Celebrity Motor

Models S3129, S3137, S3171, S3187, S3193,  
S3195, S3199, S3201, S3219, S3237, S3239

Motor - 2 Speed 43577093 (3.7)



Motor - 43577101 (2.6)

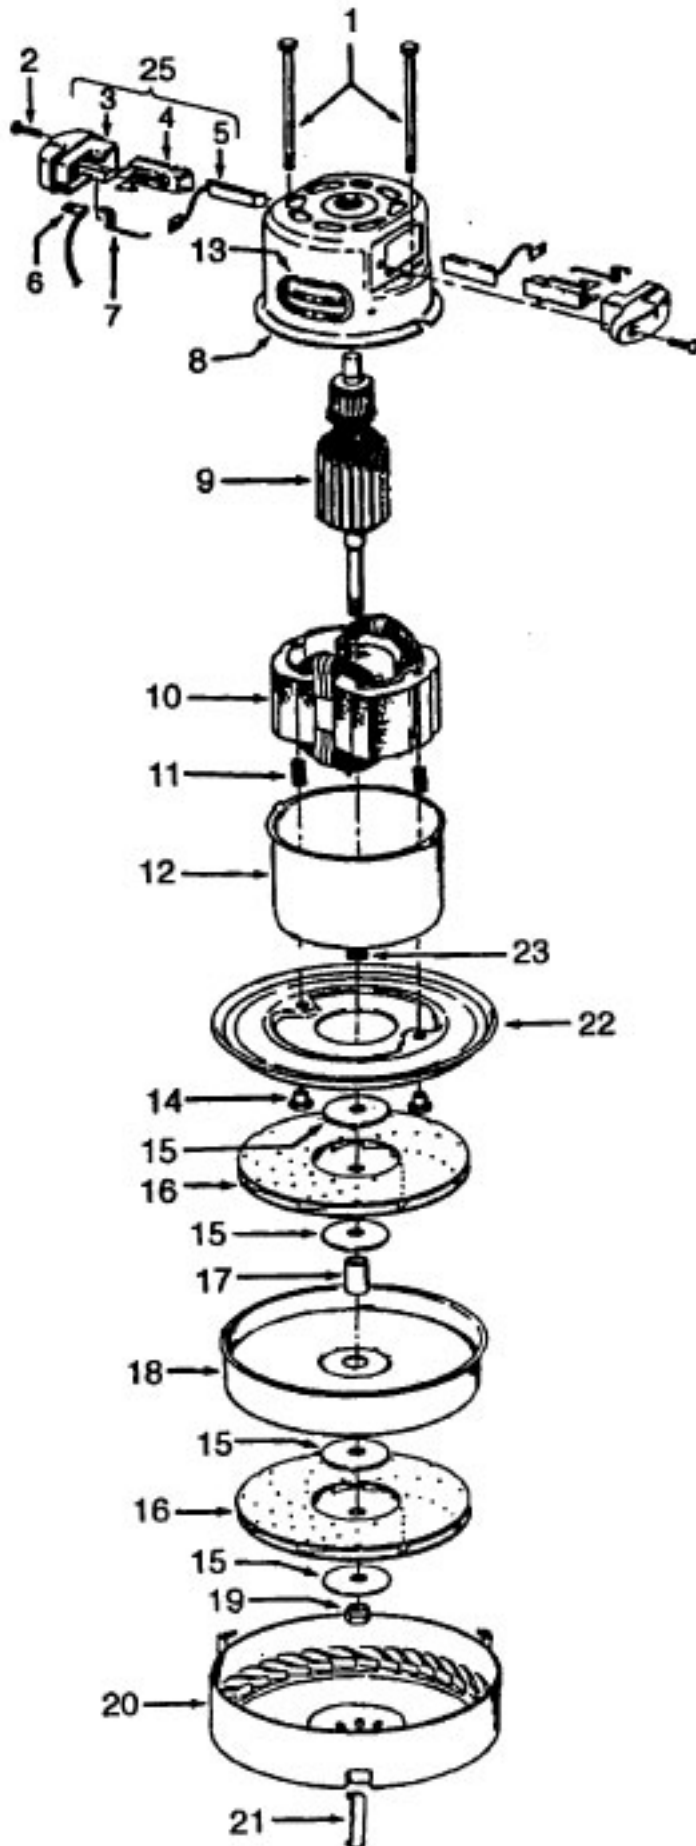

Ref. No.	Part No.	Description
	43577101	Motor - (2.6) S3129, S3137, S3171, S3187, S3193, S3195, S3219
	43577093	Motor Comp. - (3.7) S3199, S3201, S3237, S3239
1	12022	Field Bolt
2	21429406	Screw
3	168038	Brush Carrier
4	168506-	Brush Holder
5	167679	Carbon Brush
6	27666551	Terminal
7	38353004	Spring
8	169706	Motor Housing - Upper
9	44765078	Armature (2.6)
	44765106	Armature (3.7)
10	45311017	Field Coll (2.6)
	45311018	Field Coll (3.7) 2-Speed
11	167721FW	Spring (3.7)
	38311016	Spring (2.6)
12	41823001	Motor Housing - Lower
13	169702BZ	Bushing
14	167695EF	Nut
15	21312774	Washer
16	43566006	Fan
17	31732003	Spacer
18	169712	Interstage
19	33426001	Nut
20	37218005	Diffuser
21	34786002	Spring Clip
22	169713FW	Mounting Plate
23	31148002	Spacer
25	168506	Brush Carrier Assm.

# Powered Nozzle & Agitator


Models S3195, S3195-030

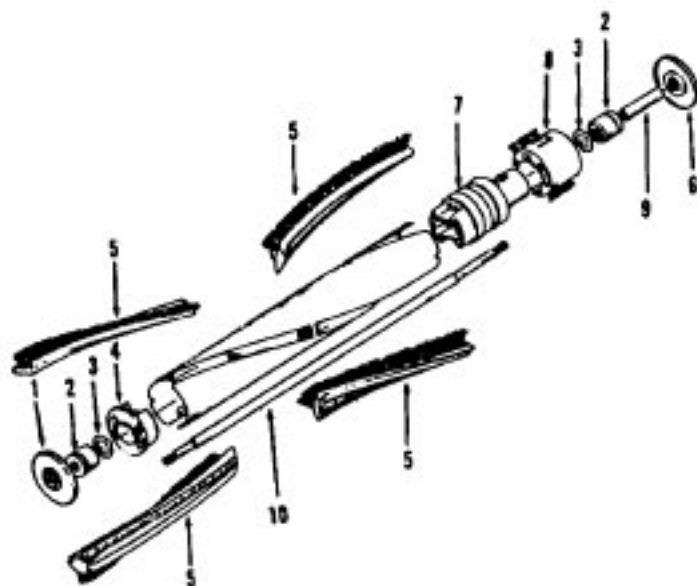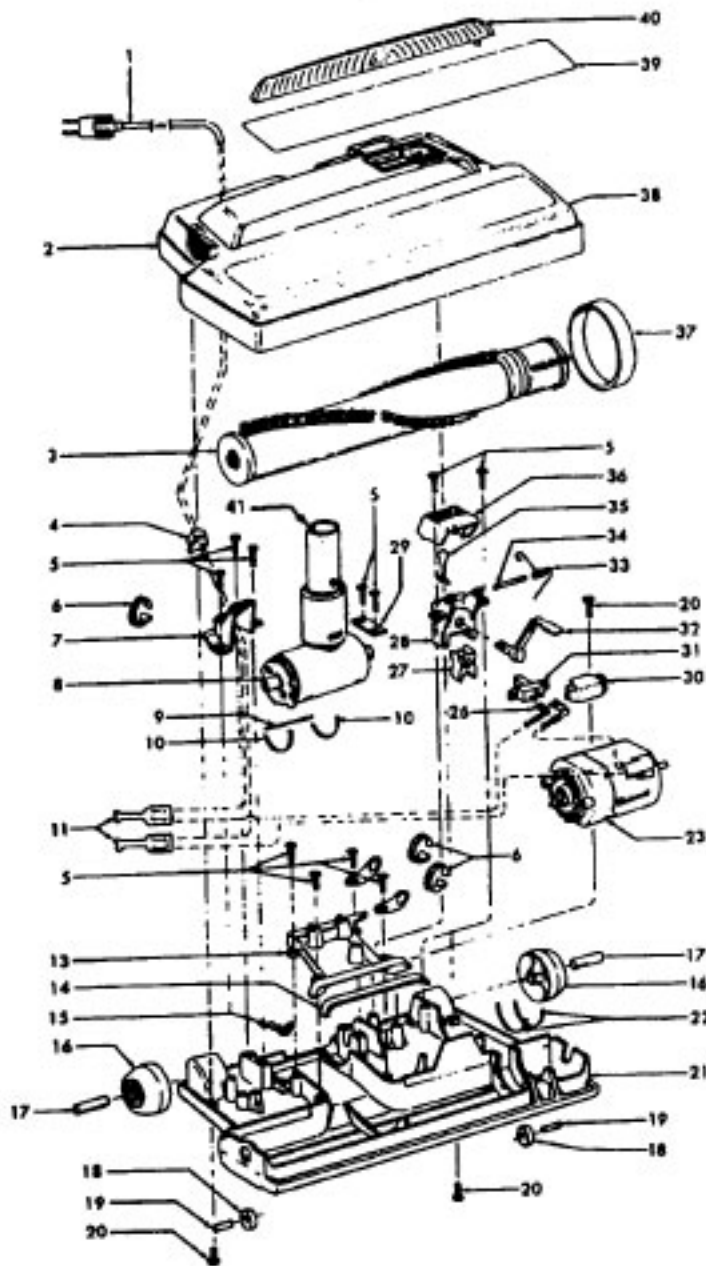

Ref. No.	Part No.	Description
1	46321005	Attachment Cord
2	36231096	Furniture Guard - MY
3	48416030	Agitator - 4B
4	163768	Strain Relief
5	21447041	Wire Tie
6	27479307	Wire Tie
7	36131020	Retainer Housing
8	43461021	Nozzle Connector - AG
9	34112005	Seal
10	34337003	Seal
11	48969	Wire Nut
13	42256098	Duct Cover
14	34123017	Seal
15	35276001	Retent Spring
16	32175025	Wheel - AG
17	31523005	Shaft
18	32761001	Wheel
19	31522004	Wheel Shaft
20	21447007	Screw
21	42246121	Base Plate (Inc. items 16, 17, 18, 19, 22)
22	34337004	Seal
23	43177073	Motor
26	27666702	Terminal
27	34361001	Switch Actuator
28	42262032	Housing
29	36131017	Retainer
30	37258082	Shield
31	281770KD	Switch
32	51151053	Indicator
33	38353007	Torsion Spring
34	31523006	Pivot Pin
35	38458002	Depressor
36	38433044	Switch Pedal - MY
37	38528011	Belt
38	42252189	Nozzle Body
39	52125092	Nameplate
40	37246100	Panel-LB
41	43457037	Swivel Tube - AG
	48438016	Power Nozzle - LB
<b>Agitator</b>		
1	48495AY	Thread Guard
2	43267002	Bearing
3	21347003	Washer
4	41435023	Agit. End (Inc. items 2,3)
5	48445017	Agitator Brush
6	41435018	Thread Guard
7	38537008	End Pulley
8	48418001	Brush Ring
9	31722019	Spacer
10	32724005	Shaft
	48416030	Agitator Comp.

# Cleaning Tools

# Spirit & Celebrity

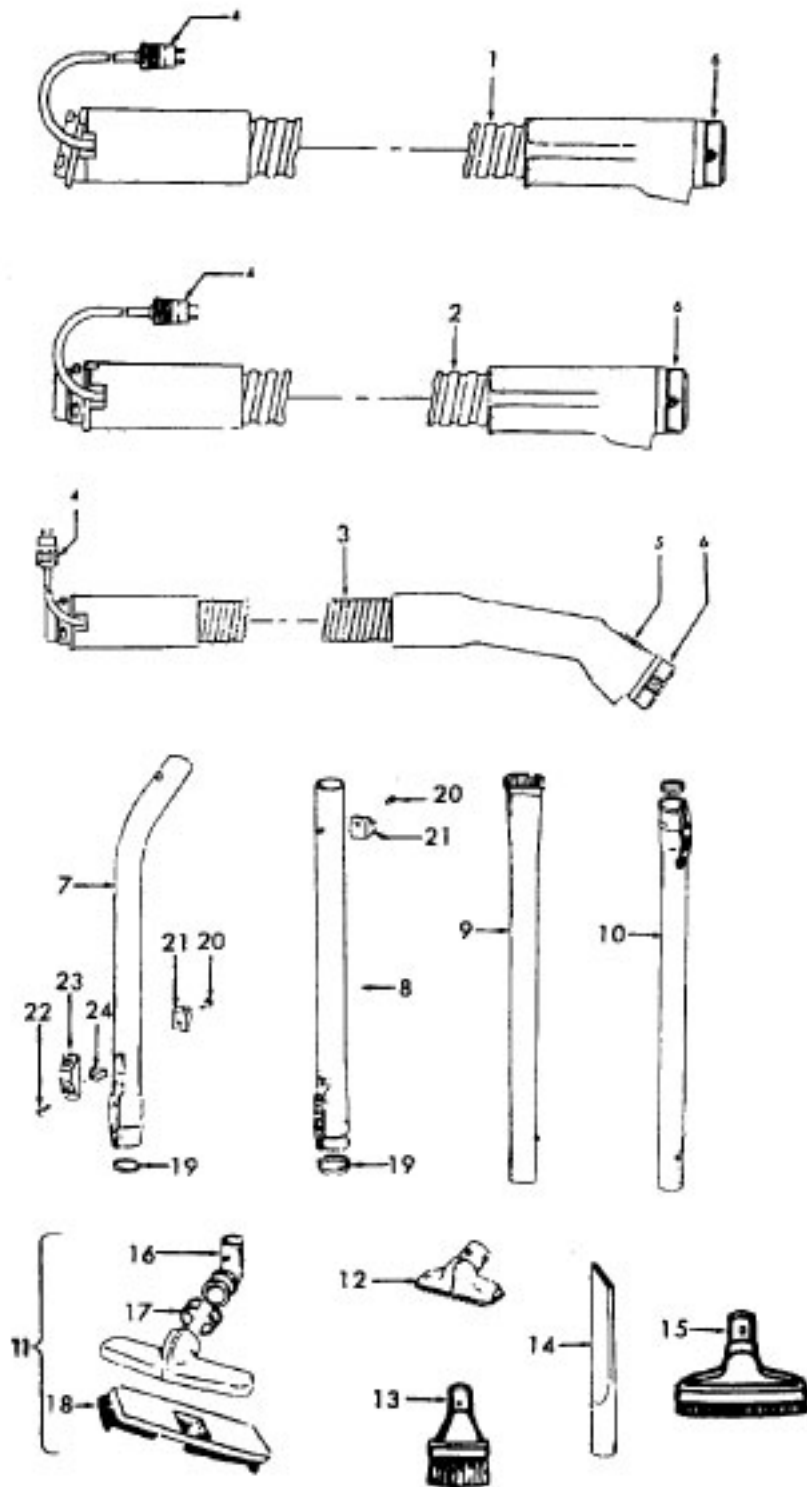

Ref. No.	Part No.	Description
1	43433085	Hose - AAP - Celebrity
2	43433032	Hose - JM - Spirit - 5-1/2'
3	43433067	Hose - AAP - Spirit - 5-1/2'
	43433081	Hose - MV -S/C- Spirit - 5-1/2'
	43433084	Hose - AAP - S/C - Spirit - 7'
	43433111	Hose - 2W - AG -S/C - Spirit
4	46321076	Cord Repair Kit
5	34777005	Suction Reg. Control - AG
	34777007	Suction Reg. Control - MV
6	36153009	Latch Ring - AG
7	43468055	Hose Tube - BL - 14
8	43453086	Extension Tube - BL - 22
	43453035	Extension Tube - AX - 22
	43453052	Extension Tube - 20 - AX (Gray Clip)
	43453058	Extension Tube - BL - 20 (Gray Clip)
9	3863801P	Extension Tube -Poly - AG
10	43453027	Extension Tube
11	43414073	Floor Brush - AG
12	38614023	Furniture Nozzle - 1 Pc. - 17
	43414057	Furniture Nozzle - AG
	38614024	Furniture Nozzle - AG
13	43414064	Dusting Brush - AG
14	38617017	Crevice Tool - AG
15	43414015	Furniture Brush - JM
	43414016	Furniture Brush - AG
16	38644040	Swivel Connector - JM
	38644020	Swivel Connector - AG
17	33712007	Split Ring
18	48447001	Brush Back
19	12845JM	Gasket
20	12783	Rivet
21	36171008	Cord Clip - MV
	36171005	Cord Clip - AG
22	13275	Screw
23	13142AG	Suction Control
24	13257BZ	Support