

**Celebrity**

**Models S3199, S3201, S3237, S3239**


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	37215115	Cord Reel Cover - LB	45	46326096	Receptacle - JM
	37215117	Cord Reel Cover - LZ	46	36151012	Latch
2	36218014	Cord Guide - LZ	47	39457006	Handle - S3199, S3239, S3237
3	0M100206	Attach. Cord - AG - 25'		39457009	Handle - LU - S3201
	46383308	Attach. Cord - AAP - 23' - S3237, S3239		39457011	Handle - M
4	46831106	Cord Reel - AAP		39457012	Handle - MD
5	31193010	Seal	48	170352AG	Bag Collar Connector
6	21366004	Speed Nut	49	48512FW	Spring
7	34141004	Wire Shield	50	16439LT	Latch
8	47348045	Brush Block		16439JX	Latch
11	37215136	Cover Plate - LS - S3199		16439EW	Latch
	37215135	Cover Plate - LB - S3201	51	21447024	Screw
	37215137	Cover Plate - LZ - S3237, S3239	52	37959020	Wire Cover - JM
12	28212004	Switch	53	34723001	Retainer Clip
13	38332001	Spring	54	17001FW	Screw
14	43138024	Brake Assm. w/Pad	55	4010009H	Throw Away Bag (3 Pk.)
15	47938	Hinge Pin	57	38198	Screw
16	21447003	Screw	59	28375002	Vacuum Switch
17	27482120	Strain Relief	60	31144003	Foam Seal
18	35214004	Hinge Leaf - Upper	61	42914004	Switch Mount
19	48123AV	Lock Ring	62	27333004	Indicator Light
20	42211267	Upper Shell - AX	63	28162006	Switch
21	170361LR	Furniture Guard	65	21447017	Screw
	170361JM	Furniture Guard	66	34661007	Brake Pedal Cam
	170361LZ	Furniture Guard	67	34783003	Spring
22	21447014	Screw	68	38433057	Brake Pedal - LT - S3199
23	21447003	Screw		38433058	Brake Pedal - LU - S3201
24	46511006	Pigtail Cord		38433060	Brake Wheel - WW - S3237
25	38764006	Filter		38433061	Brake Pedal - MD - S3239
26	27482227	Strain Relief	69	38433052	Switch Pedal - LT - S3199
27	37196070	Motor Cover - JM		38433053	Switch Pedal - LU - S3201
28	48969	Wire Nut		38433047	Switch Pedal - MD - S3237, S3239
29	27479307	Wire Tie	70	31514004	Shaft
30	21851003	Nut	71	51375052	Nameplate
31	21447014	Screw		51375053	Nameplate - S3201
32	36921011	Rest Pad - LT - S3199		51375048	Nameplate - S3199, S3201, S3237
	36921008	Rest Pad - LU - S3201, S3237, S3239		51375049	Nameplate - S3239
33	170348AW	Hinge Leaf - Lower	72	36433032	Tool Rack - LS - S3199
34	42213029	Intermediate Shell - M		36433031	Tool Rack - LB - S3201
35	169293	Resilient Mount - Upper		36433034	Tool Rack - LZ - S3237, S3239
36	43577093	Motor - 3.7 - (P - 90)	ITEMS NOT ILLUSTRATED		
37	31178015	Compression Pad		46831076	Commutator (Component of Cord Reel Assm.)
38	31178012	Muffler		56513133	Owner Manual - S3199, S3201
39	13730	Lock Ring		56513194	Owner Manual - S3237, S3239
40	34111002	Gasket		58343015	Bottom Support
41	41421276	Bottom Pan - M - S3199, S3201, S3237		58346003	Top Support
	41421277	Bottom Pan - MD - S3239		58185091	Carton - Celebrity w/ Power. Nozzle
42	38522026	Rear Wheel - LT - S3199	Cleaning Tools - (P 92)		
	38522032	Rear Wheel - S3201, S3237, S3239		43433085	Hose
43	169242	Wheel Cover - S3199, S3201		48438058	Power Nozzle - MT - (P - 88) - S3199
	37912013	Wheel Cover - S3237, S3239		48438055	Power Nozzle - TF - (P - 88) - S3201
44	23737202	Caster Wheel		48438059	Power Nozzle - LZ - (P - 123) - S3237, S3239 ( electronic version no longer available - use 48438055 )

# Celebrity Motor

Models S3129, S3137, S3171, S3187, S3193,  
S3195, S3199, S3201, S3219, S3237, S3239

Motor - 2 Speed 43577093 (3.7)


Motor - 43577101 (2.6)

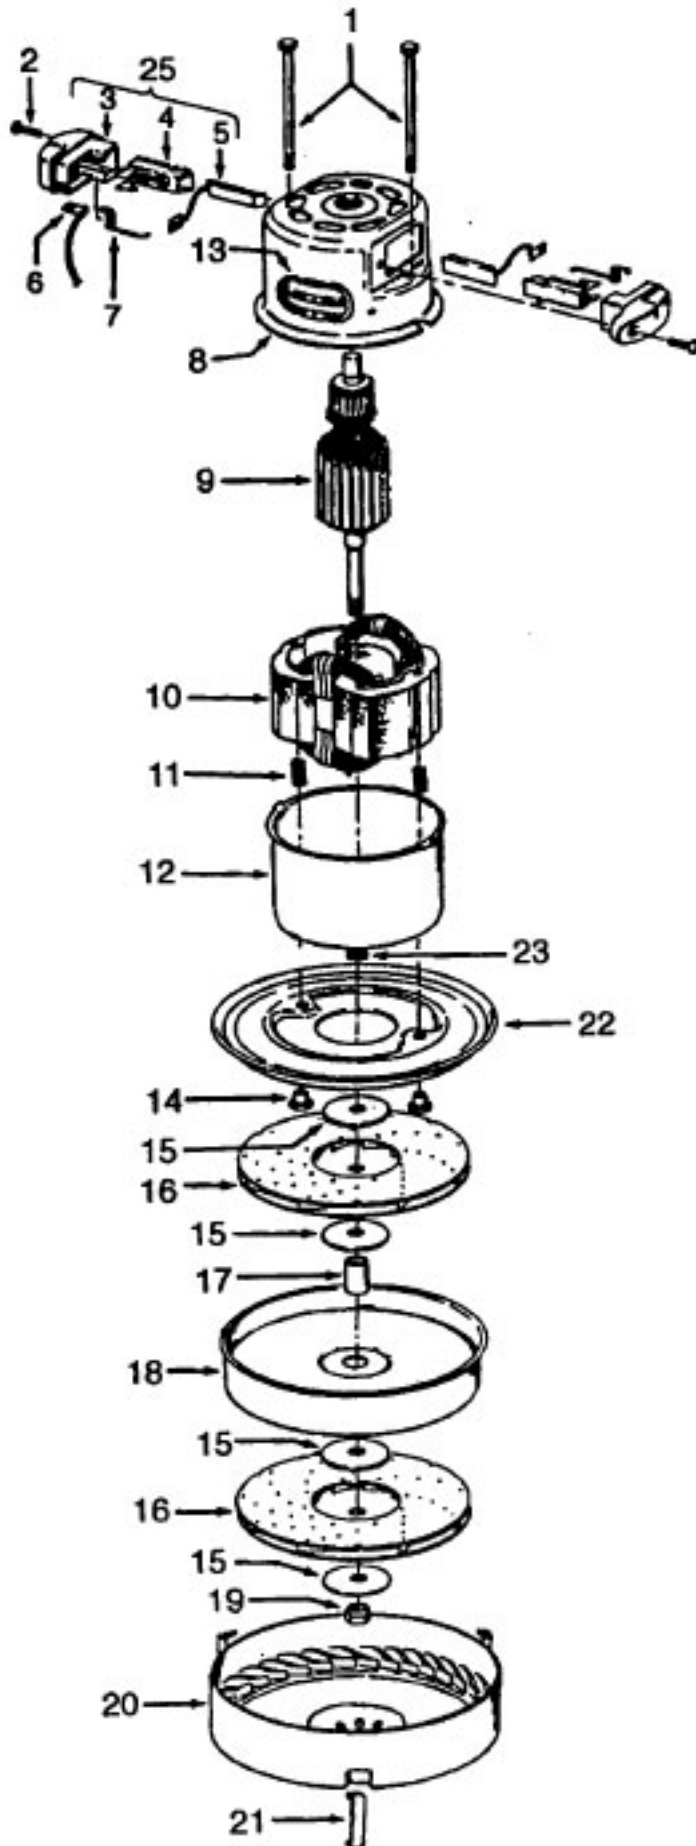

Ref. No.	Part No.	Description
	43577101	Motor - (2.6) S3129, S3137, S3171, S3187, S3193, S3195, S3219
	43577093	Motor Comp. - (3.7) S3199, S3201, S3237, S3239
1	12022	Field Bolt
2	21429406	Screw
3	168038	Brush Carrier
4	168506-	Brush Holder
5	167679	Carbon Brush
6	27666551	Terminal
7	38353004	Spring
8	169706	Motor Housing - Upper
9	44765078	Armature (2.6)
	44765106	Armature (3.7)
10	45311017	Field Coll (2.6)
	45311018	Field Coll (3.7) 2-Speed
11	167721FW	Spring (3.7)
	38311016	Spring (2.6)
12	41823001	Motor Housing - Lower
13	169702BZ	Bushing
14	167695EF	Nut
15	21312774	Washer
16	43566006	Fan
17	31732003	Spacer
18	169712	Interstage
19	33426001	Nut
20	37218005	Diffuser
21	34786002	Spring Clip
22	169713FW	Mounting Plate
23	31148002	Spacer
25	168506	Brush Carrier Assm.

Powered Nozzle


Models S3199, S3201, S3219, S3233

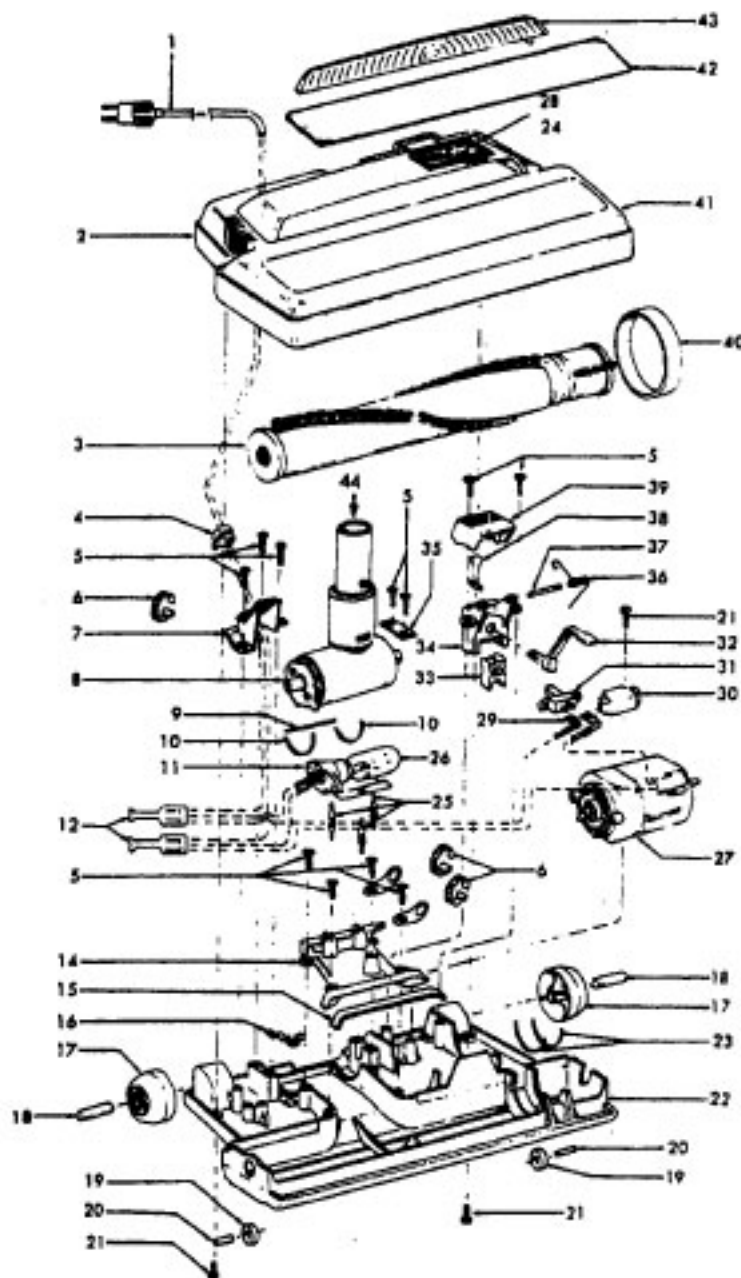


Ref. No.	Part No.	Description
1	46321005	Attachment Cord
2	36231110	Furniture Guard - LT - S3199
	36231096	Furniture Guard - MY - S3201, S3219, S3233
3	48416030	Agitator - 4B
4	163768	Strain Relief
5	21447041	Screw
6	27479307	Wire Tie
7	36131020	Retainer Housing - S3201, S3219, S3233
	36131024	Retainer Housing - MT - S3199
8	43481021	Nozzle Connector - AG
9	34112005	Seal
10	34337003	Seal
11	47171009	Lamp Socket
12	48969	Wire Nut
14	42256098	Duct Cover
15	34123017	Seal
16	35276001	Detent Spring
17	32175025	Wheel - AG
18	31523005	Wheel Shaft
19	32761001	Wheel
20	31522004	Wheel Shaft
21	21447007	Screw
22	42246121	Base Plate (Inc. items 17, 18, 19, 20, 23)
23	34337004	Lower Seal
	34378010	Upper Seal
24	51371010	Indicator Nameplate - S3201, S3219, S3233
	51865018	Indicator Nameplate - S3199
25	36218005	Grommet
26	27317307	Lamp-15
27	43177073	Motor
28	39382013	Indicator Lens
29	27666702	Terminal
30	37258082	Shield
31	281770KD	Switch
32	51151053	Indicator
33	34361001	Switch Actuator
34	42262032	Housing
35	36131017	Retainer
36	38353007	Torsion Spring
37	31523006	Pivot Pin
38	38458002	Depressor
39	38433066	Switch Pedal - S3199
	38433044	Switch Pedal - MY - S3201, S3219, S3233
40	38528011	Belt
41	42252189	Nozzle Body - AG - S3199
	42252057	Nozzle Body - LB - S3201, S3219, S3233
42	51375041	Nameplate - S3199
	52125092	Nameplate - S3201, S3219
43	39383060	Lens - KC
44	43457037	Swivel Tube - AG - S3201, S3219, S3233, S3199
	48438056	Power Nozzle - MT - S3199
	48438055	Power Nozzle - S3201, S3219, S3233

# Agitator

Models S3181, S3189, S3191, S3193, S3195, S3195-030  
 S3199, S3201, S3209, S3211, S3213, S3217, S3219,  
 S3233, S3237, S3239, S3245, S3261, S3263, S3265  
 S3269, S3271, S3403, S3425, S3425-030

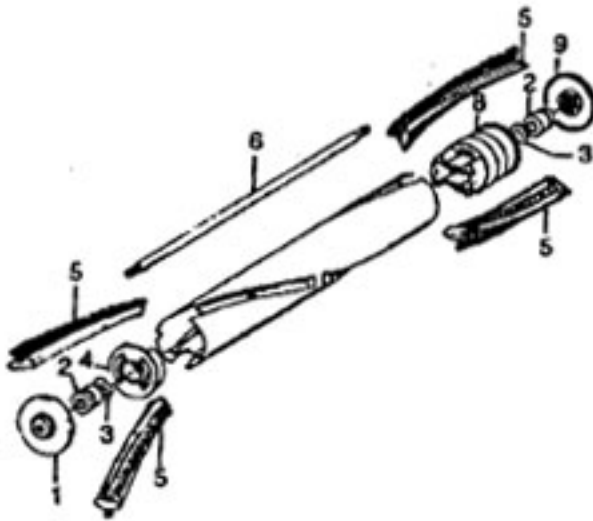


Ref. No.	Part No.	Description
1	41435018	Thread Guard
2	43267002	Bearing
3	21347003	Washer
4	38422001	End
5	41435023	End - S3425-060
5	48445017	Agitator Brush
6	160070	Shaft
8	38537002	End Pulley
9	41435021	Thread Guard
	48416009	Agitator - S3181, S3189, S3191, S3193, S3217, S3209, S3211, S3213, S3245, S3261, S3263, S3403, S3425-060

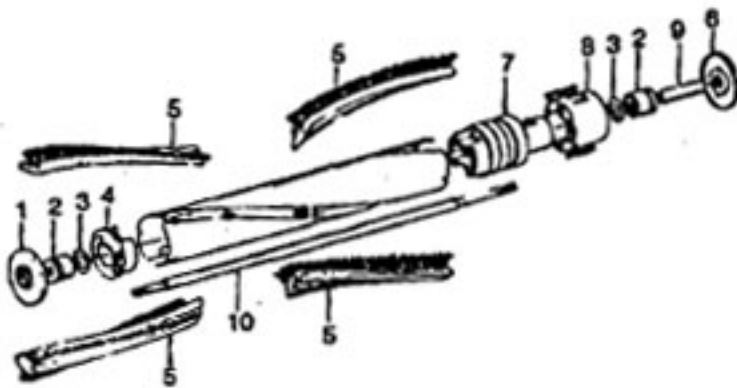

Ref. No.	Part No.	Description
1	48495AY	Thread Guard
2	43267002	Bearing
3	21347003	Washer
4	41435023	End
5	48445017	Agitator Brush
6	41435018	Thread Guard
7	38537008	End Pulley
8	48418001	Brush Ring
9	31722019	Spacer
10	32724005	Shaft
	48416000	Agitator Comp.- S3195, S3195-030, S3199, S3201, S3219, S3233, S3237, S3239, S3265, S3269, S3271

# Cleaning Tools

# Spirit & Celebrity

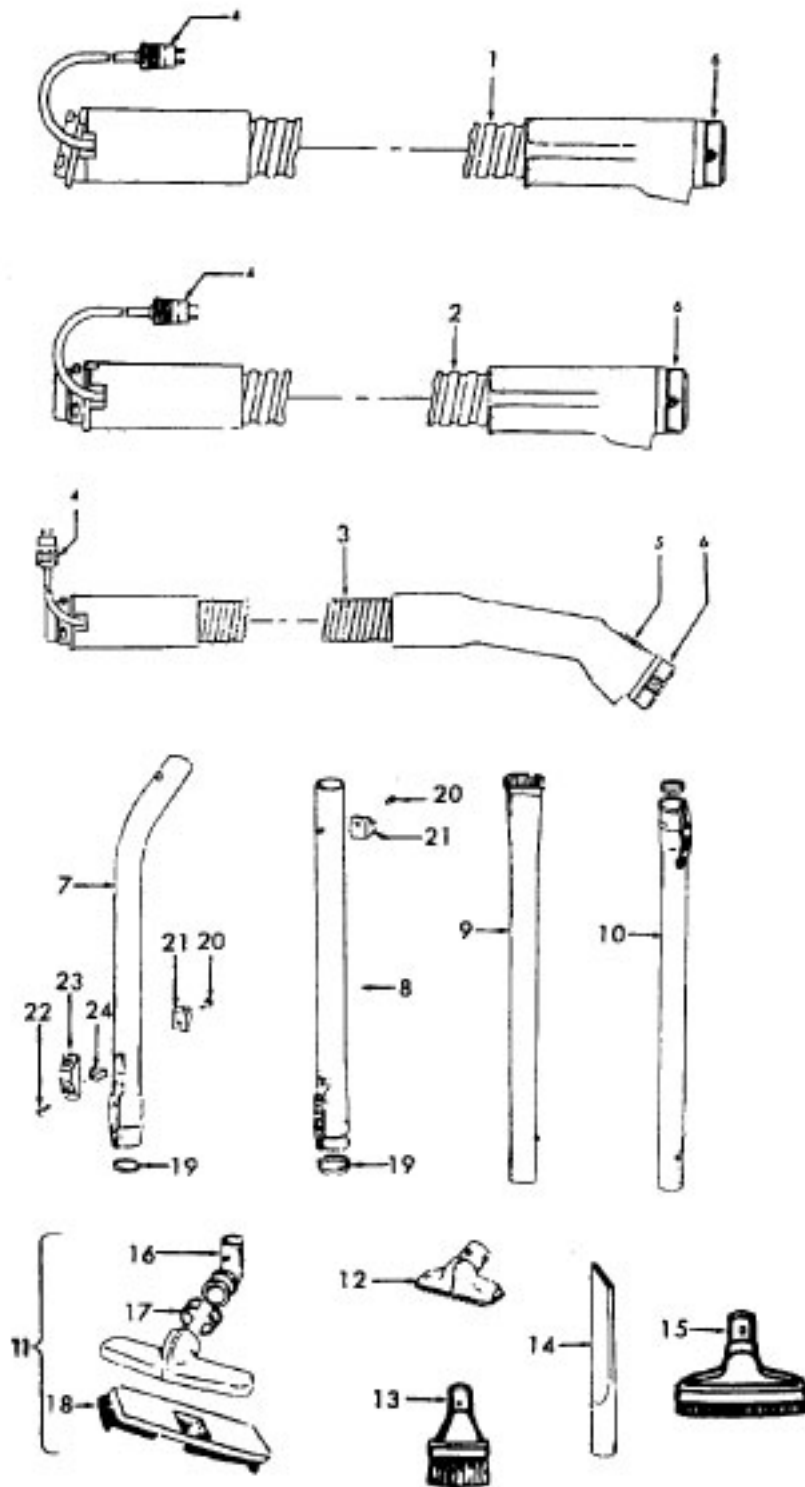

Ref. No.	Part No.	Description
1	43433085	Hose - AAP - Celebrity
2	43433032	Hose - JM - Spirit - 5-1/2'
3	43433067	Hose - AAP - Spirit - 5-1/2'
	43433081	Hose - MV -S/C- Spirit - 5-1/2'
	43433084	Hose - AAP - S/C - Spirit - 7'
	43433111	Hose - 2W - AG -S/C - Spirit
4	46321076	Cord Repair Kit
5	34777005	Suction Reg. Control - AG
	34777007	Suction Reg. Control - MV
6	36153009	Latch Ring - AG
7	43468055	Hose Tube - BL - 14
8	43453086	Extension Tube - BL - 22
	43453035	Extension Tube - AX - 22
	43453052	Extension Tube - 20 - AX (Gray Clip)
	43453058	Extension Tube - BL - 20 (Gray Clip)
9	3863801P	Extension Tube -Poly - AG
10	43453027	Extension Tube
11	43414073	Floor Brush - AG
12	38614023	Furniture Nozzle - 1 Pc. - 17
	43414057	Furniture Nozzle - AG
	38614024	Furniture Nozzle - AG
13	43414064	Dusting Brush - AG
14	38617017	Crevice Tool - AG
15	43414015	Furniture Brush - JM
	43414016	Furniture Brush - AG
16	38644040	Swivel Connector - JM
	38644020	Swivel Connector - AG
17	33712007	Split Ring
18	48447001	Brush Back
19	12845JM	Gasket
20	12783	Rivet
21	36171008	Cord Clip - MV
	36171005	Cord Clip - AG
22	13275	Screw
23	13142AG	Suction Control
24	13257BZ	Support