 


This Owner's Manual is provided and hosted by Appliance Factory Parts.



HOOVER S3271 Owner's Manual

[Shop genuine replacement parts for HOOVER S3271](#)

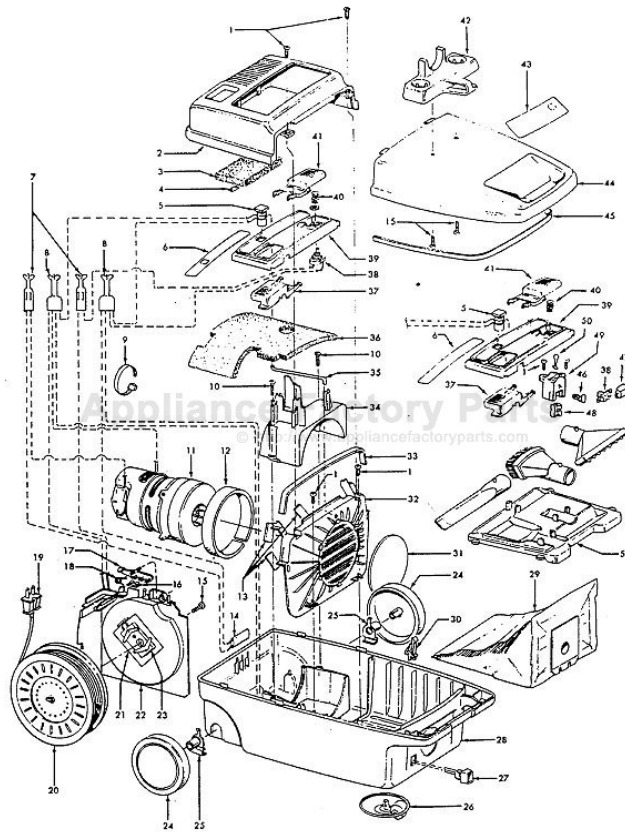


[Find Your HOOVER Vacuum Cleaner Parts - Select From 1456 Models](#)


----- Manual continues below part list -----

Available Replacement Parts for HOOVER S3271

H-4010028K	BAG OEM HOOVER (3 PACK) K
H-43267002	AGITATOR BEARING ASM
H-43414073	Floor brush.
H-43414064	DUSTING BRUSH (ONE PEICE)
HR-5000	EXTENSION TUBE
HR-1050	BELT FOR HOOVER

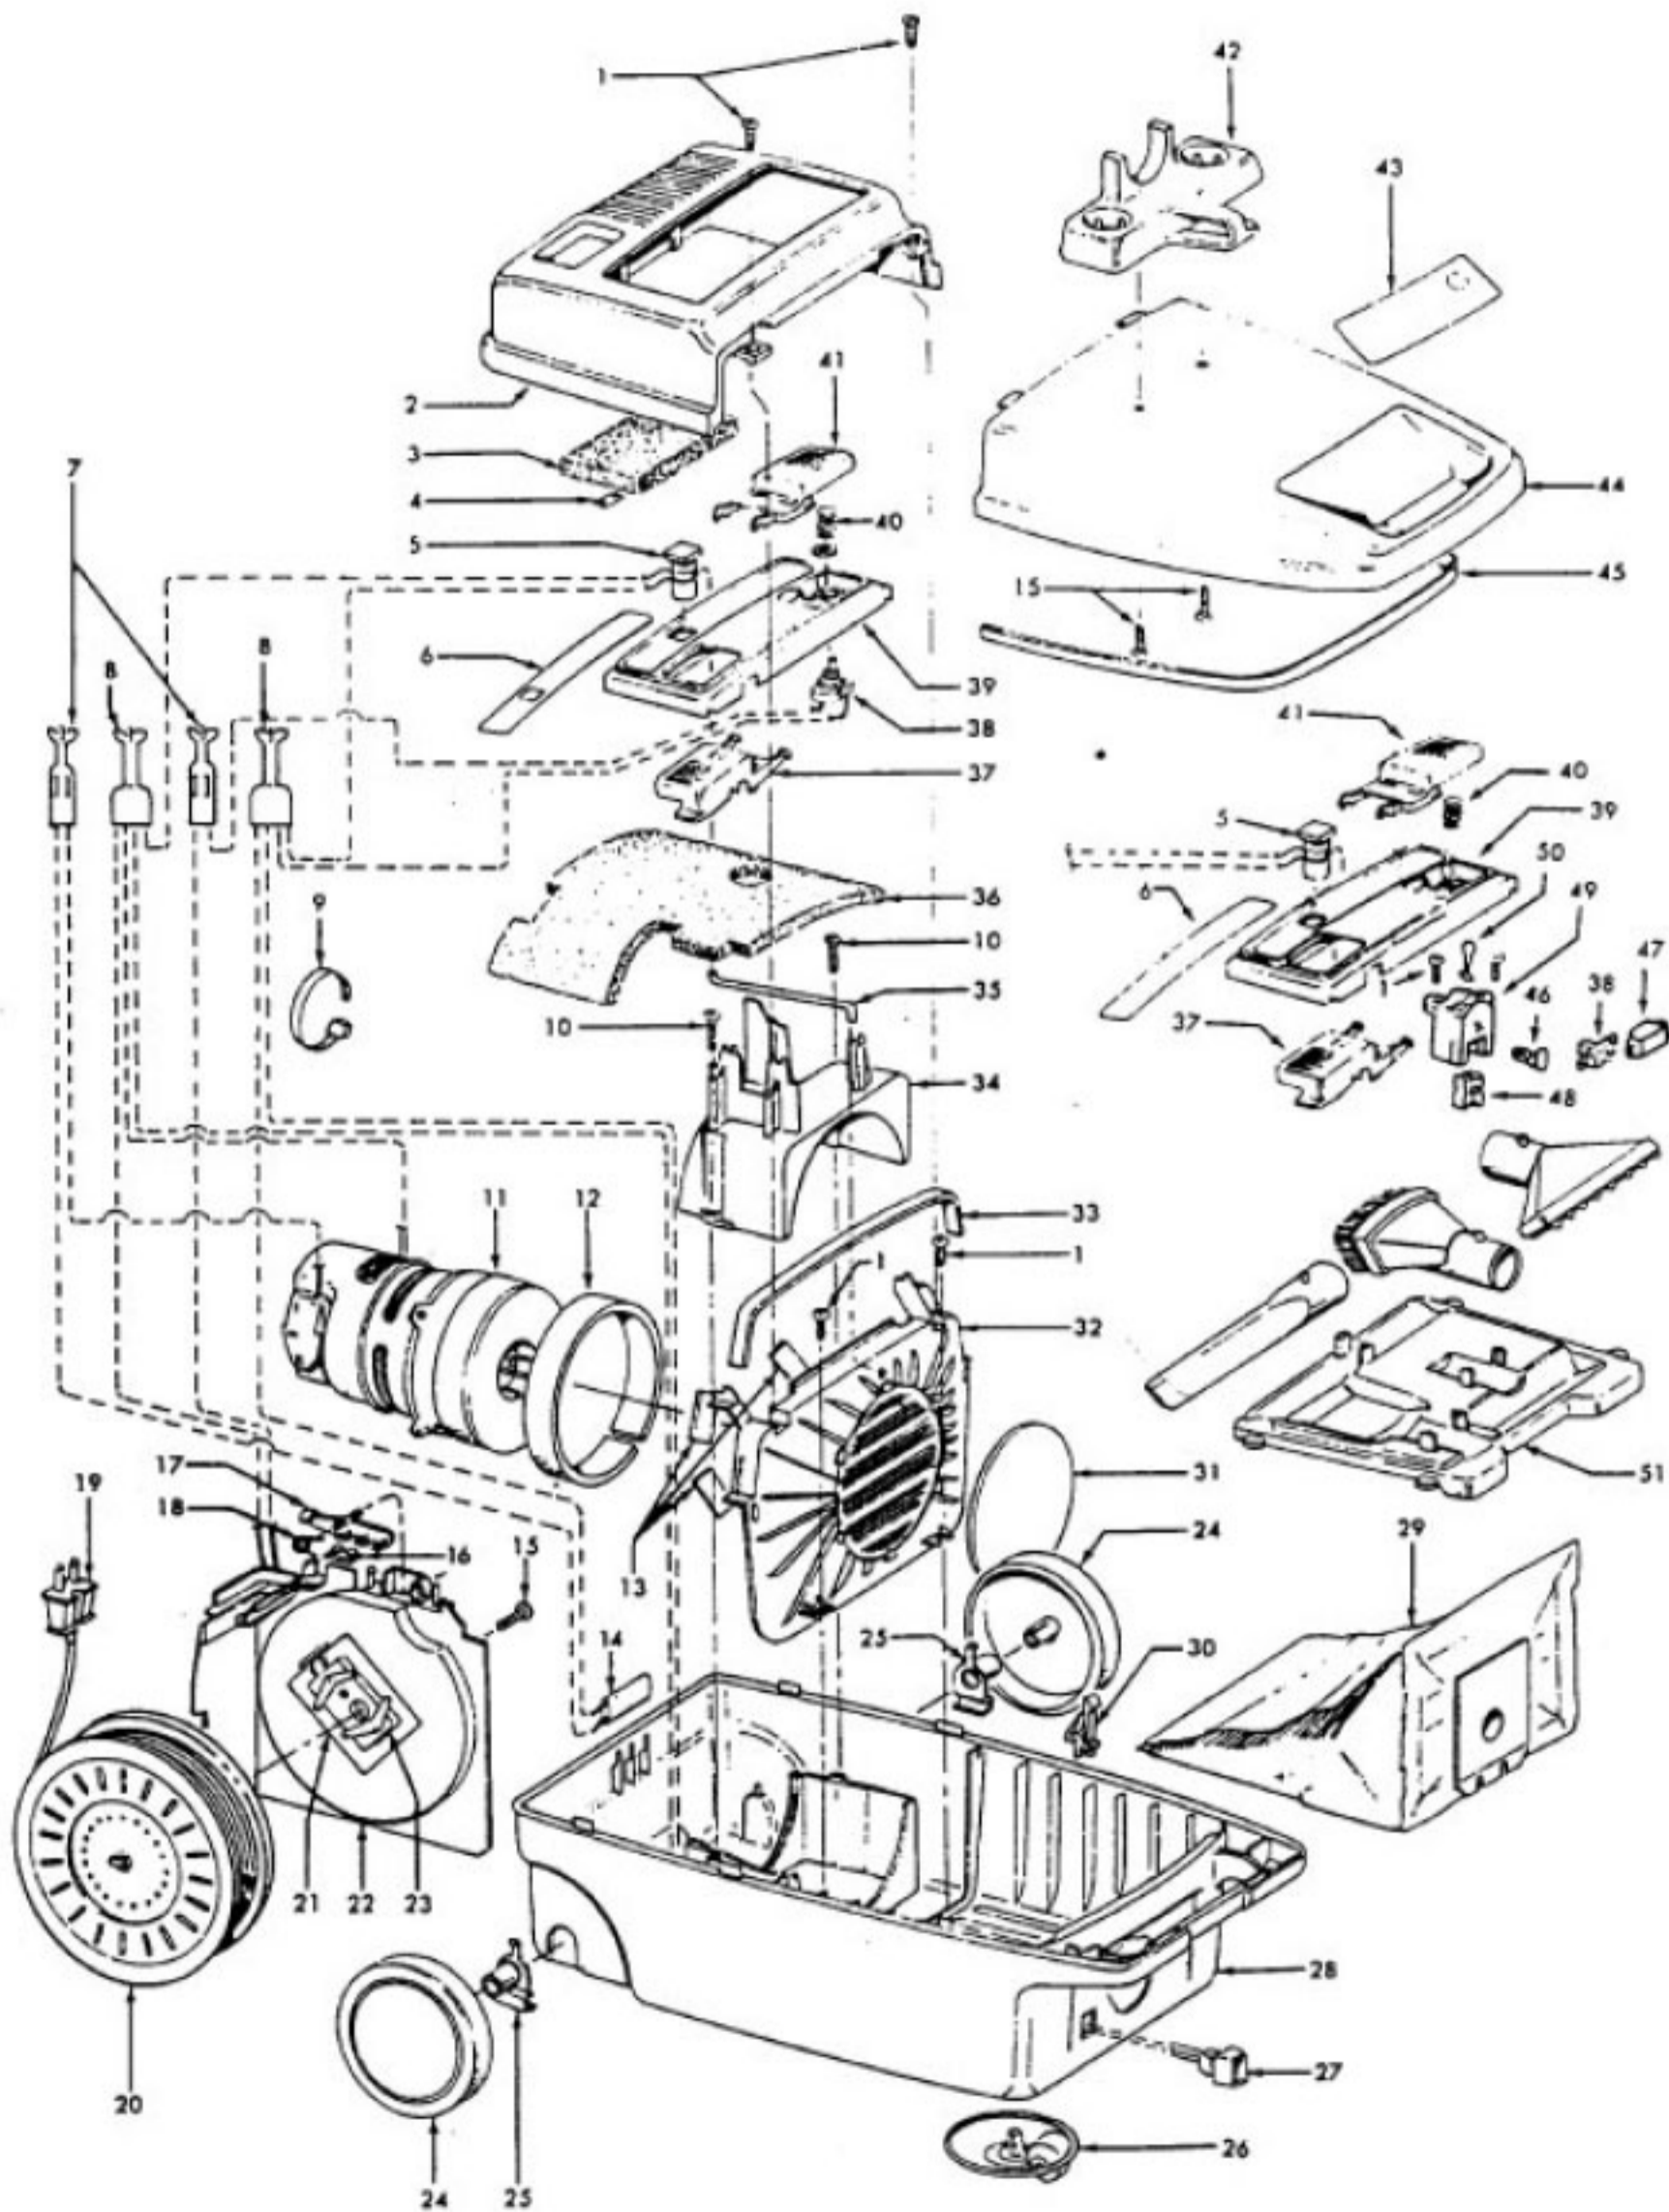 

Motor 43578051 (3.1)
43578069 (4.0)

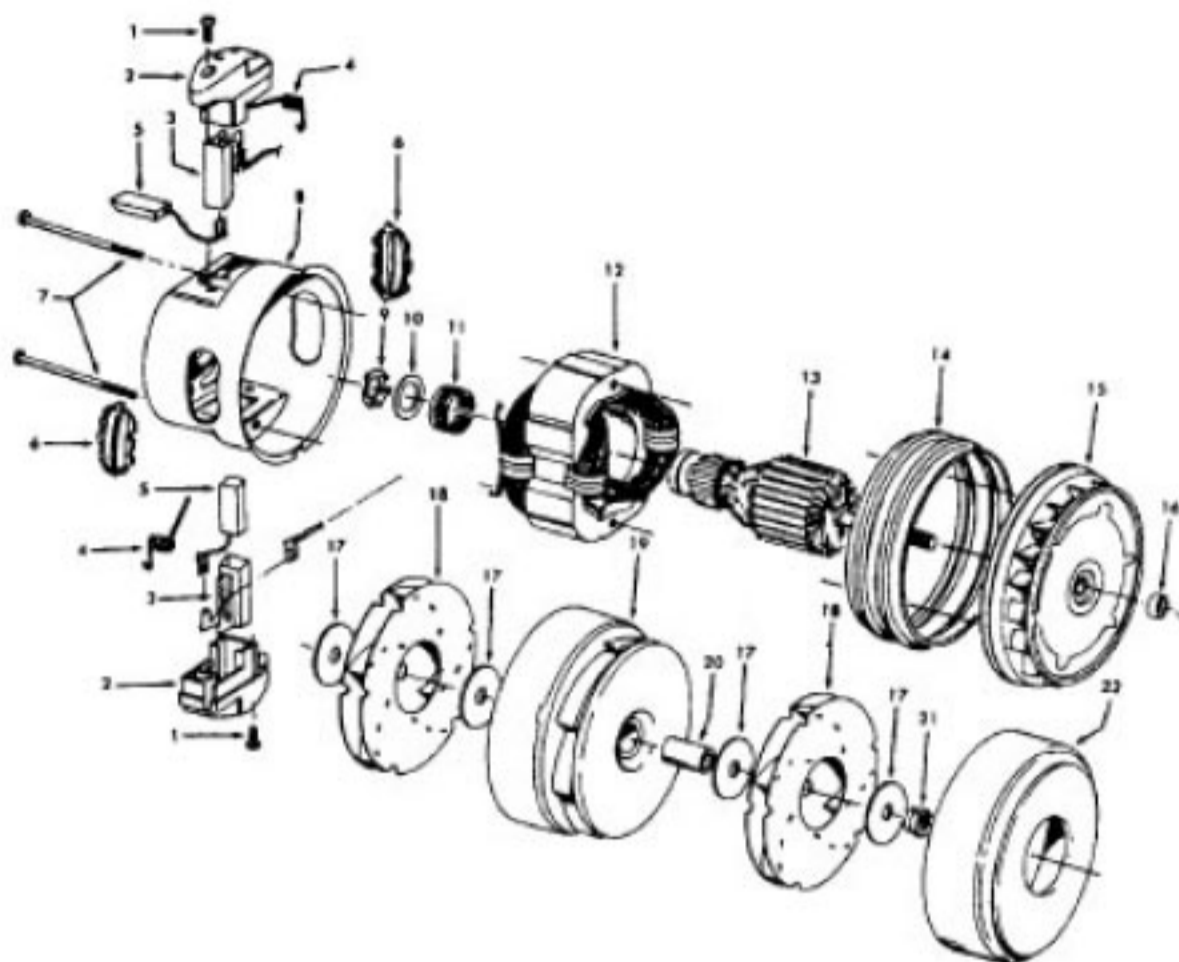 

Ref. No.	Part No.	Description
1	21429406	Screw
2	168038AG	Brush Carrier
3	168506--	Brush Holder
4	38353004	Spring
5	167679	Carbon Brush
6	169702BZ	Bushing
7	36112003	Bolt 3.1
	21563061	Bolt 4.0
8	42192016	Motor Housing
9	21345116	Spring Washer
10	21312778	Thrust Washer
11	24198002	Star Ring
12	45311048	Field Coil 3.1
	45311022	Field Coil 4.0
13	44765185	Armature 3.1
	44765225	Armature 4.0
14	31195003	Motor Mount Insulator 3.1
	31195004	Motor Mount Insulator 4.0
15	43551013	Diffuser
16	31148009	Spacer
17	21312701	Washer
18	43566017	Fan
19	42192033	Interstage
20	31743003	Spacer
21	33426001	Nut
22	37196087	Fan Cover

Motor:


	43578051	43578069
	S3259	S3269-036
	S3269	S3269-070
	S3269-060	S3271-036
	S3271	S3271-070
	S3271-060	S3483
	S3295-031	S3485
	S3299-031	S3485-070
	S3405	S3487
	S3419	S3499
	S3423	S3501
	S3441-031	S3503
	S3441-070	S3505
	S3473	S3621
	S3475	S3629
	S3481	S3631
	S3627	

Power Nozzle:

48438024 - MX - S3269, S3271, S3475

+48438037 - LZ - S3427

 Models S3269, S3271, S3427, S3475

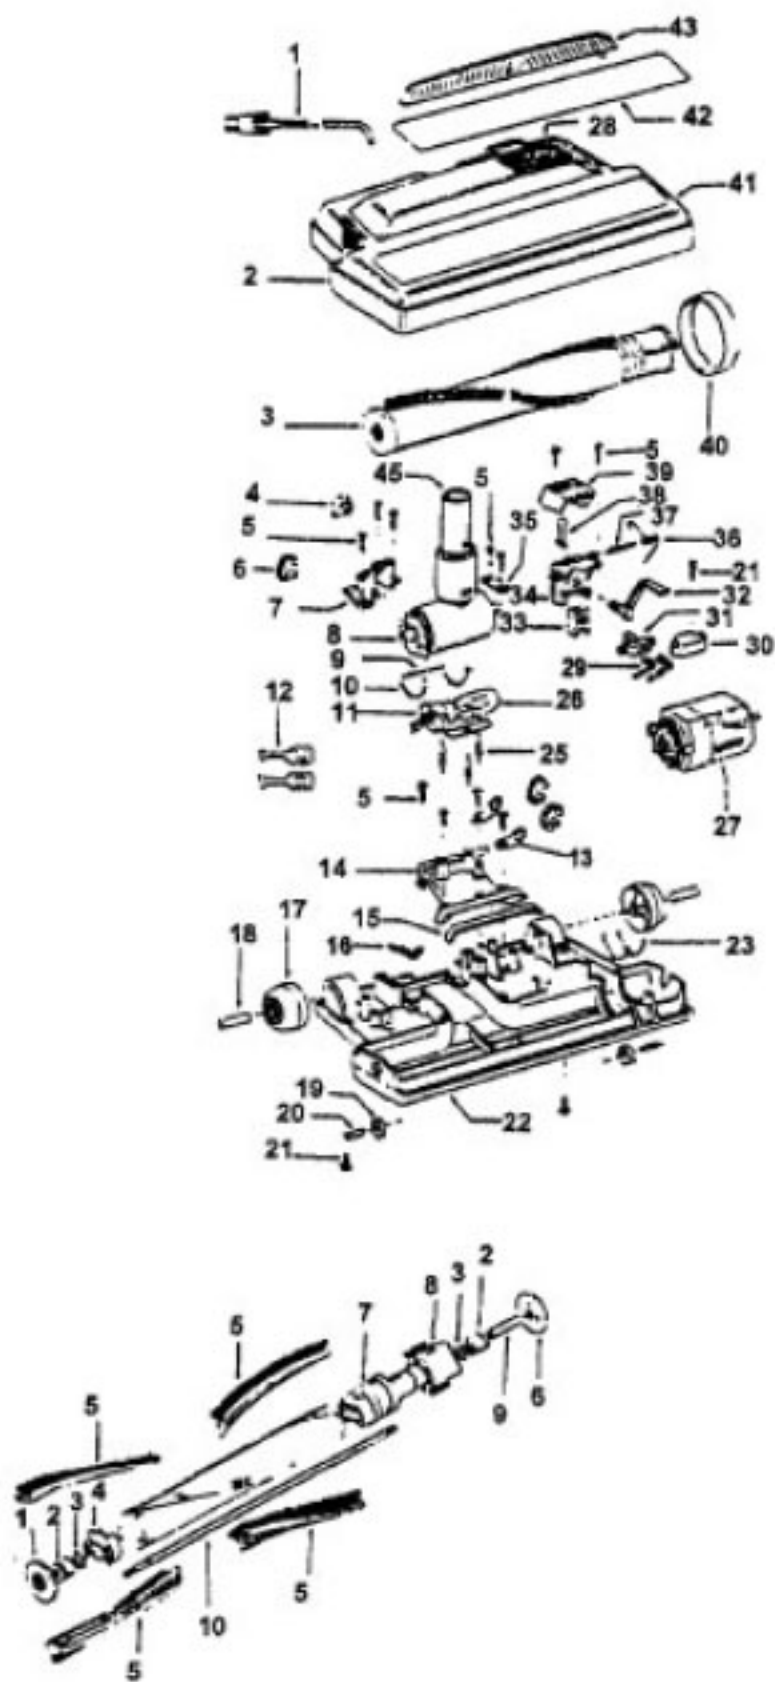


Agitator 48416030

1	48495AY	Thread Guard
2	43267002	Bearing
3	21347003	Washer
4	36422001	End
5	48445017	Agitator Brush
6	41435018	Thread Guard
7	38537008	End Pulley
8	48418001	Brush Ring
9	31722019	Spacer
10	32724005	Shaft


Ref. No.	Part No.	Description
1	48438055	Power Nozzle -TF - 4.5' Cord
	46321088	Cord - 3.5'
	46321005	Attachment Cord
2	36231097	Furniture Guard - ML - S3269
	36231096	Furniture Guard - MY - S3271, S3475
	36231106	Furniture Guard - MW - S3427
3	48416030	Agitator - 4B
4	163768	Strain Relief
5	21447041	Screw
6	27479307	Wire Tie
7	36131029	Retainer Housing - LZ
	36131023	Retainer Housing - MX
	36131065	Retainer Housing - AAK
8	43461021	Nozzle Connector - AG
9	34112005	Seal
10	34337003	Seal
11	47171009	Lamp Socket
12	48969	Wire Nut
13	45517	Wire Holder
14	42258098	Duct Cover
15	34123017	Seal
16	35276001	Detent Spring
17	32175025	Wheel - AG
18	31523005	Wheel Shaft
19	32761001	Wheel
20	31522004	Wheel Shaft
21	21447007	Screw
22	42246121	Base Plate (Inc. items 17, 18, 19, 20, 23)
23	34337004	Lower Seal
	34378010	Upper Seal
25	36218005	Grommet
26	27317307	Lamp - 15
27	43177073	Motor
28	51865005	Indicator Lens
29	27666702	Terminal
30	37258082	Shield
31	281770KD	Switch
32	51151053	Indicator - PH
33	34361001	Switch Actuator
34	42262032	Housing
35	36131017	Retainer
36	38353007	Torsion Spring
37	31523006	Pivot Pin
38	38458002	Depressor
39	38433046	Switch Pedal - ML - S3269
	38433044	Switch Pedal - MY - S3271
	38433067	Switch Pedal - MW - S3427, S3475
40	38528011	Belt
41	42252189	Nozzle Body - AG - S3269, S3271, S3427
	42252186	Nozzle Body - AAK - S3475
42	52125084	Nameplate - S3269
	52125082	Nameplate - S3271
	52125091	Nameplate - S3427
	52125114	Nameplate - S3475
43	39383060	Lens
45	43457037	Swivel Tube - AG - S3271, S3475

Agitator

 Models S3181, S3189, S3191, S3193, S3195, S3195-030
 S3199, S3201, S3209, S3211, S3213, S3217, S3219,
 S3233, S3237, S3239, S3245, S3261, S3263, S3265
 S3269, S3271, S3403, S3425, S3425-030

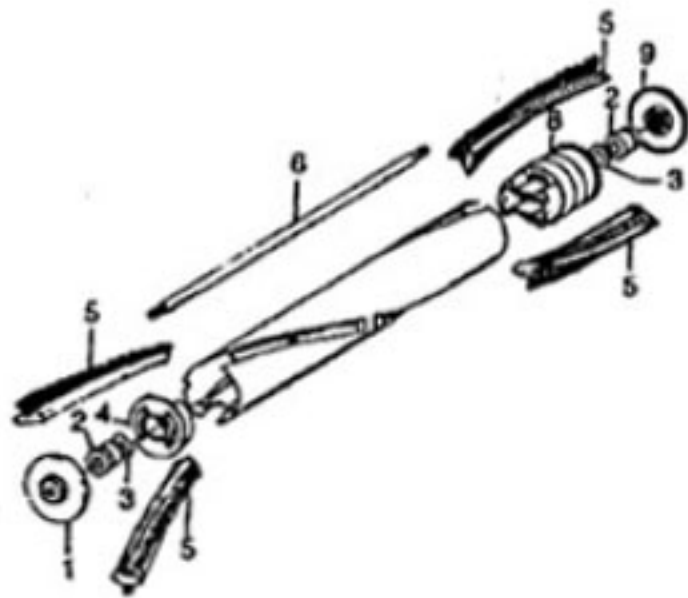


Ref. No.	Part No.	Description
1	41435018	Thread Guard
2	43267002	Bearing
3	21347003	Washer
4	38422001	End
5	41435023	End - S3425-060
5	48445017	Agitator Brush
6	160070	Shaft
8	38537002	End Pulley
9	41435021	Thread Guard
	48416009	Agitator - S3181, S3189, S3191, S3193, S3217, S3209, S3211, S3213, S3245, S3261, S3263, S3403, S3425-060

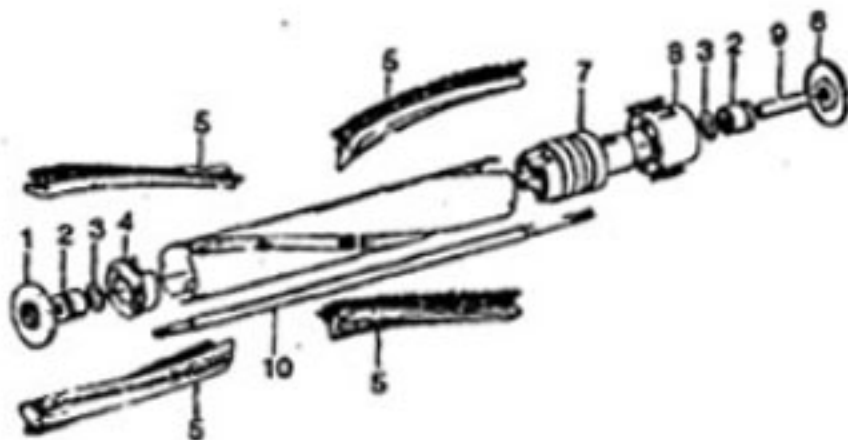 

Ref. No.	Part No.	Description
1	48495AY	Thread Guard
2	43267002	Bearing
3	21347003	Washer
4	41435023	End
5	48445017	Agitator Brush
6	41435018	Thread Guard
7	38537008	End Pulley
8	48418001	Brush Ring
9	31722019	Spacer
10	32724005	Shaft
	48416030	Agitator Comp. - S3195, S3195-030, S3199, S3201, S3219, S3233, S3237, S3239, S3265, S3269, S3271

Cleaning Tools

 Spirit & Celebrity

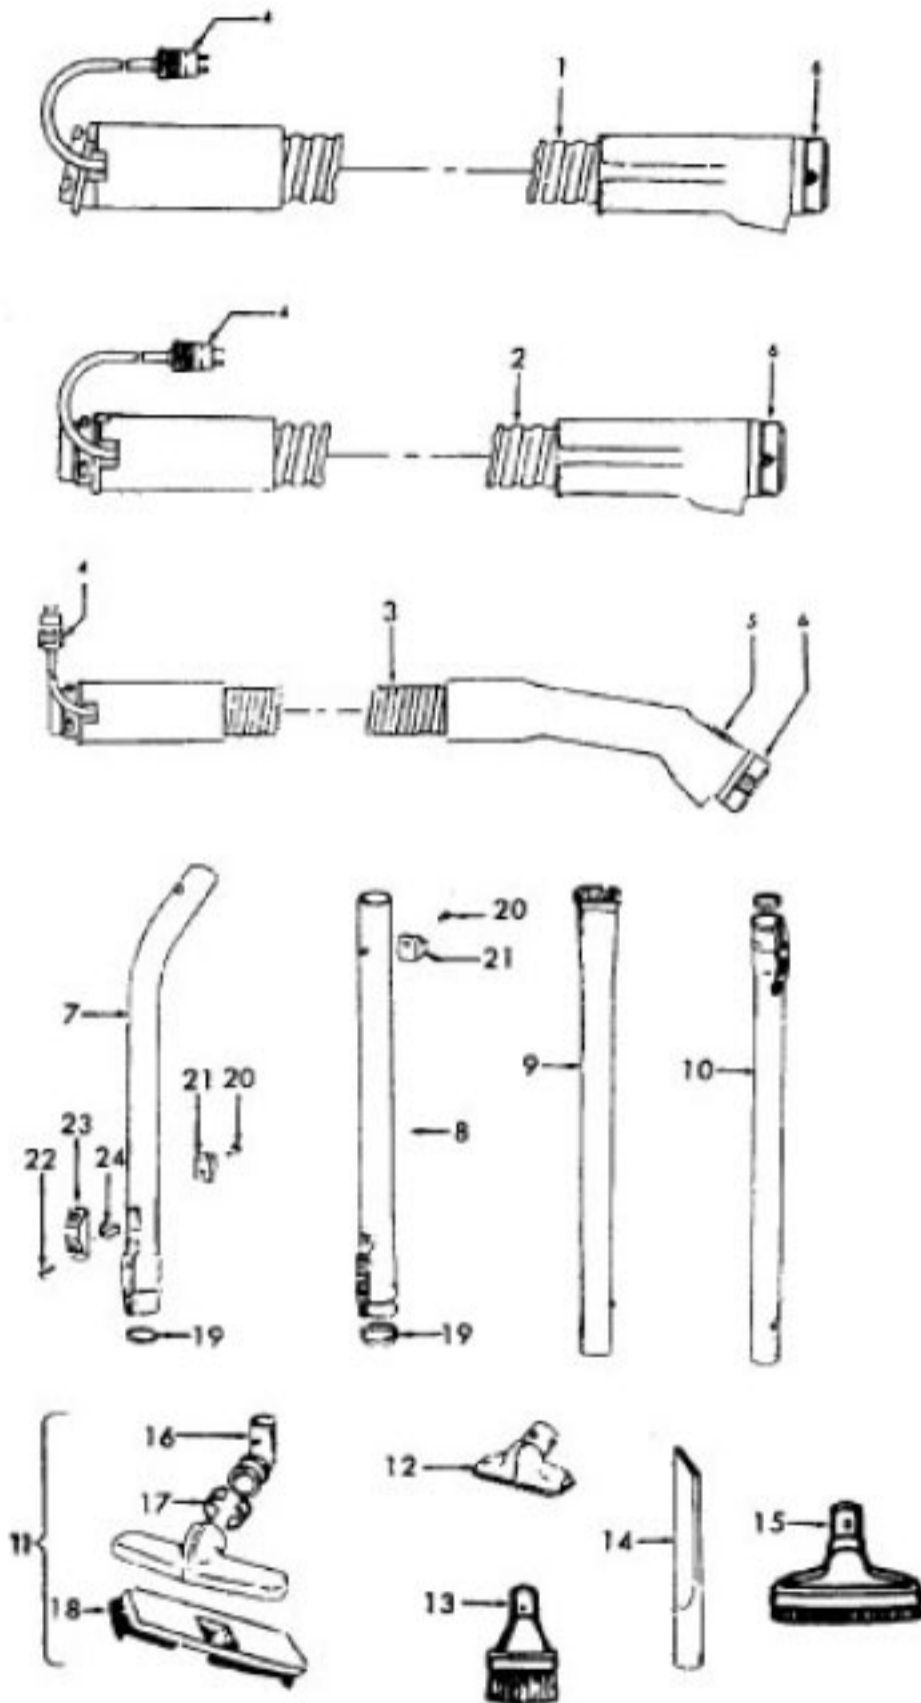

Ref. No.	Part No.	Description
1	43433085	Hose - AAP - Celebrity
2	43433032	Hose - JM - Spirit - 5-1/2'
3	43433067	Hose - AAP - Spirit - 5-1/2'
	43433081	Hose - MV - S/C - Spirit - 5-1/2'
	43433084	Hose - AAP - S/C - Spirit - 7'
	43433111	Hose - 2W - AG - S/C - Spirit
4	46321076	Cord Repair Kit
5	34777005	Suction Reg. Control - AG
	34777007	Suction Reg. Control - MV
6	36153009	Latch Ring - AG
7	43468055	Hose Tube - BL - 14
8	43453086	Extension Tube - BL - 22
	43453035	Extension Tube - AX - 22
	43453052	Extension Tube - 20 - AX (Gray Clip)
	43453058	Extension Tube - BL - 20 (Gray Clip)
9	3863801P	Extension Tube - Poly - AG
10	43453027	Extension Tube
11	43414073	Floor Brush - AG
12	38614023	Furniture Nozzle - 1 Pc. - 17
	43414057	Furniture Nozzle - AG
	38614024	Furniture Nozzle - AG
13	43414064	Dusting Brush - AG
14	38617017	Crevice Tool - AG
15	43414015	Furniture Brush - JM
	43414016	Furniture Brush - AG
16	38644040	Swivel Connector - JM
	38644020	Swivel Connector - AG
17	33712007	Split Ring
18	48447001	Brush Back
19	12845JM	Gasket
20	12783	Rivet
21	36171008	Cord Clip - MV
	36171005	Cord Clip - AG
22	13275	Screw
23	13142AG	Suction Control
24	13257BZ	Support