


This Owner's Manual is provided and hosted by Appliance Factory Parts.



HOOVER S3501 Owner's Manual

[Shop genuine replacement parts for HOOVER S3501](#)

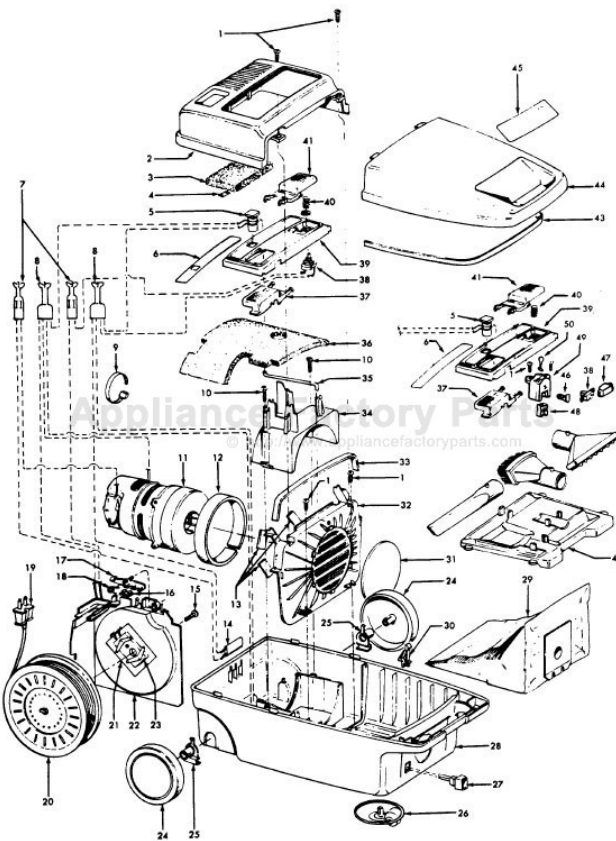


[Find Your HOOVER Vacuum Cleaner Parts - Select From 1456 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for HOOVER S3501

H-4010028K	BAG OEM HOOVER (3 PACK) K
H-43267002	AGITATOR BEARING ASM
H-43414073	Floor brush.
H-43414064	DUSTING BRUSH (ONE PEICE)
HR-5000	EXTENSION TUBE
HR-1050	BELT FOR HOOVER

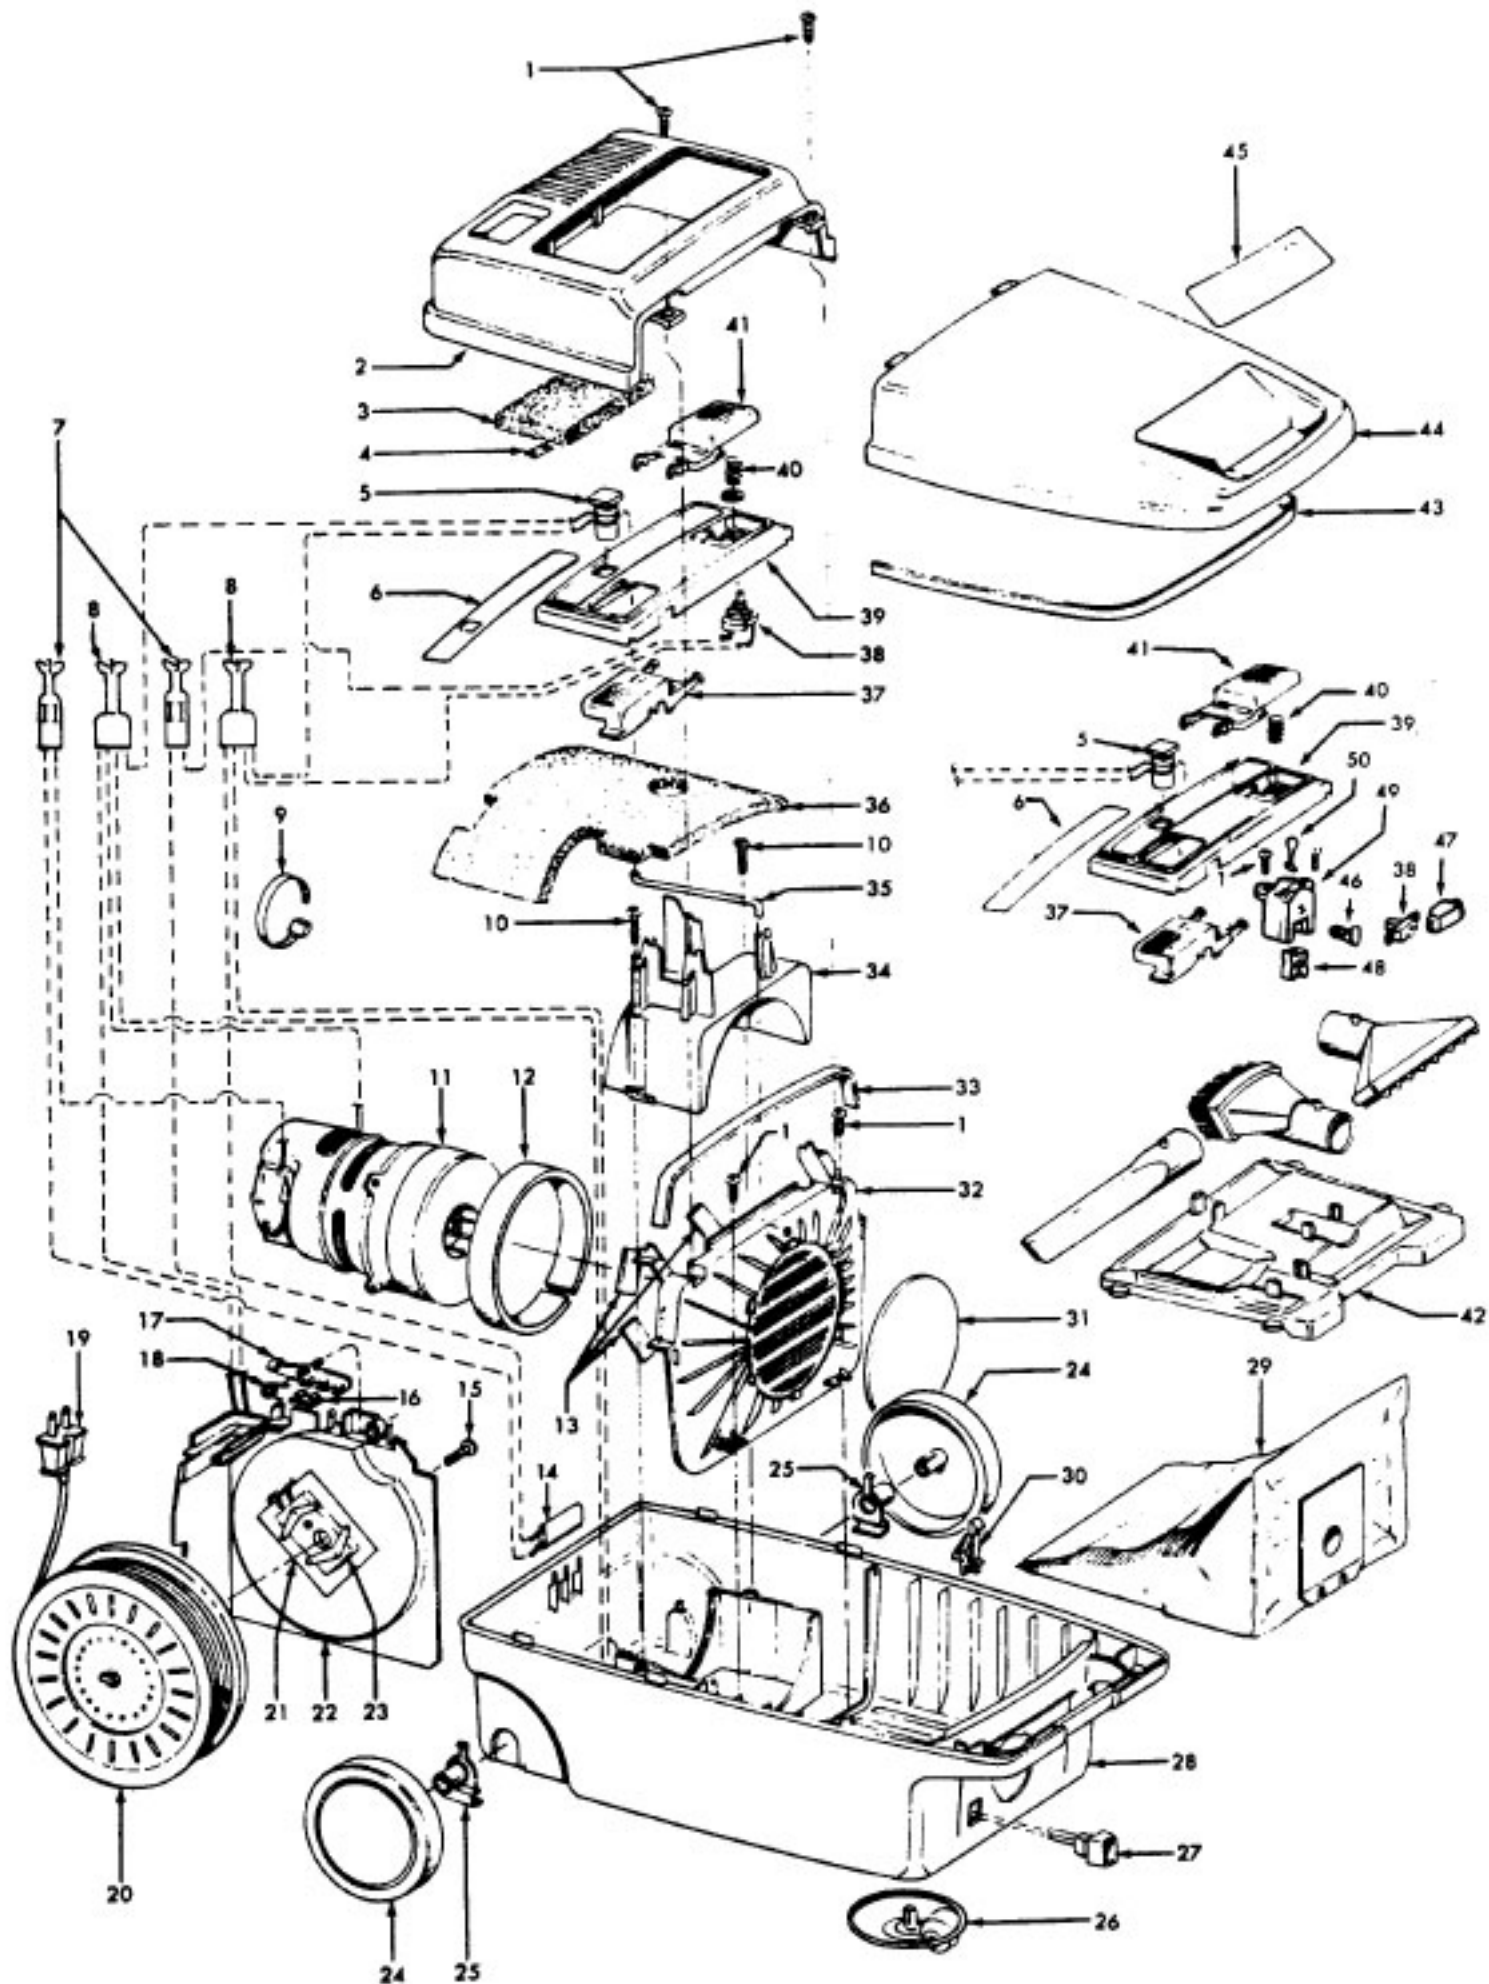

Spirit

Models S3499, S3501, S3631

Ref. No.	Part No.	Description
1	21447041	Screw
2	37195074	Motor Cover - AG - S3499, S3501, S3631
3	34163003	Diffuser
4	21366004	Speed Nut
5	27343212	Bag Indicator
6	51331007	Nameplate
7	12227	Insulated Term. (2 Wire)
8	18972	Insulated Term. (3 Wire)
9	27479307	Wire Tie
10	21447072	Screw
11	43578069	Motor- 4.0 -(P-156)
12	34143003	Seal
13	34132015	Pad
14	47534018	Thermal Protector
15	21447072	Screw
16	36222008	Brake Pad
17	38458008	Brake Arm
18	38353009	Spring
19	46383308	Cord - AG - 23 Ft.
20	46831106	Cord Reel
21	34165004	Insulator
22	37215170	Cord Reel Support - AG
23	47348076	Brush Block
24	38522061	Wheel - AG
25	38511015	Wheel Bearing
26	41432040	Wheel Carrier
27	46326058	Receptacle - AAP
	46326079	Receptacle - AG
28	37223212	Main Body - MV - S3499, S3631 (Inc. Item 14)
	37223230	Main Body - ZW - S3501 (Inc. Item 14)
29	4010028K	Paper Bag - 3 Pk.
30	36151015	Latch
31	31114010	Filter
32	36426014	Bulkhead
33	34133007	Seal
34	36321012	Motor Retainer
35	31727025	Vent Tube
36	34287021	Muffler
37	38422124	Cord Reel Pedal - AG -S3499 (Push Switch)
	38422122	Cord Reel Pedal - MV - S3499, S3631 (Slide Switch)
	38422120	Cord Reel Pedal - S3501 (Push Switch)
	38422123	Cord Reel Pedal - MV - S3501 (Slide Switch)
38	28212026	Switch - Push
	28177019	Switch - Slide

Ref. No.	Part No.	Description
39	37214146	Control Panel - MV (Push Switch)
	37214143	Control Panel - AAP - S3499, S3501 (Slide Switch)
	37214151	Control Panel - ZW (Push Switch)
	37214155	Control Panel - ZW (Slide Switch)
	37214138	Control Panel - AAP - S3499, S3501, S3631 (Slide Switch)
40	38314002	Spring (Push Switch)
	38319002	Spring (Slide Switch)
41	38422073	Switch Pedal - AG - S3499 - S3501 (Push Switch)
	38422149	Switch Pedal (Slide Switch)
42	36433071	Tool Storage Tray
43	38781010	Seal
44	42212100	Bag Housing Lid - AG - S3499
	42212101	Bag Housing Lid - MY - S3501
	42212102	Bag Housing Lid - AG - S3631
45	52125116	Nameplate
	51375093	Nameplate - S3631
46	38561003	Axle
47	37258082	Terminal Shield
48	34361001	Switch Actuator
49	42262075	Actuator Housing
50	38458002	Depressor

ITEMS NOT ILLUSTRATED

51151010	Bag Indicator - S3631
36172046	Spring Clip - S3631
21447041	Screw - Self Tapping - S3631
46831076	Cord Reel Commutator
56513274	Owner Manual
58184025	Carton
58184030	Carton - S3631
58366070	Mid Pad
58461023	Top Support


Cleaning Tools - S3499, S3501, S3631 - (P-92)

38617017	Crevice Tool - AG
43414057	Furniture Nozzle - AG
43414064	Dusting Brush - AG
43414073	Floor Brush - AG
43433084	Hose - 2W - S/C - AAP
43453052	Extension Tube - 20 - AX
48438226	Power Nozzle - MY -S3499 ,S3501 - (P-168)
48438044	Power Nozzle - AG - S3631 (P- 168)

48438024 - MX - S3271-036, S3271-060, S3271-070

48438226 - AG - S3487, S3499, S3501 - T-Plug

48438044 - AG - S3269-036, S3269-060, S3269-070, S3487, S3499, S3631 - Standard Plug

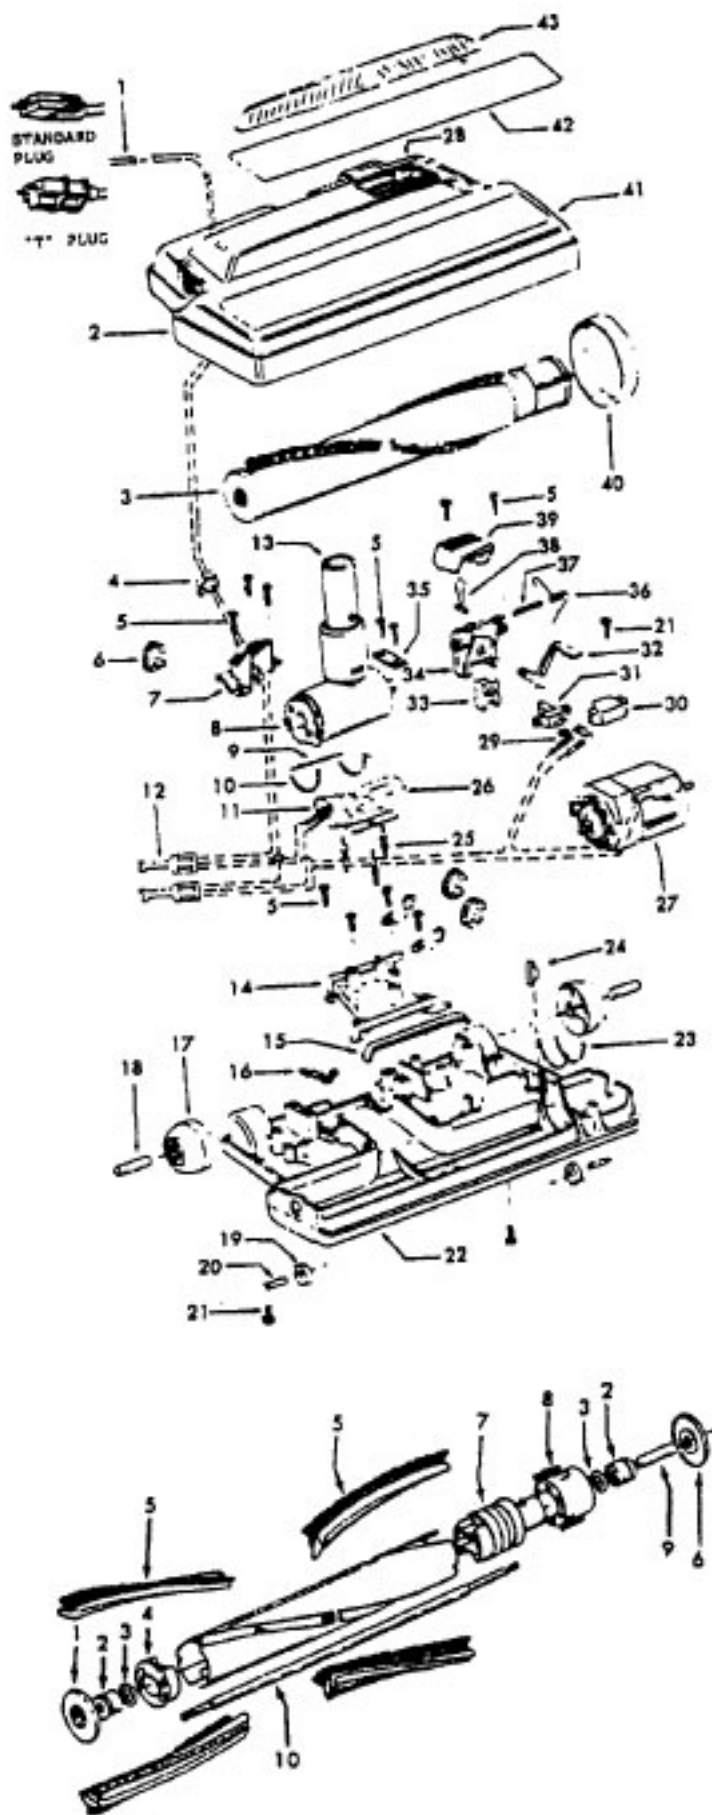


Ref. No.	Part No.	Description
1	46321088	Cord - AG - Standard Plug
2	46321009	Cord - T Plug
2	36231096	Furniture Guard - MY - S3269-036, S3269-060, S3269-070, S3271-036, S3271-060, S3487, S3499, S3501
3	48416030	Agitator - 4B
4	163788	Strain Relief
5	21447041	Screw
6	27479307	Wire Tie
7	36131065	Retainer Housing - AAK
7	36131067	Retainer Housing - AG - S3487, 3499, S3501
8	43461021	Nozzle Connector - AG
9	34112005	Seal
10	34337003	Seal
11	47171009	Lamp Socket
12	18972	Insulated Terminal (3 Wire)
13	43457037	Swivel Tube - AG
14	42256098	Duct Cover
15	34123017	Seal
16	35276001	Detent Spring
17	32175025	Wheel - AG
18	31523005	Wheel Shaft
19	32761001	Wheel
20	31522004	Wheel Shaft
21	21447007	Screw
22	42246121	Base Plate (Inc. Items 17, 18, 19, 20, 23, 24)
23	34337004	Lower Seal
23	34378010	Upper Seal
24	13281AY	Rib Shoe
25	36218005	Grommet
25	36218016	Grommet - S3631
26	27317307	Lamp - 15
27	43177073	Motor
28	51865005	Indicator Lens
28	51865018	Indicator Lens - S3269-070, S3271-070, S3487, S3499, S3501
29	27666702	Terminal
30	37258082	Shield
31	281770KD	Switch
32	51151053	Indicator - PH
33	34361001	Switch Actuator
34	42262032	Housing
35	36131017	Retainer
36	38353007	Torsion Spring
37	31523006	Pivot Pin
38	38458002	Depressor
39	38433067	Switch Pedal - MW - S3487, S3499, S3501, S3269-036, S3269-060, S3269-070, S3271-036, S3271-060, S3271-070
40	38528011	Belt
41	42252186	Nozzle Body - AAK
41	42252189	Nozzle Body - S3487, S3499, S3269-036, S3269-060, S3269-070
42	42252144	Nozzle Body - MY - S3501
43	52125114	Nameplate
44	39383060	Lens
45	43457037	Swivel Tube - AG

Agitator 48416030

1	48495AY	Thread Guard
2	43267002	Bearing
3	21347003	Washer
4	36422001	End
5	48445017	Agitator Brush
6	41435018	Thread Guard
7	38537008	End Pulley
8	48418001	Brush Ring
9	31722019	Spacer
10	32724005	Shaft

Motor 43578051 (3.1)
43578069 (4.0)

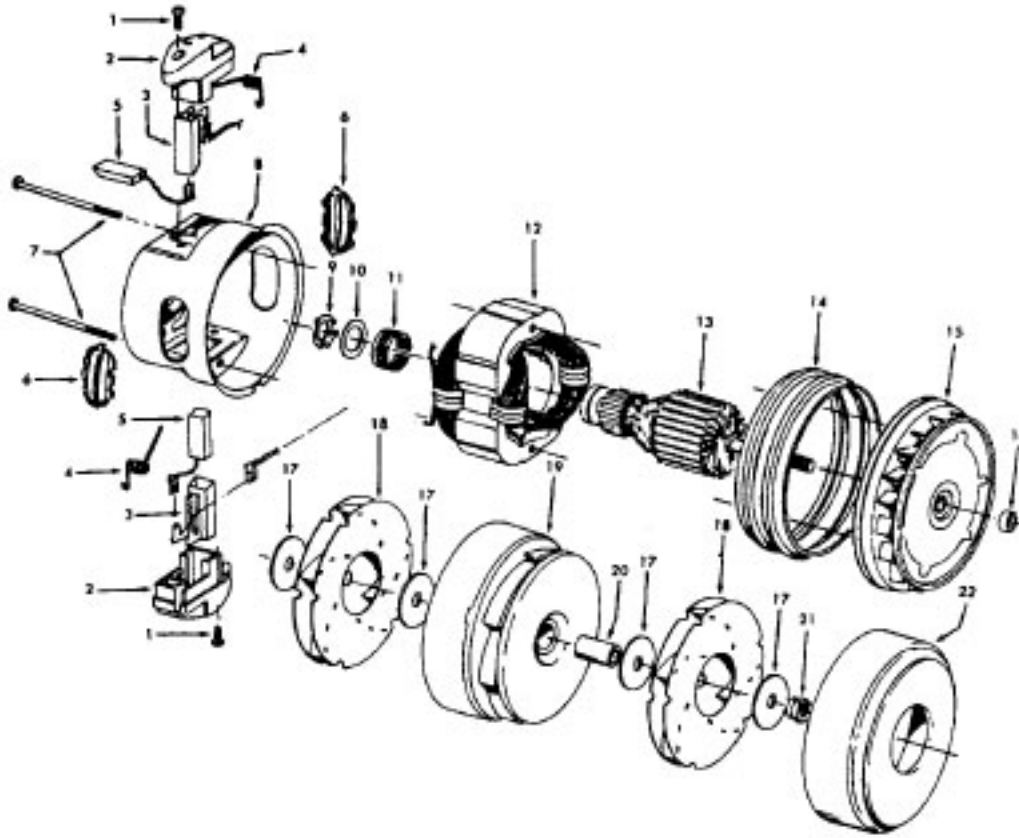


Ref. No.	Part No.	Description
1	21429406	Screw
2	168038AG	Brush Carrier
3	168506--	Brush Holder
4	38353004	Spring
5	167679	Carbon Brush
6	169702BZ	Bushing
7	36112003	Bolt 3.1
	21563061	Bolt 4.0
8	42192016	Motor Housing
9	21345116	Spring Washer
10	21312778	Thrust Washer
11	24198002	Star Ring
12	45311048	Field Coil 3.1
	45311022	Field Coil 4.0
13	44765185	Armature 3.1
	44765225	Armature 4.0
14	31195003	Motor Mount Insulator 3.1
	31195004	Motor Mount Insulator 4.0
15	43551013	Diffuser
16	31148009	Spacer
17	21312701	Washer
18	43566017	Fan
19	42192033	Interstage
20	31743003	Spacer
21	33426001	Nut
22	37196087	Fan Cover

Motor:

	43578051	43578069
	S3259	S3269-036
	S3269	S3269-070
	S3269-060	S3271-036
	S3271	S3271-070
	S3271-060	S3483
	S3295-031	S3485
	S3299-031	S3485-070
	S3405	S3487
	S3419	S3499
	S3423	S3501
	S3441-031	S3503
	S3441-070	S3505
	S3473	S3621
	S3475	S3629
	S3481	S3631
	S3627	

Cleaning Tools

Spirit & Celebrity

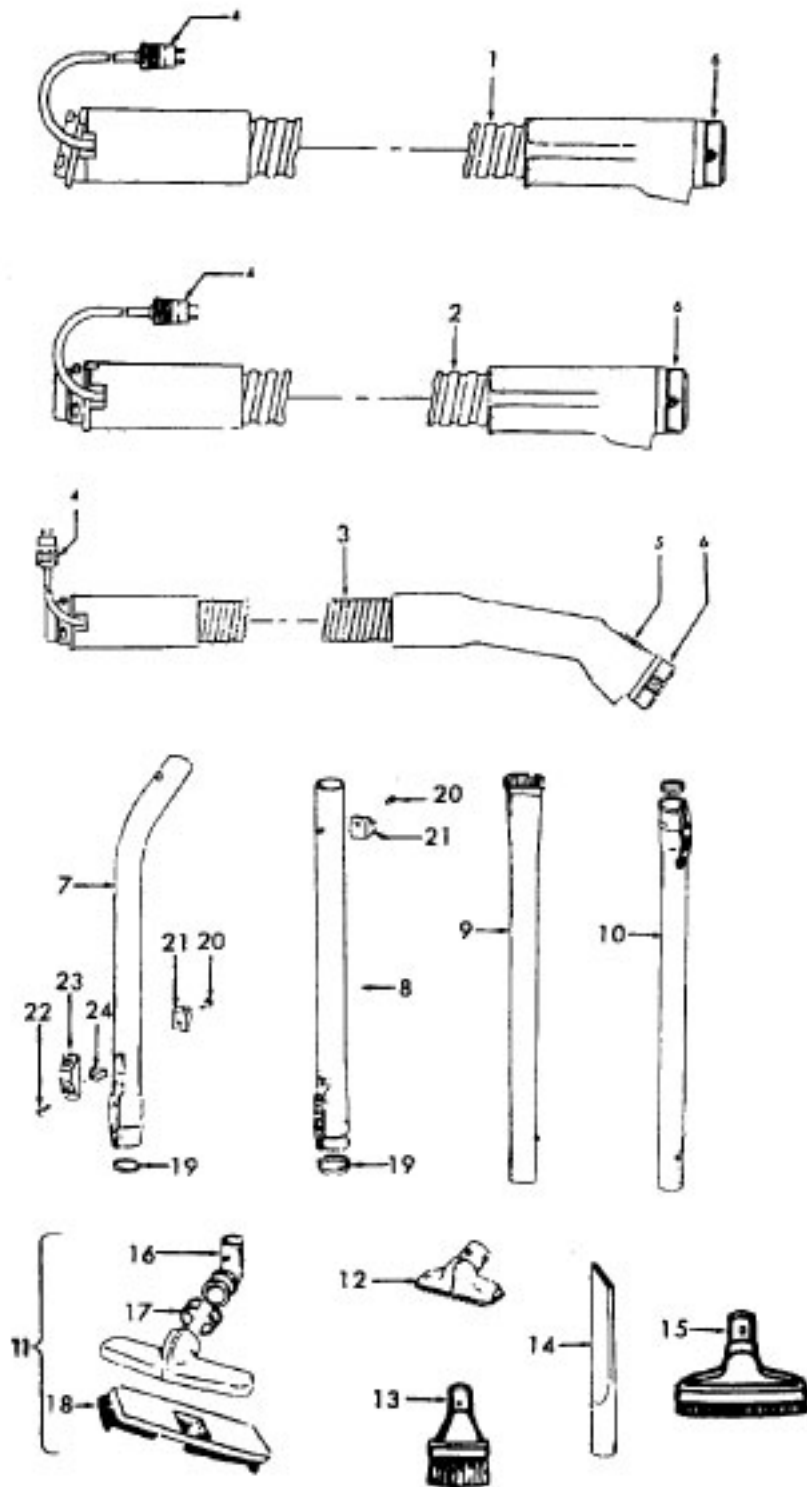

Ref. No.	Part No.	Description
1	43433085	Hose - AAP - Celebrity
2	43433032	Hose - JM - Spirit - 5-1/2'
3	43433067	Hose - AAP - Spirit - 5-1/2'
	43433081	Hose - MV -S/C- Spirit - 5-1/2'
	43433084	Hose - AAP - S/C - Spirit - 7'
	43433111	Hose - 2W - AG -S/C - Spirit
4	46321076	Cord Repair Kit
5	34777005	Suction Reg. Control - AG
	34777007	Suction Reg. Control - MV
6	36153009	Latch Ring - AG
7	43468055	Hose Tube - BL - 14
8	43453086	Extension Tube - BL - 22
	43453035	Extension Tube - AX - 22
	43453052	Extension Tube - 20 - AX (Gray Clip)
	43453058	Extension Tube - BL - 20 (Gray Clip)
9	3863801P	Extension Tube -Poly - AG
10	43453027	Extension Tube
11	43414073	Floor Brush - AG
12	38614023	Furniture Nozzle - 1 Pc. - 17
	43414057	Furniture Nozzle - AG
	38614024	Furniture Nozzle - AG
13	43414064	Dusting Brush - AG
14	38617017	Crevice Tool - AG
15	43414015	Furniture Brush - JM
	43414016	Furniture Brush - AG
16	38644040	Swivel Connector - JM
	38644020	Swivel Connector - AG
17	33712007	Split Ring
18	48447001	Brush Back
19	12845JM	Gasket
20	12783	Rivet
21	36171008	Cord Clip - MV
	36171005	Cord Clip - AG
22	13275	Screw
23	13142AG	Suction Control
24	13257BZ	Support