 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



HOOVER S3625 Owner's Manual

[Shop genuine replacement parts for HOOVER S3625](#)

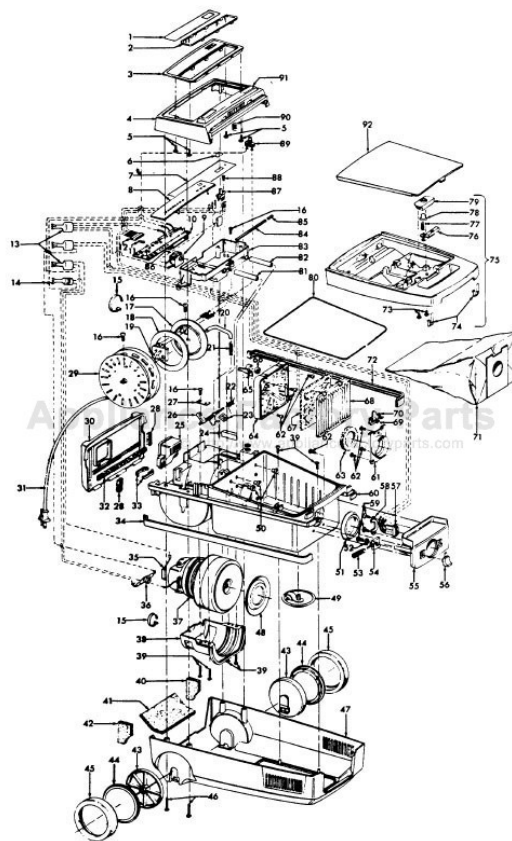


[Find Your HOOVER Vacuum Cleaner Parts - Select From 1456 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for HOOVER S3625

H-4010037M	HOOVER OEM PAPER BAG 3 PACK
H-38765006	Filter for Hoover 1 PACK, Aftermarket
H-43267002	AGITATOR BEARING ASM
H-43414073	Floor brush.
H-43414064	DUSTING BRUSH (ONE PEICE)
HR-5000	EXTENSION TUBE

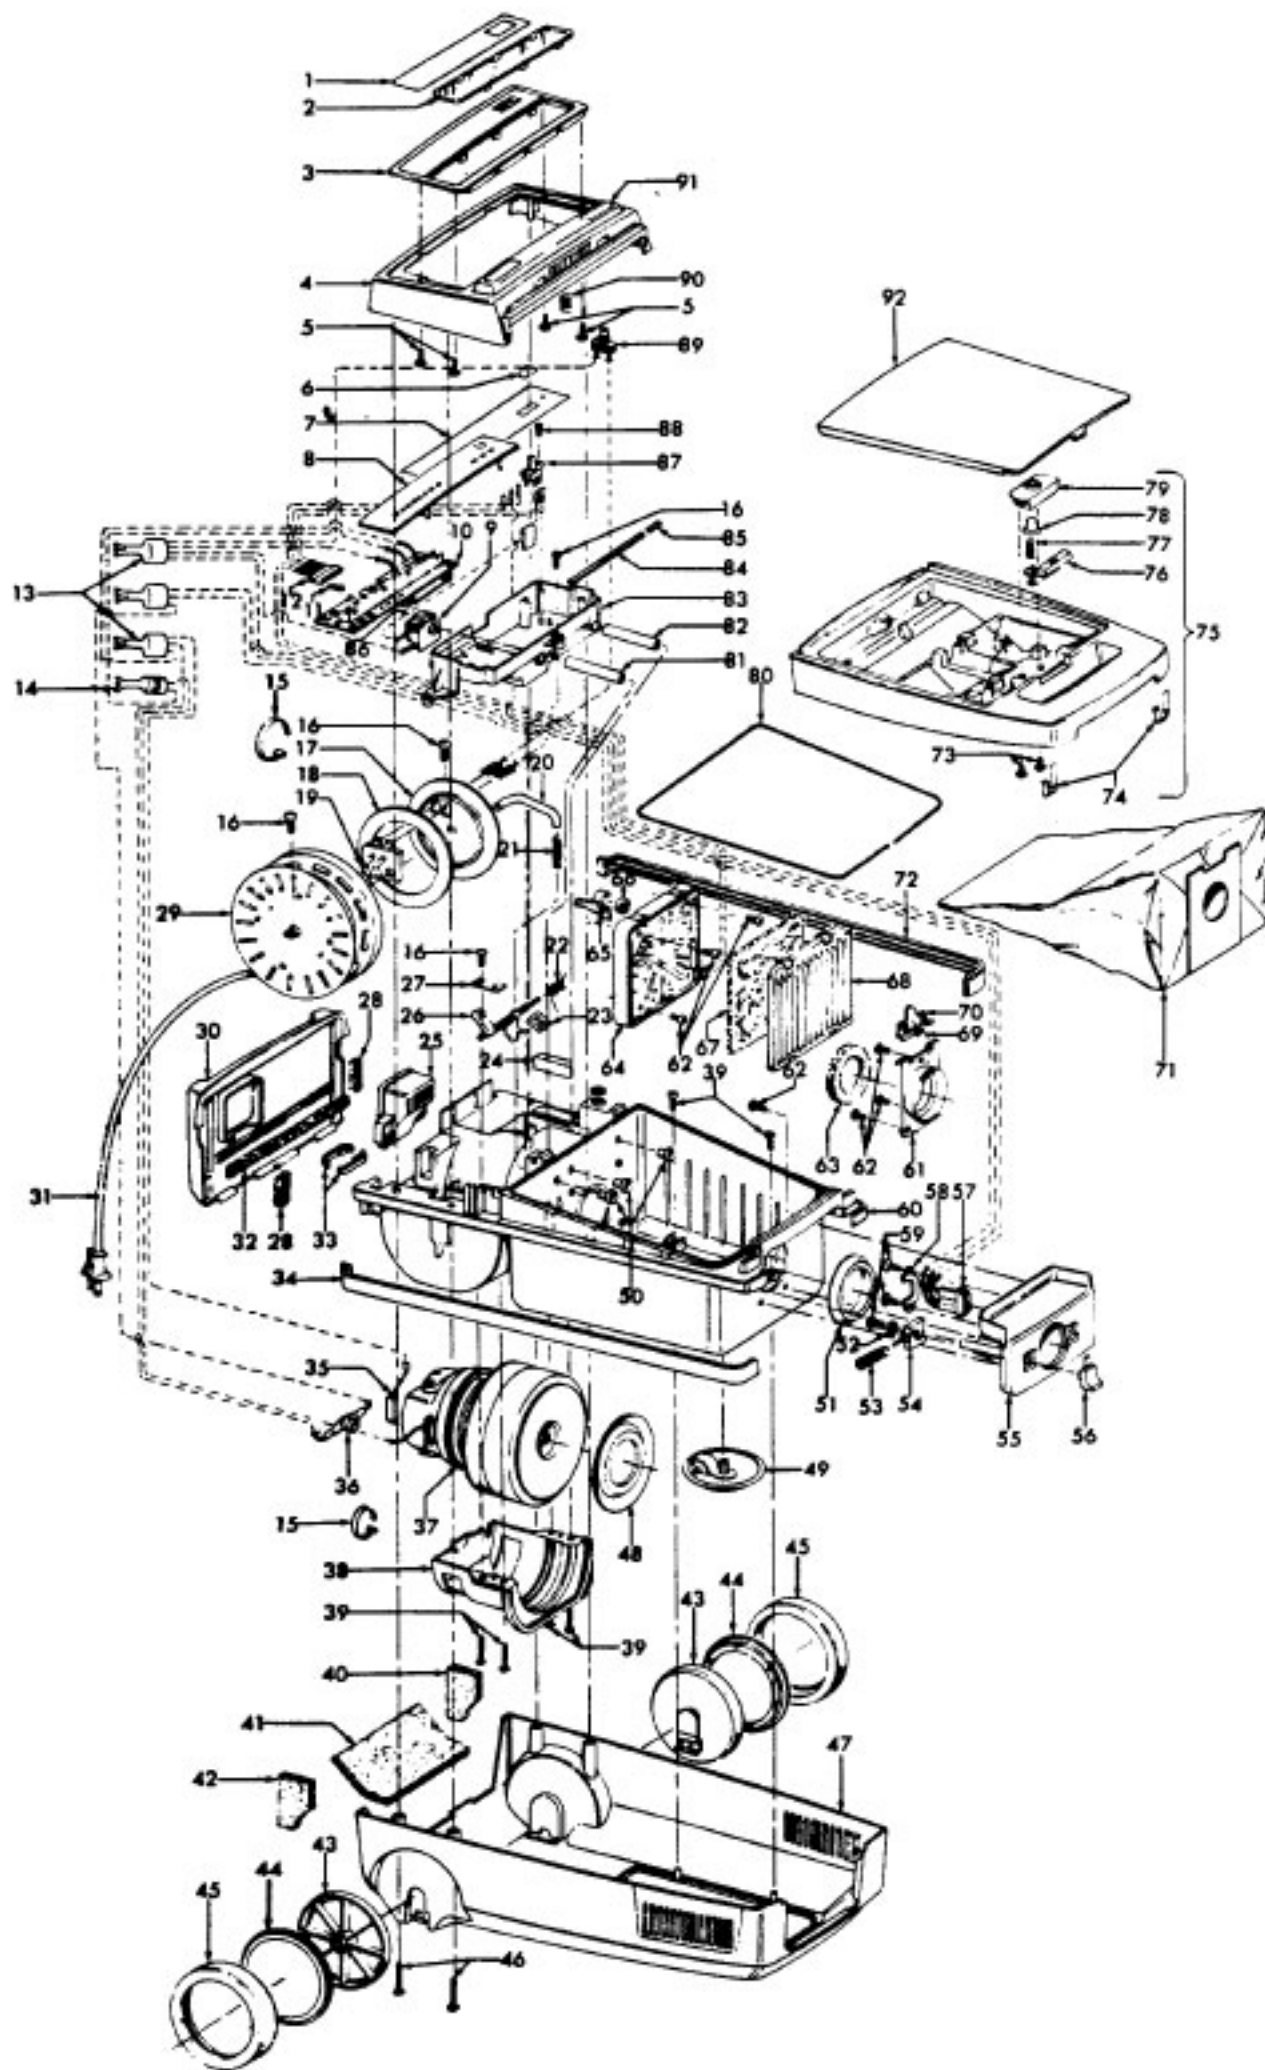 

Ref. No.	Part No.	Description
1	51371026	Nameplate
2	39382022	Lens
3	37214083	Control Panel - AG
4	37221019	Rear Deck - ABB
5	21447125	Screw
6	38421020	Switch Button - AG
7	37217007	Insulation Shield
8	51485013	Nameplate Panel
9	47851003	Transducer
10	46851021	P.C. Board
11	36152003	Locking Plug
12	27719102	Edge Connector
13	18972	Terminal Insulated
14	12227	Insulated Terminal
15	27479307	Wire Tie
16	21447003	Screw
17	36924005	Brush Block Bracket
18	31178027	Seal
19	47342008	Brush Block
20	31725020	Vent Tube
21	38315010	Vent Tube Spring
22	38356006	Spring
23	36222008	Brake Pad
24	34132014	Foam Pad
25	37926009	Plug Housing - AG
26	38458012	Brake Arm
27	36131017	Retainer
28	34132008	Seal
29	46831025	Cord Reel
30	42224005	Rear Panel - AG
31	46383308	Cord - AAP - 23
32	34123025	Seal
33	35253004	Ferrule
34	36235075	Furniture Guard - RH - AG
35	167679	Carbon Brush
36	28382111	Hi - Limit Thermostat
37	43578082	Motor (P - 192)
38	37196110	Motor Cap
39	21447072	Screw
40	34214002	Seal - LH
41	34172026	Seal
42	34214001	Seal - RH
43	43244021	Inside Wheel
44	32811012	Outside Wheel - AG
45	38522053	Tire - AG
46	21447121	Screw
47	37212139	Lower Case - ABB
48	38784013	Motor Seal
49	43244025	Caster Wheel
50	32271003	Tube Adapter
51	38784015	Seal
52	21328071	Washer
53	38313017	Spring
54	36152005	Slide Latch
55	37218022	Hose Module - MW
56	38421011	Slide Button
57	46526006	Receptacle - 3W

Ref. No.	Part No.	Description
58	36171009	Clamp
59	21447203	Screw
60	37215111	Main Frame -AG
61	36425032	Bag Collar Support
62	21447003	Screw
63	38784017	Seal
64	42983015	Air Flow Control
65	38458020	Sail
66	39131001	Magnet
67	38765006	Filter
68	37944004	Filter Retainer
69	38351006	Spring
70	36153026	Bag Latch
71	4010037M	Paper Bag - 3 Pk.
72	36235074	Furniture Guard - LH - AG
73	21447017	Screw
74	21378157	Spring Clip
75	42217137	Bag Lid - ABB
76	36152014	Latch - ABB
77	38313017	Spring
78	38411053	Pop - Up Button
79	36131048	Latch Retainer
80	31526003	Seal
81	31724023	Vent Tube
82	31724025	Vent Tube
83	37922005	P.C. Board Cover
84	34123024	Seal
85	34122010	Seal
86	34132015	Foam Pad
87	28182001	Switch
88	21447125	Screw
89	47511030	Switch
90	38313021	Spring
91	38426044	Pedal
92	36433024	Tool Lid - AAL (Clear)


ITEMS NOT ILLUSTRATED

56513316	Owner Manual
58185121	Carton
58461024	Rear Support
58461025	Front Support
58333010	Mid Pad
58369022	Bottom Support
46831076	Brush Block (Cord Reel)

CLEANING TOOLS - (P - 150)

38617017	Crevice Tool - AG
43414057	Furniture Nozzle - AG
43414064	Dusting Brush - AG
43414073	Floor Brush - AG
43433024	Hose - 3W - MV - (P - 149)
43453052	Extension Tube - 20 - AX
48438124	Power Nozzle - ABB - (P - 146)

 
**Motor 43578037 (4.3) +
43578082 (4.3)**

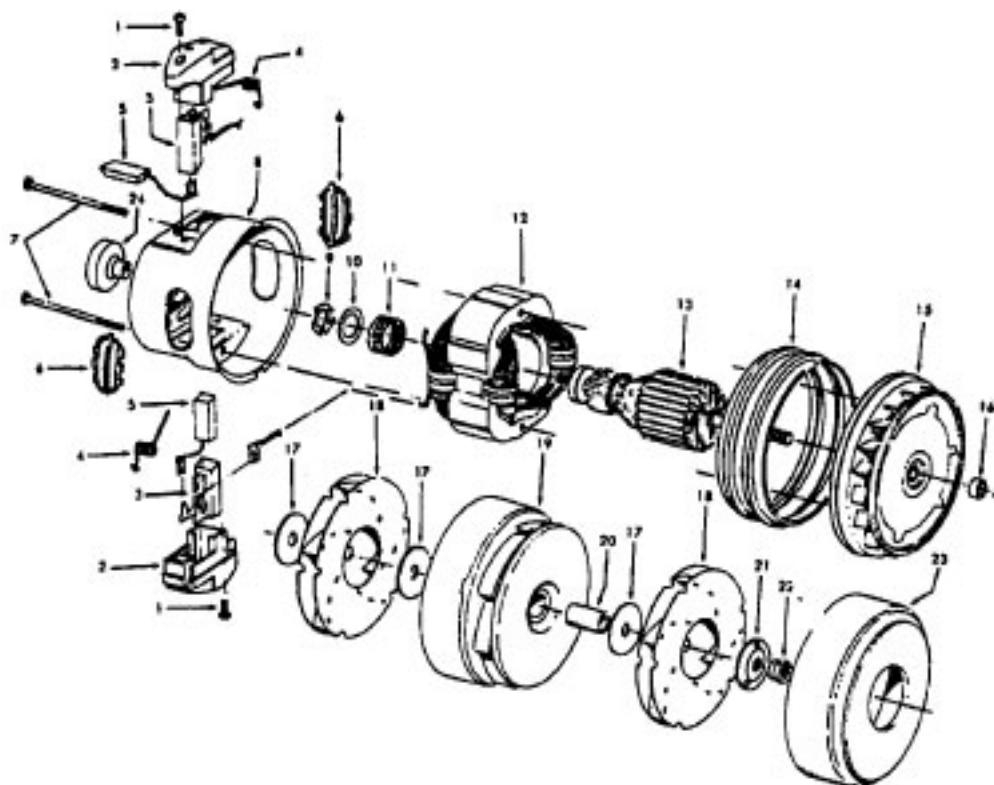

Ref. No.	Part No.	Description
1	21429406	Screw
2	168038AG	Brush Carrier
3	168506--	Brush Holder
4	38353004	Spring
5	167679	Carbon Brush
6	169702BZ	Bushing
7	36112003	Bolt (Use w/Metal Diffuser)
	21447221	Screw (Use w/Molded Diffuser)
8	42192015	Motor Housing
9	21345116	Spring Washer
10	21312778	Thrust Washer
11	24198002	Star Ring
12	45311023	Field Coil
13	44765070	Armature
14	36322012	Motor Mount Insulator
15	43551012	Diffuser (Metal)
	43551030	Diffuser (Molded)
16	31148009	Spacer (Use w/Metal Diffuser)
	31148011	Spacer (Use w/Molded Diffuser)
17	21312774	Washer
18	43551008	Fan
19	42192030	Interstage
20	31732023	Spacer
21	31162006	Balancing Ring
22	12028AY	Nut
23	37196059	Fan Cover
24	36116023	Balancing Ring/Nut

Power Nozzle 48438112 + (Use 48438044)
 48438124 - ABB, 48438126 - ABB
 48438226 - AG T - Plug,
 48438044 - AG - Standard Plug

 Model S3277, S3277-040, S3279,
 S3491, S3493, S3623, S3625

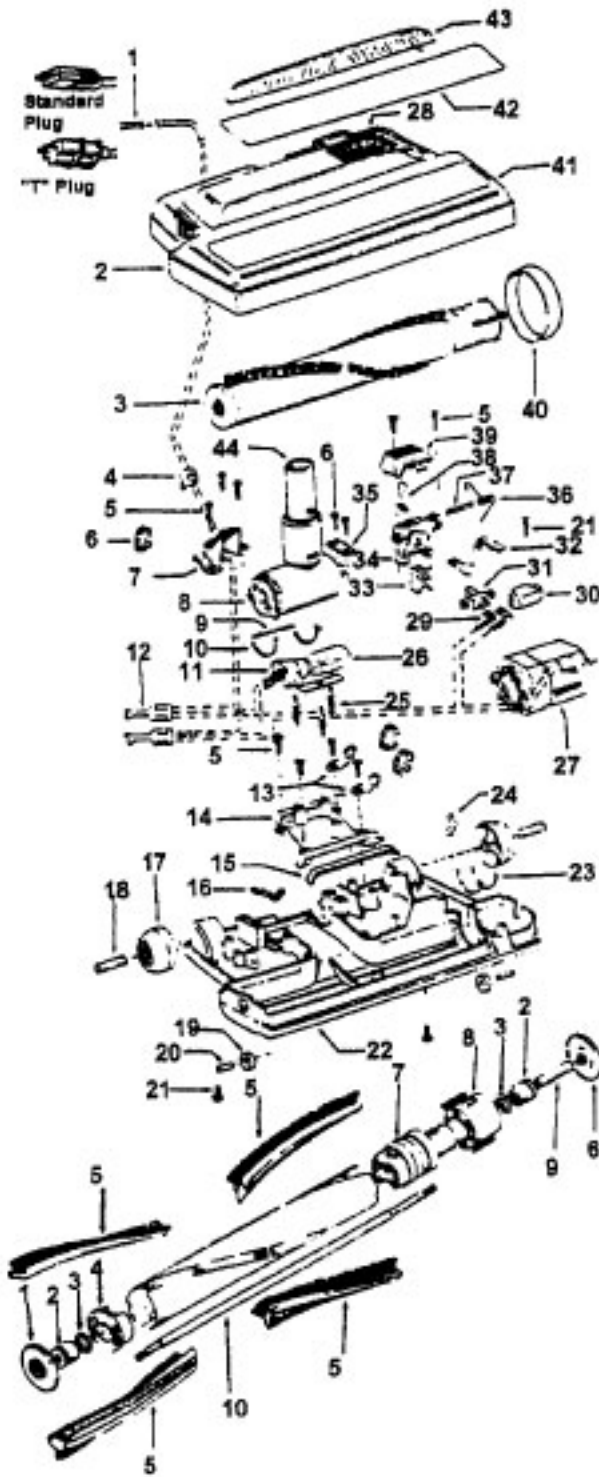


Agitator 48416030

1	48495AY	Bearing
2	43267002	Bearing
3	21347003	Washer
4	36422001	End
5	48445017	Agitator Brush
6	41435018	Thread Guard
7	38537008	End Pulley
8	48418001	Brush Ring
9	31722019	Spacer
10	32724005	Shaft


Ref. No.	Part No.	Description
1	46321088	Cord - AG - Standard Plug
	46321009	Cord - S3625
2	36231103	Furniture Guard - MS - S3277, S3277-040, S3279
	36231096	Furniture Guard - MY
3	48416030	Agitator - 4B
4	163768	Strain Relief
5	21447041	Screw
6	27479307	Wire Tie
7	36131044	Retainer Housing - MP
	36131067	Retainer Housing - AG - S3491, S3493, S3623, S3625
8	43461021	Nozzle Connector - AG (Incl. Item 44)
9	34112005	Seal
10	34337003	Seal
11	47171009	Lamp Socket
12	18972	Insulated Terminal (3 Wire)
13	45517	Wire Holder
14	42256098	Dust Cover
15	34123017	Seal
16	35276001	Detent Spring
17	32175025	Wheel - AG
18	31523005	Wheel Shaft
19	32761001	Wheel
20	31522004	Wheel Shaft
21	21447007	Screw
22	42246121	Base Plate Assm. (incl. Items 17,18,19,20,23,24)
23	34337004	Lower Seal
24	13261AY	Rib Shoe
25	36218005	Grommet
26	27317307	Lamp - 15
27	43177073	Motor
28	51865002	Indicator Lens
	51865018	Indicator Lens
29	27666702	Terminal
30	37258082	Shield
31	281770KD	Switch
32	51151053	Indicator - PH
33	34361001	Switch Actuator
34	42262032	Housing
35	36131017	Retainer
36	38353007	Torsion Spring
37	31523006	Pivot Pin
38	38458002	Depressor
39	38433054	Switch Pedal - MR
	38433067	Switch Pedal - MW - S3491, S3493, S3623, S3625
40	38528011	Belt
41	42252189	Nozzle Body-AG - (Incl. Items 2,43)
42	52125092	Nameplate - S3277, S3279
	52125114	Nameplate - S3277-040, S3491, 4393
	52125133	Nameplate - S3623, S3625
43	39383060	Lens
44	43457037	Swivel Tube - AG

 Dimension Hose

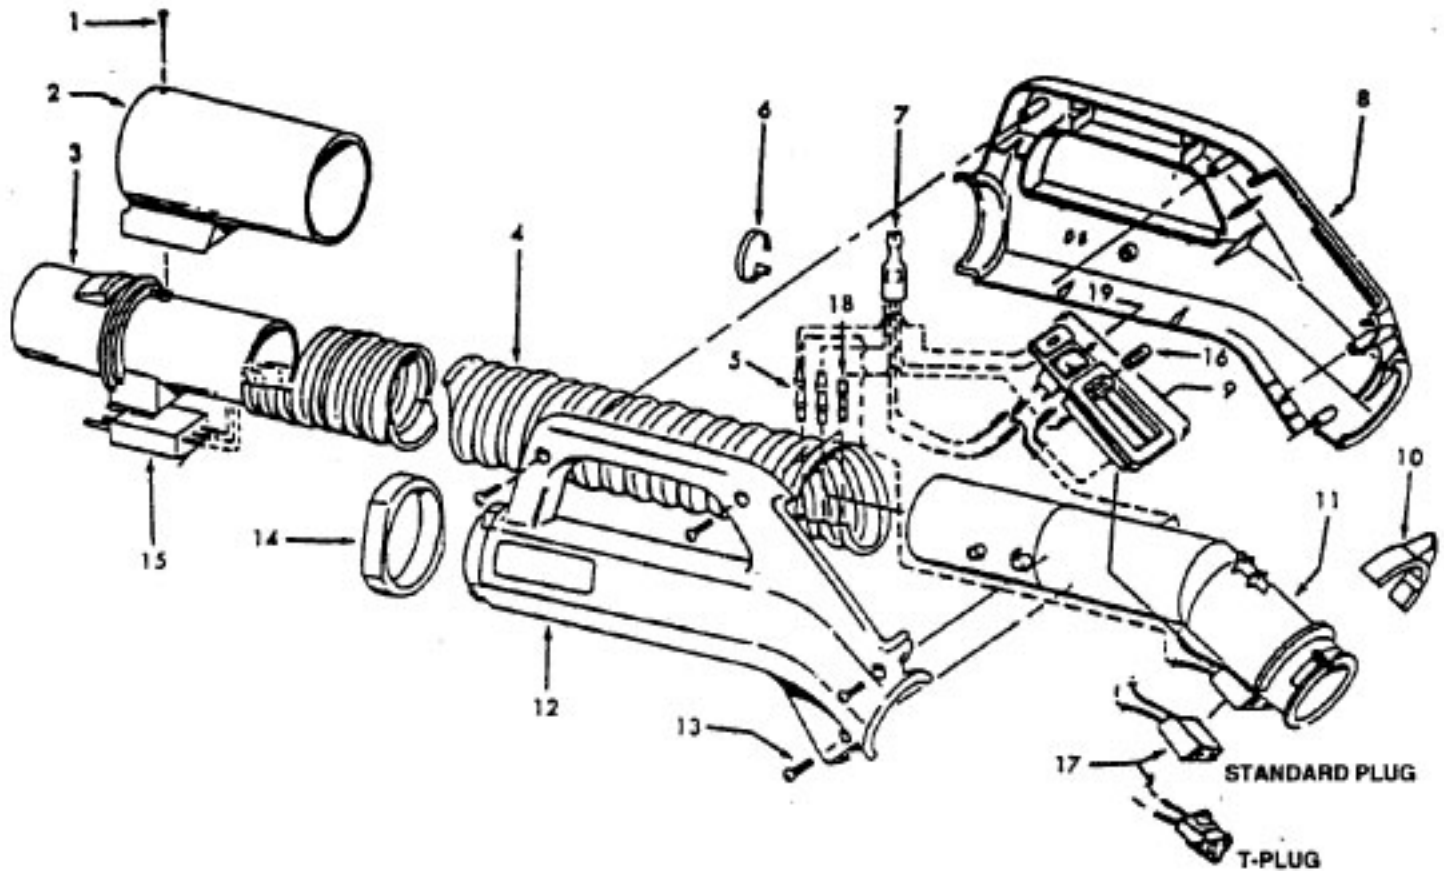

43433079			43433024		
Hose - 3W - MV - 6'			Hose - 3W - MV - 7-1/2' (T - Plug)		
Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	21124102	Drive Screw	1	21124102	Drive Screw
2	38634067	Grip - MV	2	38634067	Grip - MV
3	38638030	Hose Connector	3	38638030	Hose Connector
4	43431014	Hose - 3W	4	43431014	Hose - 3W
5	31712006	Insulating Sleeve	5	31712006	Insulating Sleeve
6	27479307	Wire Tie	6	27479307	Wire Tie
7	12227	Insulated Terminal	7	12227	Insulated Terminal
8	48663161	Hose Grip Assm. (Incl. Items 12,17,18)	8	39461008	Grip - LH - MV (T-Plug Style)
9	48663023	Grip Control Panel - (Incl. Items 7,8,12,17)	9	47561006	Grip Control Panel - AG (Incl. Items 7,17)
	51341001	Nameplate - Grip Control Panel		51341001	Nameplate - Grip Control Panel
10	36153029	Latch Ring	10	36153029	Latch Ring
11	38646034	Inner Tube	11	38646034	Inner Tube
12	48663161	Hose Grip Assm. (incl. Items 8,17,18)	12	39461007	Grip - RH - MV (T-Plug Style)
13	21447124	Screw	13	21447124	Screw
14	36131087	Retainer Ring	14	36131087	Retainer Ring
15	46521008	Plug - 3 Pin	15	46521008	Plug - 3 Pin
16	38421040	Button	16	38421040	Button
17	46651001	Connector & Lamp (Std. Plug Style)	17	46651003	Connector & Lamp (T-Plug Style)
	46325024	Connector Repair Kit (Std. Plug Style)		46325032	Connector (T-Plug Style)
18	27613003	Wire Slice	18	27613003	Wire Slice
19	28161051	Switch	19	28161051	Switch

 Cleaning Tools - Dimension




38617017 Crevice Tool - AG



43414057 Furniture Nozzle - AG



 43414064 Dusting Brush - AG

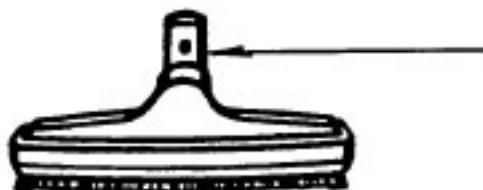


38644020 Swivel Connector


43414073 Floor Brush - AG



 48447001 Brush Back




3863801P Extension Tube - AG

 

43453058 Ext. Tube - BL - 20

 43453052 Ext. Tube - AX - 20



43453023 Ext. Tube - AX - 20 w/c