 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://Appliance Factory Parts).



# HOOVER U4463-9 Owner's Manual

[Shop genuine replacement parts for HOOVER U4463-9](#)

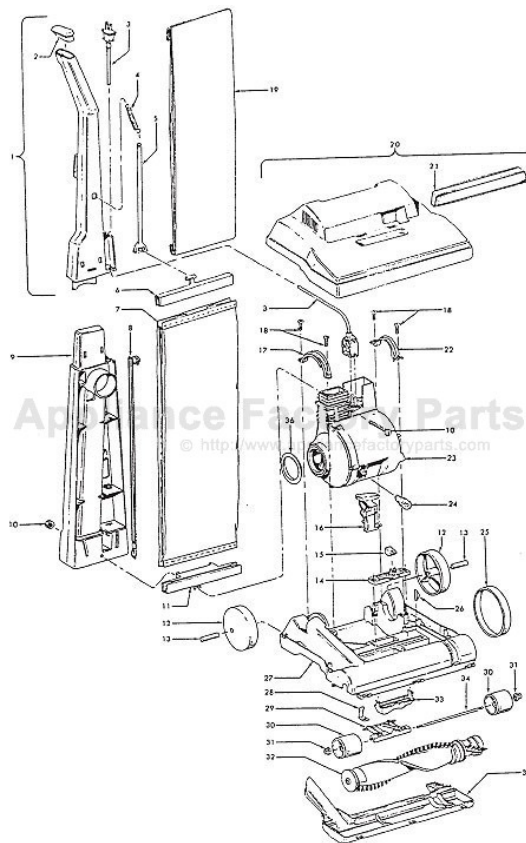

[Find Your HOOVER Vacuum Cleaner Parts - Select From 1456 Models](#)

----- Manual continues below part list -----

 
## Available Replacement Parts for HOOVER U4463-9

<a href="#">H-38528040</a>	BELT VACUUM HOOVER OEM (1 PACK)
<a href="#">48414036</a>	HOOVER ELITE BRUSH ROLLER
<a href="#">H-4010001A</a>	VACUUM BAG OEM HOOVER 3 PACK
<a href="#">H-43267002</a>	AGITATOR BEARING ASM
<a href="#">K-109289</a>	BULB
<a href="#">HR-5000</a>	EXTENSION TUBE

# HOOVER Original

ELITE

Models U4459, U4459-940, U4461-9, U4463-9, U4701-970, U4483

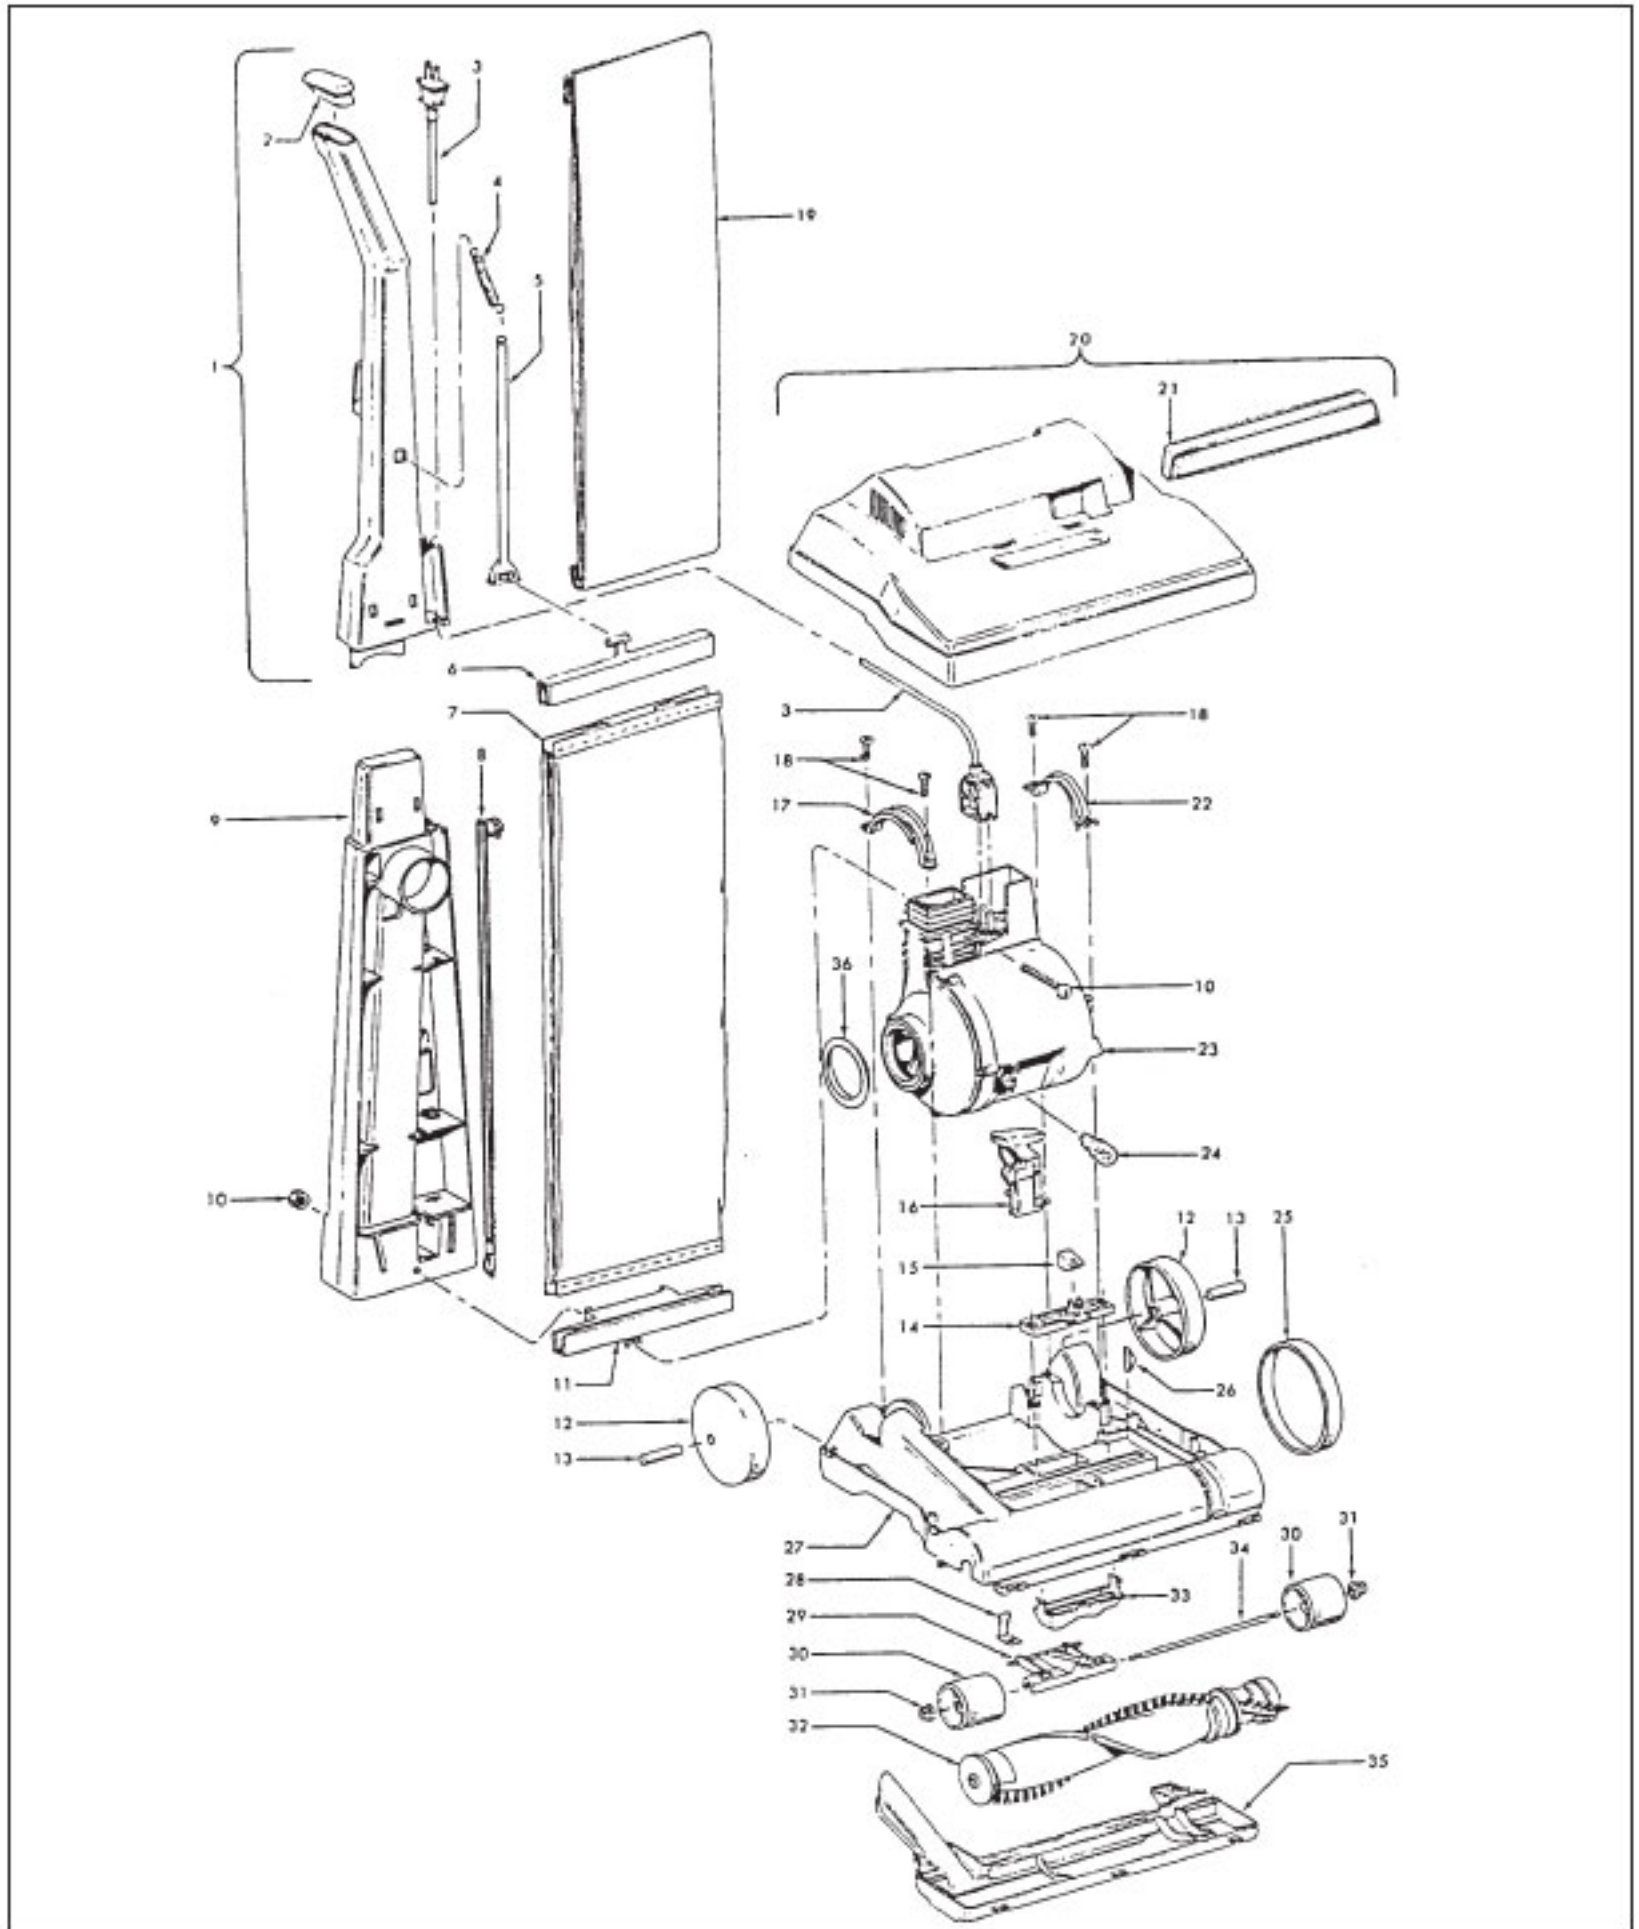




# HOOVER Original


## LEGACY & ELITE

 Models U4459, U4459-940, U4461-9, U4463-9, U4465-9, U4471, U4471-9, U4471-960, U4473, U4473-080, U4483, U4485, U4507, U4507-9, U4509, U4511, U4511-9, U4533-9, U4545-900, U4557-910, U4569-910, U4581-910, U4599-900, U4601-900, U4609, U4617-910, U4641-910, U4649-910, U4671-910, U4681, U4681-910, U4689-910, U4697-910, U4701-970, U4709-910, U4713-910, U4731-910, U5069-910, U5079-910

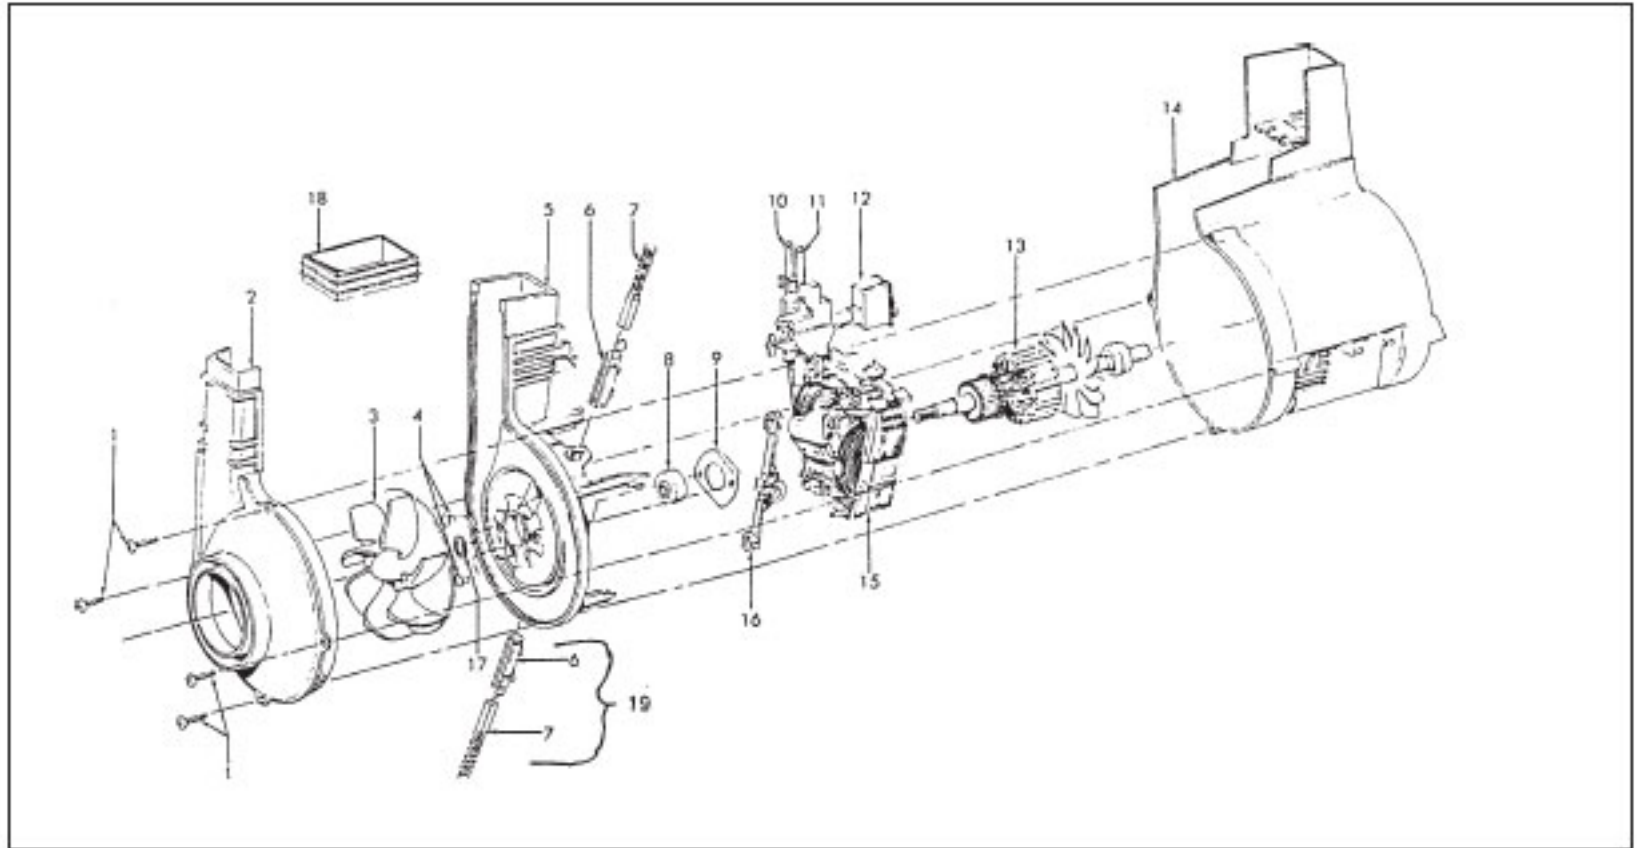


KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION
	NLA	Motor Ass'y Comp. - Order H-43576211 (See Page 22-225)	13	NLA	Armature/Bearing Ass'y - U4465-9, U4473, U4473-080, U4485, U4507, U4507-9, U4511, U4511-9, U4545-900, U4557-910, U4569-910, U4581-910, U4641-910, U4649-910, U4681, U4689-910, U4697-910, U4731-910
1	H-214793 DA	Screw - Self Tapping (4)		NLA	Armature/Bearing Ass'y
2	H-38736032	Fan Chamber - MW	14	H-37194034	Motor End Cap Ass'y - MW
3	H-38755030	Fan	15	NLA	Field Ass'y - U4465-9, U4473, U4473-080, U4485, U4507, U4507-9, U4641-910, U4649-910, U4681, U4681-910, U4689-910, U4697-910 (Incl. Items 10, 11, 12, 16)
4	H-12503 EF	Rivet - Semi Tubular (2)		NLA	Field Ass'y (Incl. Items 10, 11, 12, 16)
5	NLA	Motor Housing Ass'y (Incl. Items 4, 6, 8, 9)		NLA	Field Ass'y - U4511, U4511-9, U4545-900, U4557-910
6	H-41311011	Motor Brush Holder (2)		NLA	Field Ass'y - U4569-910, U4581-910, U4731-910, U5069-910, U5079-910 (Incl. Items 10, 11, 12, 16)
7	H-41311011 H-47318024	Motor Brush Ass'y (2) Motor Brush Ass'y (2) - U4511, U4511-9, U4545-900, U4557-910, U4569-910, U4581-910, U4731-910		NLA	Lamp Holder Ass'y
8	H-24152808	Bearing	16	H-47171018	Lamp Holder Ass'y
9	H-37913020	Bearing Retainer	17	H-21312793	Washer
10	H-36914004	Switch Bus Bar	18	H-38783014	Molded Duct Seal
11	H-39116005	Attachment Terminal	19	H-41311011	Motor Brush Holder Ass'y - (Incl. Items 6, 7)
12	H-28218043	Switch Ass'y			

 H-48414035

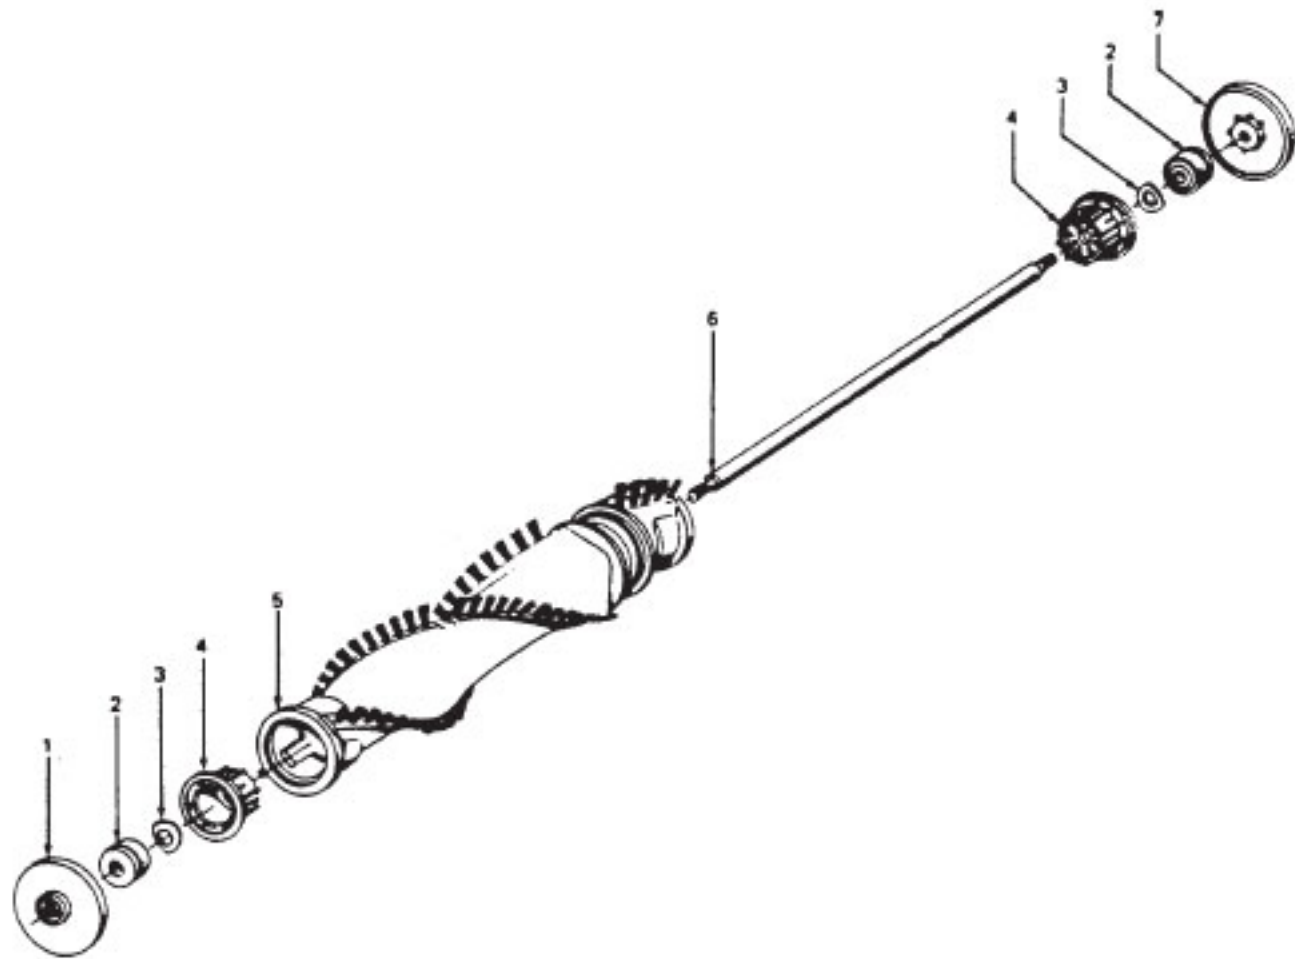

KEY	PART NO.	DESCRIPTION
	H-48414036	Agitator Ass'y Complete 2 Row
	H-48414035	Agitator Ass'y Complete 4 Row
1	H-36423016	Thread Guard - R.H.
2	H-43267002	Agitator Bearing Ass'y (2)
3	H-21347003	Conical Washer(2)
4	H-36422022	Agitator End (2)
5	H-48414032	Agitator Body
6	H-32724013	Agitator Shaft
7	H-36423017	Thread Guard - L.H. - AG

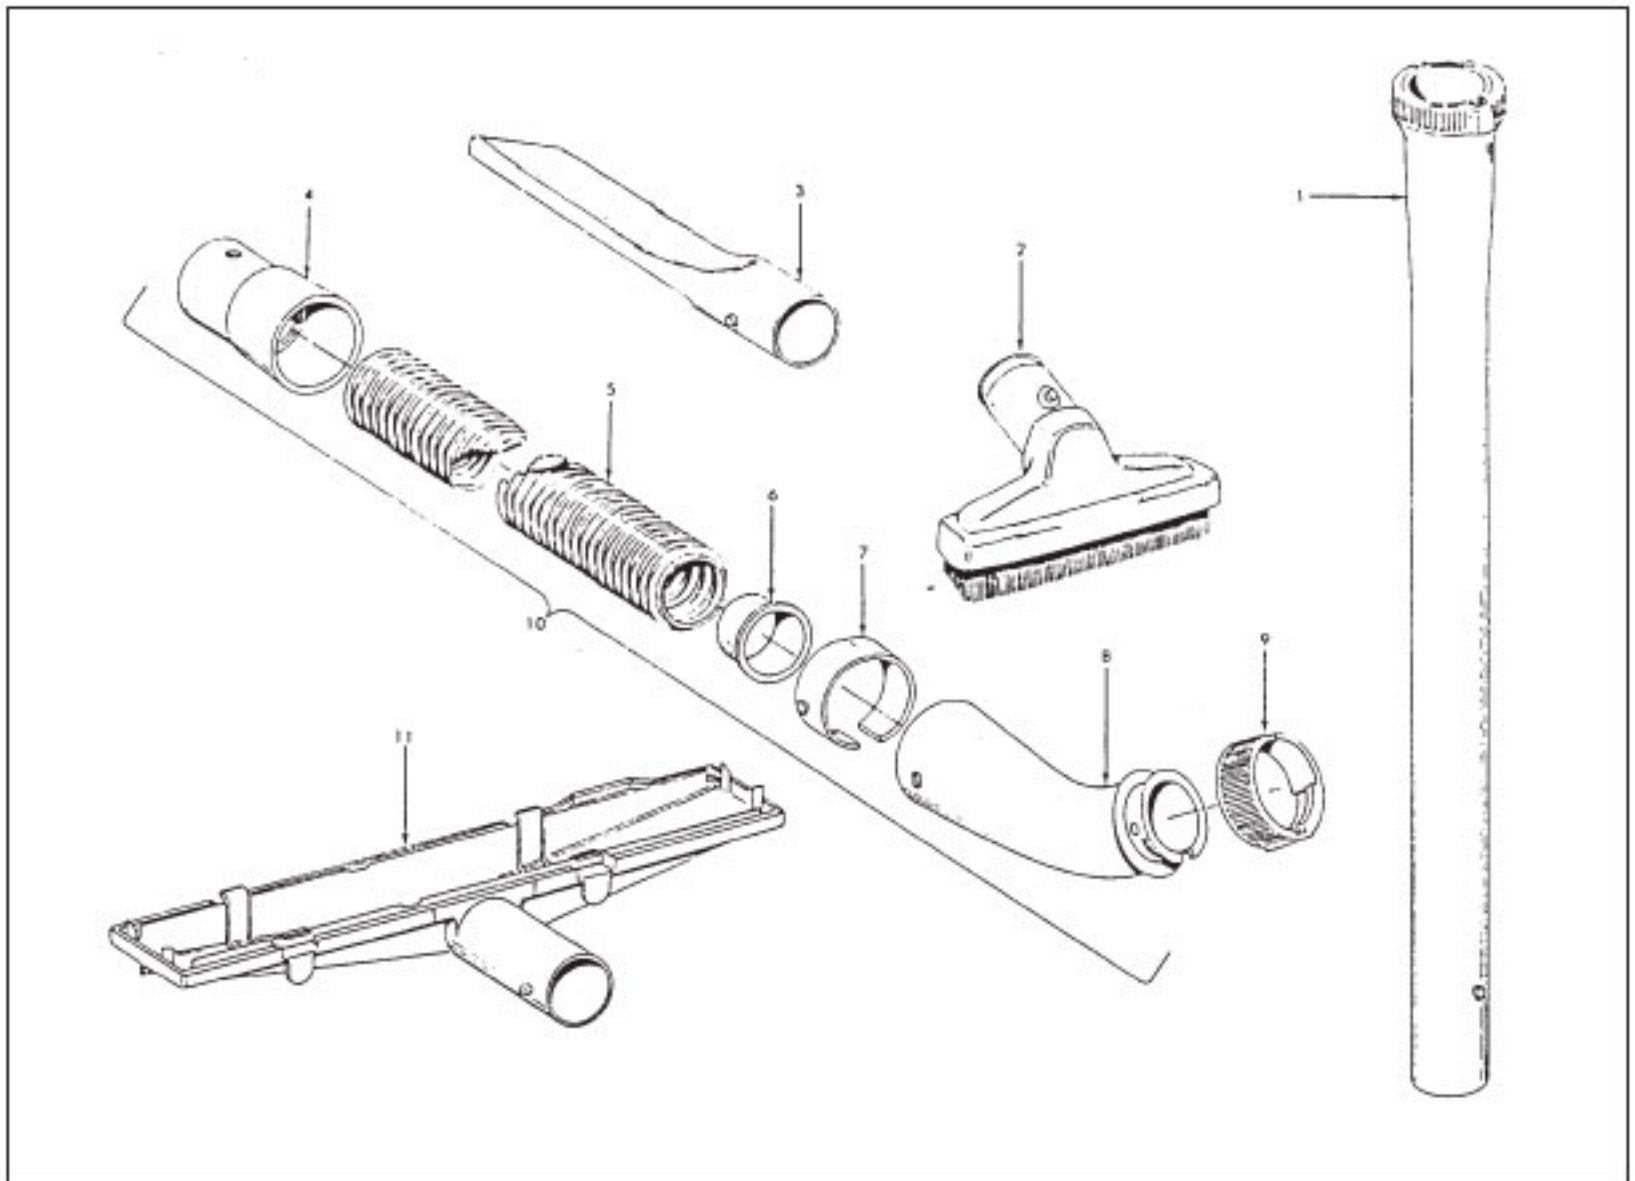 

### Standard Fit Tools (w/Retention Pin) (Shown)

KEY	PART NO.	DESCRIPTION
1	H-43453043	Extension Tube - AAP
2	H-43414017	Multi-Purpose Brush - AAP
3	H-38617018	Crevice Tool - AAP
4	H-32288004	Hose Connector - AAP
5	H-38671018	Hose - Less Ends - AAP
6	H-32156010	Hose Sleeves
7	H-36171025	Hose Connector - Curved - AAP
8	H-43466058	Hose Connector - Curved - AAP (Incl. Item 9)
9	H-36153021	Latch Ring
10	H-43434210	Hose Comp.
11	H-38656016	Convertor Body - AAP
	H-43414071	Furniture Nozzle - AAP
	H-43414087	Dusting Brush - AAP
	H-43414088	Wall/Floor Brush - AAP

### Friction Fit Tools (w/o Retention Pin) (Not Shown)

PART NO.
H-38634074
Not Available
H-38617023
H-32288004
H-38671025
Not Available
Not Available
H-39454053 (Hand Grip)
Not Available
H-43434225
H-38656016
H-38614026
H-43414129
H-43414135