 


This Owner's Manual is provided and hosted by Appliance Factory Parts.



HOOVER U5099-930 Owner's Manual

[Shop genuine replacement parts for HOOVER
U5099-930](#)

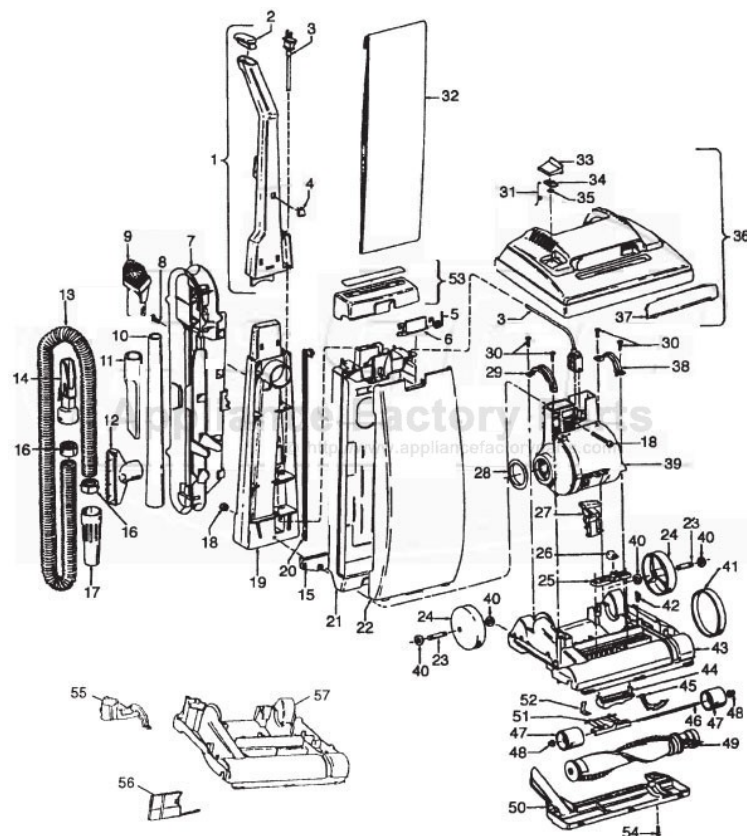

[Find Your HOOVER Vacuum Cleaner Parts - Select From 1456 Models](#)

----- Manual continues below part list -----


Available Replacement Parts for HOOVER U5099-930

H-38528040	BELT VACUUM HOOVER OEM (1 PACK)
48414036	HOOVER ELITE BRUSH ROLLER
H-4010001A	VACUUM BAG OEM HOOVER 3 PACK
HR-5000	EXTENSION TUBE

HOOVER Original

ELITE & LEGACY HARD BODY

 Models C1401-910, C1409-910, C1413-910/930, U5035-910/930, U5043-910/930, U5051-910/930, U5053-910/930, U5069-910, U5079-910, U5089-910/920/930, U5099-910/920/930, U5109-910/920/930

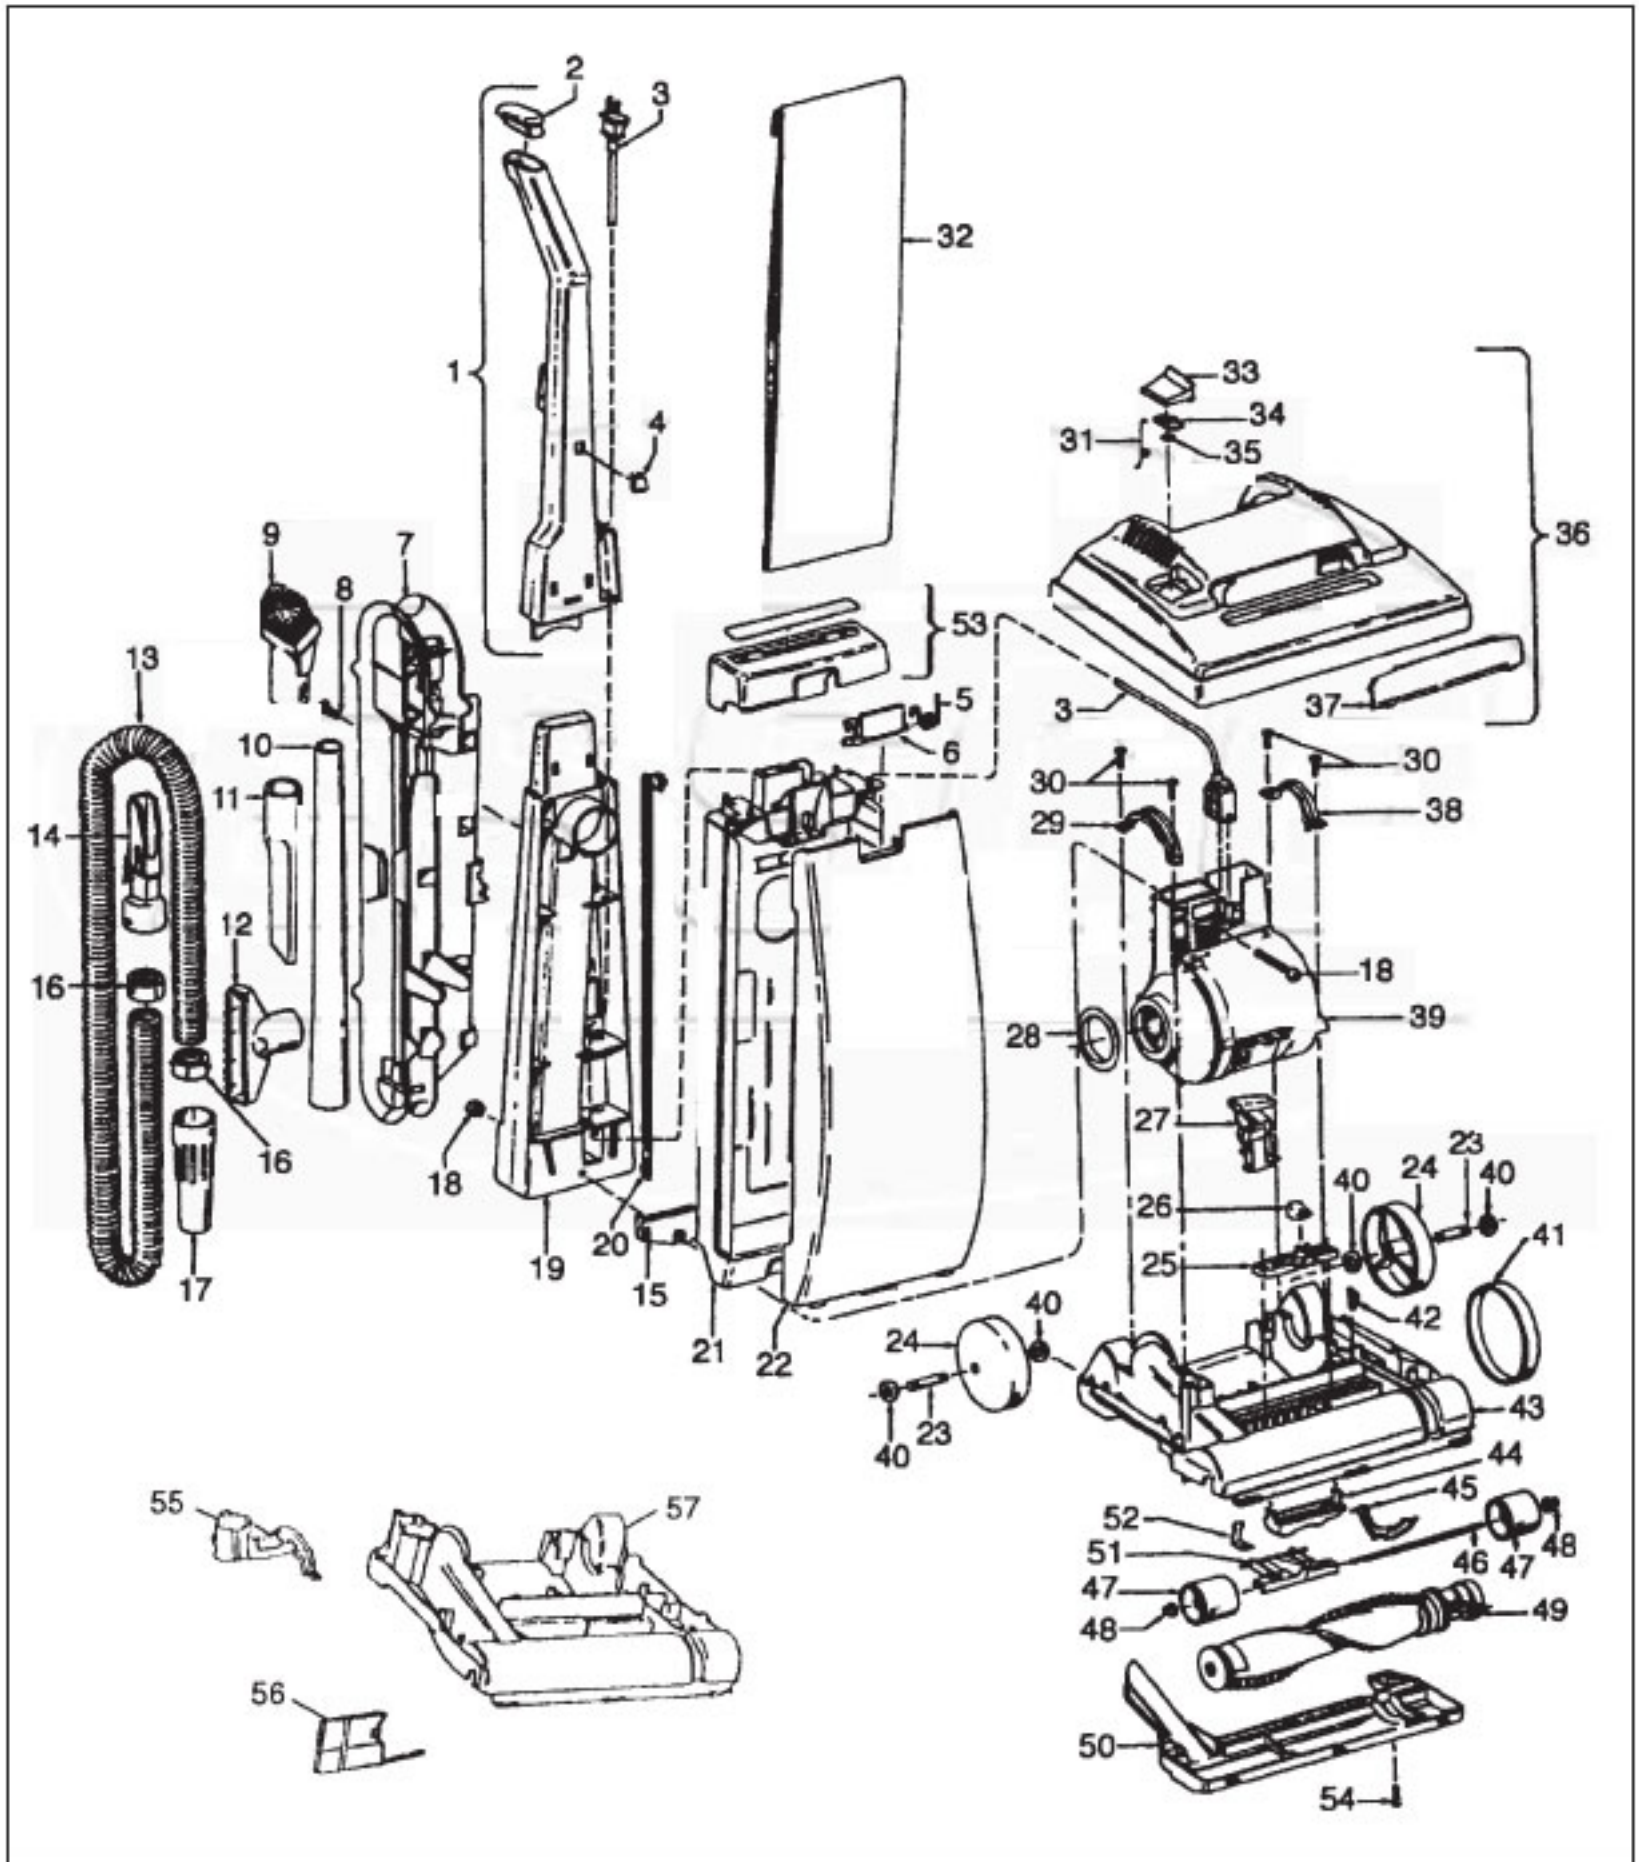

Original **HOOVER**

ELITE & LEGACY HARD BODY

Models C1401-910, C1409-910, C1413-910/930, U5035-910/930, U5043-910/930, U5051-910/930, U5053-910/930, U5069-910, U5079-910, U5089-910/920/930, U5099-910/920/930, U5109-910/920/930

KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION
1	H-48663158	Upper Handle Ass'y C1413-930	27	H-38458022	Handle Release Lever AG
1	NLA	Upper Handle Ass'y 5089-910/920/930, 5099-910/920/930 U5109-910/920/930	28	H-38784016	Seal
1	H-48663160	Upper Handle Ass'y 5051, 5069-910, 5079-910	29	H-36131057	Motor Retainer Cap - R.H.
1	H-48663167	Upper Handle Ass'y 5053-910, 5053-930	30	H-21447217	Screw - Self Tapping
1	H-48663168	Upper Handle Ass'y 5035-930, 5043-910/930	31	H-38351013	Spring
1	H-48663158	Upper Handle Ass'y C1409-910	32	H-4010001A	Throw Away Bag - 3 Pk.
2	H-37911072	Handle Cap - ABE	33	H-37257064	Door Ass'y - AAW (Incl. Items 34,35)
3	H-46368005	Attachment Cord 3 Wire	34	H-38785011	Seal
3	H-46388016	Attachment Cord 2 Wire	35	H-21362006	Speed Nut
4	H-37911061	Plug	36	NLA	Hood Ass'y C1401-910
5	H-38355008	Spring	36	H-42252357	Hood Ass'y (Incl. Items 33, 37)
6	H-36151006	Latch	36	H-42252357	Hood Ass'y (Incl. Items 33, 37) C1413-930
7	H-41426086	Tool Holder - ABE	36	H-42252330	Hood Ass'y 5035-930
8	H-21447220	Screw - Self Tapping	36	H-42252319	Hood Ass'y 5043-910
9	H-43414145	Dusting Brush - AG	36	H-42252292	Hood Ass'y 5053-910/930, 5079-910
10	H-38634077	Ext. Tube - AG	36	H-42252340	Hood Ass'y 5043-930
11	H-38617024	Crevice Tool - AG	36	H-42252368	Hood Ass'y 5051-930
12	H-38614029	Furniture Nozzle - AG	36	H-42252293	Hood Ass'y 5069-910, 5089-910/920/930
13	H-43434232	Hose Comp. - ABX/AG	36	H-42252298	Hood Ass'y 5099-910/920/930
14	H-38656035	Hose Connector - AG	36	H-42252250	Hood Ass'y 5109-910/920/930
15	H-36425081	Bag Housing Bracket	36	H-42252297	Hood Ass'y C1409-910
16	H-36116027	Hose Connector Collar - AG	37	H-37246129	Cover C1413-930
17	H-32288011	Hose Adapter - AG	37	H-39383097	Lens 5053-910/930, 5069-910, 5079-910, 5089-910/920/930, 5099-910/920/930, 5109-910/920/930
18	H-40201085	Nut & Bolt	37	H-39383098	Lens 5035-930, 5043-910/930, 5051-930
19	H-39464005	Lower Handle C1413-930, 5051-910	37	H-39383102	Lens C1409-910
19	H-48669001	Lower Handle 5089-910/920/930, 5099-910/920/930, 5109-910/920/930	38	H-36131090	Motor Retainer Cap - L.H.
19	H-39464004	Lower Handle 5035-930, 5043-910/930, 5069-910, 5079-910, C1409-910	39	H-43576142	Motor
20	H-38456036	Switch Control Rod -ABB	40	H-21312787	Washer (4)
21	H-37254068	Bag Housing	41	H-38528040	Belt
22	H-37257082	Bag Housing Door C1413-930	42	H-13261	Rug Nozzle Rib Shoe
22	H-37257038	Bag Housing Door 5035-930, 5043-910/930, 5053-910/930, 5069-910, 5079-910, 5089-910/920/930, 5099-910/920/930, 5109-910/920/930	43	H-42243002	Main Body Ass'y (Incl. 23, 24, 27, 42) C1413-930
22	H-37257084	Bag Housing Door 5051-930	43	H-42243001	Main Body Ass'y 5035-910, 5043-910/930, 5051-930
22	H-37257034	Bag Housing Door C1409-910	44	H-38563011	Nozzle Height Adj. Cam
23	H-31531008	Wheel Shaft - AY	45	H-38452089	Lever
24	H-38522011	Rear Wheel - AG	46	H-32563012	Wheel Shaft - AY
25	H-38567008	Cam Actuator C1413-930, 5035-930, 5043-910/930, 5051-930	47	H-38521023	Wheel - AG
25	H-38567009	Cam Actuator 5053-910/930, 5069-910, 5079-910, 5089-910/920/930, 5099-910/920/930, 5109-910/920/930, C1401-910	48	H-36131056	Wheel Retainer - BZ
26	H-38421070	Indicator Knob Small C1413-910/930, 5035-930, 5043-930, 5051-930	49	H-48414035	Agitator
26	H-38421066	Indicator Knob Small 5043-910	50	H-37245106	Bottom Plate - AG
26	H-38567020	Indicator Knob Large 5053-910/930, 5069-910	51	H-36432053	Wheel Support - BZ
26	H-38567021	Indicator Knob Large 5079-910, 5089-910/920/930	52	H-34572002	Cam Actuator Spring - FW
26	H-38567023	Indicator Knob Large 5099-910/920/930	53	H-42987020	Bag Housing Cap Ass'y
26	H-38567014	Indicator Knob Large 5109-910/920/930	54	H-21447121	Screw - Self Tapping
26	H-38567022	Indicator Knob Large C1409-910	55	H-38613029	Air Intake/Motor Clamp 5053-910/930, 5069-910, 5079-910, 5089-910/920/930, 5099-910/920/930, 5109-910/920/930, C1409-910
			56	H-38718005	Valve Gate 5053-910/930, 5069-910, 5079-910, 5089-910/920/930, 5099-910/920/930, 5109-910/920/930, C1409-910
			57	H-42242266	Main Body Ass'y 5035-910/930, 5069-910, 5079-910, 5089-910/920/930, 5099-910/920/930, 5109-910/920/930, C1409-910

HOOVER Original

LEGACY & ELITE

Models U4459, U4459-940, U4461-9, U4463-9, U4465-9, U4471, U4471-9, U4471-960, U4473, U4473-080, U4483, U4485, U4507, U4507-9, U4509, U4511, U4511-9, U4533-9, U4545-900, U4557-910, U4569-910, U4581-910, U4599-900, U4601-900, U4609, U4617-910, U4641-910, U4649-910, U4671-910, U4681, U4681-910, U4689-910, U4697-910, U4701-970, U4709-910, U4713-910, U4731-910, U5069-910, U5079-910



KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION
	NLA	Motor Ass'y Comp. - Order H-43576211 (See Page 22-225)	13	NLA	Armature/Bearing Ass'y - U4465-9, U4473, U4473-080, U4485, U4507, U4507-9, U4511, U4511-9, U4545-900, U4557-910, U4569-910, U4581-910, U4641-910, U4649-910, U4681, U4689-910, U4697-910, U4731-910
1	H-214793 DA	Screw - Self Tapping (4)		NLA	Armature/Bearing Ass'y
2	H-38736032	Fan Chamber - MW	14	H-37194034	Motor End Cap Ass'y - MW
3	H-38755030	Fan	15	NLA	Field Ass'y - U4465-9, U4473, U4473-080, U4485, U4507, U4507-9, U4641-910, U4649-910, U4681, U4681-910, U4689-910, U4697-910 (Incl. Items 10, 11, 12, 16)
4	H-12503 EF	Rivet - Semi Tubular (2)		NLA	Field Ass'y (Incl. Items 10, 11, 12, 16)
5	NLA	Motor Housing Ass'y (Incl. Items 4, 6, 8, 9)		NLA	Field Ass'y - U4511, U4511-9, U4545-900, U4557-910
6	H-41311011	Motor Brush Holder (2)		NLA	Field Ass'y - U4569-910, U4581-910, U4731-910, U5069-910, U5079-910 (Incl. Items 10, 11, 12, 16)
7	H-41311011 H-47318024	Motor Brush Ass'y (2) Motor Brush Ass'y (2) - U4511, U4511-9, U4545-900, U4557-910, U4569-910, U4581-910, U4731-910			
8	H-24152808	Bearing	16	H-47171018	Lamp Holder Ass'y
9	H-37913020	Bearing Retainer	17	H-21312793	Washer
10	H-36914004	Switch Bus Bar	18	H-38783014	Molded Duct Seal
11	H-39116005	Attachment Terminal	19	H-41311011	Motor Brush Holder Ass'y - (Incl. Items 6, 7)
12	H-28218043	Switch Ass'y			



Standard Fit Tools (w/Retention Pin) (Shown)

KEY	PART NO.	DESCRIPTION
1	H-43453043	Extension Tube - AAP
2	H-43414017	Multi-Purpose Brush - AAP
3	H-38617018	Crevice Tool - AAP
4	H-32288004	Hose Connector - AAP
5	H-38671018	Hose - Less Ends - AAP
6	H-32156010	Hose Sleeves
7	H-36171025	Hose Connector - Curved - AAP
8	H-43466058	Hose Connector - Curved - AAP (Incl. Item 9)
9	H-36153021	Latch Ring
10	H-43434210	Hose Comp.
11	H-38656016	Convertor Body - AAP
	H-43414071	Furniture Nozzle - AAP
	H-43414087	Dusting Brush - AAP
	H-43414088	Wall/Floor Brush - AAP

Friction Fit Tools (w/o Retention Pin) (Not Shown)

PART NO.	DESCRIPTION
H-38634074	Extension Tube - AAP
Not Available	Multi-Purpose Brush - AAP
H-38617023	Crevice Tool - AAP
H-32288004	Hose Connector - AAP
H-38671025	Hose - Less Ends - AAP
Not Available	Hose Sleeves
Not Available	Hose Connector - Curved - AAP
H-39454053 (Hand Grip)	Hose Connector - Curved - AAP (Incl. Item 9)
Not Available	Latch Ring
H-43434225	Hose Comp.
H-38656016	Convertor Body - AAP
H-38614026	Furniture Nozzle - AAP
H-43414129	Dusting Brush - AAP
H-43414135	Wall/Floor Brush - AAP