

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Wolf S030-2FS Owner's Manual

[Shop genuine replacement parts for Wolf S030-2FS](#)




[Find Your Wolf Electric Range Parts - Select From 82 Models](#)

----- Manual continues below -----

**Oven Modules Parts List
Single and Double Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	808572	Plate, Mtg, Hardware
2	808573	Module, Power
3	808574	Transformer
4	808575	Cover, Latch
5	808576	Relay Board - Single Oven
	808577	Relay Board - Double Oven
6	808578	Pan, 30 Module
7	808579	Bracket, Air Diverter Top
8	808580	Fan, Cooling Upper
9	808581	Bracket, Cord
10	808582	Latch, Motorized
11	808583	Latch, Z-Bracket, Top Oven
12	808584	Switch, Thermostat Upper
13	808586	Support Bracket, Top Module
14	811451	Pan, Middle, 30"
15	808587	Latch, Z-Bracket, Bottom Oven
16	808588	Bracket, Air Diverter
17	811211	Plate, Steam Deflector


**Oven Modules Exploded View
Single and Double Oven**

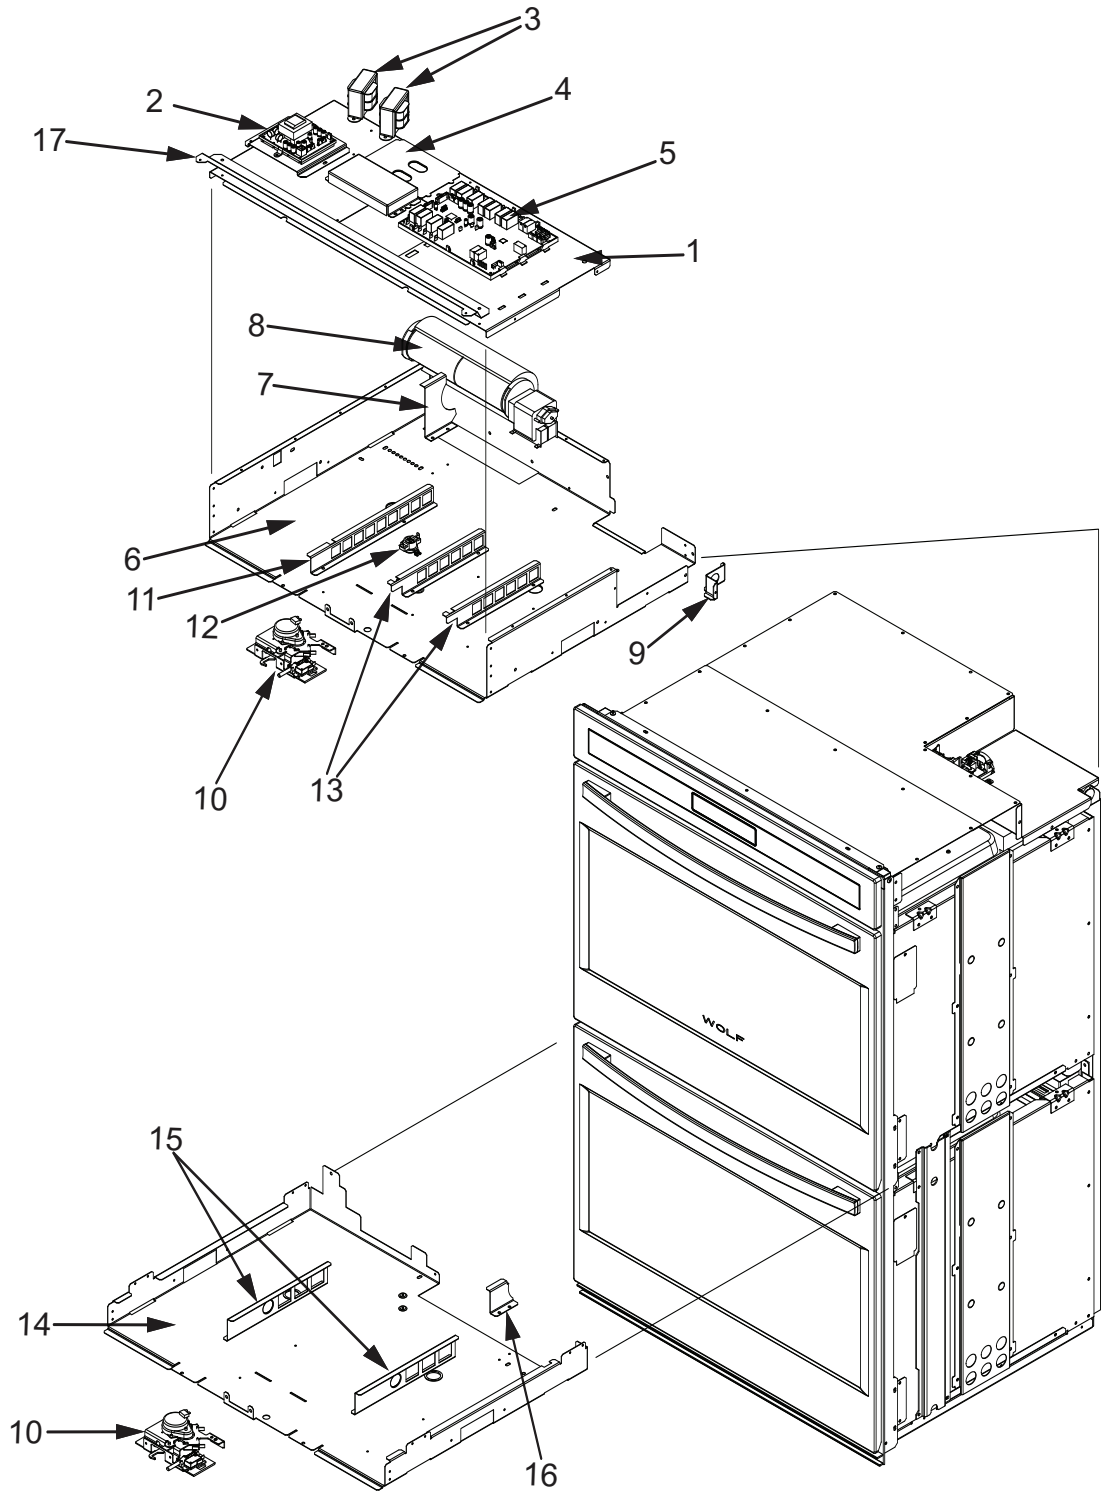

Oven Cavity Parts List
Single and Double Oven

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1		Special Order, Contact Customer Service Dept.
2	808636	Light Oven
3	808637	Light Bulb
4	808638	Cover, Probe Switch (Sgl & Upr Only)
5	808639	Switch, Probe (Sgl & Upr Only)
6	808640	Catalyst, Smoke
7	808641	Sensor, Temperature
8	808408	Conv. Fan Assy, CCW
9	808409	Conv. Fan Assy, CW
10	808642	Pan, Boil Element
11	808643	Element, Broil, 30
12	808644	Bracket, Sprt-Hinge Pocket Left
13	808645	Bracket, Sprt-Hinge Pocket Right
14	808646	Hinge Pocket, Door
15	808647	Rack, Guide, Left-30
16	808648	Rack, Guide, Right-30
17	811453	Screw, Shoulder, 8-18
18	808649	Washer, Mica - .062 x .625
19	808650	Convection Baffle Assy (Sgl & Upr Only)
20	808119	Washer, Mica - .040 x .625 Black
21	808652	Probe, Temperature (Sgl & Upr Only)
22	808653	Rack, Oven 30
23	808654	Rack, Oven Flat 30
24	808655	Pizza Peel
25	808656	Stone, Pizza
26	808657	Rack, Pizza Stone, 30
27	804712	Accessory, Pkg Broiler Pan Set
28	808659	Gasket, Cavity, 30
29	808660	SVCE, , Assy., - WOCatalyst
30	808651	Washer, Mica - .045x.625 Bk
31	811259	Hinge Cover, Bottom
32	811260	Screw, 10-16x1/2, CR Trs

**Oven Cavity Exploded View
Single and Double Oven**

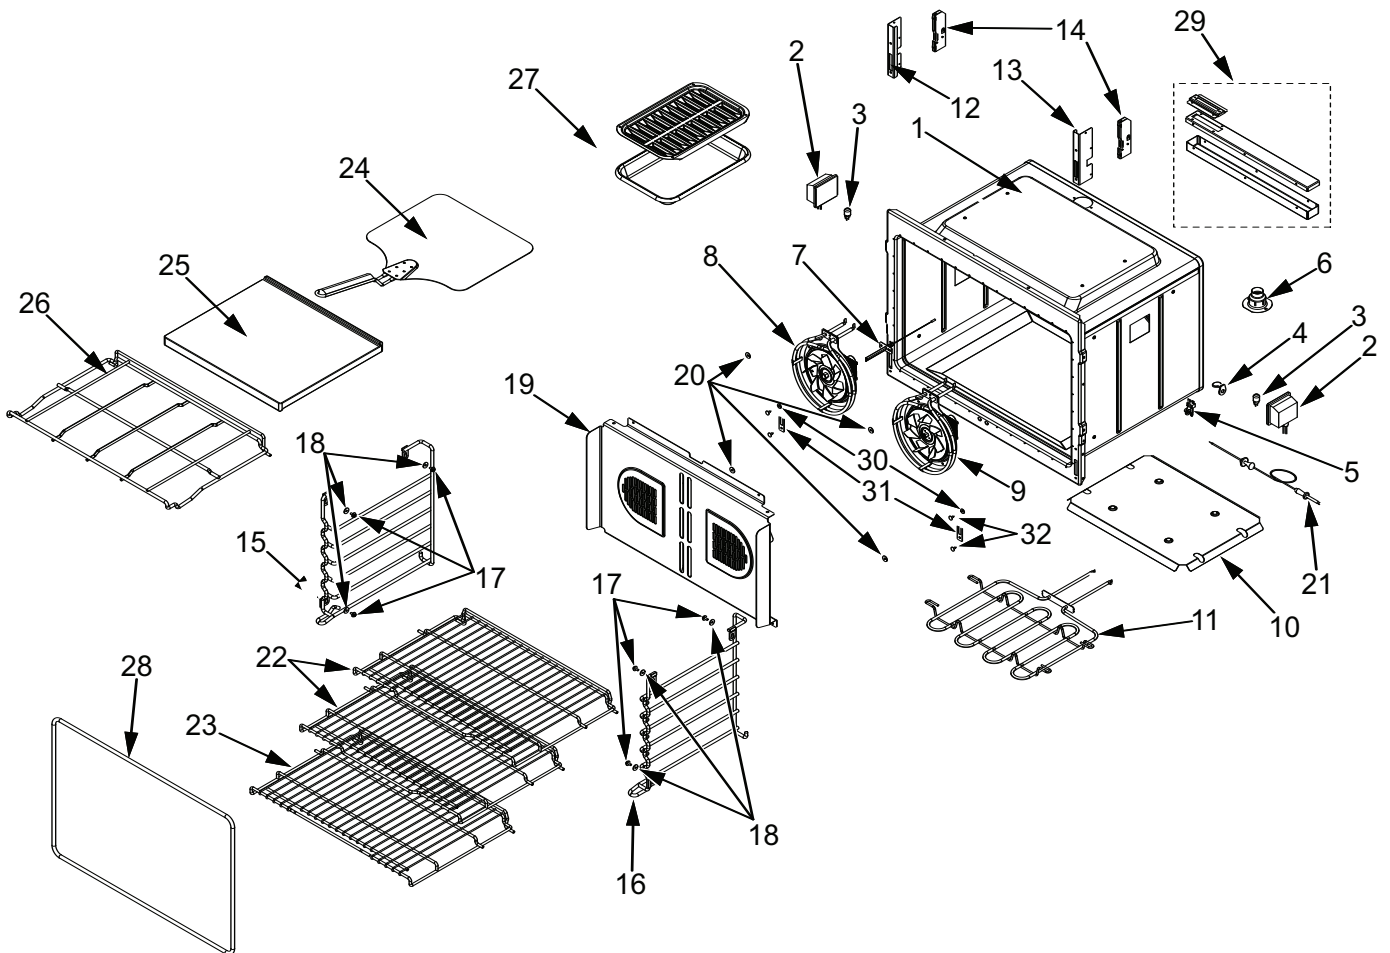

**Oven Back Parts List
Single and Double Oven**


Ref #	Part #	Description
1	808600	Plate, Upper Venting Face
2	808601	Weld Assembly, Cowling
3	808602	Panel, Upper Front
4	808603	Cover, Rear Top
5	808604	Cover, Small, Top Module
*6	808605	Element, Bake Mgo 3500
7	811452	Panel, Back - Top
8	808607	Strain Relief, Metal
9	808607	Convection Fan Shroud
10	808609	Channel, Divider Side Exhaust Sgl
11	808610	Panel, Back - SO30
12	808584	Switch, Thermostat Upper
13	808611	Fan, Cooling Lower
14	808612	Cover, Fan Cooling
15	808613	Cover, Small Back Panel
16	808614	Channel, Divider Side Exh-Long
17	808615	Channel, Cooling, Dbl WO
18	808616	Channel, Divider Side Exh-Short
19	808617	Cover, Back
20	808618	Plate, Vent - Middle
21	808619	Assy, SO Framed Control Panel
	808620	Assy, SO Unframed Control Panel
	811933	Cont Pnl, Unframed Sgl Oven (ICB only)
	808621	Assy, DO Framed Control Panel
	808622	Assy, DO Unframed Control Panel
	811934	Cont Pnl, Unframed Dbl Oven (ICB only)
22	730239	Screw, #8x3/8" Mod. Truss Hd
23	801542	8-18x3/8" Screw Type B H/W/Hd

Not Shown

809594	Communication Cable
811212	Harness, Main, Single
811213	Harness, Main, Double
811214	Wire Routing Device, Plastic
812211	Power Cord Conduit, Single
812212	Power Cord Conduit, Double
808623	Terminal Box & Gnd Wire (International only)
808624	Plug, Hole

* See Bake Pan Assembly exploded view page 8 & 9

**Oven Back Exploded View
Single and Double Oven**

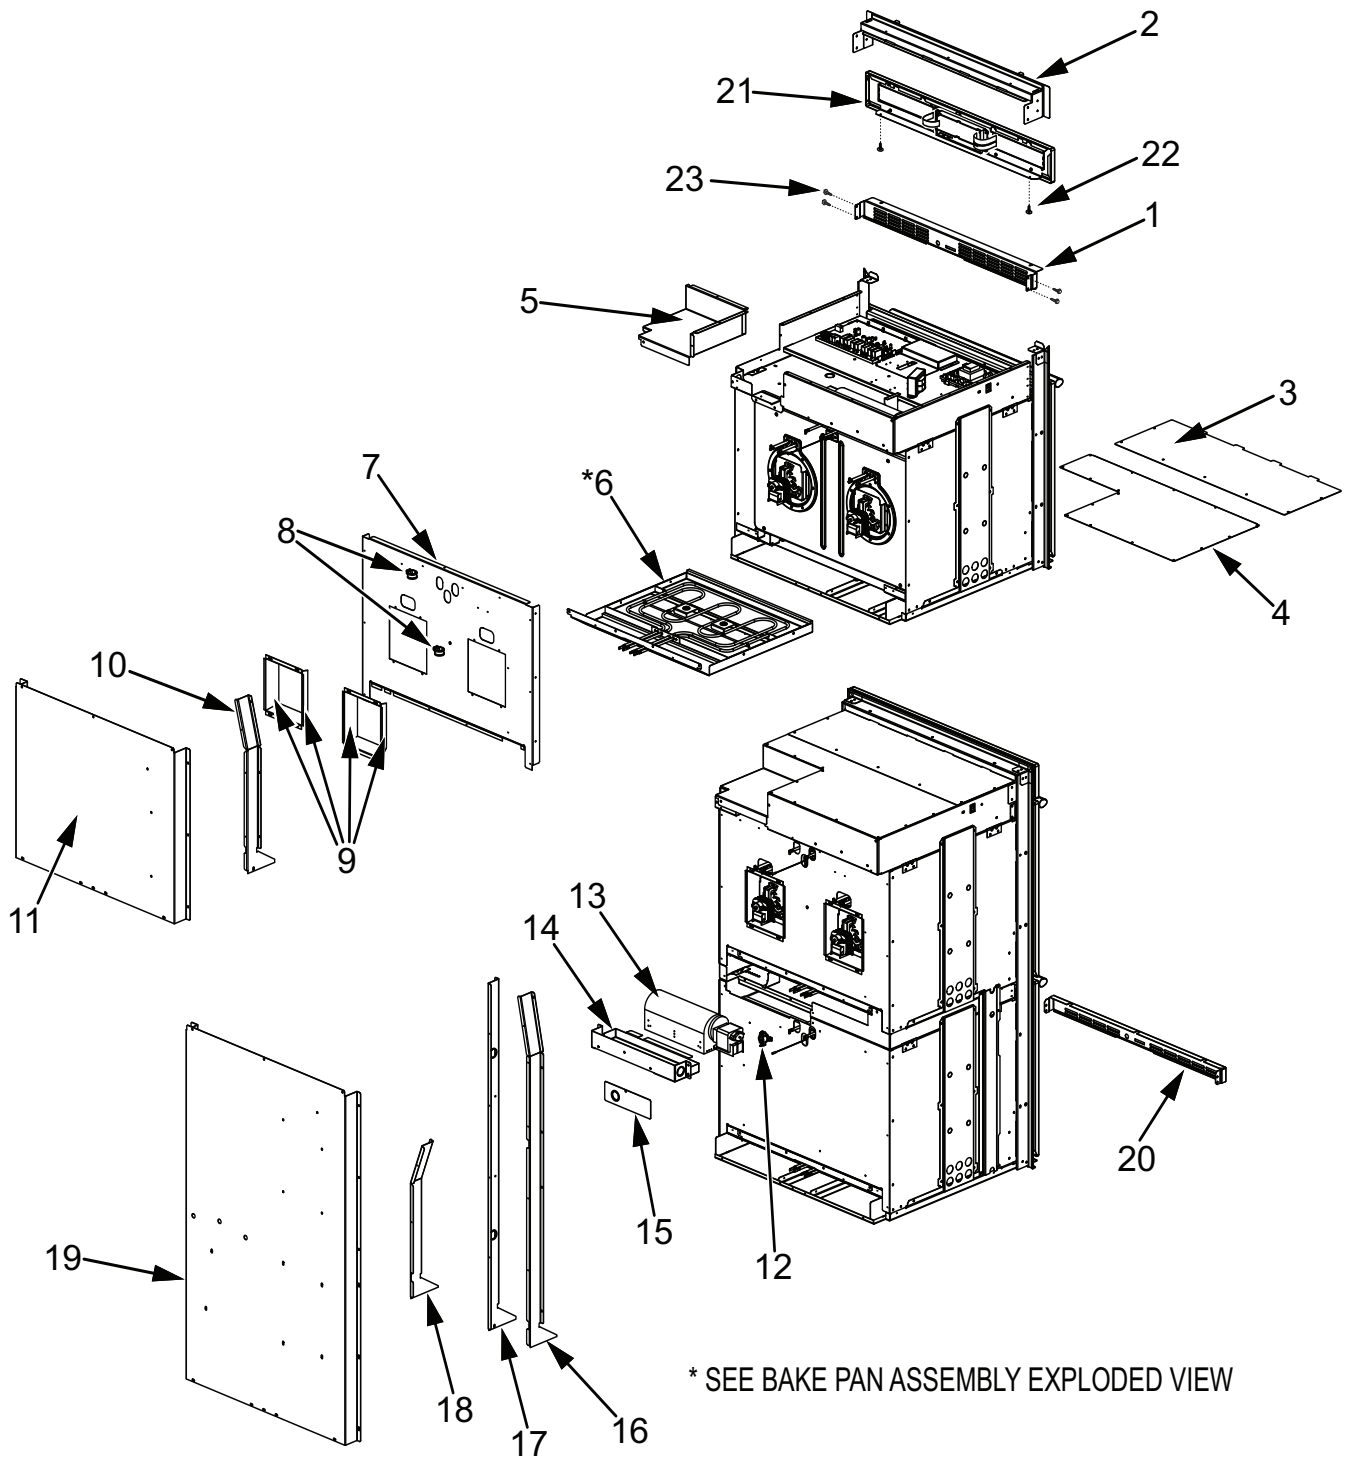


* SEE BAKE PAN ASSEMBLY EXPLODED VIEW

Bake Pan Parts List
Single and Double Oven

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	808625	Insulation, Bake Pan Back
2	808605	Element, Bake - Mgo 3500
3	808626	Assy, Inner Bake Pan
4	808627	Insulation, Thk-Bake Pan
5	808628	Pan, Bake Element

Bake Pan Exploded View
Single and Double Oven

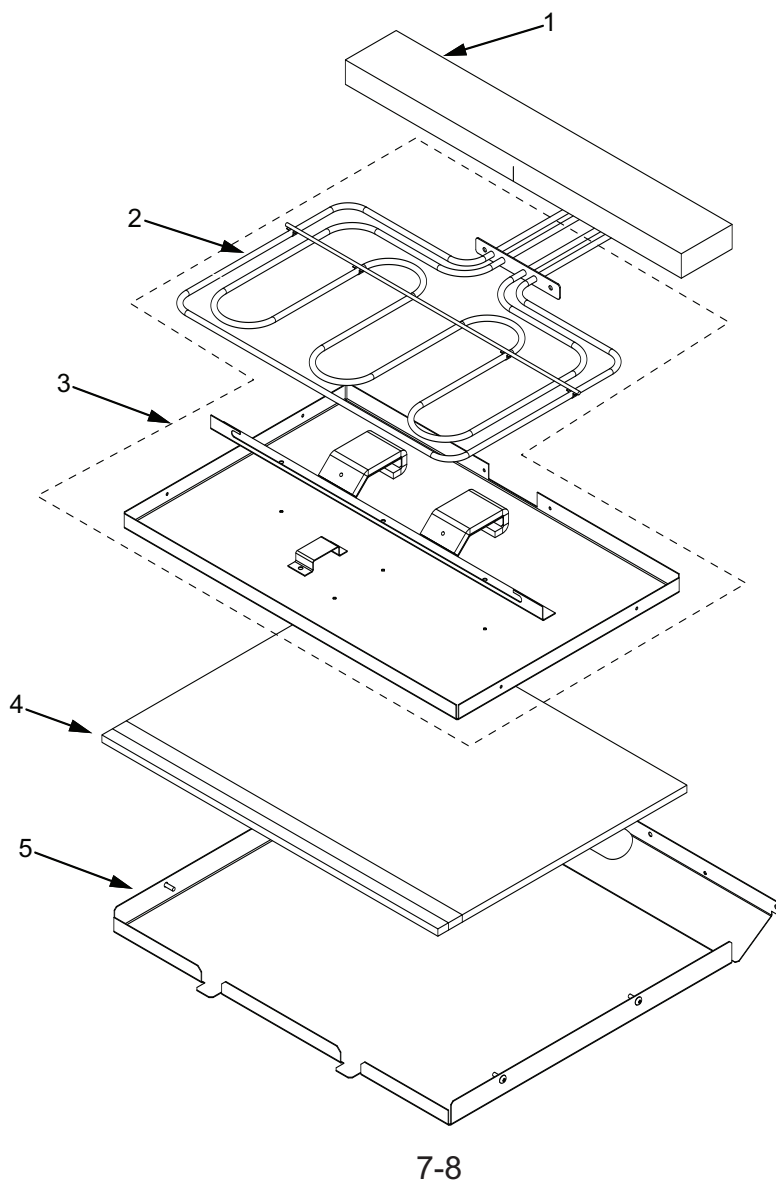

WOLF® E-Series Wall Oven Parts List with Exploded Views

Oven Door Parts List Single and Double Oven


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	808401	Liner Assy.
2	808589	Door Glide, Left Weldment
3	808591	Door Glide, Rt Weldment
4	808593	Bumper, Door
5	808594	Hinge, Door
6	801540	Inside Screw (All Tear Drop Handles) 10-24 x 1/4" Screw W/Dog Point
	811575	Inside Screws (Framed Euro Handle) 8-32 x .625 Hex w / Shrh Mach Scr
	811949	Inside Screws (Unframed Euro Handle) 8-32 x .75 Hex w / Shrh Mach Scr
7	808595	Bracket, Mounting-Door Handle
8	808402	Skin Assy., Framed Upper/Single
	813125	Skin Assy., Framed Upper/Single Tear Drop
	808403	Skin Assy., Framed Lower
	813127	Skin Assy., Framed Lower Tear Drop
	808404	Skin Assy., Un-Framed Upper/Single
	813129	Skin Assy., Un-Framed Upper/Single Tear Drop
	808405	Skin Assy., Un-Framed Lower
	813131	Skin Assy., Un-Framed Lower Tear Drop
9	808406	Handle, Door, Framed Tear Drop
	808407	Handle, Door, UnFramed Tear Drop
	811850	Handle, Door, Framed Euro
	811851	Handle, Door, Unframed Euro
10	811575	Outside Screws (All Euro Handles) 8-32 x .625 Hex w / Shrh Mach Scr
	801540	Outside Screws (All Tear Drop Handles) 10-24 x 1/4" Screw W/Dog Point

NOTE: Complete door assembly is a special order, Call Customer Service Department

Not Shown:

803379 Door Liner Screws

Oven Door Exploded View Single and Double Oven

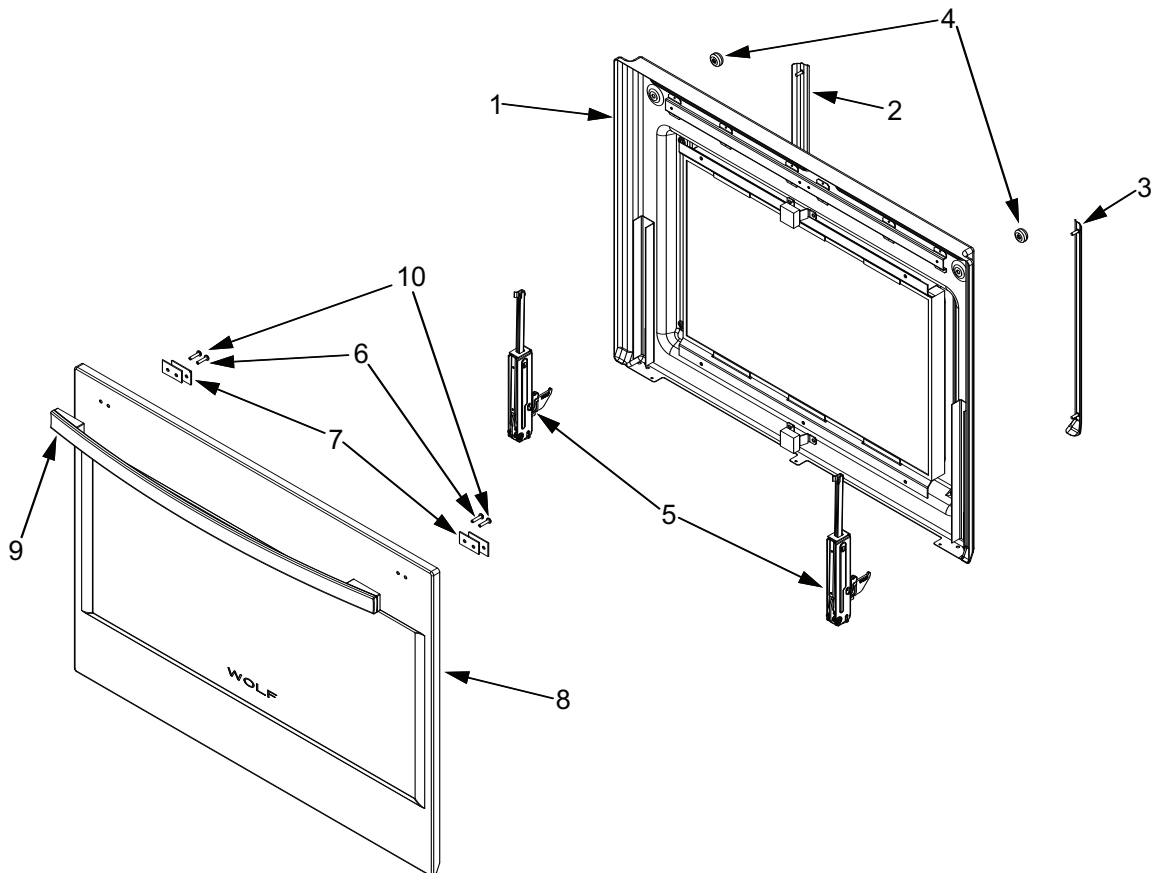

Oven Trim Parts List
Single and Double Oven

Ref #	Part #	Description
1	808629	Washer, .25x.625 x .031 Thk, Fiber
2	808630	Trim, Top
3	808631	Extrn, Bottom
4	808632	Trim, SO Left Side
5	808633	Trim, SO Right Side
6	608634	Trim, DO Left Side
7	808635	Trim, DO Right Side
8	811216	Bracket, Corner - Left
9	811217	Bracket, Corner - Right
10	811264	Trim, Screw
11	811218	Bracket, Trim Support

Oven Trim Exploded View
Single and Double Oven

