


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



Wolf R30-SERIES Owner's Manual

[Shop genuine replacement parts for Wolf R30-SERIES](#)

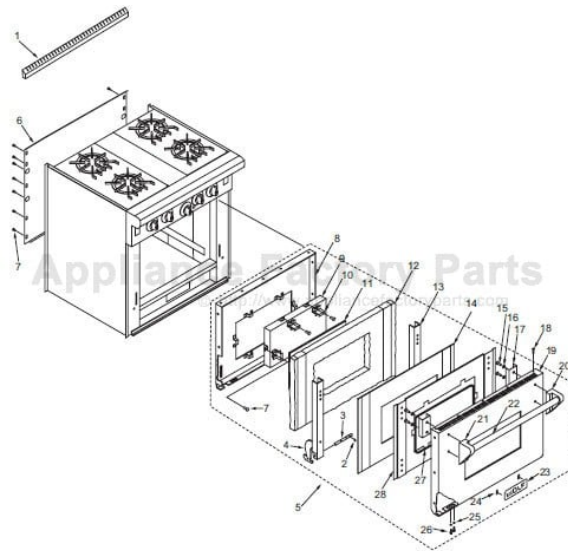

[Find Your Wolf Electric Range Parts - Select From 82 Models](#)

----- Manual continues below -----

30" Range Door and Riser Parts List


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787622	Strip, Filler (Island Trim)
2	714589	Ring, Retaining
3	719287	Pin, Door Hinge
4	802808	Hinge, Door Stiffener Support Assy Lh
5	*Special Order	Order, Call Factory Parts Department
		Door, Oven Assy, 30"
6	766488	Panel, Back 30" Range
7	730228	Screw, #10-24 x 1/2"
8	769576	Liner, Door Assy 30"
	802809	Liner, Door Assy 30" (See SN Breaks)
9	720814	Window, Oven Door Lg.
10	723296	Clip, Oven Glass Retainer
11	722328	Glass, Oven Door
12	800635	30" Door Insulation
13	766374	Hinge, Door Stiffener Support Assy Rh
	802807	Hinge, Door Stiffener Support Assy Rh
14	800635	30" Door Insulation
15	730141	Screw, 1/4-20" x 1/2"
16	730308	Washer, Lock 1/4
17	787592	Channel Door Spacer
18	730239	Screw, #8 x 3/8"
19	769565	Skin, Door SS, 30" (See SN Breaks)
	800983	Skin, Door SS, 30" (See SN Breaks)
	769564	Skin, Door Black, 30" Range
20	719628	Bracket, Belly Bar RH
21	719627	Bracket, Belly Bar LH
22	720770	Handle, Oven Door, 30" Range
23	800925	Logo, Wolf, Large
24	730509	Clip, Tinnerman
25	730335	Washer, Lock #10
26	730028	Screw, #10-24 x 1"
27	722424	Trim, J Oven Window Lg.
28	803863	Spacer, Door 30" Range

NOTE: Door and door components prior to serial number 17000000. See page 4 & 5 for door and door components starting with serial number 17000000.

Not Shown

806659 Riser 5-R30
 800015 Riser 10-R30
 800019 Riser 20-R30

30" Range Door and Riser View

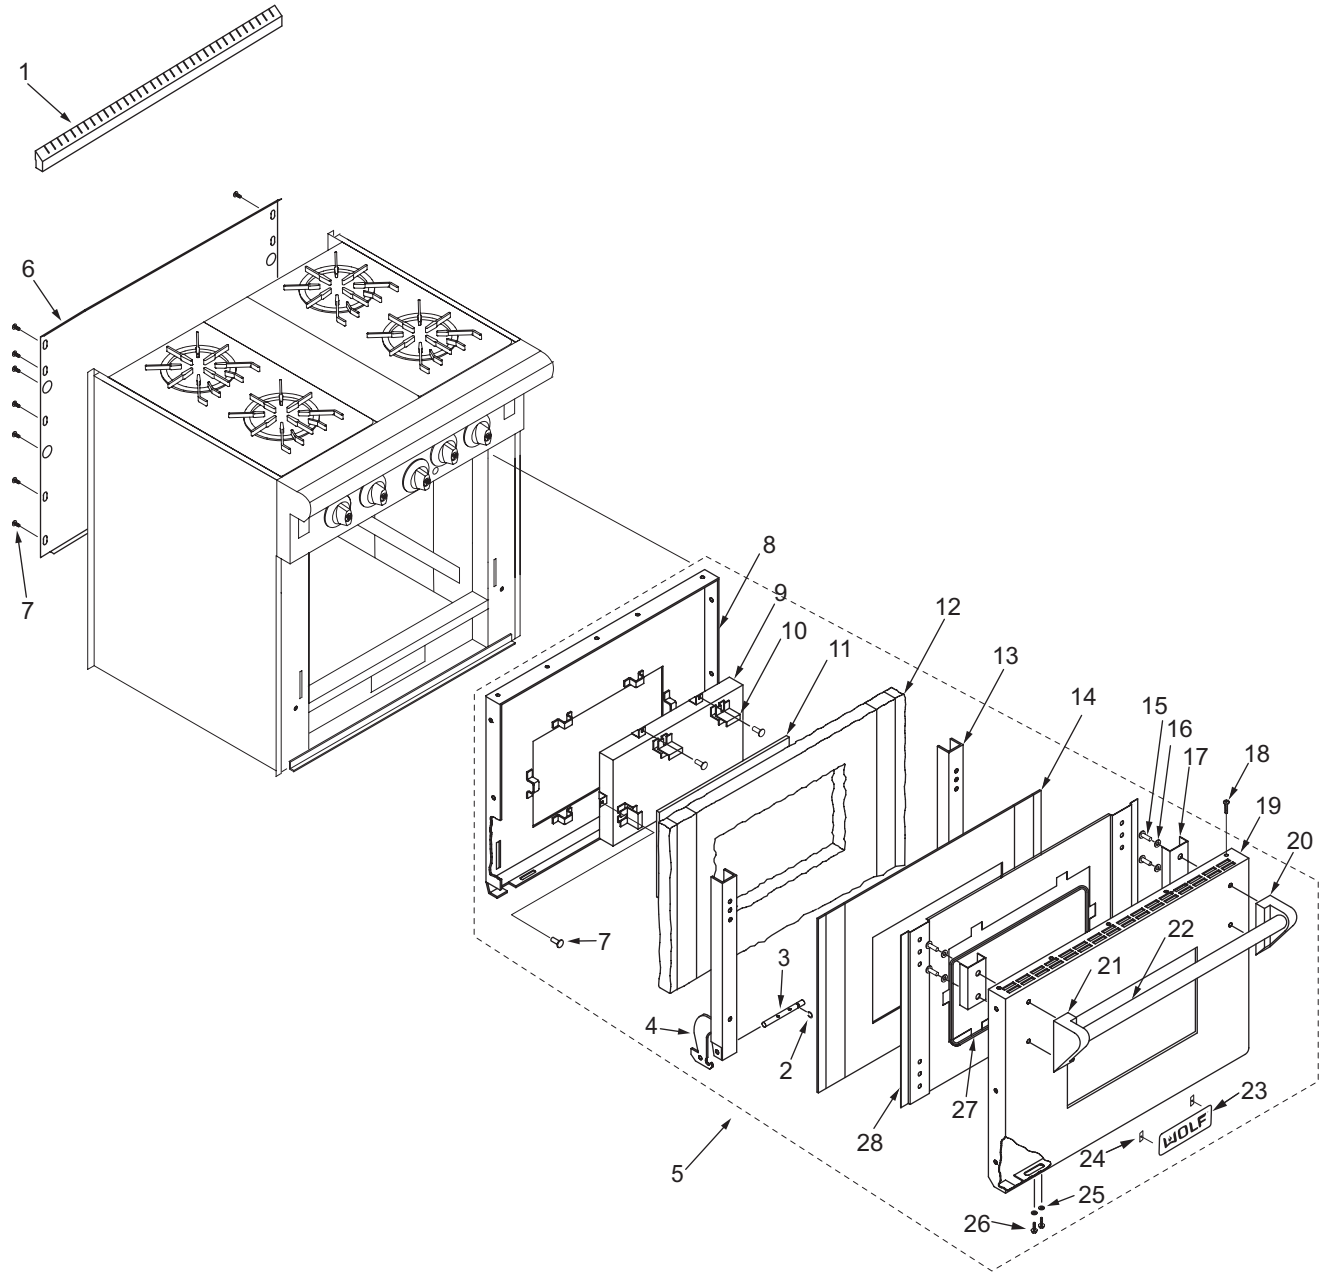


30" Range Door Parts List (Starting with Serial Number 17000000)

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1		*Special Order, Call Factory Parts Department
		Door, Oven Assy, 30" Door Assy. SS
2	809654	Liner, 30" Door-Range, SVCE
3	809637	Hinge Hydraulic, SVCE
4	809649	Hinge, Spring, SVCE
5	809667	Clip, Oven Glass Retainer, SVCE
6	730228	Screw, #10-24 x 1/2"
7	809651	Window, Oven Door Large, SVCE
8	809664	Glass, Oven Door, Large, SVCE
9	809653	Insulation, Blkt, 30", SVCE
10	809639	Bracket Assy, End Cap, Range, SVCE
11	730141	Screw, 1/4-20" x 1/2"
12	809640	Handle End Cap, Right, SVCE
13	809641	Handle End Cap, Left, SVCE
14	804396	8-32x .375 Set Screw
15	809650	Handle Bar, 30", SVCE
16	800925	Logo, Wolf, Large
17	809647	Door, Skin - 30" Logo Assy, SVCE
18	809663	J-Trim, Oven Window Lg, SVCE
19	809652	Baffle, 30" Door - Range SVCE
20	803273	Pin, Pilot
21	809373	Retainer, Hinge, SVCE
22	730239	Screw, #8x3/8"
23	803372	#10-16 X 1/2" Screw CR Truss HD
	804789	Washer, Fiber
24	801541	8-18 X 1/2" Screw TYPE B H/W/HD

NOTE: Door and door components starting with serial number 17000000. See page 2 & 3 for door and door components prior to serial number 17000000.

30" Range Door View (Starting with Serial Number 17000000)

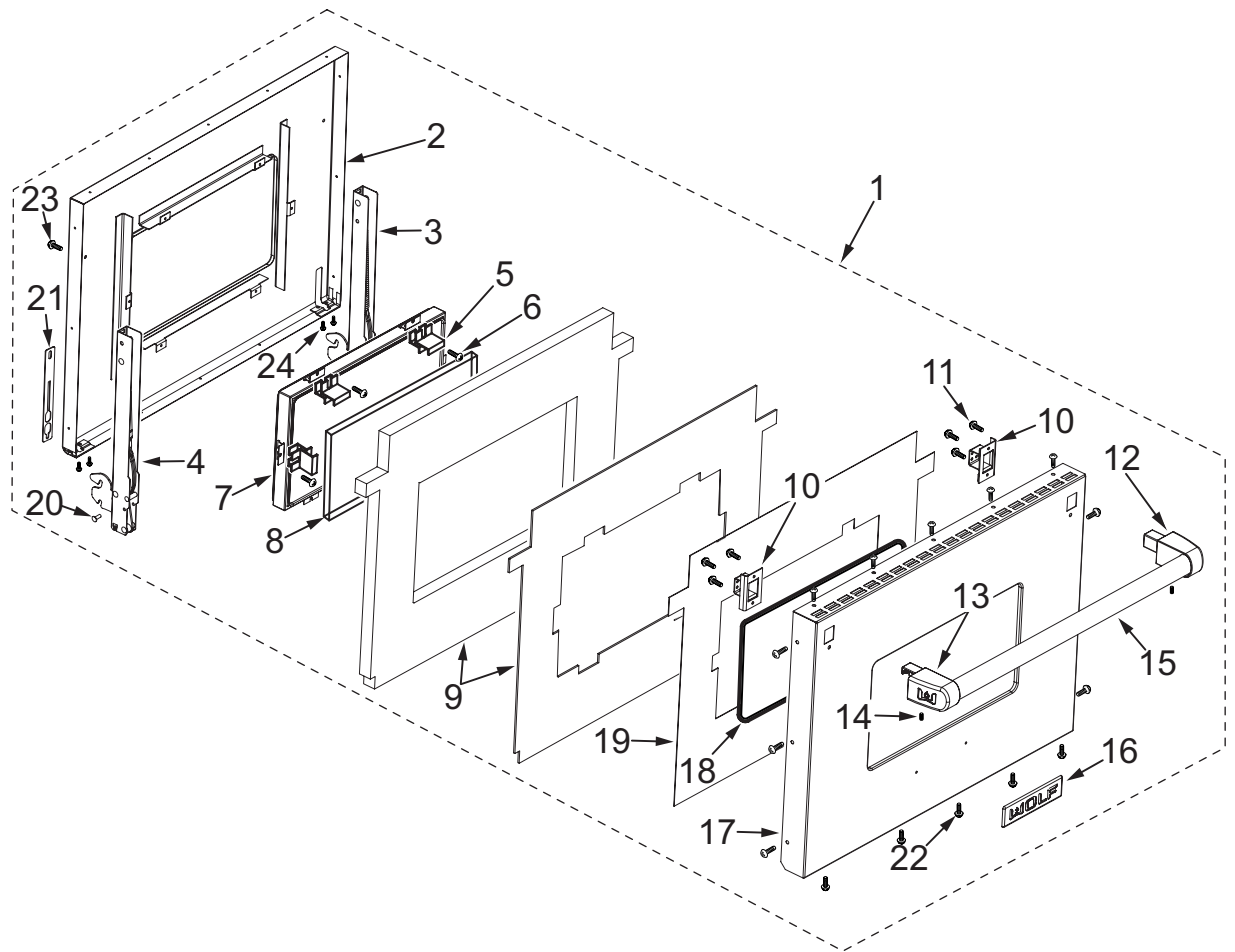

30" Range Dress Panels Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787306	Panel, Outer RH, SS 30/36" Range
	787308	Panel, Outer RH, Blk 30/36" Range
2	766411	Channel, Front & Rear, 30" Range
3	714369	Bushing, Snap 1/2"
4	722270	Rivet, Pop 3/16"
5	768256	Baffle, Roll Front 30" Range
6	801921	Roll Front
7	730228	Screw #10-24 x 1/2" Phillips
8	787583	Pan, Drip Assy. (See SN Breaks)
	801360	Drip Tray Assy. (See SN Breaks)
9	807586	Skirt, Front SS, 30" Range
	766537	Skirt, Front Black, 30" Range
10	809366	Panel, Lower Front, SS 30" Range
	769580	Panel, Lower Front, Blk 30" Range
11	730228	Screw 10-24 X 1/2" Phillips Head
12	809365	Switch, Door Interlock
13	766547*	Bracket, Door Switch, 30" Range
	809377**	Bracket, Door Switch, 30" Range
14	730535*	Nut, 6-32 Lock
15	719331*	Bolt, Eye 1/4-20 x 3"
16	730506*	Nut, Oversize
17	718361*	Spring, Door
18	768260*	Angle, Switch
19	719710*	Arm, Rocker, LH
20	719344*	Hook, "S", Oven Door
21	719350*	Pin, Clevis, 3/8 x 2"
22	730410*	Pin, Cotter, 3/32 x 1-1/4"
23	730310*	Washer
24	787307	Panel, Outer LH, SS 30/36" Range
	787309	Panel, Outer LH, Blk 30/36" Range

Not Shown

801256	Slide, Drip Tray, Lh
801257	Slide, Drip Tray, Rh

* - Prior to Serial Number (PTS) 17000000
** - Starting with Serial Number (SWS) 17000000

30" Range Top Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	720829	Grate, Spider (See SN Breaks)
	809099	Grate, Spider (See SN Breaks)
2	722421	Grate Foot Pad (See SN Breaks)
3	722422	Washer, Silicone, Spider Grate (See SN Breaks)
4	800041	Burner, Inner Head, Black Enamel
	720801	Burner, Inner Head, Plated
5	720887	Base, Inner Burner (See SN Breaks)
	800044	Burner, Inner Base, Black Enamel (See SN Breaks)
6	720803	Burner, Outer (See SN Breaks)
	801150	Cap, Burner, Outer Head, Black Enamel
7	720802	Ring, Cross
	801151	Ring, Burner, Inner Base, Black Enamel
8	803965	Burner Ring/Cap, Service Package
9	766446	Top, Pressed Stl Porc (See SN Breaks)
	805519	Top, Pressed Steel (See SN Breaks)
10	800010	S Grate Spacer
11	800137	S Grate, Front (See SN Breaks)
	804228	S Grate, Front (See SN Breaks)
12	800146	S Grate, Rear (See SN Breaks)
	804229	S Grate, Rear (See SN Breaks)
13	801149	Burner, Body Assy
14	806483	Service Components, Electrode
15	800872	Orifice, Outer Burner, Natural Gas
	800051	Orifice, Outer Burner, LP Gas
16	722162	Screw, Phillips Head
17	807864	Holder, Jet Assembly
18	720886	Venturi
19	730228	Screw #10-24 x 1/2"
20	800882	Orifice, Inner Burner, Natural Gas
	800052	Orifice, Inner Burner, LP
21	720900	Fitting, Inner Orifice
22	807598	Spring
23	720822	Ring
24	719566	Sleeve, 1/4" Fiberglass
25	807609	Spacer, Top, 30" Porcelain
26	767615	Panel, Burner Support
27	809019	Burner Assembly - Also Order 806483
28	801669	Grate, Wok (See SN Breaks)
	804230	Grate, Wok (See SN Breaks)
29	806563	Grate Assy., Center-R30
30	807017	Grate, Center Package


Not Shown

722218	Hook, Porcelain Top Remover
767627	Spacer, Burner Support
807066	Shield, Rubber - Electrode

30" Range Front Panel Parts List

Ref #	Part #	Description
1	766543	Baffle, Broiler
2	720690	Seal, Door Top (See SN Breaks)
	803809	Gasket, Door 30" (See SN Breaks)
3	720692	Seal, Door Side (See SN Breaks)
	803809	Gasket, Door 30" (See SN Breaks)
4	722712	Label, Fan Switch
5	766423	Panel, Front R304 (See SN Breaks)
		Also need to order # 722712 and # 722713
	801078	Panel, Front R304 (See SN Breaks)
		Also need to order # 722712 and # 722713
6	720815	Switch, Oven Fan
7	720879	Knob, Control, Red (See SN Breaks)
	801312	Knob, Surface Burner Valve, Red (See SN Breaks)
	720880	Knob, Control, Black (See SN Breaks)
	801313	Knob, Surface Burner Valve, Red (See SN Breaks)
8	718146	Bezel, Thermostat (See SN Breaks)
	801348	Bezel, w/Tick Mark (See SN Breaks)
9	720818	Knob, Oven Thermostat, Red (See SN Breaks)
	801308	Knob, Oven Therm, W/Broil, Red (See SN Breaks)
	720819	Knob, Oven Thermostat, Black (See SN Breaks)
	801309	Knob, Oven Therm, W/Broil, Black (See SN Breaks)
10	730076	Screw, #6-32 x 1/4"
11	801346	Bezel, Front (See SN Break)
12	801347	Bezel, Rear (See SN Break)
13	720816	Switch, Oven Light
14	722564	Shield, Switch Terminal
15	715142	Terminal, Command Dummy
16	730229	Screw, 10-24 X 1-1/2" Pan HD
17	722713	Label, Light Switch
18	714902	Thermostat, Oven
19	720017	Light, Indicator, Red, Oven
20	718195	Bolt, Trunion
	803579	Bolt, Trunion, Offset
	730310	Washer, Trunion Shim
21	730311	Washer, Lock
22	730513	Nut, Hex 3/8-16
23	730228	Screw #10-24 x 1/2"
24	720691	Seal, Door Bottom (See SN Breaks)
	803809	Gasket, Door 30" (See SN Breaks)
25	721013	Leg, Range, 3"
26	803436	Caster, Dual Wheel, 2"
		<u>Not Shown</u>
	803239	Wrench, Caster Adjusting
	805293	Bumper, Door

30" Range Front Panel View

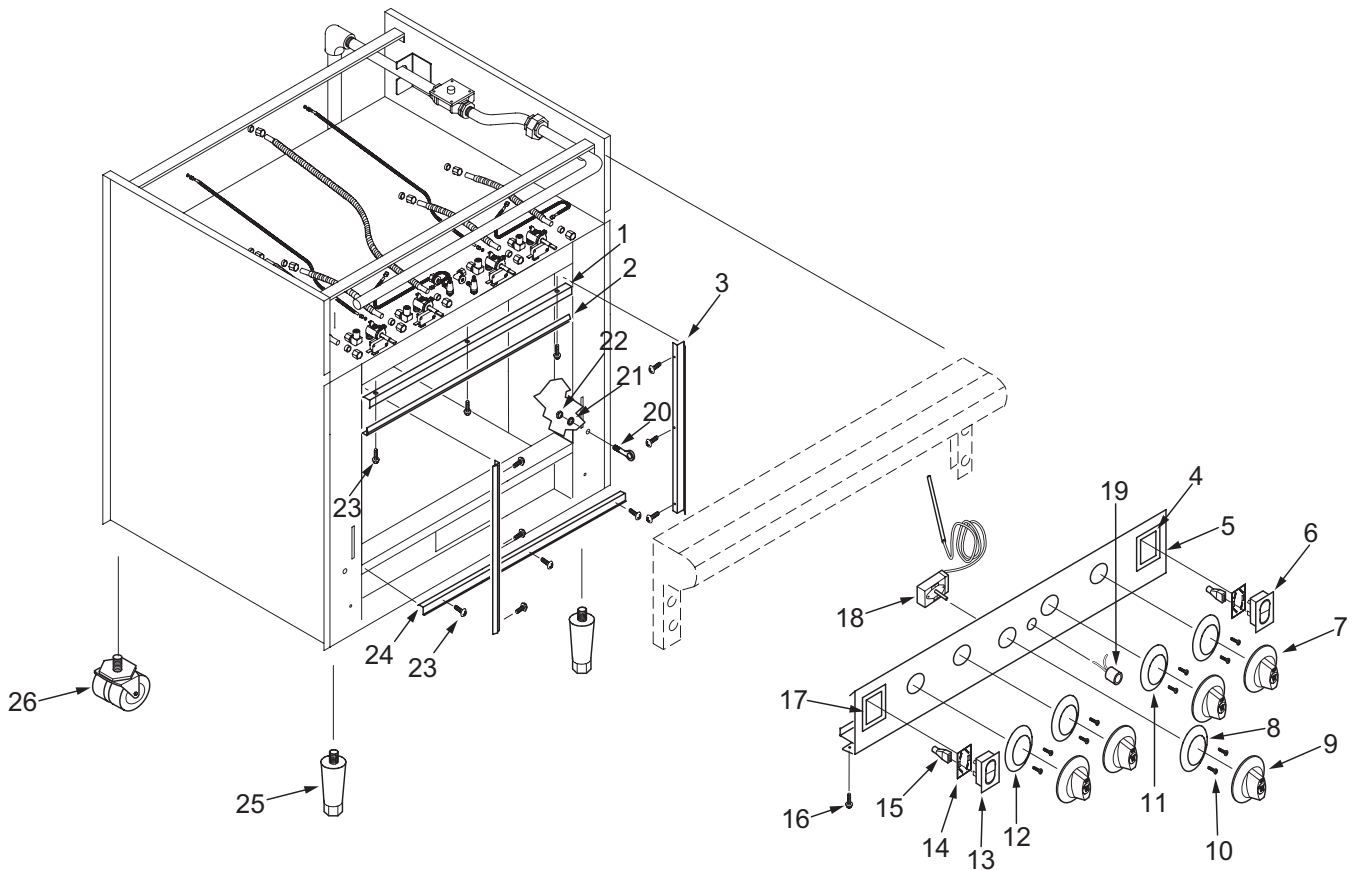


30" Range Manifold Parts List

Ref #	Part #	Description
1	803171	Flex Tubing Service Package 5/16" x 14"
2	807667	Ferrule, Sleeve Brass, 5/16"
3	807677	Nut, Compress Brass, 5/16"
4	801937	Flex Tubing Service Package 3/16" x 27"
5	803172	Flex Tubing Service Package 3/8" x 42"
6	714361	Connector, 3/8"
7	722133	Screw, Hex Head
8	720885	Bracket, Valve Mounting
9	804417	Manifold (R304)
10	801936	Flex Tubing Service Package 3/16" x 16"
11	800892	Orifice, Bypass Inner, Natural Gas
	800055	Orifice, Bypass Inner, LP Gas
12	800884	Orifice, Bypass Outer, Natural Gas
	800054	Orifice, Bypass Outer, LP Gas
13	809153	Burner Valve & Switch Assy, Nat
	809154	Valve, Burner, LP Gas
14	807141	Valve, Switch
15	720330	Valve, Shut Off, Oven
16	719393	Elbow, Brass 3/8"
17	722278	Elbow, Adapter, Compression
18	719370	Plug, Hex Head, 1/8"
19	807668	Ferrule, 3/8"
20	807678	Nut, 3/8"
21	807665	Ferrule, 3/16"
22	720888	Fitting, 3/16"
23	723350	Regulator, 3/4" Convertible
	801358	Regulator, 1/2" Convertible
24	722832	Pipe, Offset
25	719033	Union, 1/2" Black
26	803169	Flex Tubing Service Package 3/8" x 48"
27	807678	Nut, Compressed Brass, 3/8"
28	807668	Ferrule, Sleeve, Brass 3/8"
29	786977	Shield, Corner Wire

Not Shown

806376	Wiring Harness, Manifold R304
806377	Wiring Harness, Rear R304
807098	Harness Rpl Component, R304


30" Range Manifold View

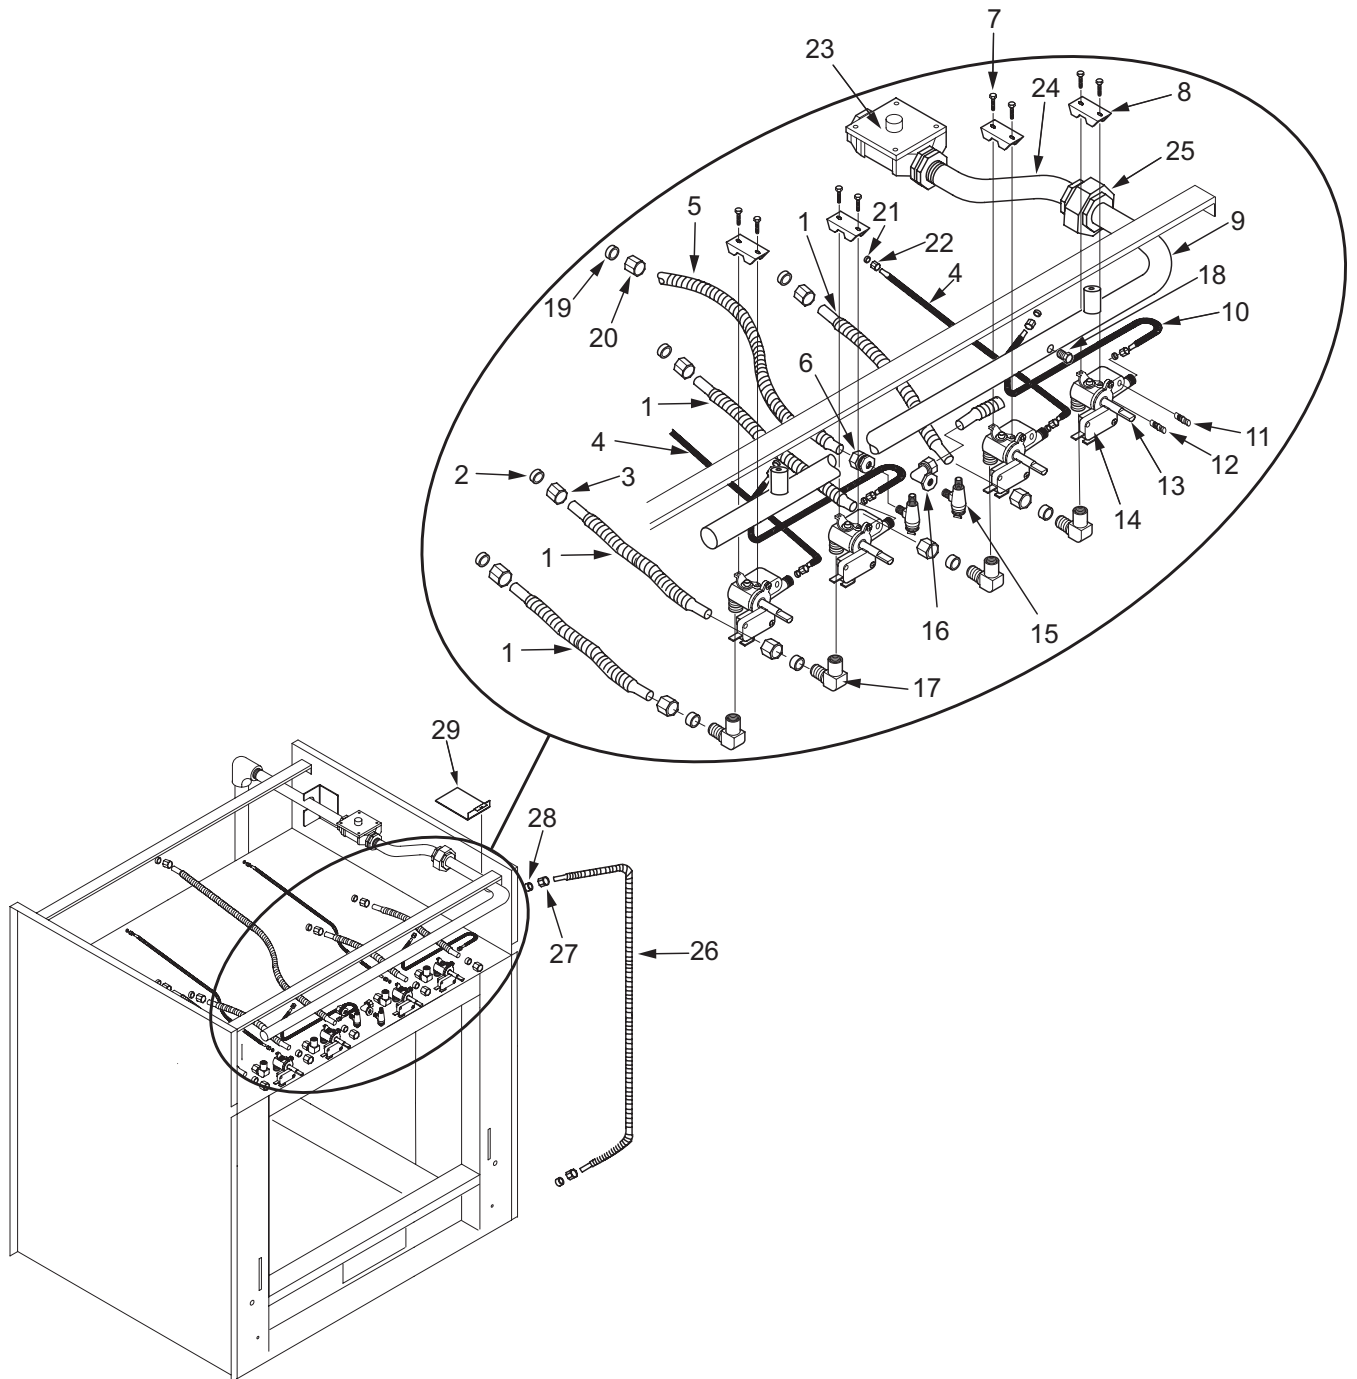

30" Range Oven Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	720761	Burner, Infrared Oven
2	766479	Bracket, Burner Left/Right
3	766592	Bracket, Burner Front/Rear
4	730228	Screw, #10-24 x 1/2"
5	766499	Bracket, Igniter, IR Range
6	723060	Igniter, Hot Surface
7	801690	Cover, Igniter Shield, Range
8	730230	Screw #8-32 x 3/8"
9	806873	Thermo Bulb Housing Assembly
10	806873	Thermo Bulb Housing Assembly
11	800120	Oven Deflector Rest
12	718601	Igniter, Norton
13	720696	Lamp, Oven Assembly
14	342766	Lamp, Oven 40w, 120v
15	720830	Lens
16	715221	Motor, Fan Oven
17	766451	Plug, Motor Mount
18	800628	Blade, Convection Fan
19	730229	Screw, #10-24 x 1-1/2"
20	766456	Cover, Blower Oven
21	720683	Rack, Oven 30" Range
22	714502	Pan, Broiler
23	766420	Deflector, Oven Bottom Range
24	766418	Panel, Oven Bottom 30" (See SN Break)
	803543	Panel Oven Bottom 30" (See SN Break)
25	720682	Rack, Guide
26	719393	Elbow, Brass 3/8"
27	803254	Valve, Oven Safety Single Hole
28	803166	Flex Tubing Service Package 3/8" x 6"
29	719385	Orifice Holder
30	800071	Orifice, Lg Oven, Natural Gas, #36
	803882	Orifice, Lg Oven, LP, 1.65 Mm
31	807734	Orifice Bracket, Range
32	807861	Baffle, Lower Front
33	803973	Heatsink
34	803814	Burner Tube, Oven (See SN Break)
	807729	Buner Tube, Bake (See SN Break)
35	766546	Baffle, Flue Range

30" Range Oven View

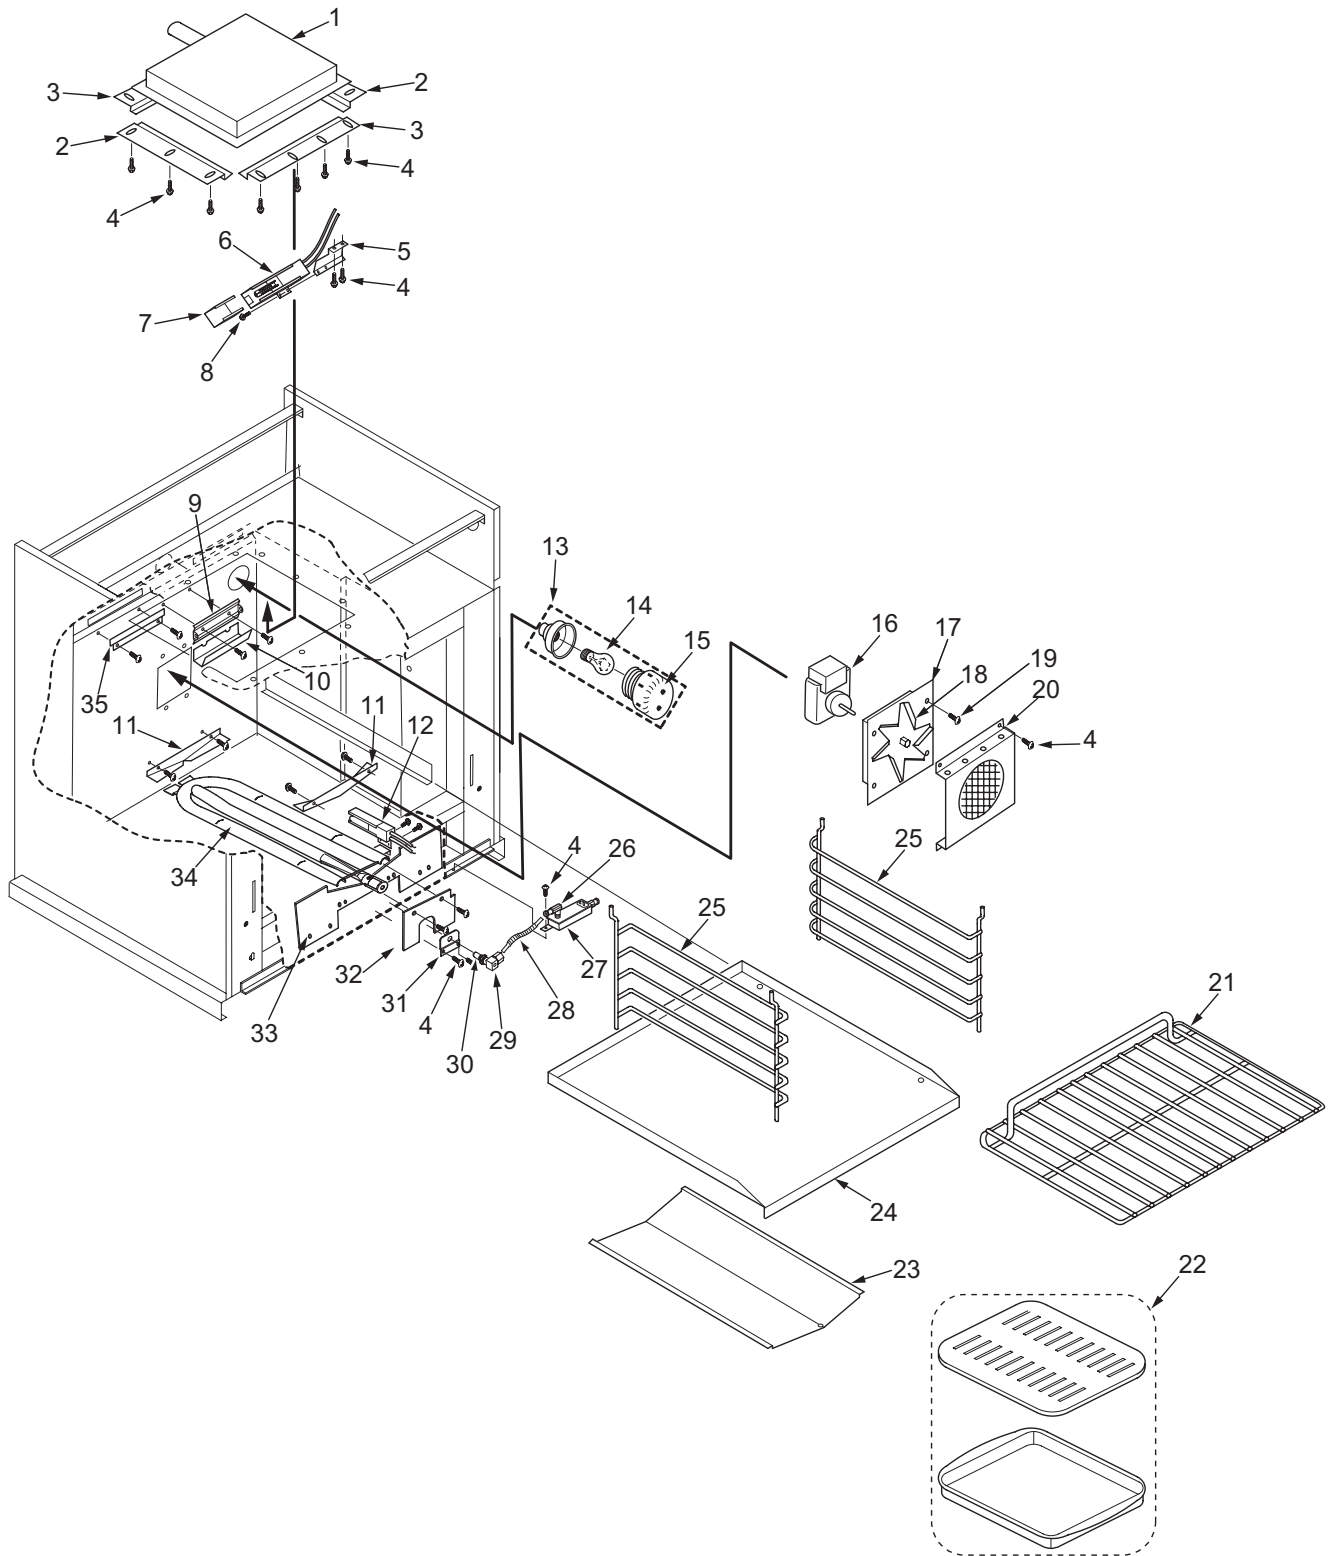

30" Range Rear Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	722632	Cord, Power
2	719393	Elbow, 3/8" x 3/8"
3	730230	Screw #8-32 x 3/8"
4	807678	Ferrule, Sleeve 3/8"
5	807668	Nut, Compress
6	803166	Flex Tubing Service Package 3/8" x 6"
7	803254	Valve, Oven Safety Single Hole
8	766542	Bracket, Safety Valve-Relay
9	719068	Bushing, Snap
10	786776	Box, Flue Assembly
11	730228	Screw #10-24 x 1/2" Phillips
12	786835	Box, Flue Center Assembly
13	730239	Screw #8 x 3/8"
14	722383	Relay, Fan
15	809417	Module, Spark 4 Point
16	768258	Panel, Module Range
17	800246	Washer, Flat, Teflon
18	766482	Cover, Blower Motor, Range
19	766593	Angle, Wall Brace
20	766458	Brace, Rear Bottom
21	719502	Box, Electrical
22	719503	Plate, Face Electrical Box
23	713813	Connector, 3/8", Power Cord
24	719049	Elbow, 3/4" X 3/4"
	801457	Elbow, 1/2" x 1/2"
25	713494	Nipple, 3/4" x 22 3/4"
	801456	Nipple, 1/2" x 22 3/4"
26	786768	Bracket, Manifold Support
27	801459	Nipple, 1/2" x 31/2"
28	721030	Gasket, Red Rubber
29	722278	Elbow, Adapter Compression
30	800259	Orifice, W/ELB Broil Natural (Stamp #48)
	800057	Orifice, IR Broil (LP) 1.181MM (Stamp #56)
		<u>Not Shown</u>
	800247	Silicone, Red High Temp.
	720809	Harness, Wiring

30" Range Rear View

