 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).




Kenmore 116.2841081 Owner's Manual

[Shop genuine replacement parts for Kenmore
116.2841081](#)



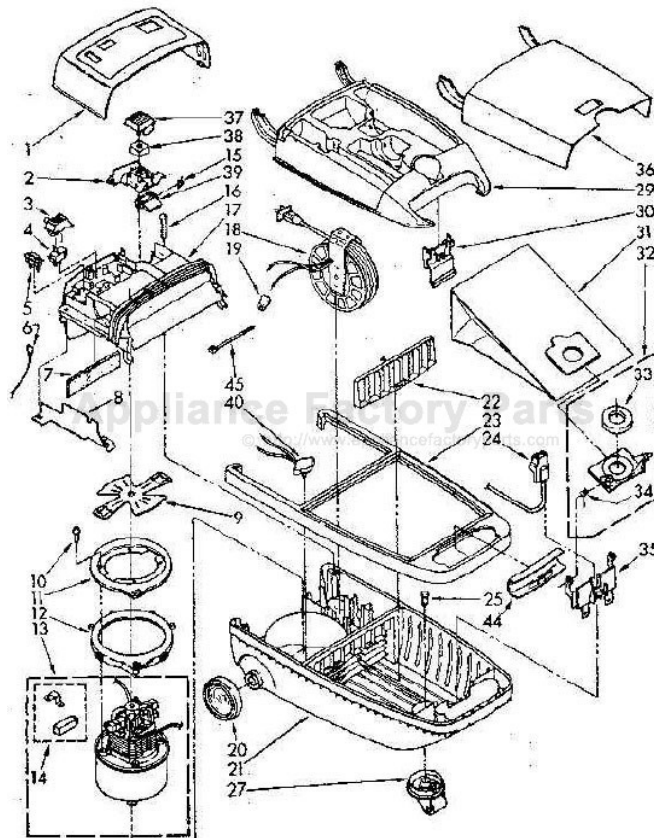


[Find Your Kenmore Vacuum Cleaner Parts - Select From 745 Models](#)

 ----- Manual continues below -----

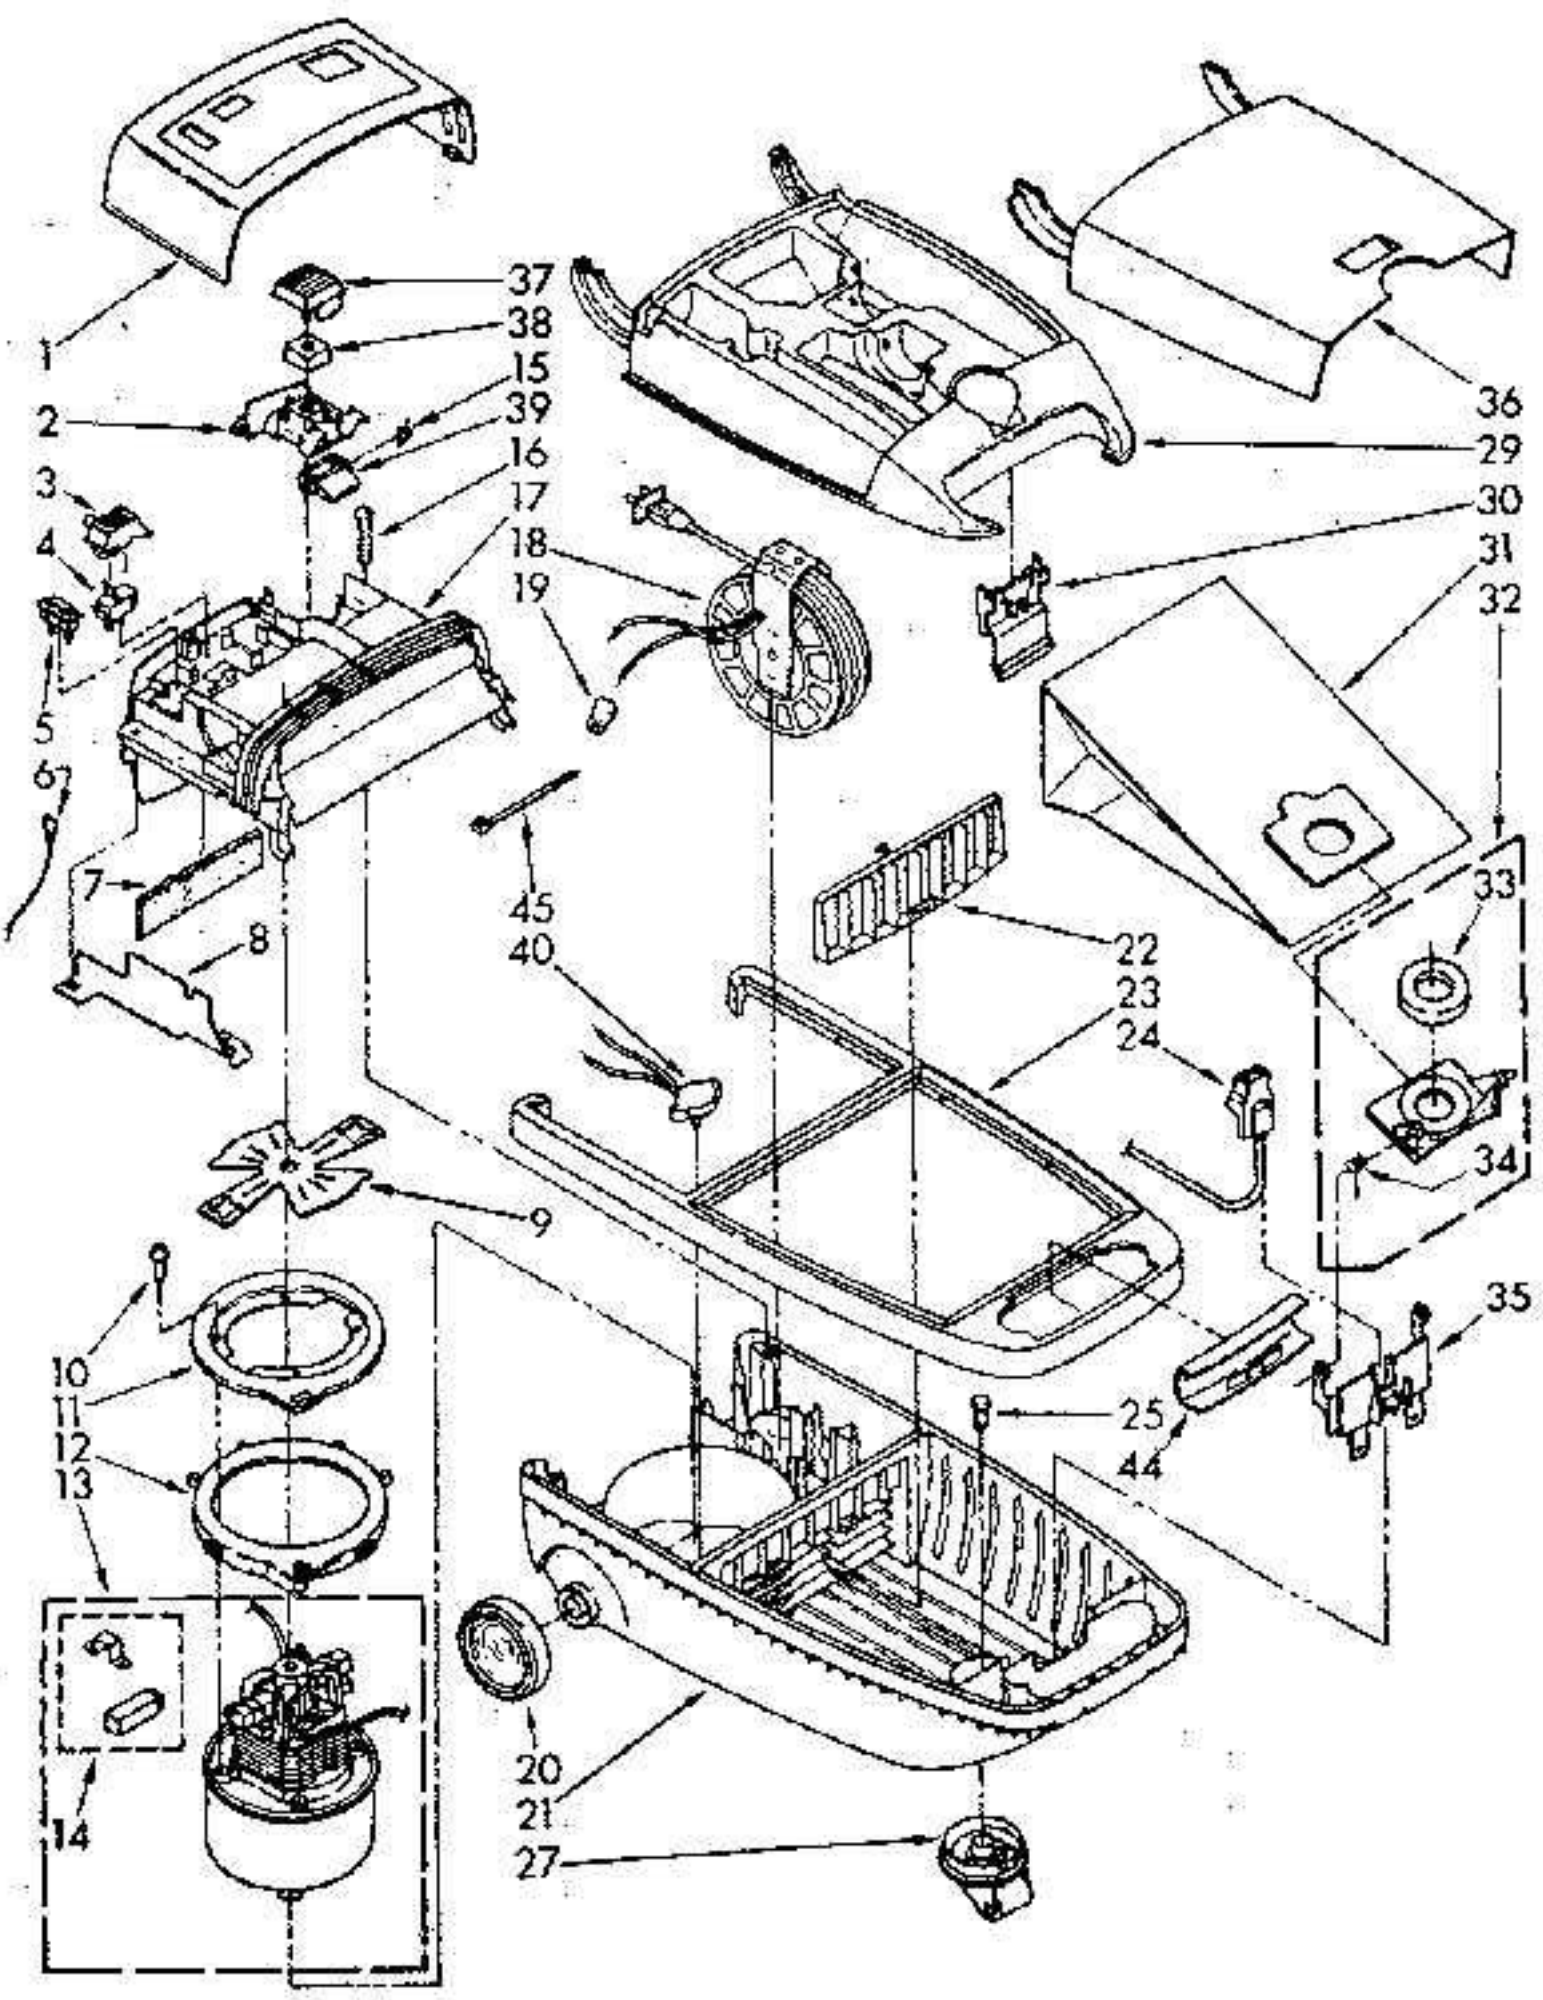

1	KE-4147297	COVER, CANOPY
2	KE-4148749	FRAME, CORD LOCK
3	KE-4147278	BUTTON, SWITCH
4	KE-706915	SWITCH, TOGGLE
5	KE-4147459	LIGHT, INDICATOR
6	KE-4150360	LEAD, INDICATOR (BLACK)
6A	KE-747315	LEAD, SWITCH (WHITE)
6B	KE-747316	LEAD, SWITCH (RED)
7	KE-706389	FILTER, REAR EXHAUST
8	KE-706827	AEGIS, MOTOR
9	KE-703515	SHIELD, MOTOR
10	KE-681697	SCREW, 10-24 X 1/2
11	KE-706011	PLATE, MOTOR MOUNT
12	KE-706504	MOUNT, MOTOR
13	KE-705311	MOTOR
14	KE-588867	BRUSH, MOTOR
15	KE-4149726	SPRING, CORD LOCK
16	KE-681550	SCREW, 8-18 X 1-7/8
17	KE-4148034	CANOPY
18	KE-4147261	CORD REEL
19	KE-596564	CONNECTOR, WIRE
20	KE-4147126	WHEEL, REAR
21	KE-4148039	BASE
22	KE-706061	FILTER, SAFETY

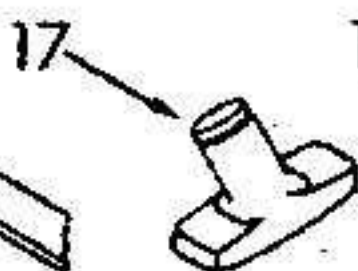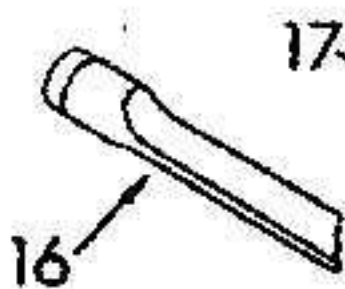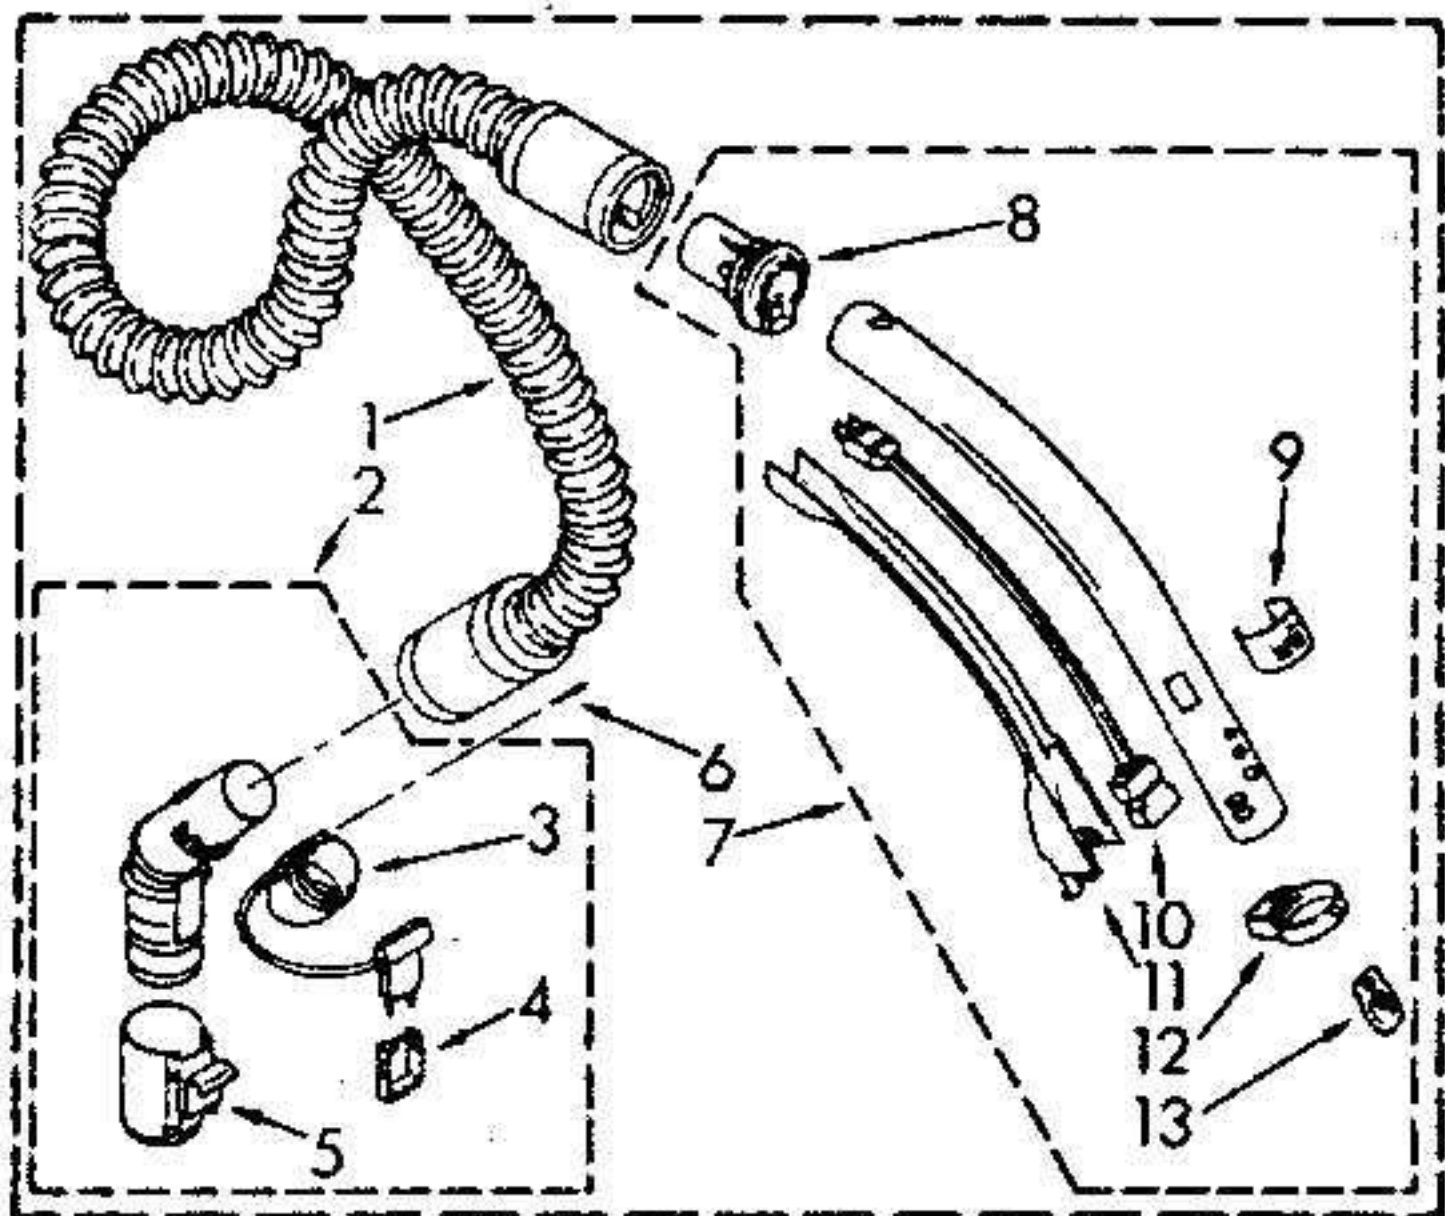   

1	KE-4150577	HOSE
2	KE-4147154	SWIVEL ASSEMBLY
3	KE-4147149	LINK, PLUG
4	KE-4147153	FRAME, PLUG
5	KE-4147147	HOUSING, SWIVEL
6	KE-4150715	PIN, CONTACT
7	KE-4147146	HANDLE ASSEMBLY
8	KE-4147144	ADAPTER, TUBE
9	KE-4147140	CONTROL, SUCTION
10	KE-4150717	CORD & PLUG ASSEMBLY
11	KE-4147141	COVER, CORD
12	KE-4147143	LOCK, CORD COVER
13	KE-725419	SPRING, WAND LOCK
14	KE-4150927	HOSE ASSEMBLY
15	KE-747151	BRUSH, FLOOR
16	KE-4147116	TOOL, CREVICE
17	KE-4147115	BRUSH, FABRIC
18	KE-4147113	BRUSH, DUSTING