



1 KE-4370763	Cord, power
2 KE-4370790	Screw, handle cap mounting
3 KE-4370799	Cap, handle
4 KE-4370798	Handle
5 KE-4370785	Hook, upper cord storage
6 KE-4370779	Screw, mounting
7 NLA	Connector, wire (2)
8 KE-8192407	Cover, filter
9 KE-KC60KCJUZR19	Cover, dust
10 KE-4368563	Screw, motor, case mounting
11 KE-8191890	Packing, rear cover
12 KE-KC88KCJUZV07	Compartment, dust
13 KE-KC02FCHPZ000	Motor support (rubber)
14 KE-8192146	Motor, fan
15 KE-8191589	Lead wire, assembly
16 KE-8191904	Lead wire (motor)
17 KE-KC03FCJUZ000	Motor, support rear
18 KE-8192105	Frame
19 KE-4369561	Shaft, rear wheel
20 KE-4369562	Washer, wheel
21 KE-4369563	Wheel
22 KE-4369564	Stopper, wheel
23 KER-1800	Filter, sears no. 20-86889
24 KE-4370764	Button, on - off
25 KE-4370762	Cover, switch
26 KE-4370761	Switch, on-off
27 KE-8191893	Lead wire (white)
28 KE-8191894	Lead wire (black)
29 KE-8191579	Filter
30 KE-8191592	Spring
31 KE-8191557	Handle
32 KE-8192107	Handle lid
33 KER-1810	Filter unit sears no. 20-82720
34 KE-4370772	Window
35 FA-3500	Bulb, light sears no. 20-5240
36 KE-KC93HCJUZ000	Bulb socket
37 KE-KC42KCHFZBUU	Case filter assembly
38 KE-8191569	Valve, grommett
39 KE-4370429	Latch, dust cover
40 KE-4370808	Spring, protector
41 KE-4370408	Cover, protector

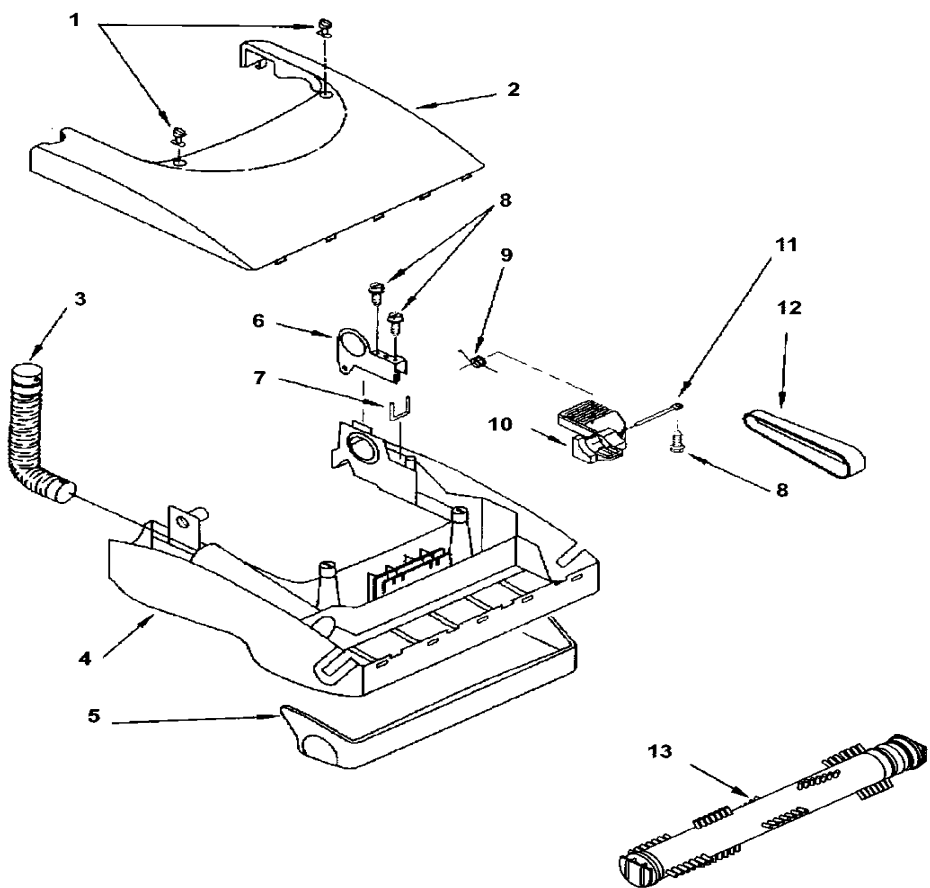

6/04

1	KE-4370788	Holder, plastic
2	KE-4370783	Latch, nozzle (2)
3	KE-7370776	Hose, nozzle
4	KE-KC27AASJZV07	Lower plate
5	KE-4370769	Guard, furniture
6	KE-4370784	Frame
7	KE-4369535	Guard, belt
8	KE-4368563	Screw, motor, case mounting
9	KE-4370258	Spring, pedal
10	KE-4370394	Pedal
11	KE-488658	Pedal shaft
12	PR-1015	BELT
13	KE-8191717	Agitator assembly

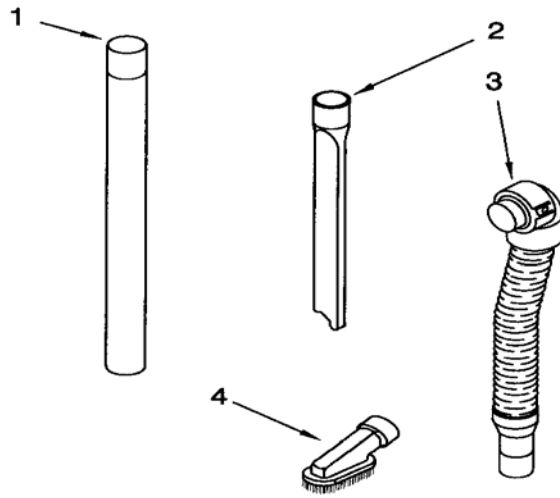

	1 KE-4369688	Wand, extension
	2 KE-4368684	Tool, crevice sears no. 20-52631
	3 KE-8191858	Hose, blow molded/stretch
	4 KE-4368681	Brush, combination
Not illustrated	KE-4370788	Holder, plastic