


KENMORE Original & Replacement

POWER NOZZLE Model 116.57312790

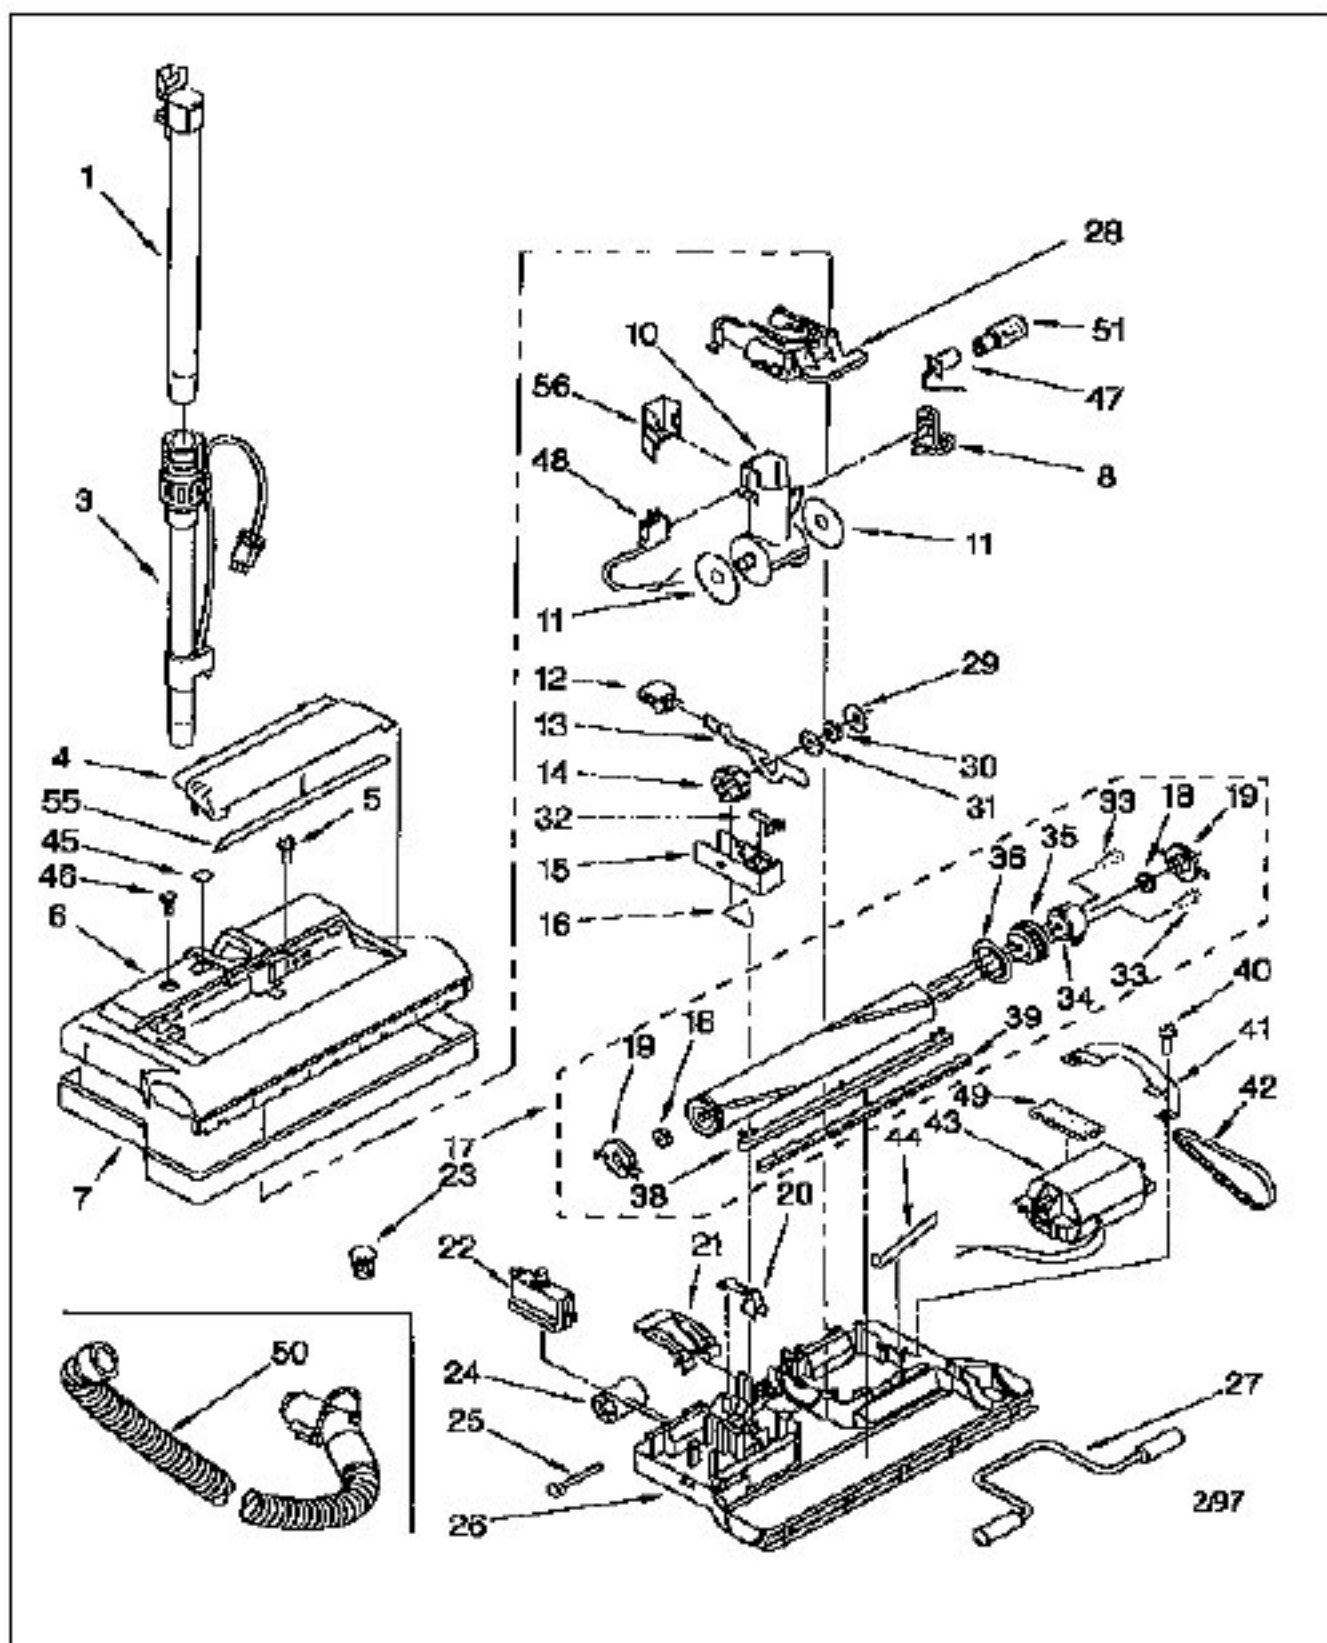

Original & Replacement **KENMORE** POWER NOZZLE Model 116.2045080

KEY	PART NO.	DESCRIPTION
1	P-50043	Upper Wand
3	P-50051	Lower Wand and cord
4	KE-4388824	Housing, bulb (includes no. 55)
5	KE-488839	Screw 8-18 x 1-7/8
6	KE-4388823	Nozzle
7	KE-747222	Bumper
8	KE-8191503	Foot pedal
10	KE-KS4153198	Swivel
11	KE-742019	Seal, swivel bearing (2)
12	KE-4150826	Pad, foot pedal
13	KE-4370720	Indicator lever
14	KE-588543	Indicator cam
15	KE-8191508	Indicator block
16	KE-725775	Spring, assist
17	NLA	Brush assembly
18	KE-881424	Washer, metal (12 x 1/2) (2) (incl. 18)
19	KE-876195	Bearing and housing assembly (2)(includes no. 18)
20	KE-4370726	Lifter
21	KE-4148391	Release, handle
22	KE-8191614	Protector, overload
23	SS-3270	Connector, wire (2)
24	KE-747117	Roller, nozzle (2)
25	KE-742006	Shaft, roller (2)
26	KE-4370013	Base
27	KE-KS744029	Front assembly assembly
28	KE-8191518	Cap, swivel
29	KE-722909	Washer, thrust
30	KE-725635	Washer, spring
31	KE-588543	Catch, indexing
32	KE-742016	Ratchet, catch
33	KE-881605	Screw type 25 no. 6 pan (2)
34	KE-742509	End brush tufted
35	KE-742506	Brush sprocket
36	KE-742031	Brush sprocket flange
38	KE-876194	Beater brush (2)
39	KE-743419	Bar, beater
40	KE-STD610805	Screw, 8-18 x 5/8 (2)
41	KE-705093	Motor, bridge
42	KER-1075	Belt, cogged (*sears no. 20-5285)
43	P-60518	Motor (Sears no. KC90FCAL100)
44	KE-742002	Spring, motor adjustment
45	KE-4388887	Lens, height adjuster
46	KE-4388982	Extension, button
47	KE-747096	Socket, bulb
48	KE-KS4151701	Cord and plug
49	KE-747156	Gasket, motor hose assembly
50	P-40473	Hose Ass'y
51	FA-3515	Bulb
55	KE-KS747286	Lens, light