 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



Nutone 598 Owner's Manual

[Shop genuine replacement parts for Nutone 598](#)

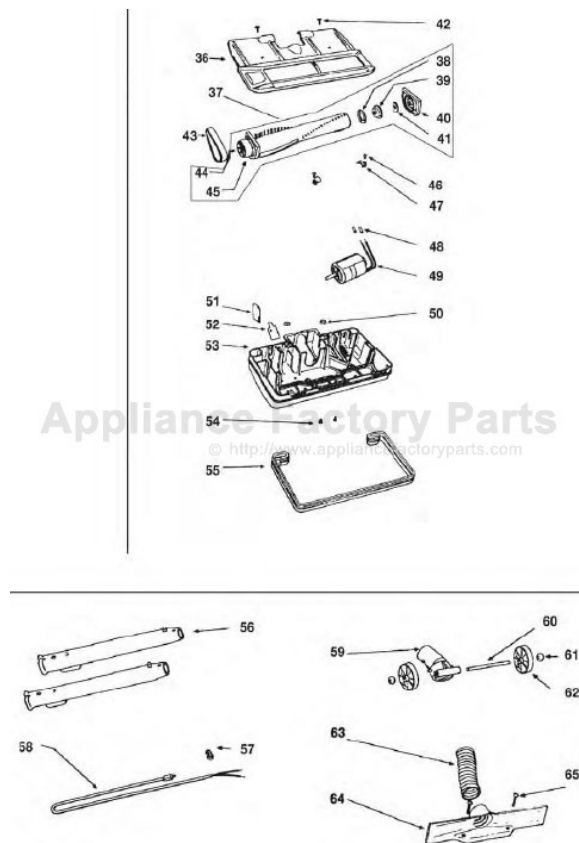

 
 
 
[Find Your Nutone Vacuum Cleaner Parts - Select From 10 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for Nutone 598

[48332](#)

DRAFT INDUCERS 115 VOLTS 3200/ 2800 RPM

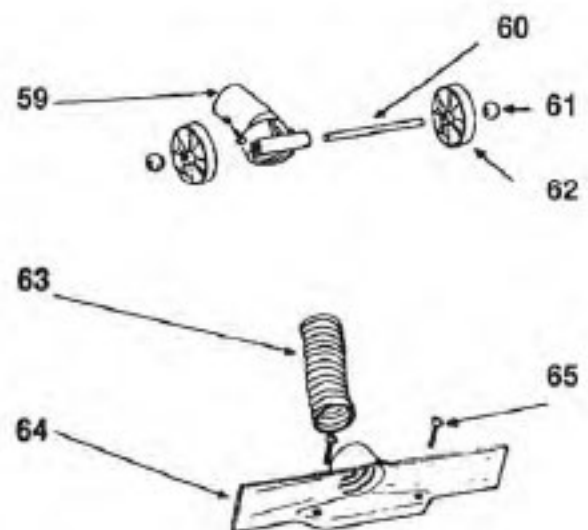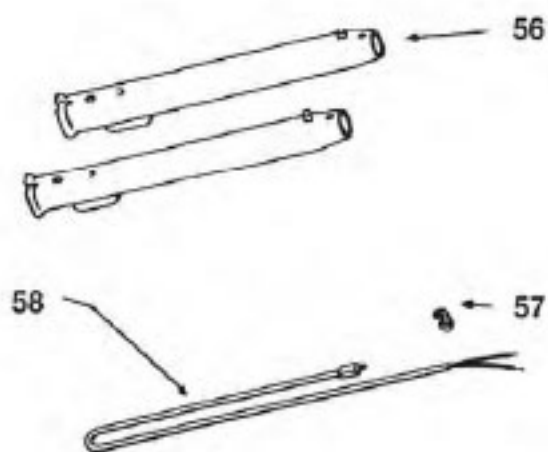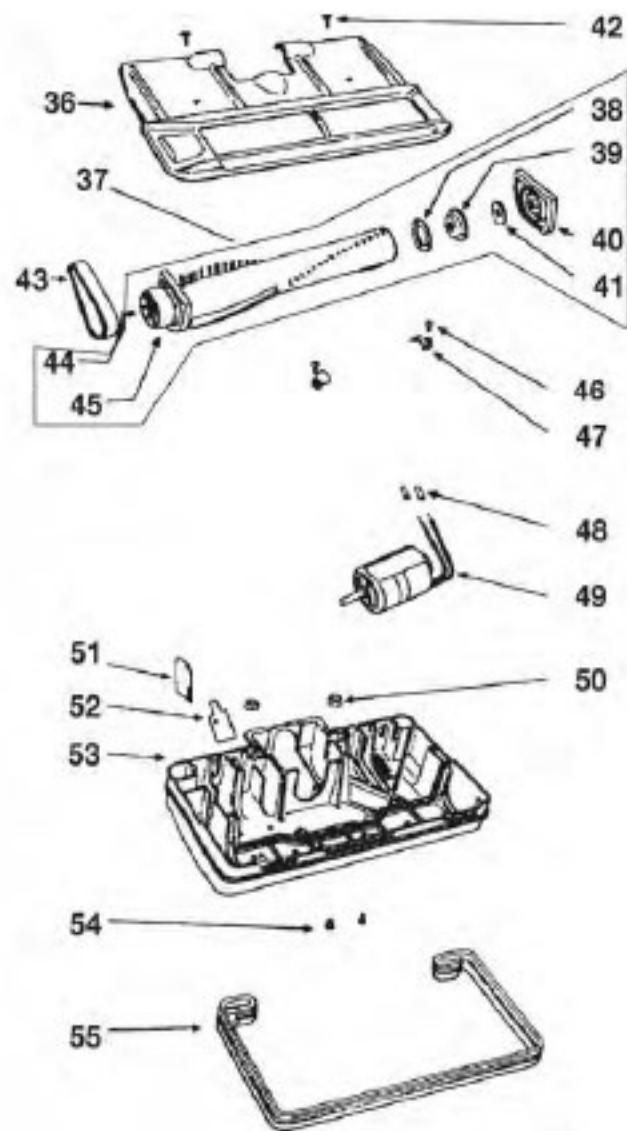

KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION
36	E-25788	Sole Plate Ass'y*			
	E-25903	*Sole Plate Gasket			
37	NLA	Brushroll Ass'y Wood W/Large Pulley**			
37	E-53408	Brushroll Ass'y Wood W/Small Pulley			
37	E-53348-1	Brushroll Ass'y Wood W/Small Pulley			
37	ER-2030	Brushroll Ass'y Wood W/Small Pulley			
38	E-49101	**Felt Washer			
39	E-36412	**Felt Retainer			
40	E-53282	**Bearing Ass'y Repair Kit			
41	E-49591	**Flat Washer			
42	E-EW305-8P7N	Screw			
43	E-52201	Drive Belt			
43	ER-1050	Drive Belt			
44	E-49175	**Locknut			
45	E-37114	**Pulley			
46	E-EW312-88C	Plate Screw			
47	E-48332	Retainer Plate			
48	E-EW22-17	Wire Nut			
48	SS-3270	Wire Nut			
49	E-52314-2	Motor			
49	ER-6050	Motor			
50	E-49050	On-Sert			
51	E-49110A	Belt Guard			
52	E-36680	Grounding Cover			
53	NLA	Housing Ass'y*			
	E-25353	*Name Plate			
54	E-EW110-8P4C	Motor Screw			
55	E-36322A-2	Furniture Guard			
56	E-36879-2	Wand			
56	FA-5001	Wand			
	FA-3210	Cord Strap (not illustrated)			
57	E-55053-1	Strain Relief Bushing			
57	SS-3265	Strain Relief Bushing			
58	E-35970-5	Cord			
58	ER-3055	Cord			
59	NLA	Handle Socket			
60	E-48334	Axle			
61	E-48336	Axle Bearing			
62	E-36555-1	Wheel			
63	E-25789-2	Hose 5"			
63	ER-7200	Hose 5"			
64	E-12578B-1	Inlet Divider			
65	E-EW312-8-8C	Screw			

NLA = No Longer Available